
■AVC-LAN

1. General

The AVC-LAN is used to transmit data only between the audio head unit or radio and player with display and the stereo amplifier on models with the premium audio system.

2. System Diagram

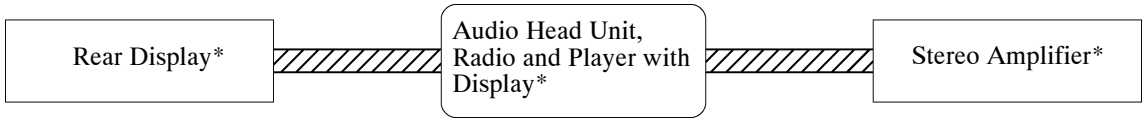


*: Optional Equipment

For AVC-LAN

04E2BE04C

3. Layout of Main Components

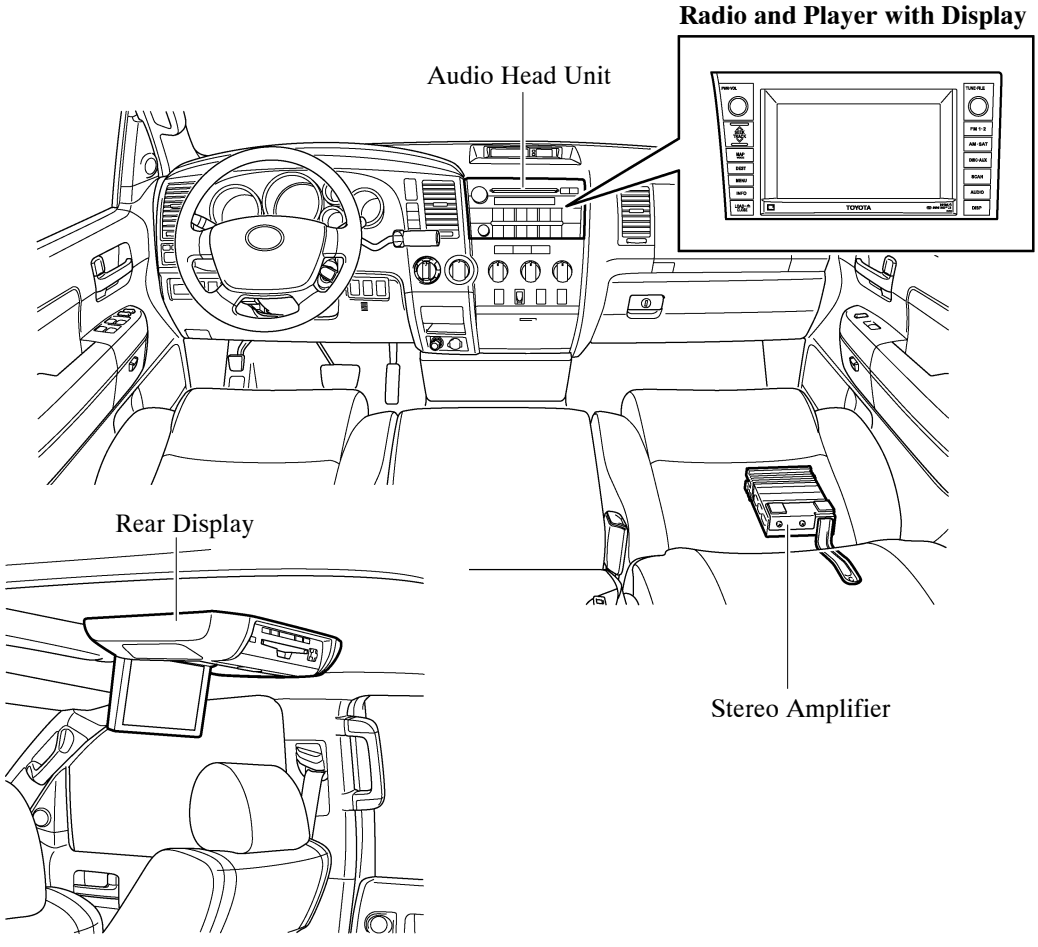

04E2BE05Z

BE

4. Diagnosis

If a malfunction occurs in the AVC-LAN communication bus, the audio head unit stores a DTC (Diagnostic Trouble Code) in its memory.

- The DTCs of models having the navigation with AV system can be read on the diagnosis menu display on the radio and player with display.
- The DTCs of models without the navigation with AV system can be read on the LCD of the audio head unit.

For details, see the 2007 TOYOTA TUNDRA Repair Manual (Pub. No. RM04E2U).