■ACCESSORY METER

1. General

Availability of the accessory meter is as shown below:

×: Standard OP: Option -: Not Equipped


Regular Cab				
	Engine	**1GR-FE**	**2UZ-FE/3UR-FE**	
	Model	**2WD**	**2WD**	**4WD**
Accessory Meter	Clock Only	×	-	-
	Clock + Security Indicator Light	-	×	×
	Clock + Clearance Sonar Warning	OP	-	-
	Clock + Security Indicator Light + Clearance Sonar Warning	-	OP	OP

Double Cab				
	Engine	**1GR-FE**	**2UZ-FE/3UR-FE**	
	Grade	**SR5**	**SR5**	**Limited**
Accessory Meter	Clock Only	×	-	-
	Clock + Security Indicator Light	-	×	×
	Clock + Clearance Sonar Warning	OP	-	-
	Clock + Security Indicator Light + Clearance Sonar Warning	-	OP	OP
	Clock + Cruise Information + Security Indicator light + Clearance Sonar Warning	-	OP	-

CrewMax			
	Engine	**2UZ-FE/3UR-FE**	
	Grade	**SR5**	**Limited**
Accessory Meter	Clock + Security Indicator Light	×	×
	Clock + Security Indicator Light + Clearance Sonar Warning	OP	OP
	Clock + Cruise Information + Security Indicator light + Clearance Sonar Warning	OP	-

- For cruise information, four types of information (Outside Temperature, Average Fuel Economy, Instant Fuel Economy, and Distance To Empty) can be displayed.
- The cruise information can be switched by using the INFO switch.
- The cruise information can be reset by using the SELECT switch.
- The cruise information units can be changed by using the SETUP switch.


Accessory Meter

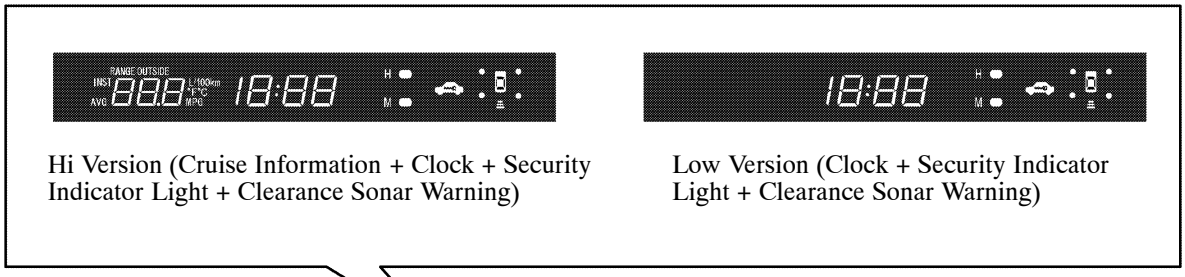

Hi Version (Cruise Information + Clock + Security Indicator Light + Clearance Sonar Warning)

Low Version (Clock + Security Indicator Light + Clearance Sonar Warning)


Drive Monitor Switch

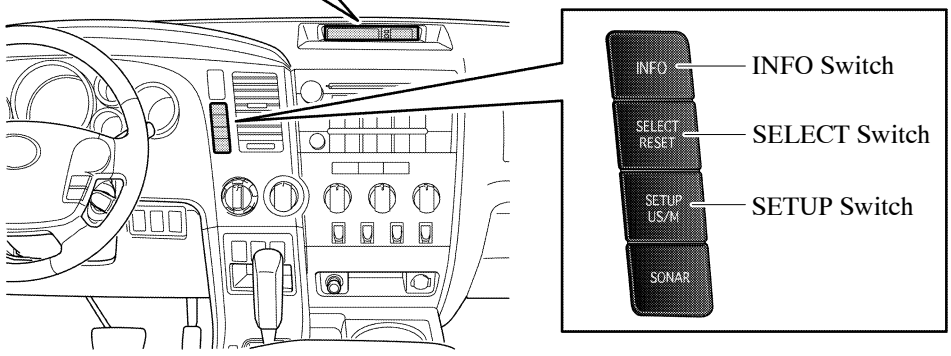

04E0BE28Z

2. System Diagram

Hi Version

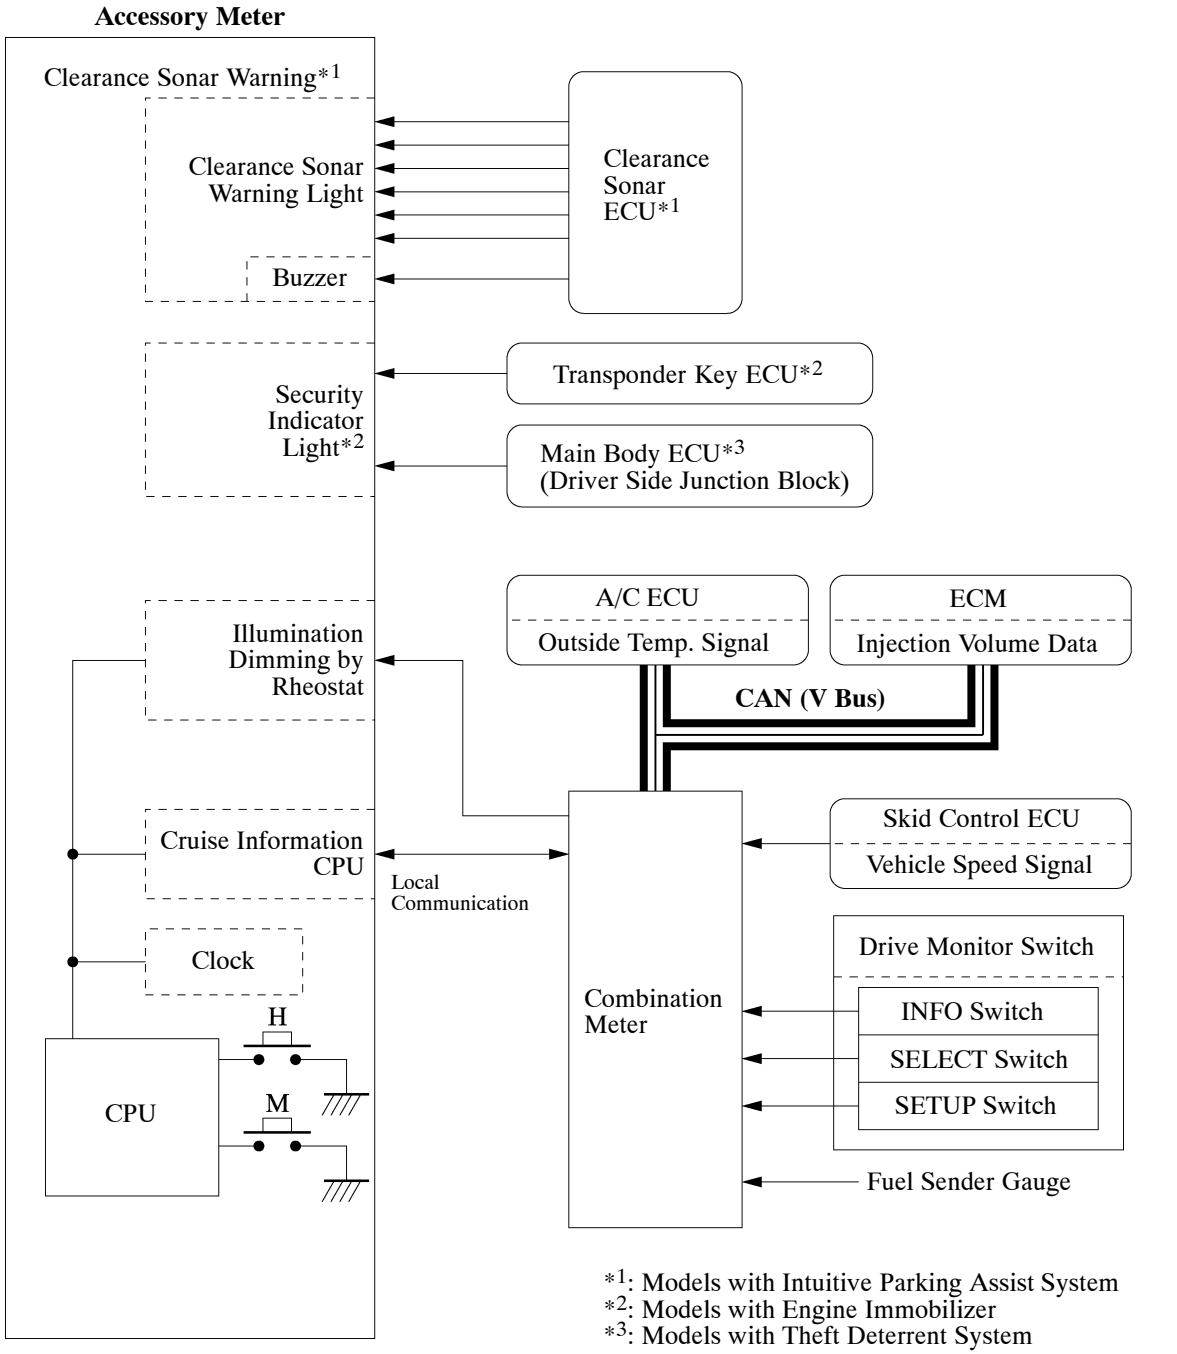


*1: Models with Intuitive Parking Assist System
*2: Models with Engine Immobilizer
*3: Models with Theft Deterrent System

04E1BE09C

BE

Low Version

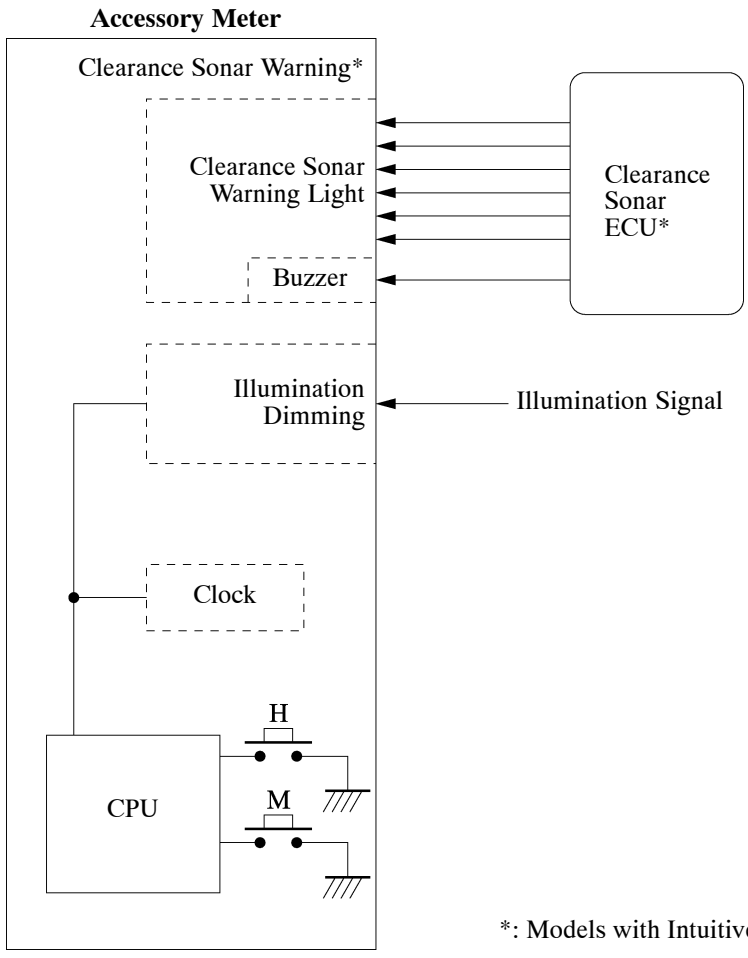

*: Models with Intuitive Parking Assist System

04E0BE121C

3. Cruise Information

The cruise information is displayed in the following order each time the INFO switch is pressed.

Information		Outline
(1)	**Outside Temperature**  04E0BE29C	Displays outside temperature in accordance with the outside temperature sensor signal from the A/C ECU.
(2)	**Average Fuel Economy**  04E0BE30C	• Displays a value that has been calculated by the combination meter, which is based on the distance driven and the fuel consumption volume (fuel injection signal from the No.1 cylinder). • This display is updated every 10 seconds.
(3)	**Current Fuel Economy**  04E0BE31C	• Displays a value that has been calculated by the combination meter. When the ignition switch is turned ON, the combination meter calculates this value based on the distance driven and the fuel consumption volume (fuel injection signal from the No.1 injector). • This display is updated every 0.5 seconds.
(4)	**Distance To Empty**  04E0BE32C	• Displays the value that has been calculated by the combination meter (Meter ECU), which is based on the fuel consumption data that the combination meter (Meter ECU) continuously monitors and stores in its memory and the residual fuel volume data, provided that the ignition switch is turned ON. • The display is updated every 1 mile (1 km).