
■SYSTEM OPERATION

The theft deterrent system activates as described in the diagram below when one of the items places it in the respective state.

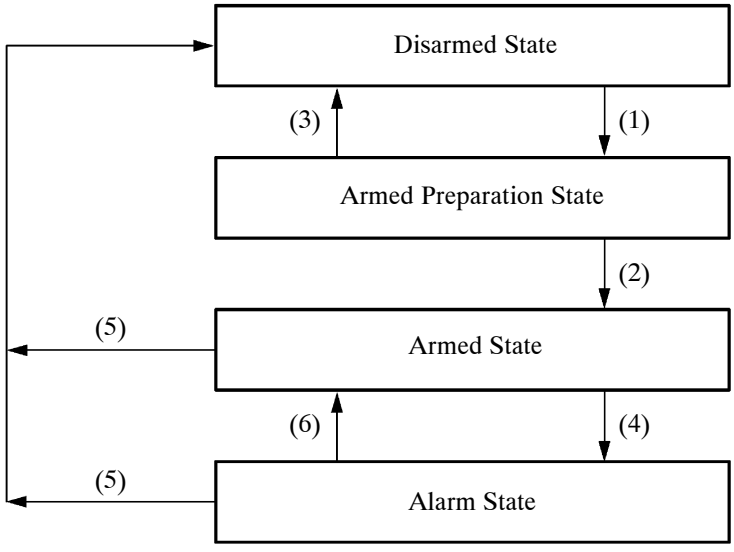

187BE40

Condition	Item
(1)	In the disarmed state, when the key is not in the ignition key cylinder, the system state is switched if one of the following conditions is met. • When all doors and engine hood are closed, the mechanical key locks the doors. • When all doors and engine hood are closed, the transmitter locks the doors. • When all doors and engine hood locked, any these are changed from open to close, and then these are closed or locked.
(2)	The system enters the armed state when the doors and engine hood are all closed and locked, and 30 seconds have elapsed.
(3)	The system reverts to a disarmed state when one of the following conditions is met. • Any door or engine hood is opened. • Any door is changed from lock to unlock. • When the ignition key is inserted in the ignition key cylinder.
(4)	The system enters the alarm state when one of the following conditions is met. • Any door is changed from close to open. • Any door is changed from lock to unlock by a method other than the mechanical key or transmitter. • Engine hood is changed from close to open. • When a terminal is disconnected from the battery and reconnected. • The wiring harness is directly connected as if to turn the ignition switch ON.
(5)	The system state switches to disarmed when one of the following conditions is met. • Any door is changed from lock to unlock with the mechanical key or transmitter. • The ignition key is inserted in the ignition key cylinder and turned ON.
(6)	The system state reverts to Armed after the alarm time (60 seconds) elapses.