
■ MIRROR HEATER

1. General


The mirror heaters use a heater element in both outside rear view mirrors to help to defog them.

- The mirror heaters are controlled by the A/C ECU.
- This system is activated when the ignition switch is turned ON, and mirror heater button is pushed. The A/C ECU activates to keep the mirror heater ON for approx. 15 minutes.

2. System Diagram

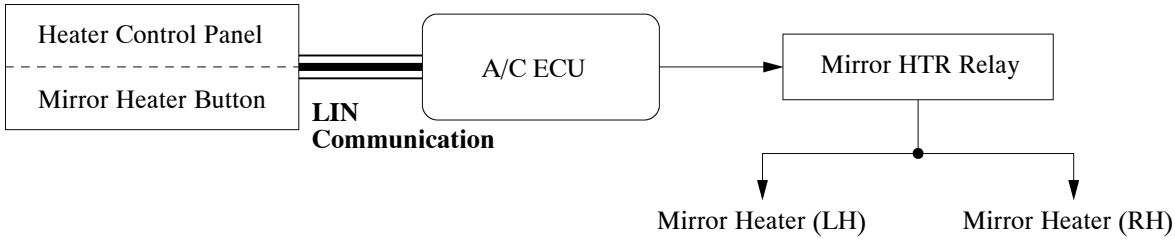

3. Layout of Main Components

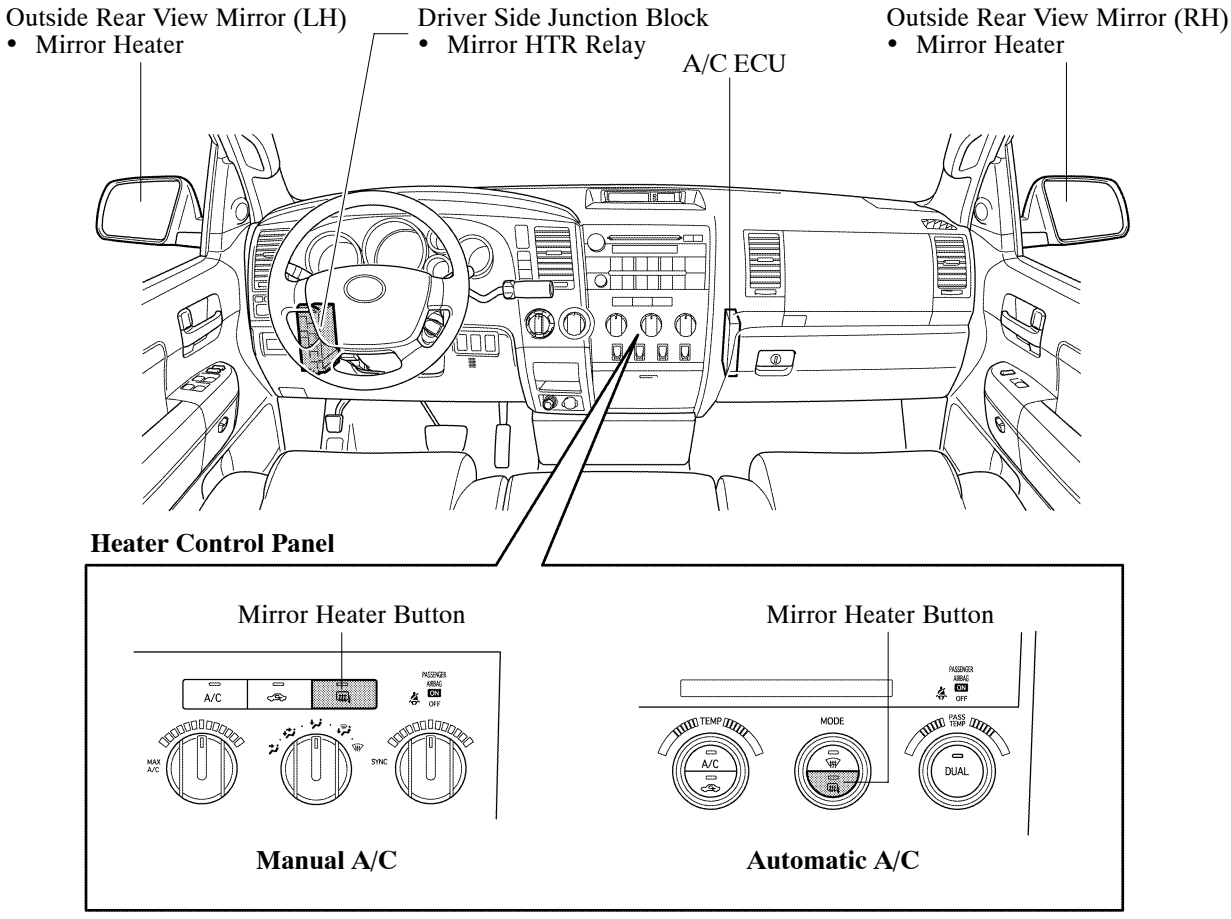

04E2BE24Z

BE