RADIATOR SUPPORT (ASSY)




F26956A

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: MIG Plug Weld

F26956B

REMOVAL·INSTALLATION

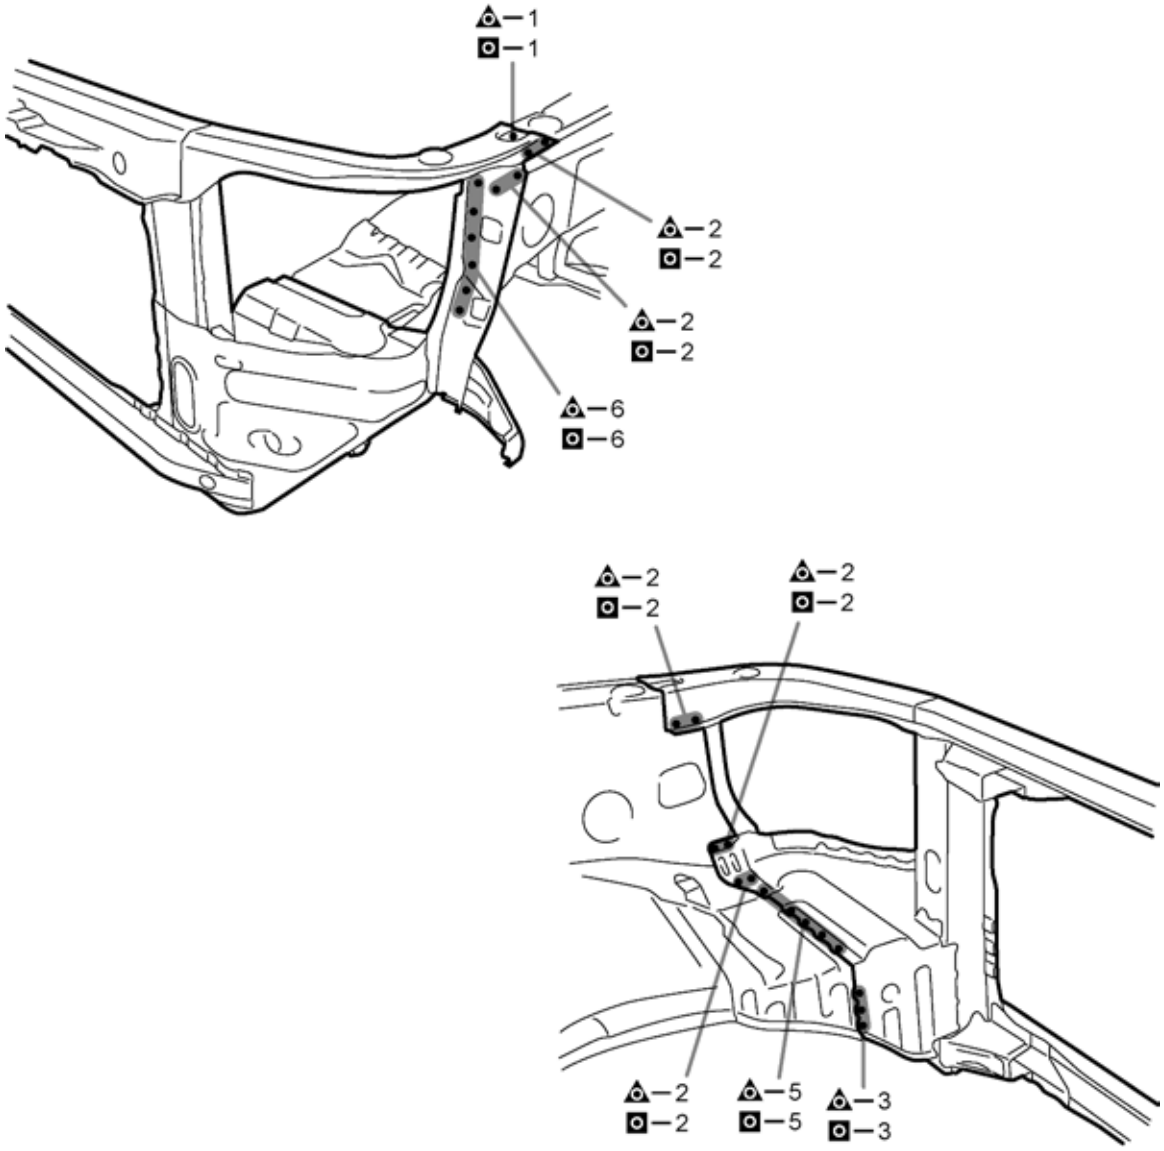


F26956

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

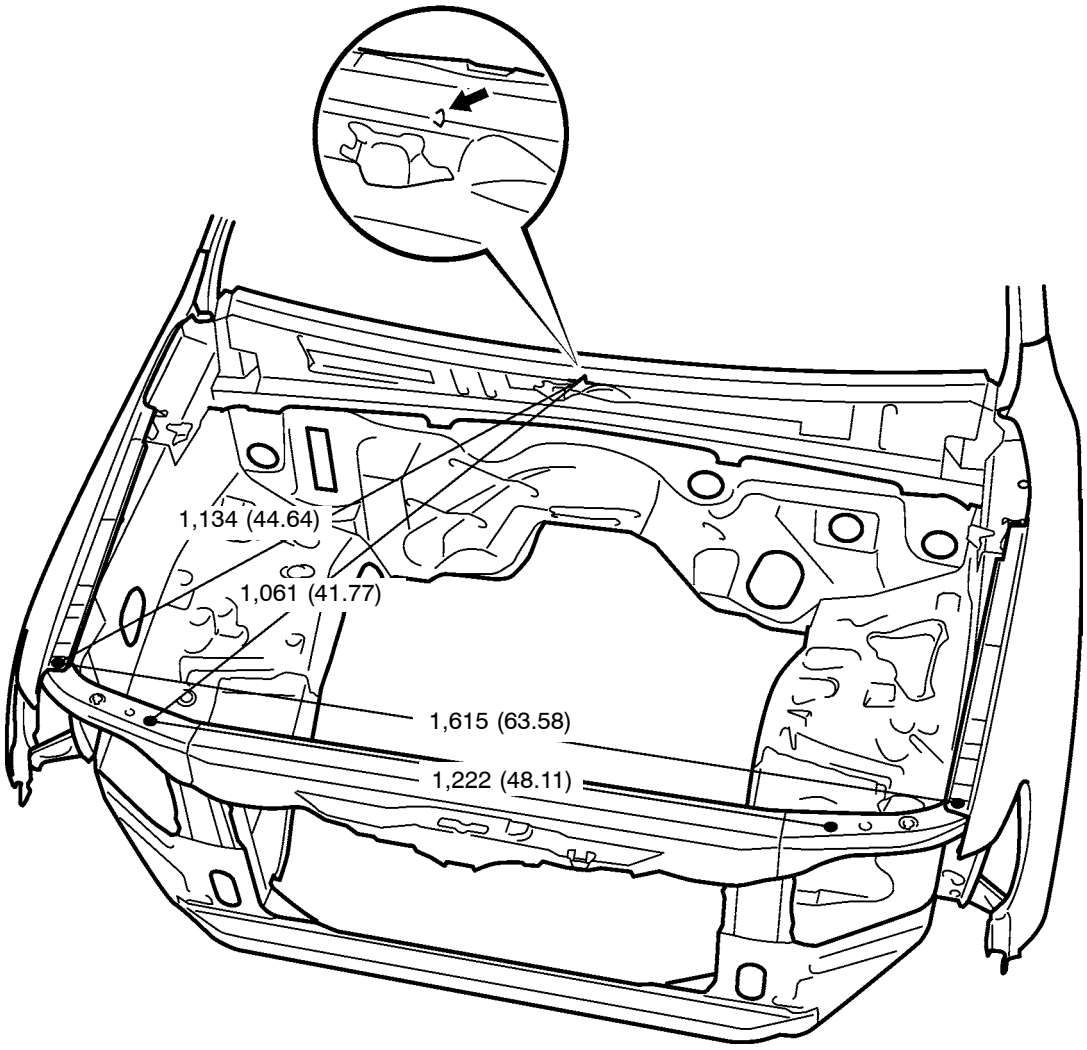

mm (in.)

F26957

INSTALLATION POINT

1 Measure the dimensions before installing the headlights.
2 These values are reference values.