
ROCKER OUTER PANEL (CUT-H)

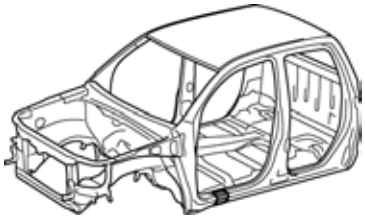

F26990A

Symbol meaning


: Remove Weld Points : Cut and Join Location

REMOVAL : Cut Location for Supply Parts

INSTALLATION : MIG Plug Weld : Butt Weld

F26990B

REMOVAL·INSTALLATION

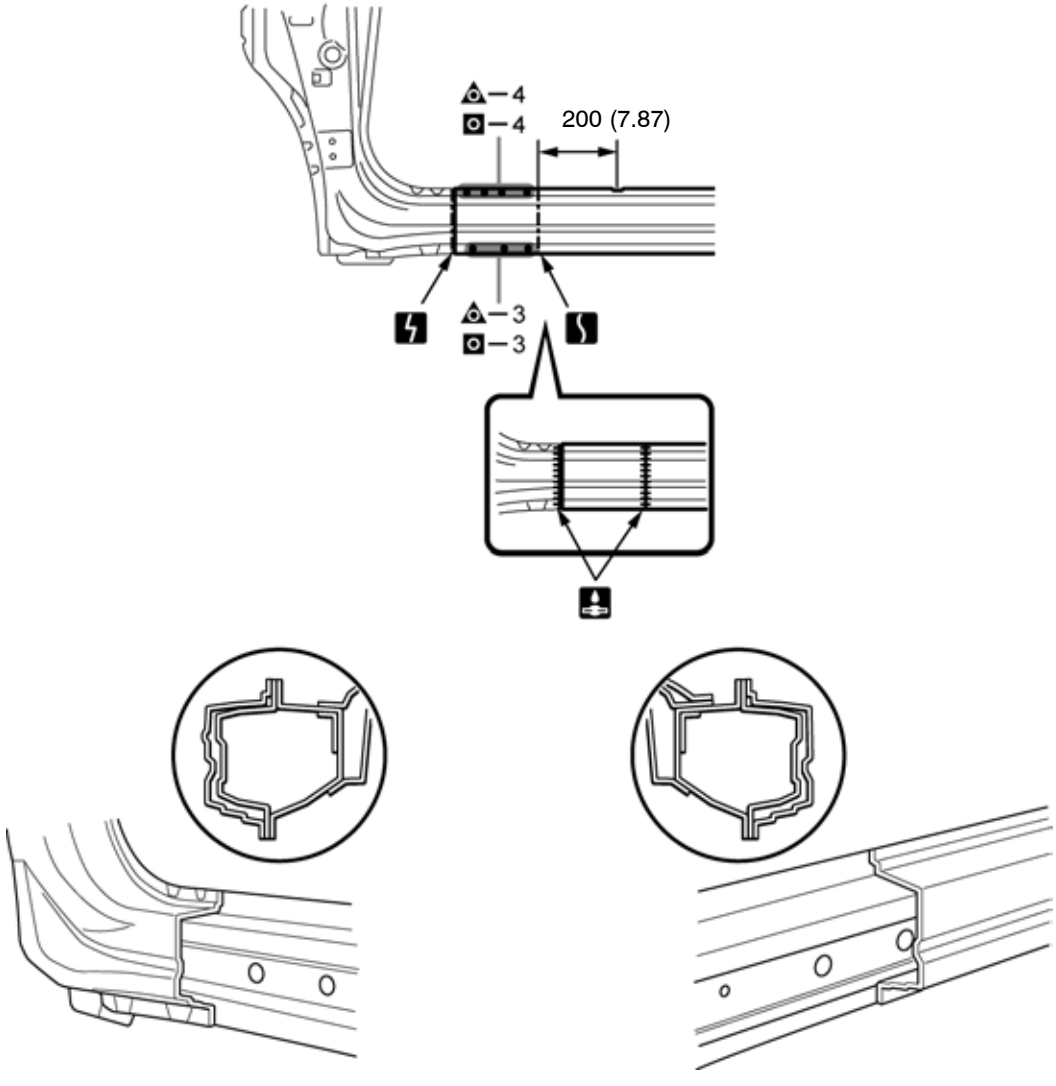

mm (in.)

F26990

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.