
QUARTER PANEL (CUT): Double Cab

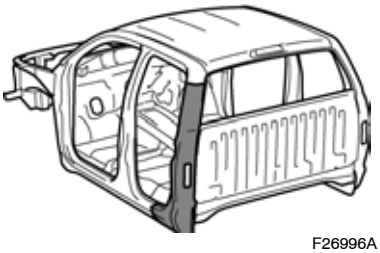


F26996A

Symbol meaning

	: Remove Weld Points : Cut and Join Location
REMOVAL	: Cut Location for Supply Parts
INSTALLATION	: Spot Weld : MIG Plug Weld : Butt Weld

F26996B

REMOVAL·INSTALLATION

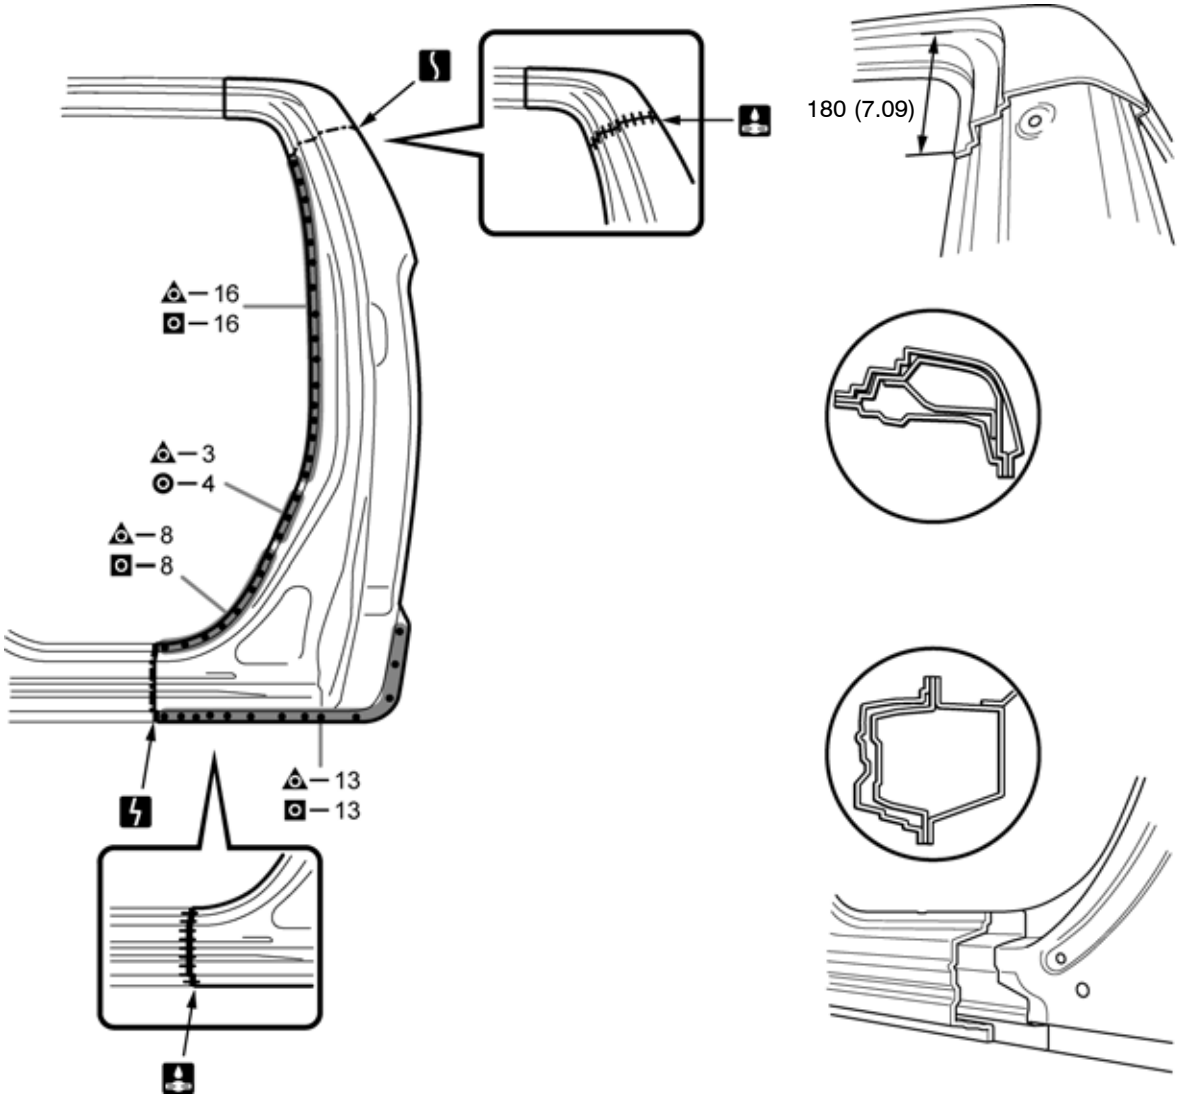

mm (in.)

F26996

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.


2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)


Symbol meaning

REMOVAL : Remove Weld Points : Cut and Join Location
: Cut Location for Supply Parts

INSTALLATION : Spot Weld : MIG Plug Weld : Butt Weld

F26996B

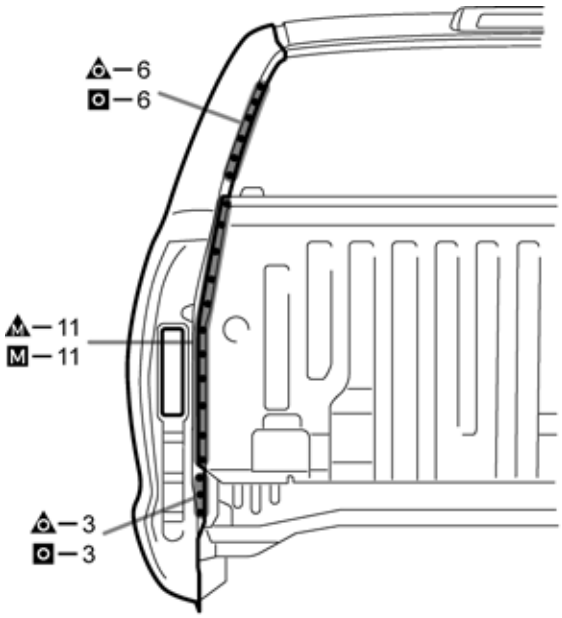

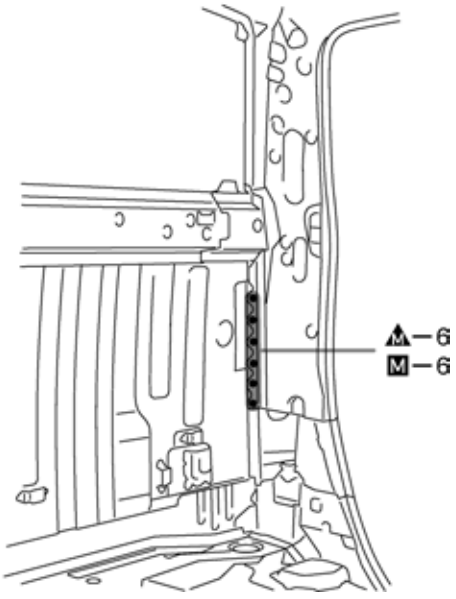


F26997

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply polyurethane foam to the corresponding parts. (See the paint·coating)
4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

QUARTER PANEL (CUT): CrewMax

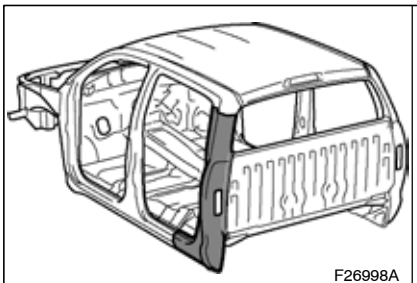
F26998A

Symbol meaning


: Remove Weld Points : Cut and Join Location

REMOVAL : Cut Location for Supply Parts

INSTALLATION : Spot Weld : MIG Plug Weld : Butt Weld

F26998B

REMOVAL·INSTALLATION

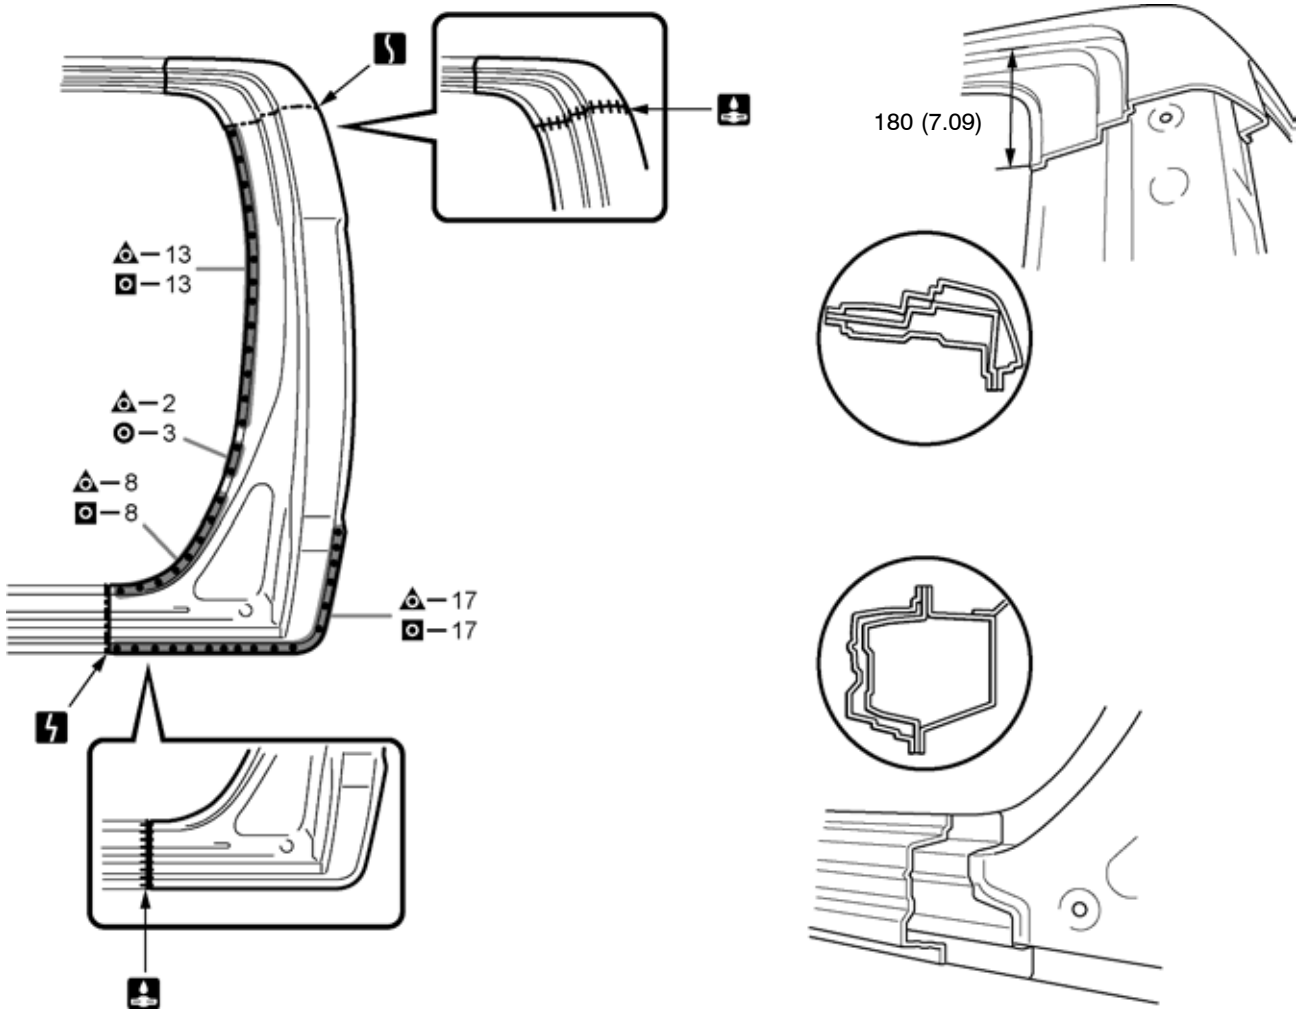

mm (in.)

F26998

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)


Symbol meaning


: Remove Weld Points : Cut and Join Location

REMOVAL : Cut Location for Supply Parts

INSTALLATION : Spot Weld : MIG Plug Weld : Butt Weld

F26999B

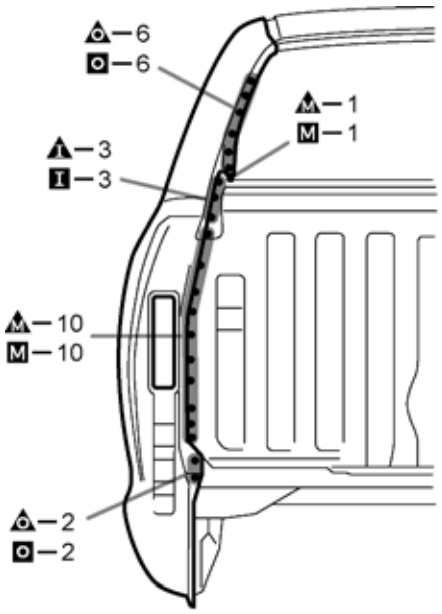

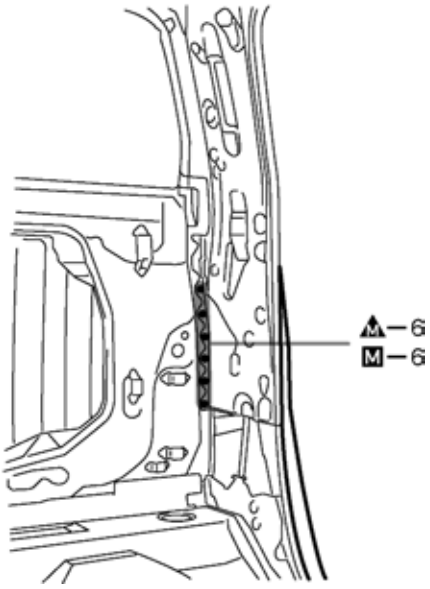

F26999

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply polyurethane foam to the corresponding parts. (See the paint•coating)
4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint•coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.