DAMAGED VEHICLE DISPOSAL PRECAUTION (SRS AIRBAG SYSTEM)


For SRS airbag system adjustment service and repair procedures, refer to the TOYOTA Repair Manual.

(1) When using an electric welder, first remove all airbags and seat belt pretensioners.


(2) If impacts are likely to occur to the front airbag sensors, side airbag sensors, door side airbag sensors or center airbag sensor, remove each sensor as necessary beforehand.

(3) Do not allow the front airbag sensors, side airbag sensors, door side airbag sensors or center airbag sensor to become heated to high temperatures.

for Regular Cab:

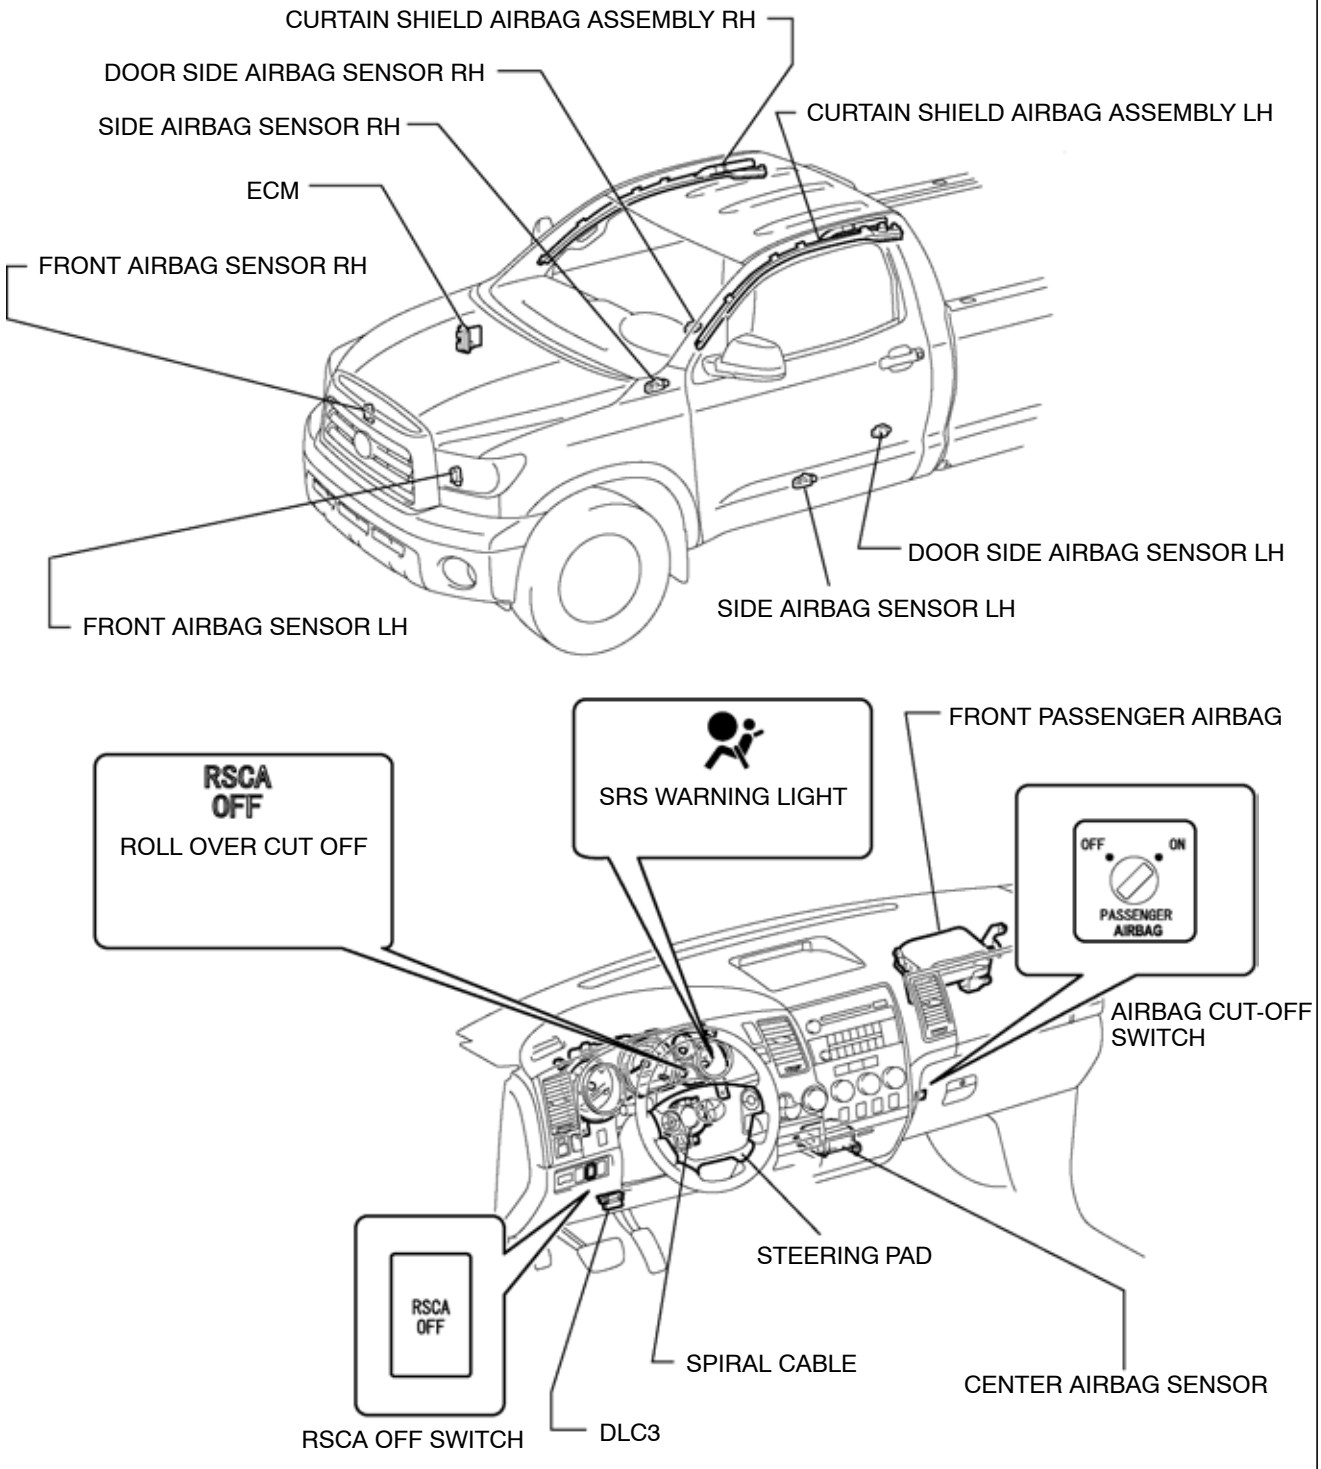



for Double Cab:

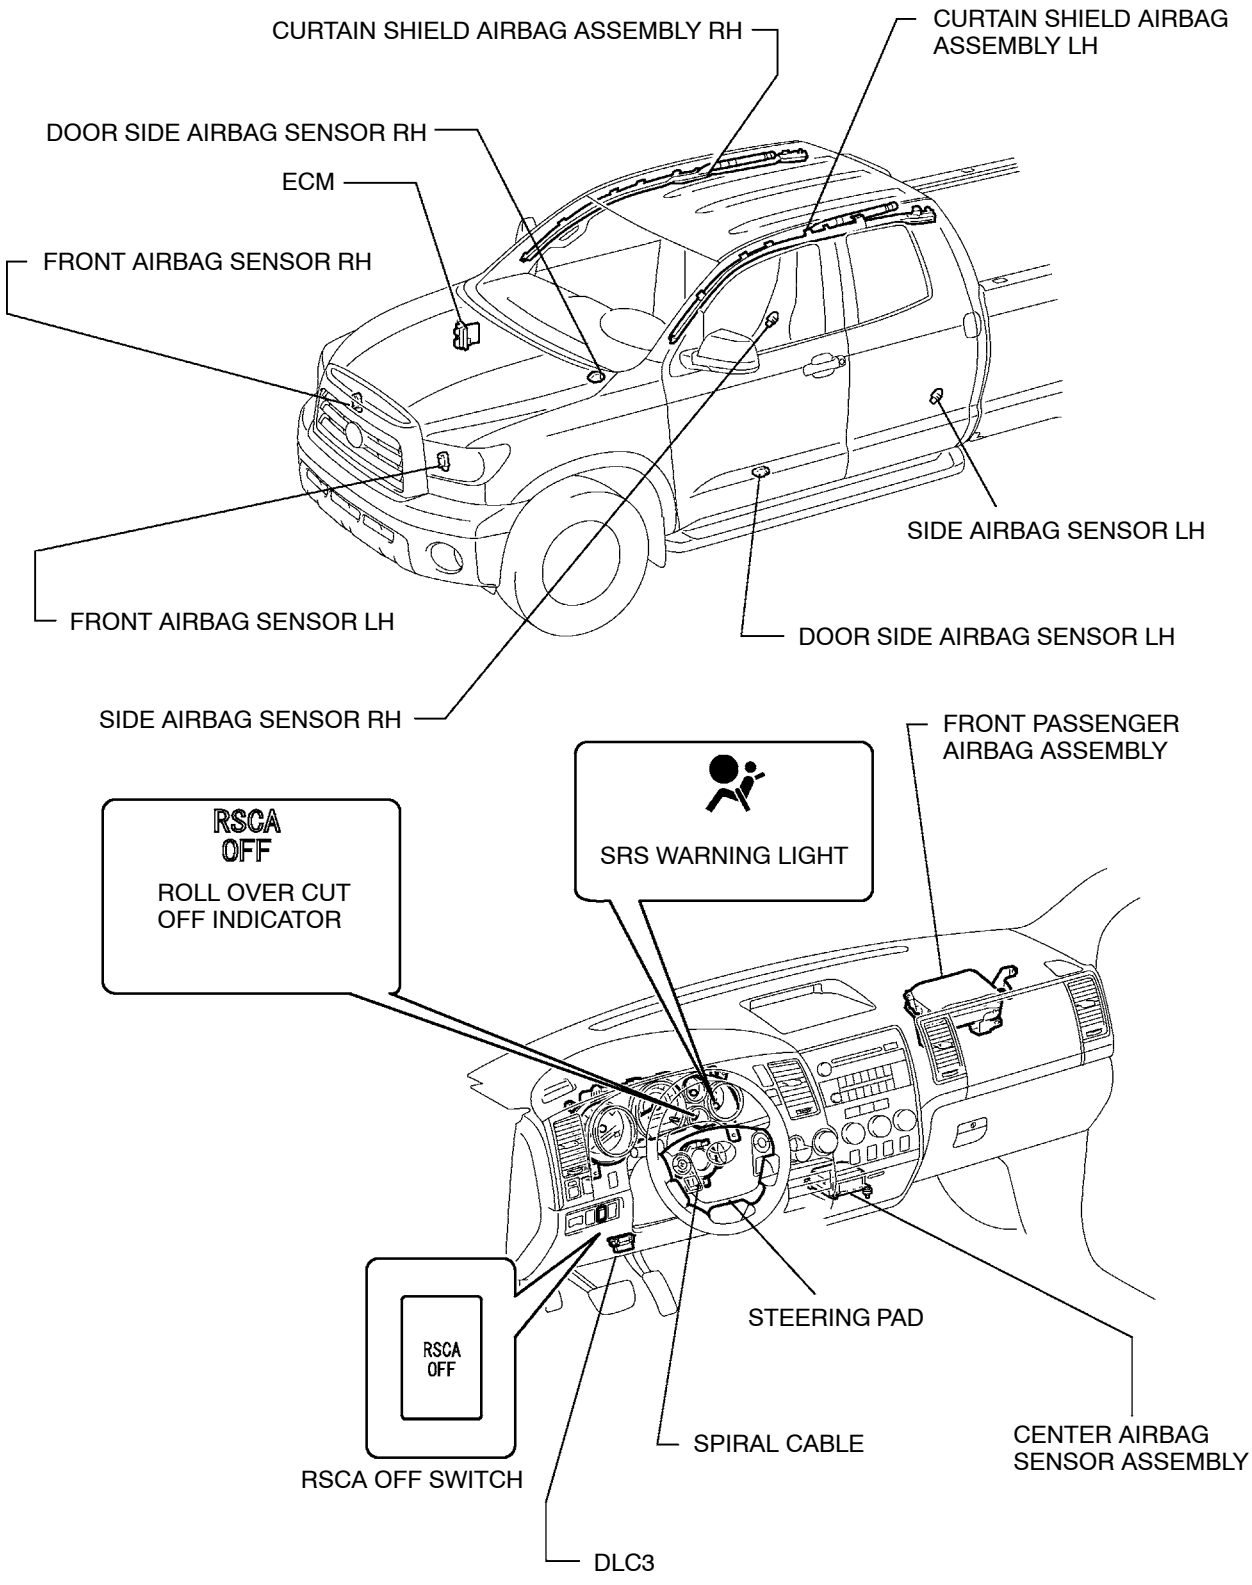

C156048


for CrewMax:

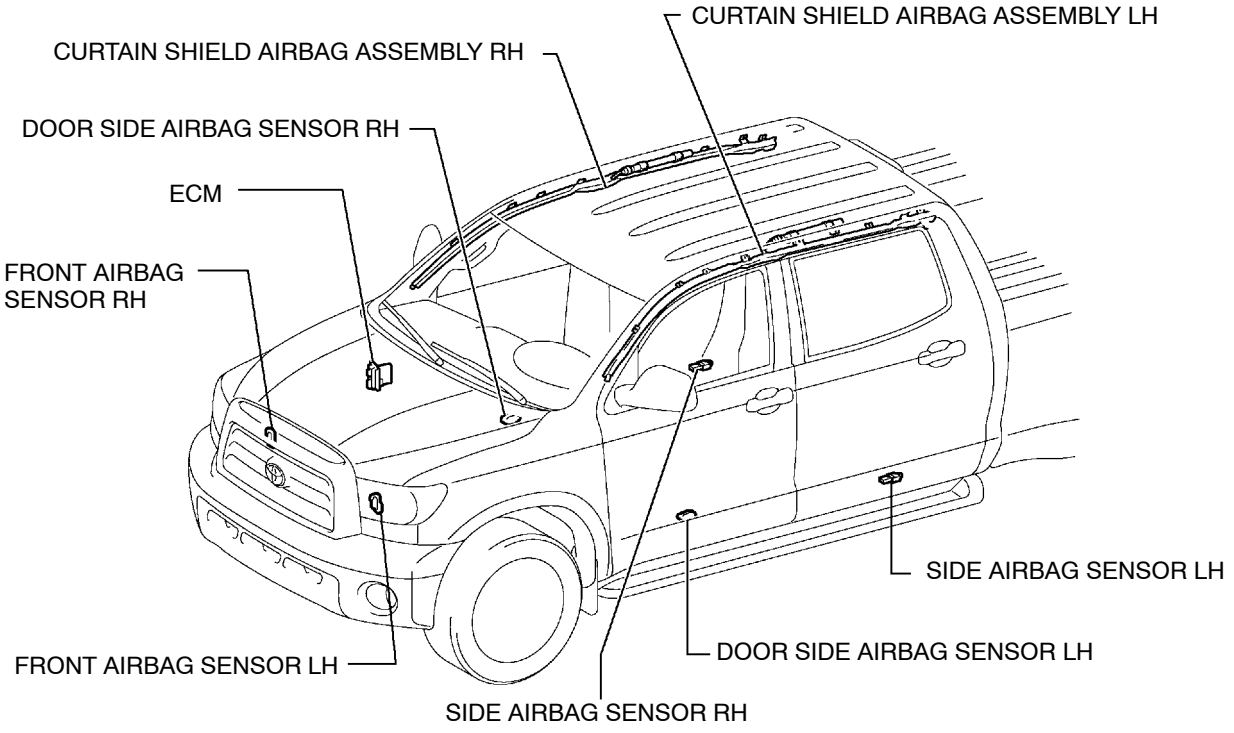

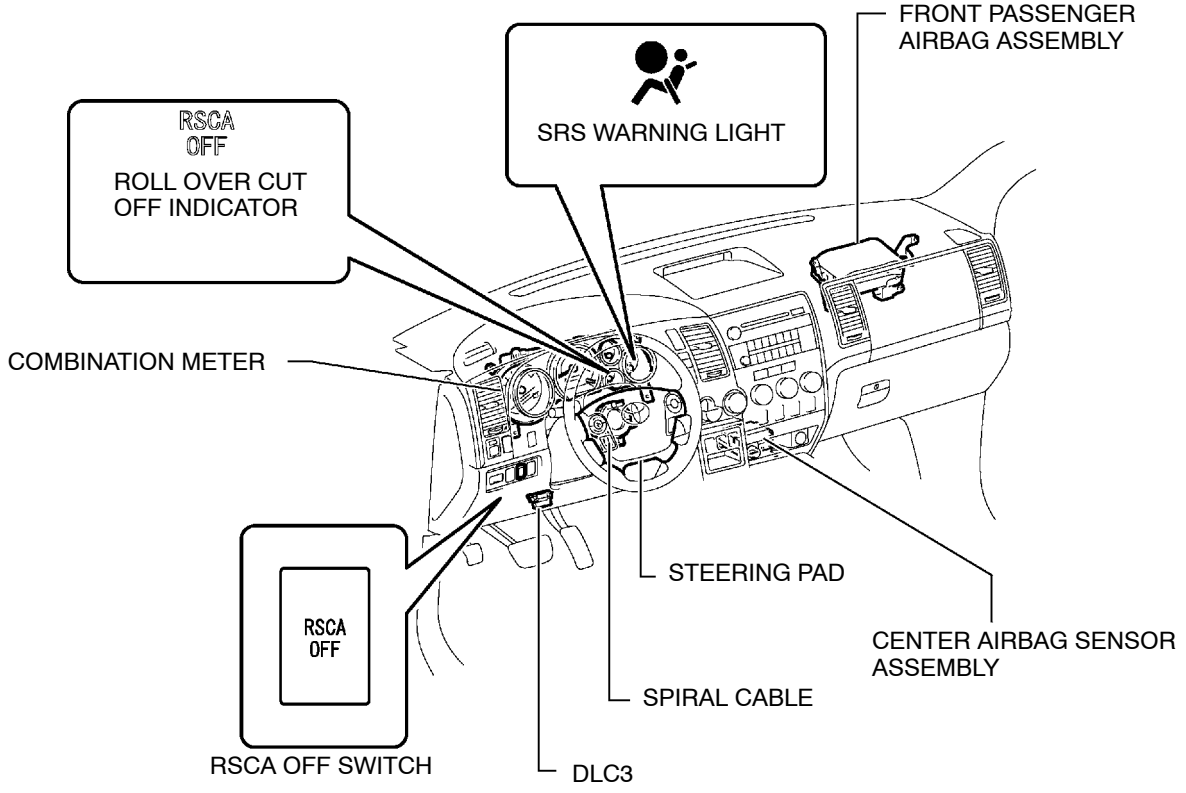


C164011

for Separate Seat:

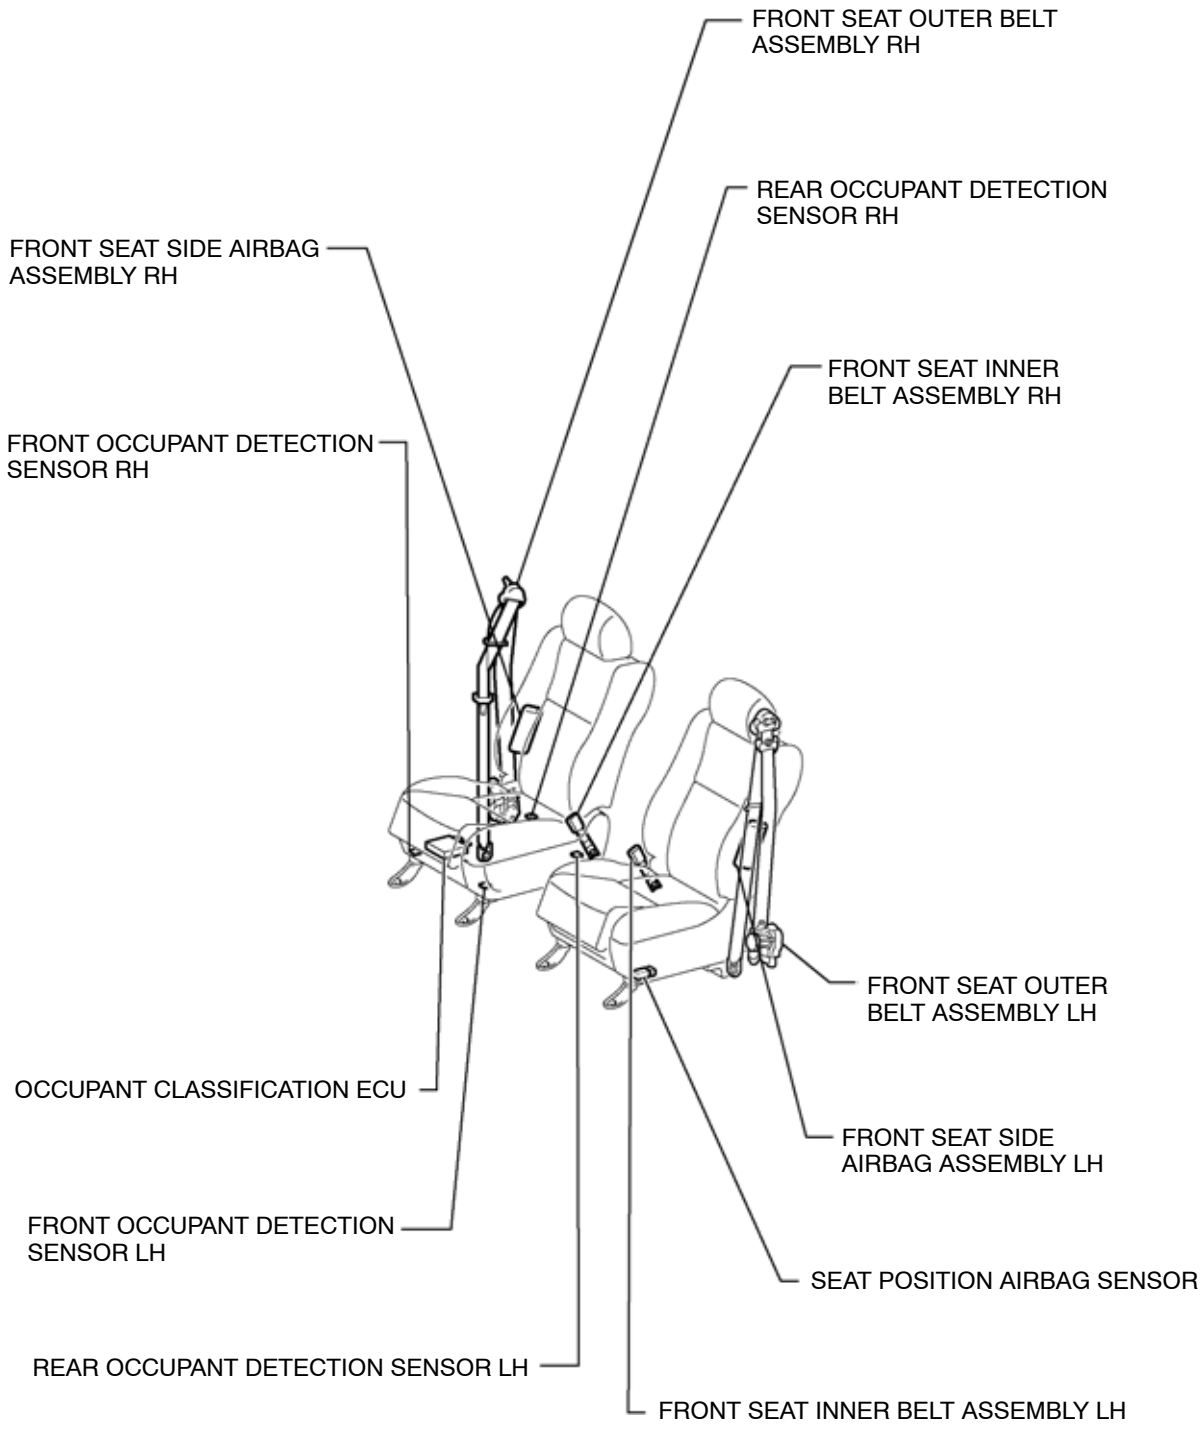

C164476


for Bench Seat:

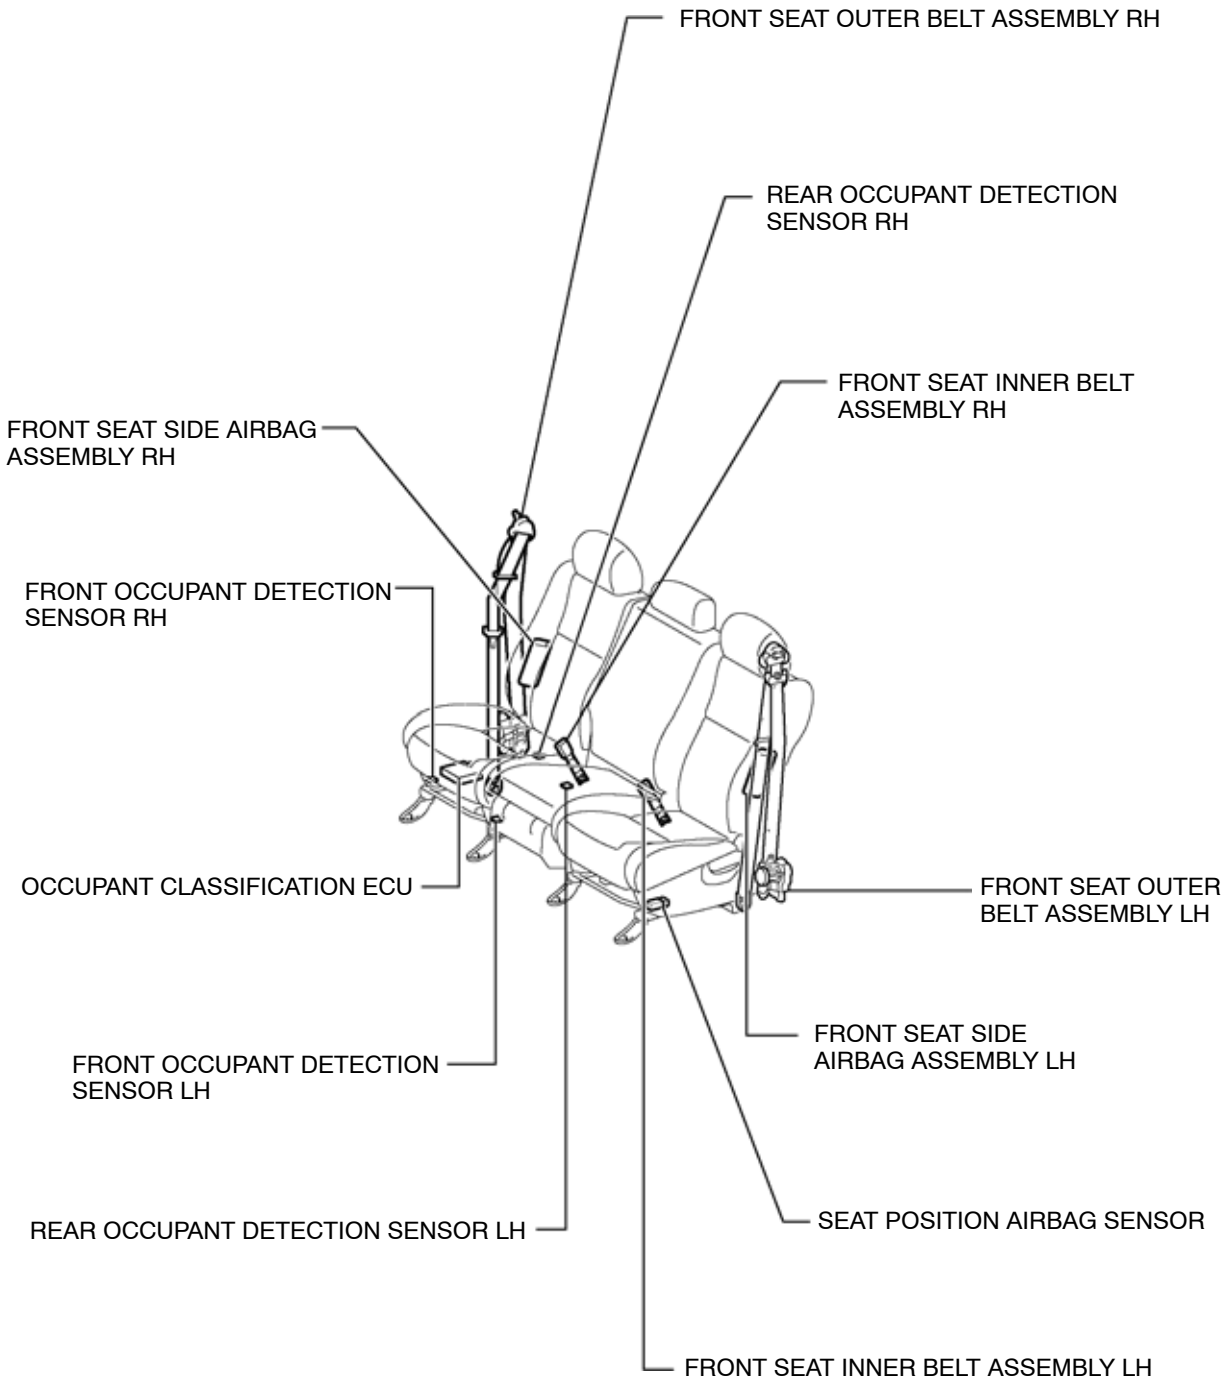

C164477

for Manual Air Conditioning:


PASSENGER AIRBAG ON/OFF INDICATOR

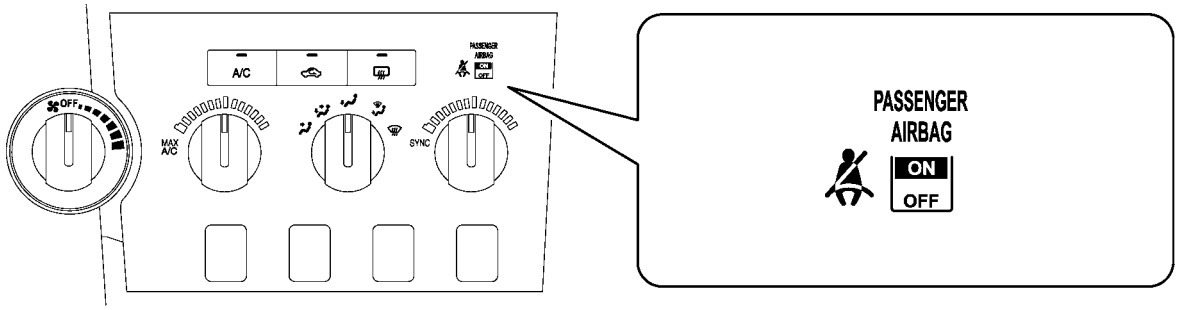

INTEGRATION CONTROL AND PANEL

for Automatic Air Conditioning:

PASSENGER AIRBAG ON/OFF INDICATOR

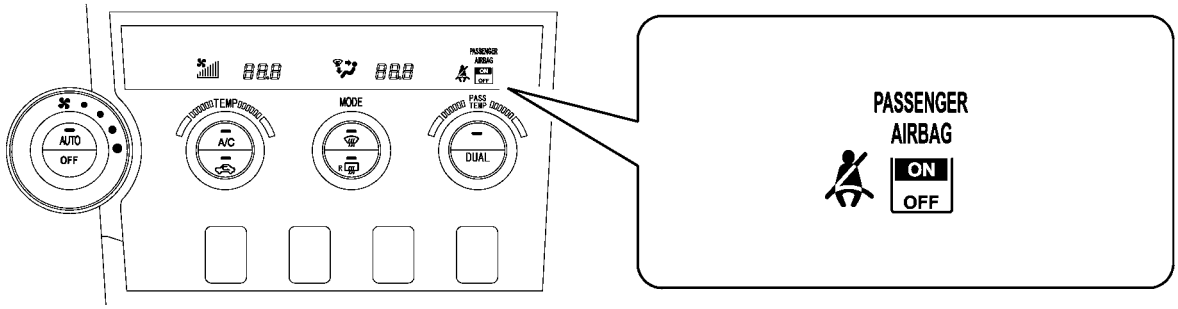

INTEGRATION CONTROL AND PANEL

C156052