BODY PANEL SEALING AREAS

1 Be sure to apply body sealer to the body panel joints and door edges (tip of outer panel folded part), etc., to waterproof and rustproof them.

HINT:


1) Apply degreasing agent to a clean cloth and clean the sealer application areas.

2) After removing the applied spot sealer from the sealer application areas using thinner or equivalent, rustproof the areas by applying primer or equivalent. Then apply body sealer.

3) If sealer is unnecessarily applied to an area, apply degreasing agent to a clean cloth and clean off the sealer immediately.


++++++++++	Flat Finishing	————	No Flat Finishing


1. ENGINE COMPARTMENT

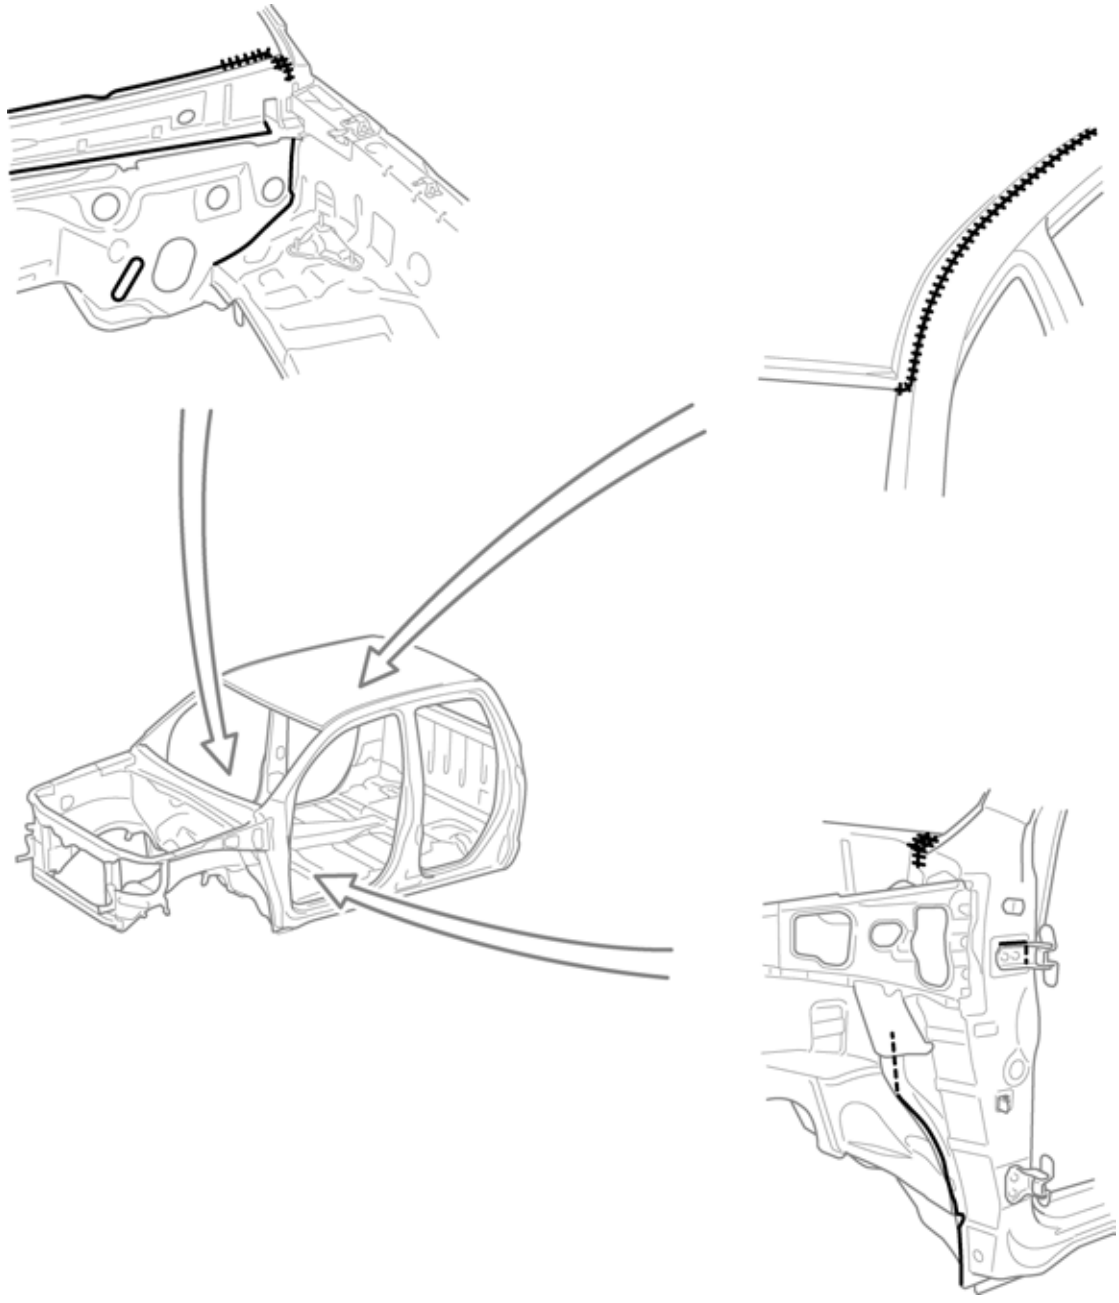


F27034

2. INSIDE

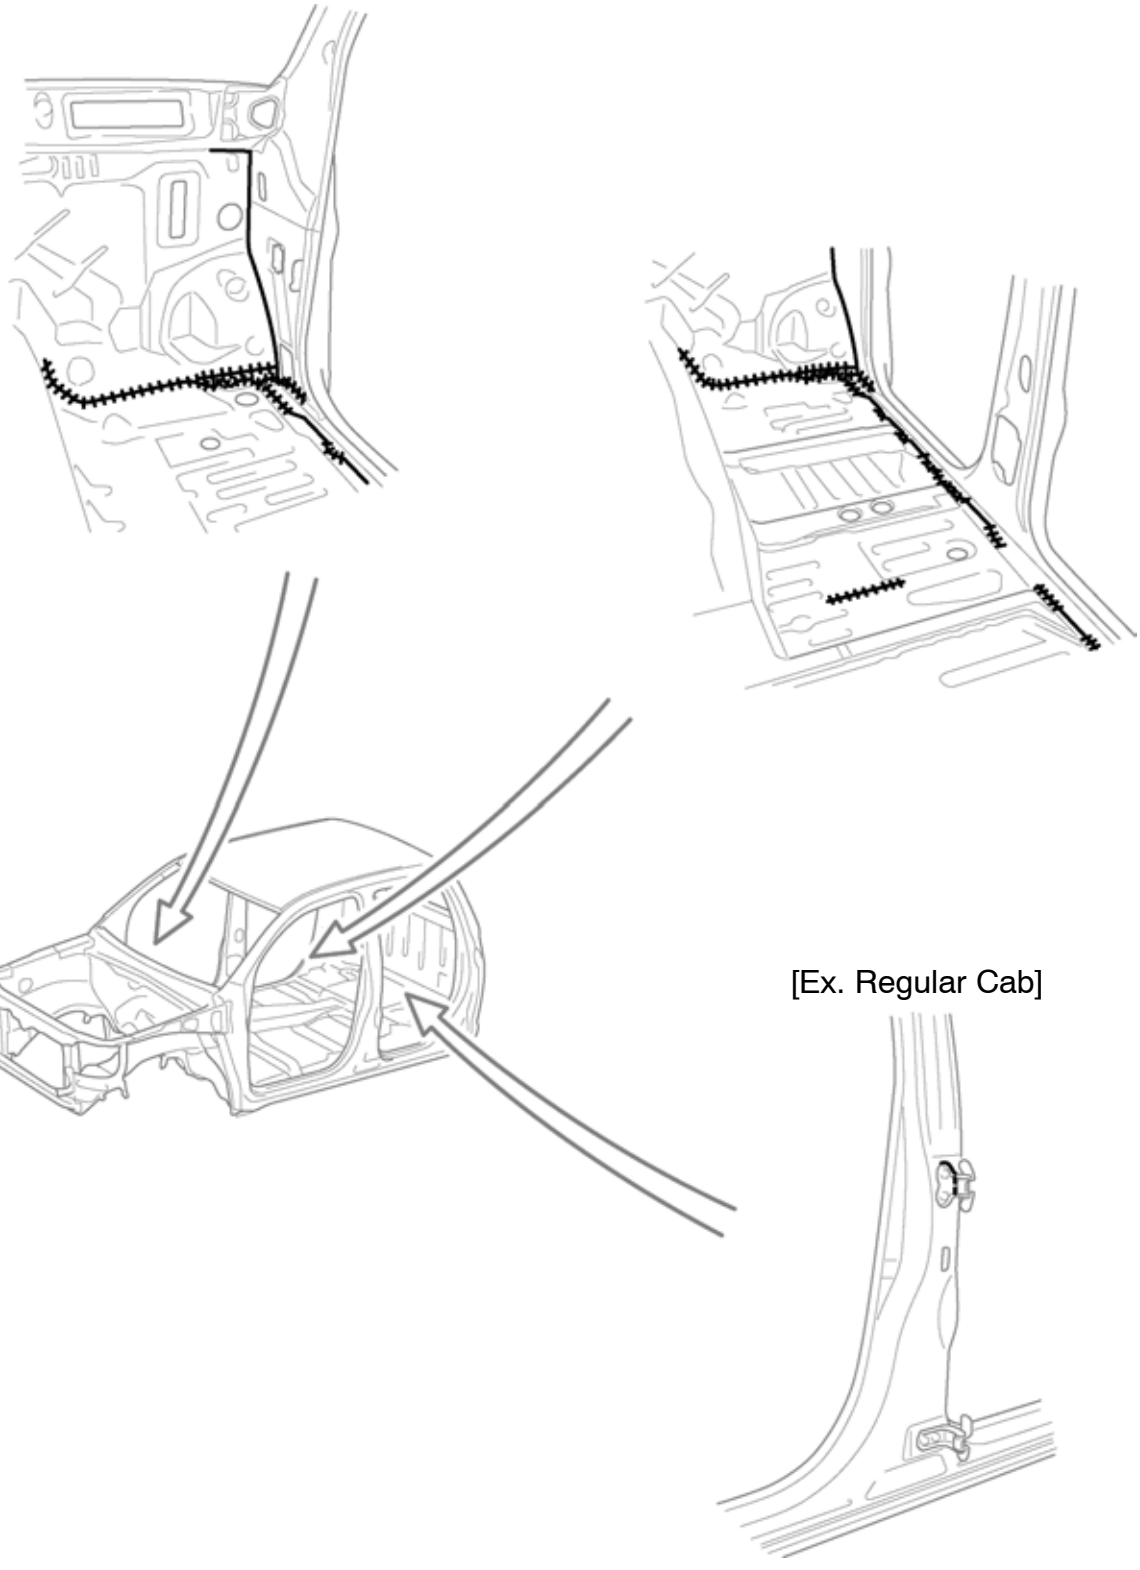


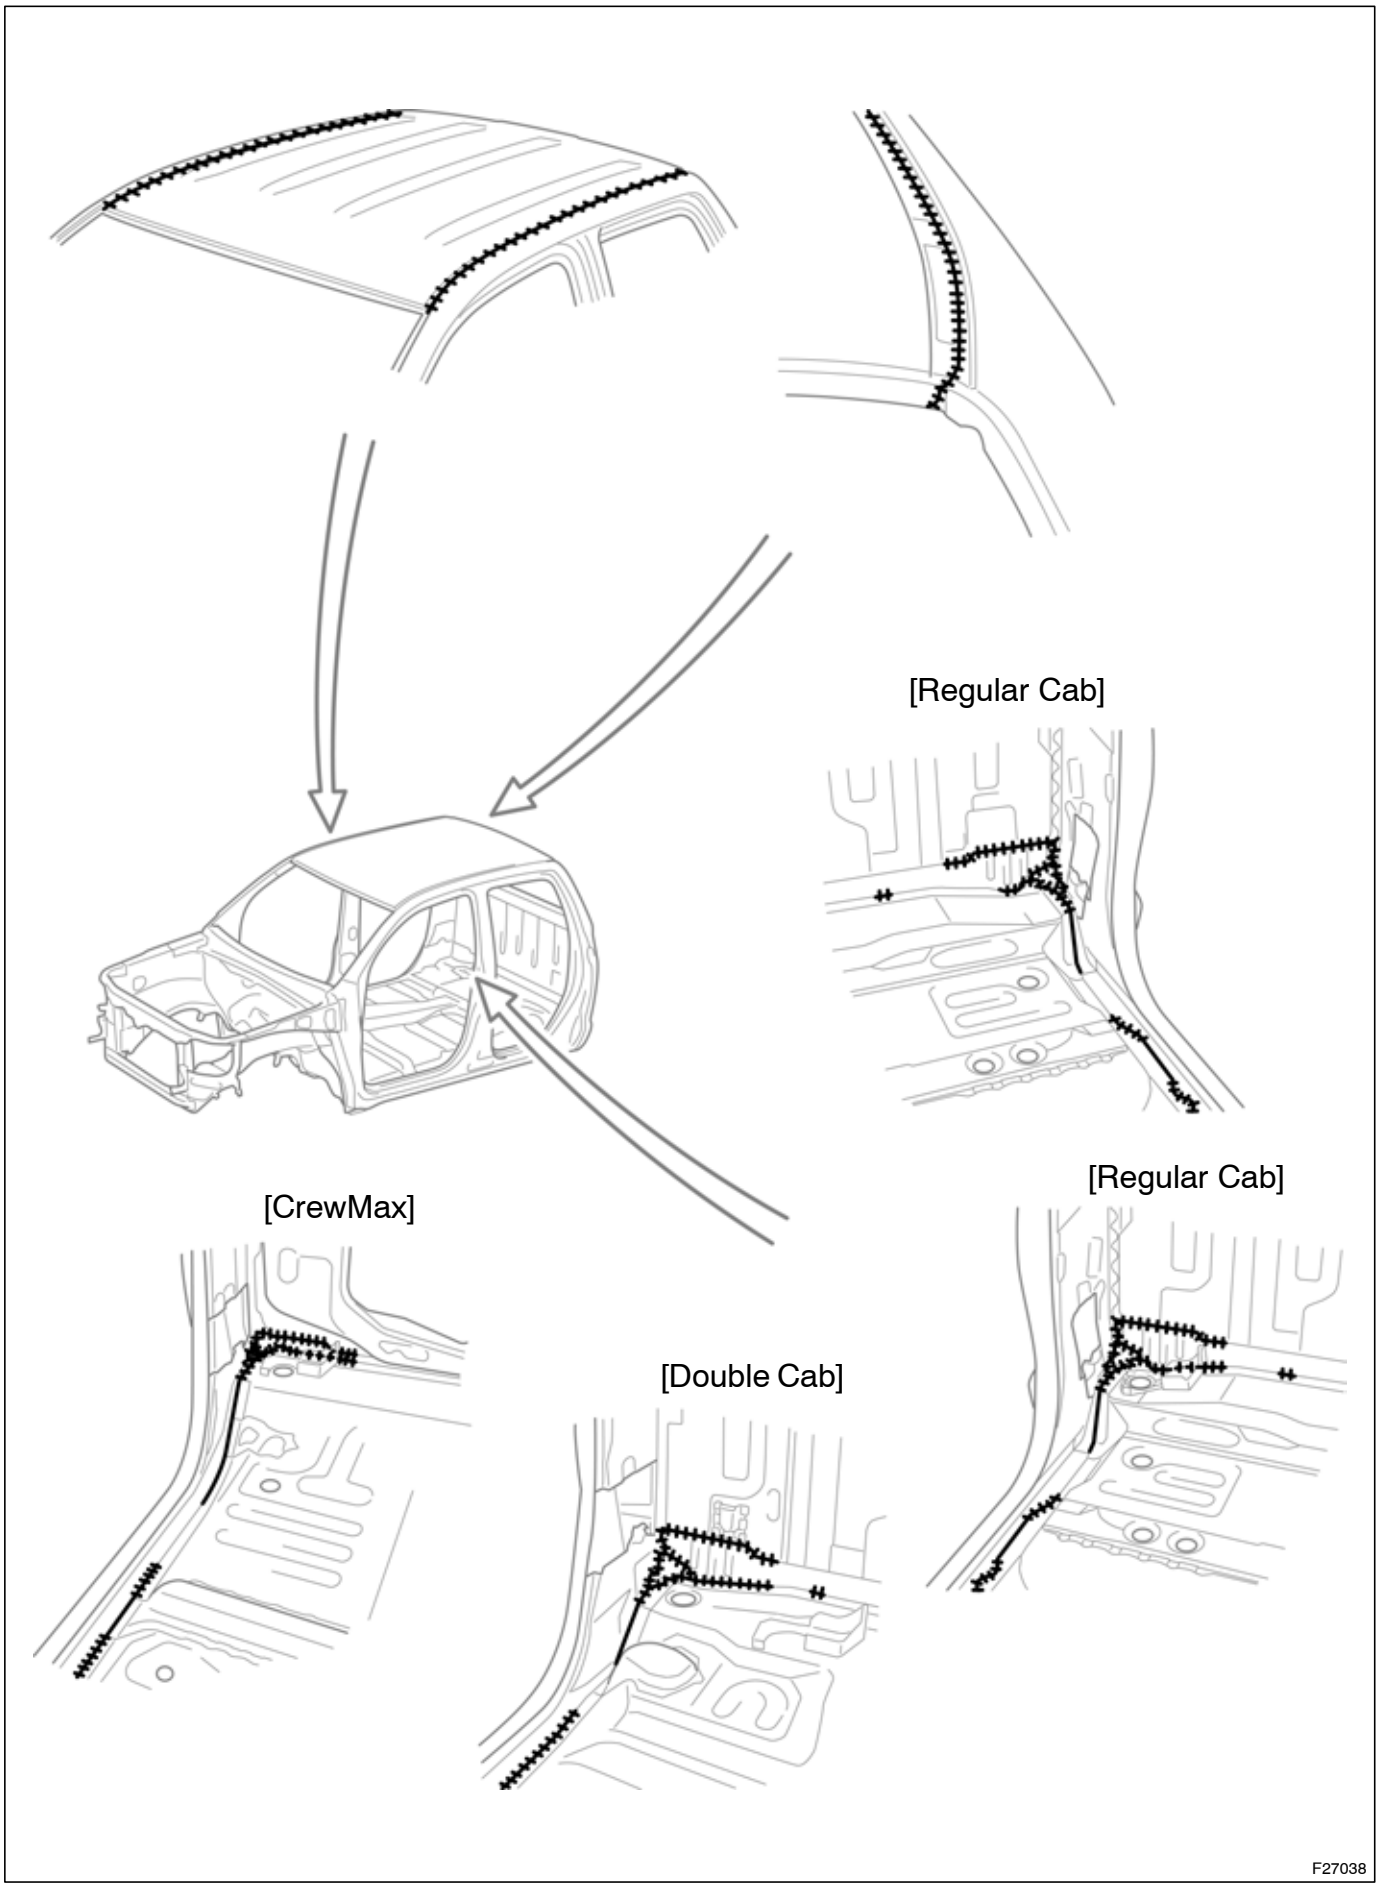
[Regular Cab]
[Regular Cab]
[CrewMax]
[Double Cab]
F27038

3. OUTSIDE

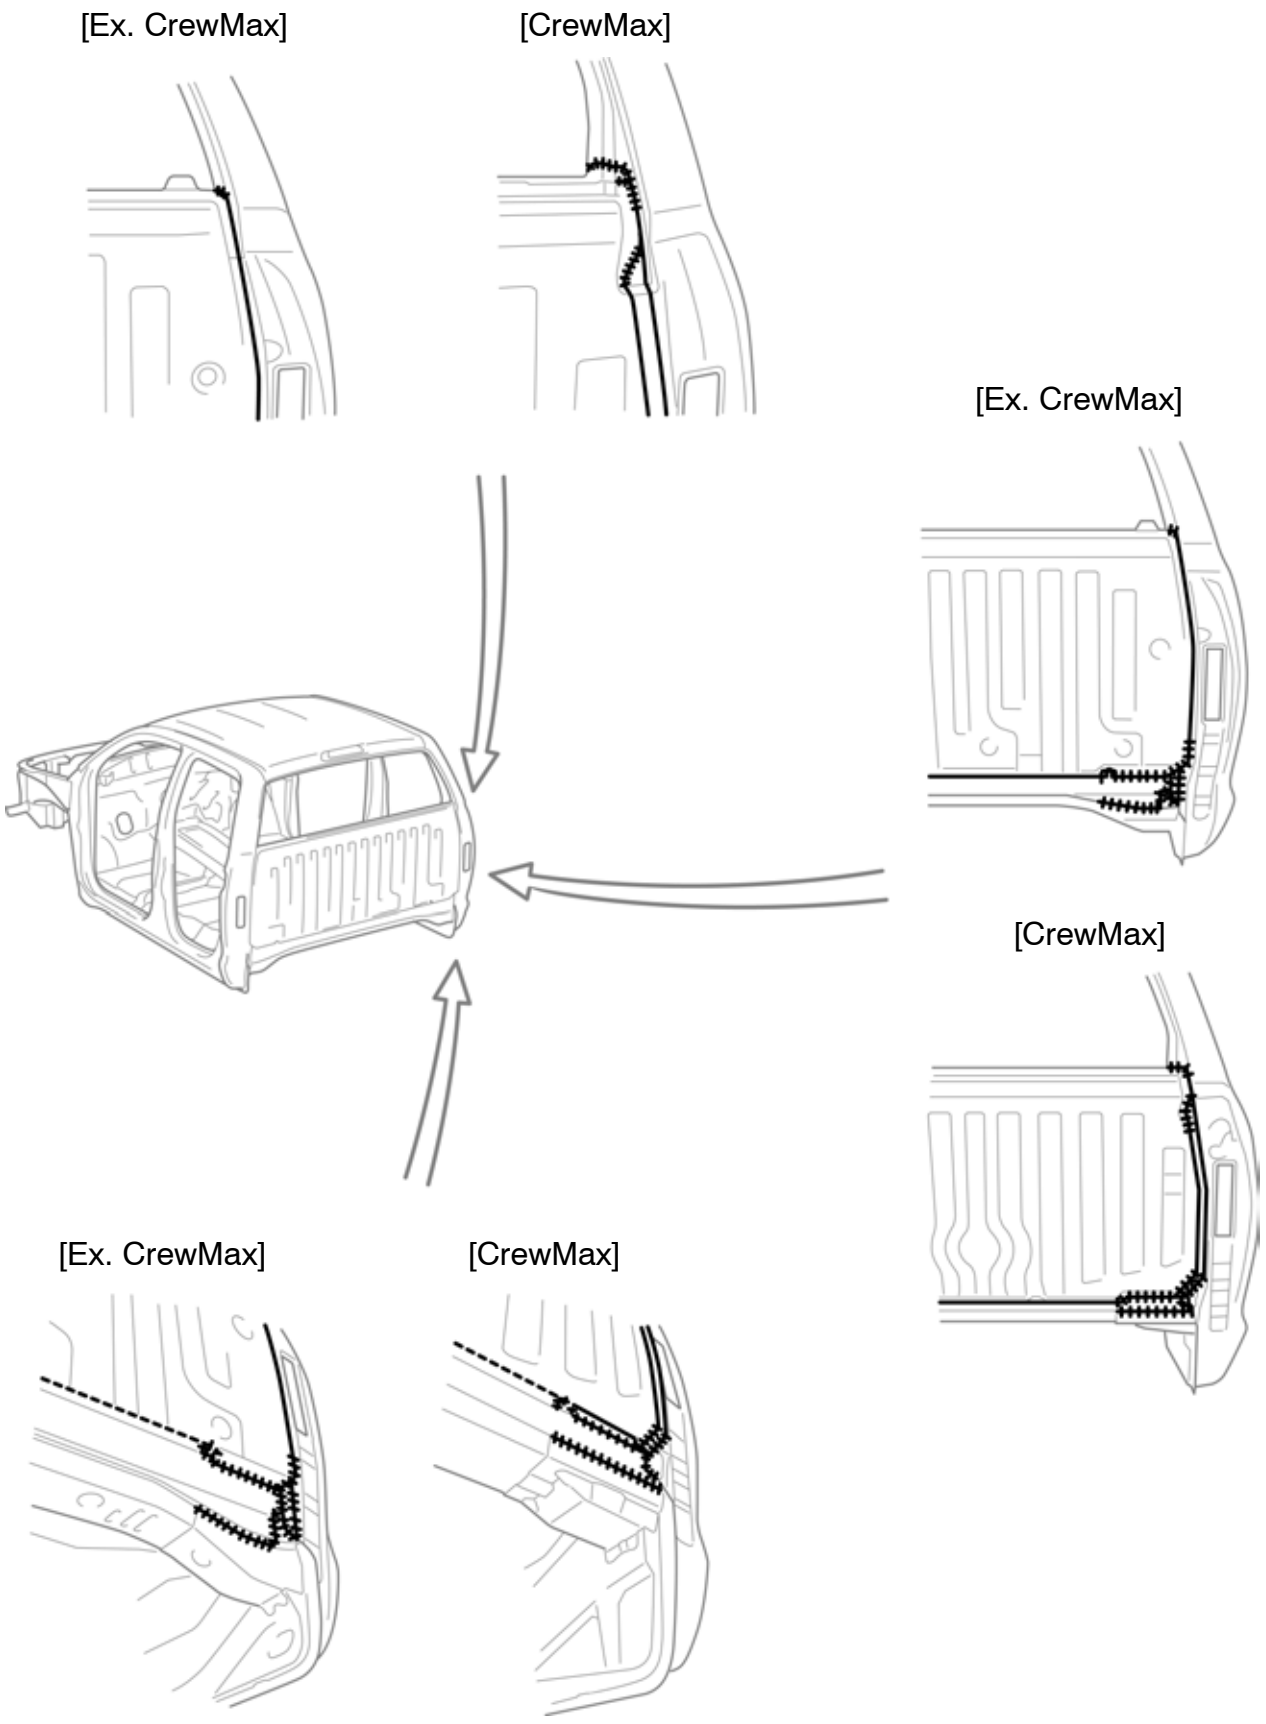


F27040

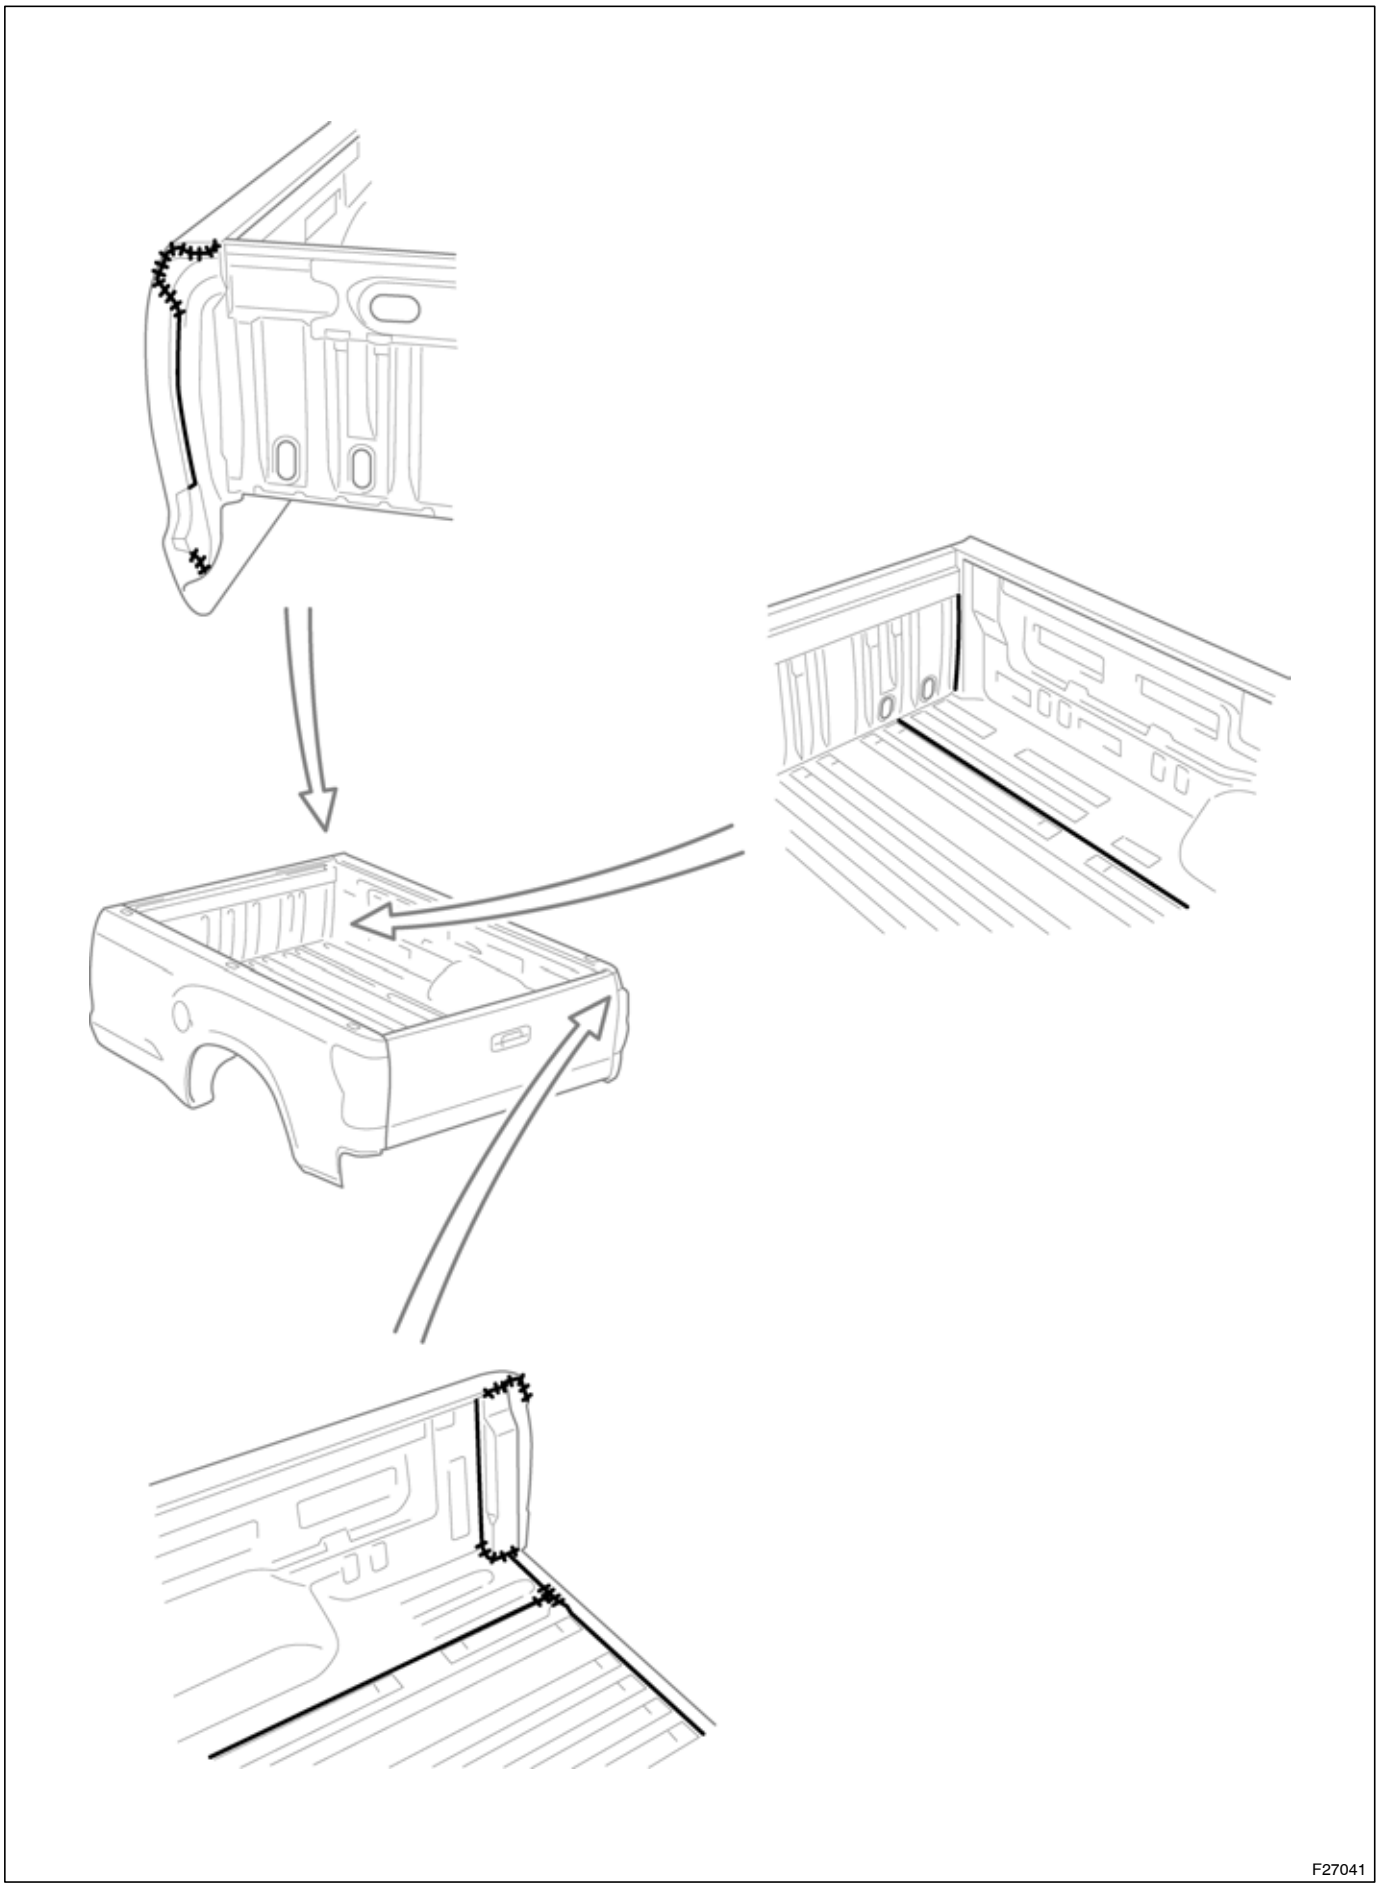


F27041

4. DOOR PARTS


[Regular Cab]

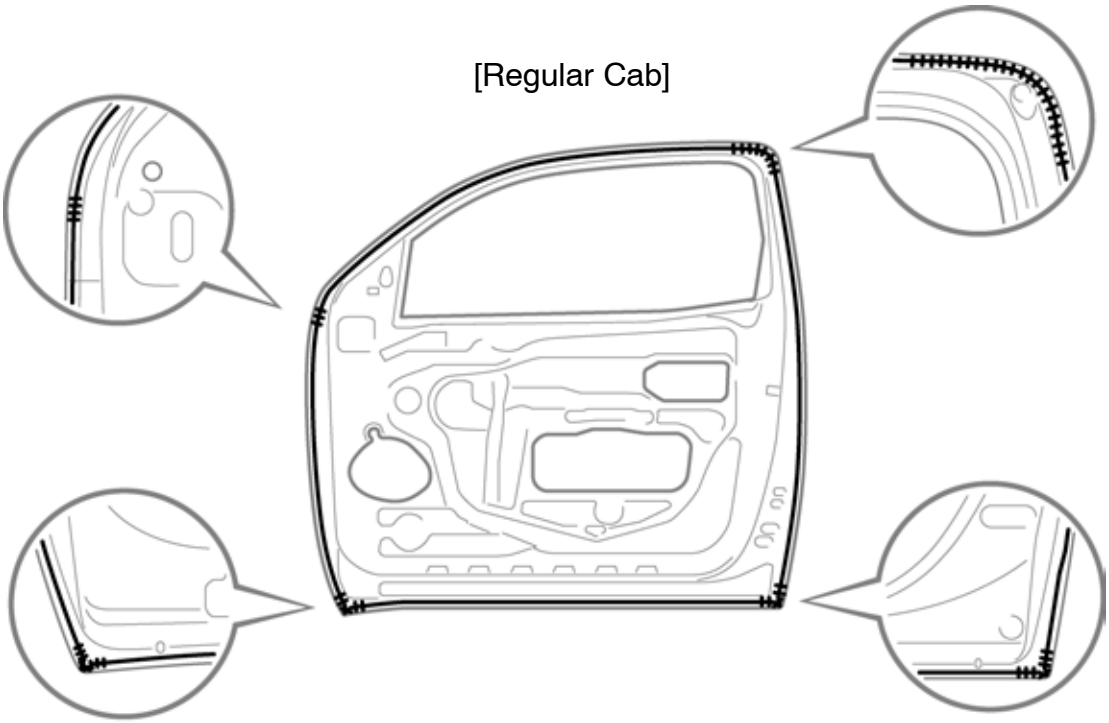


[Ex. Regular Cab]

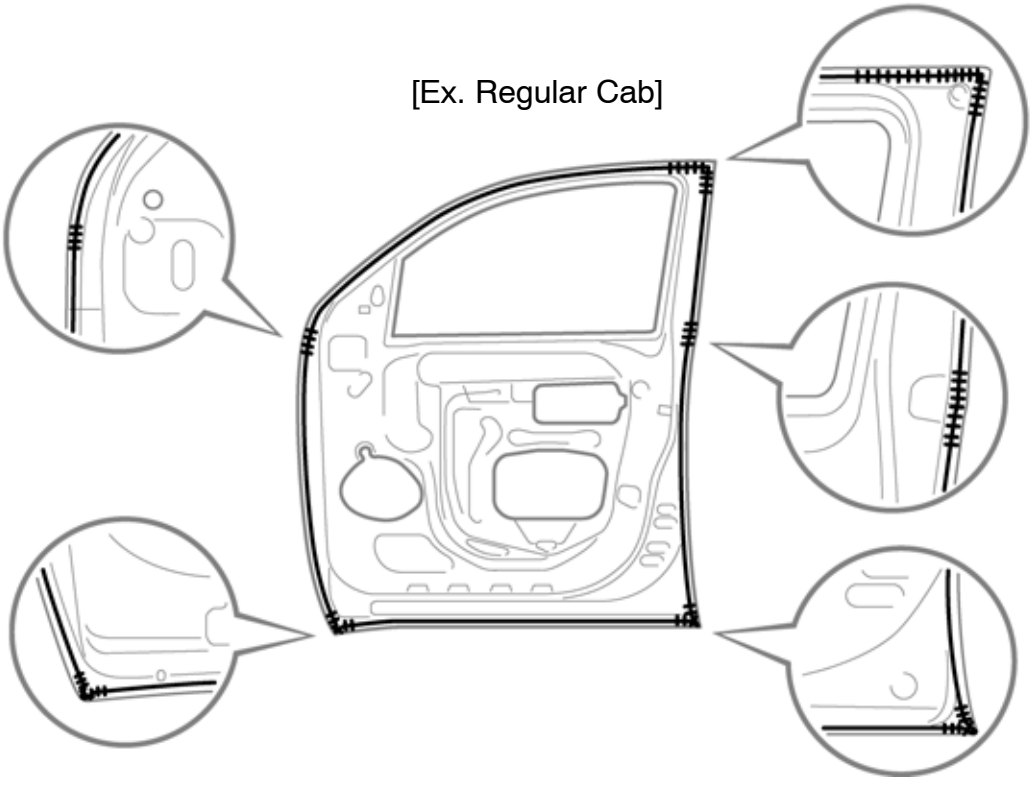


F27043

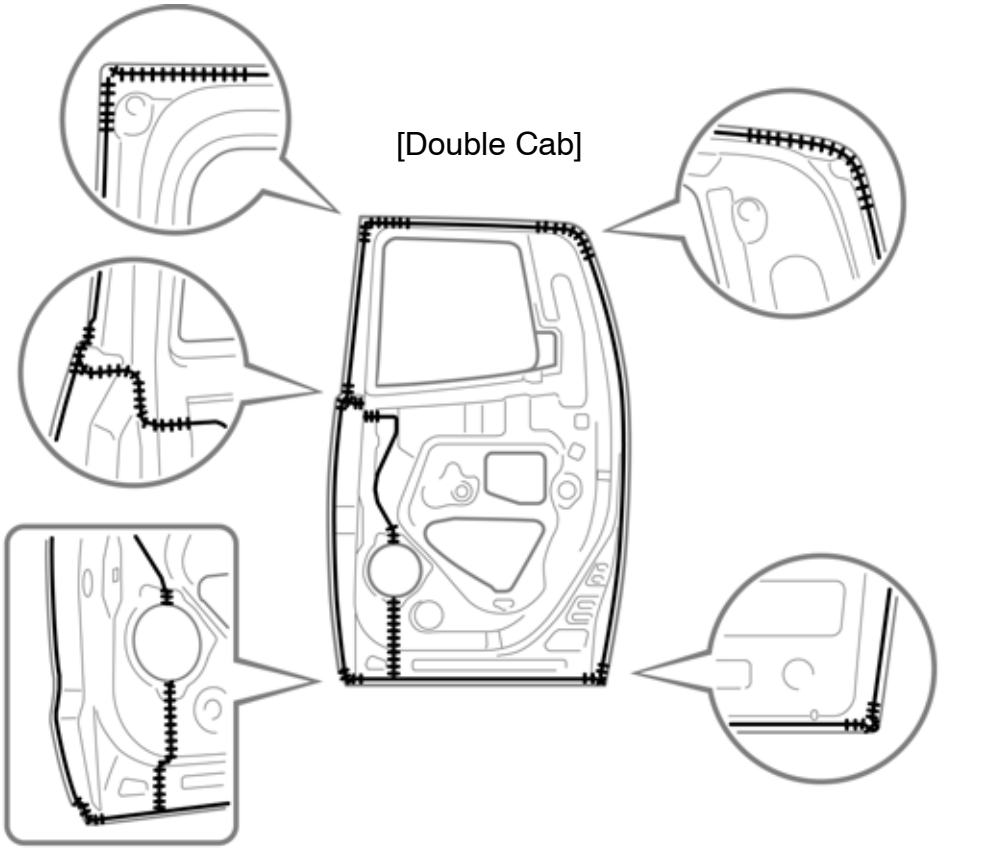

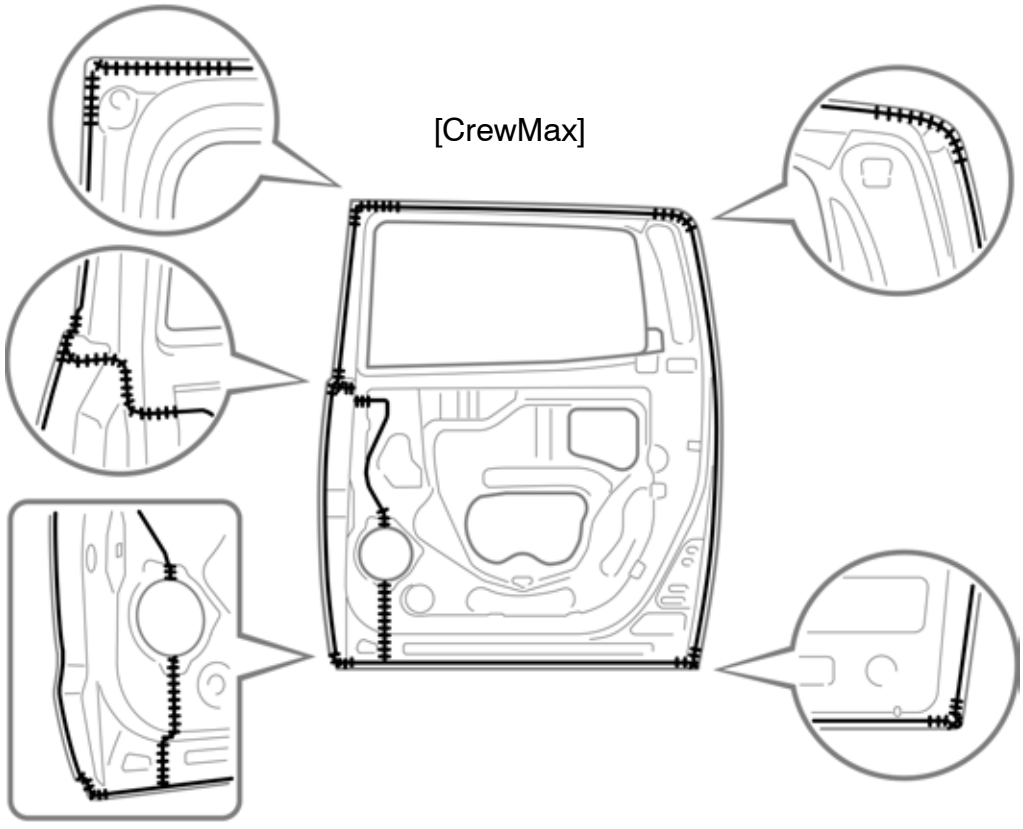

F27045

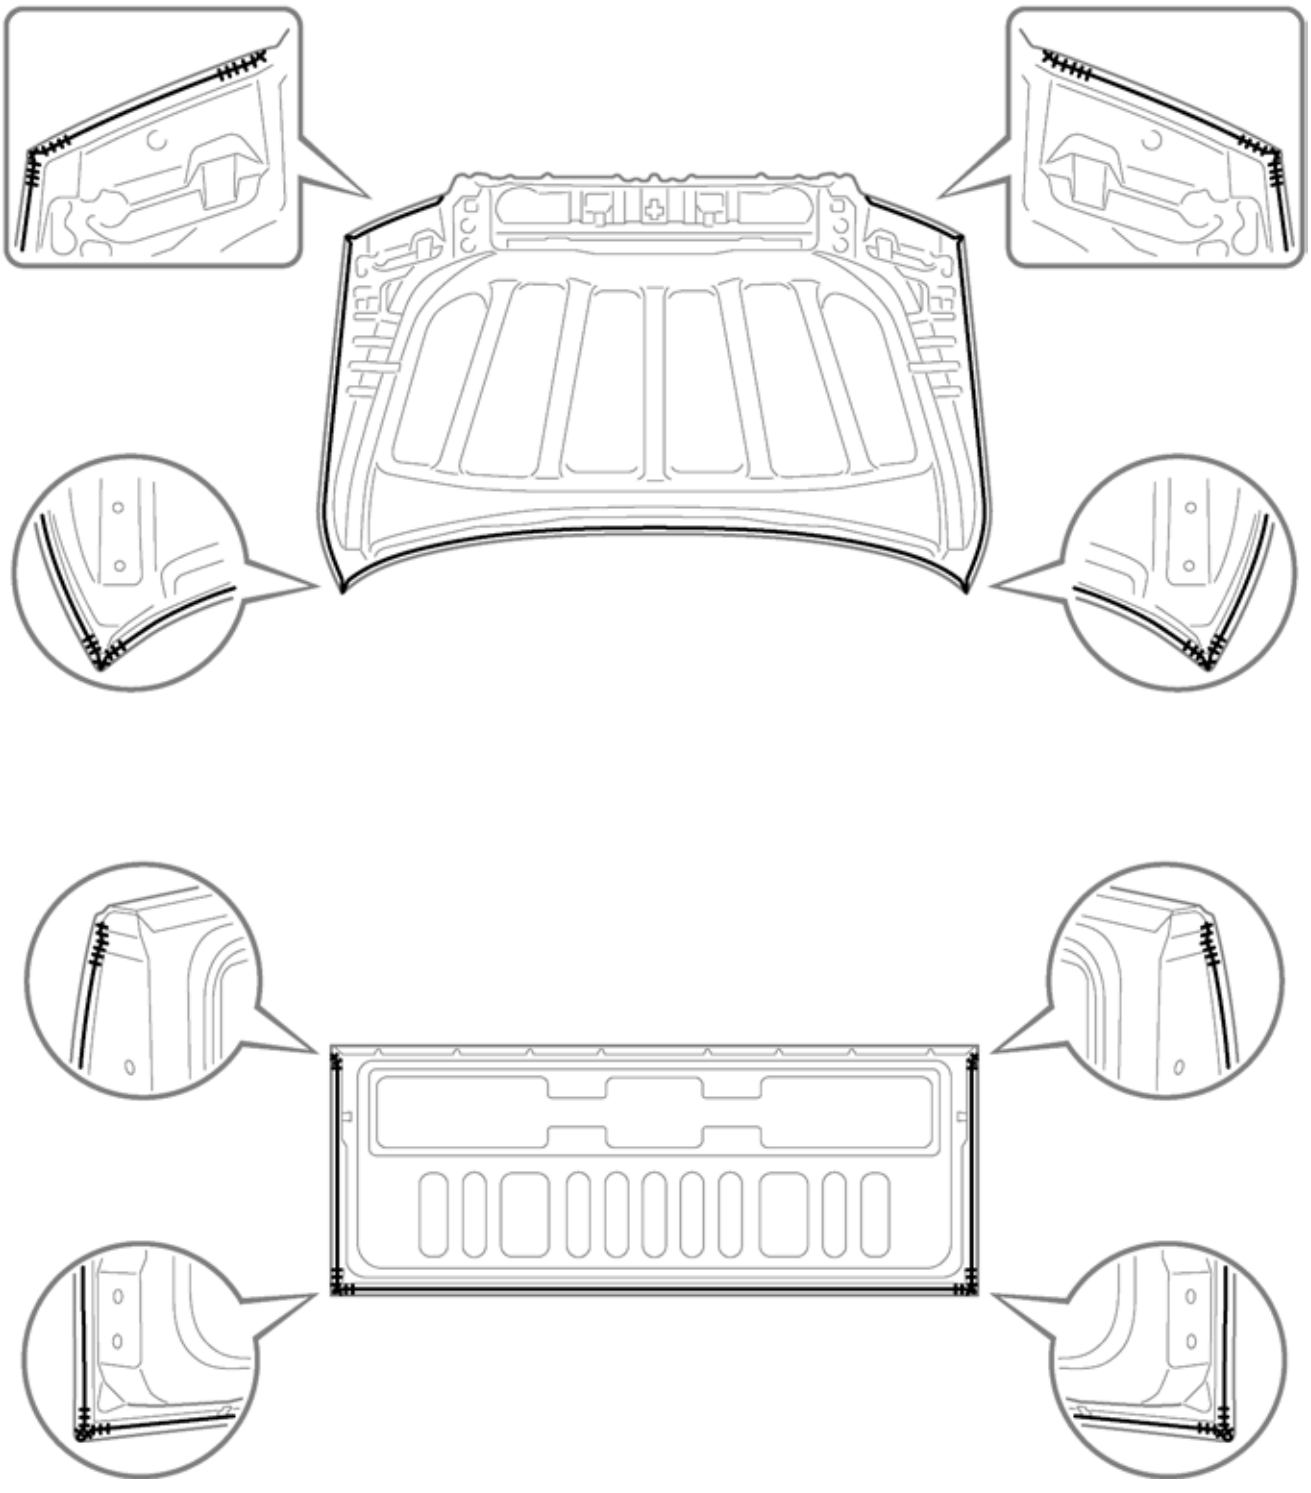

F27046