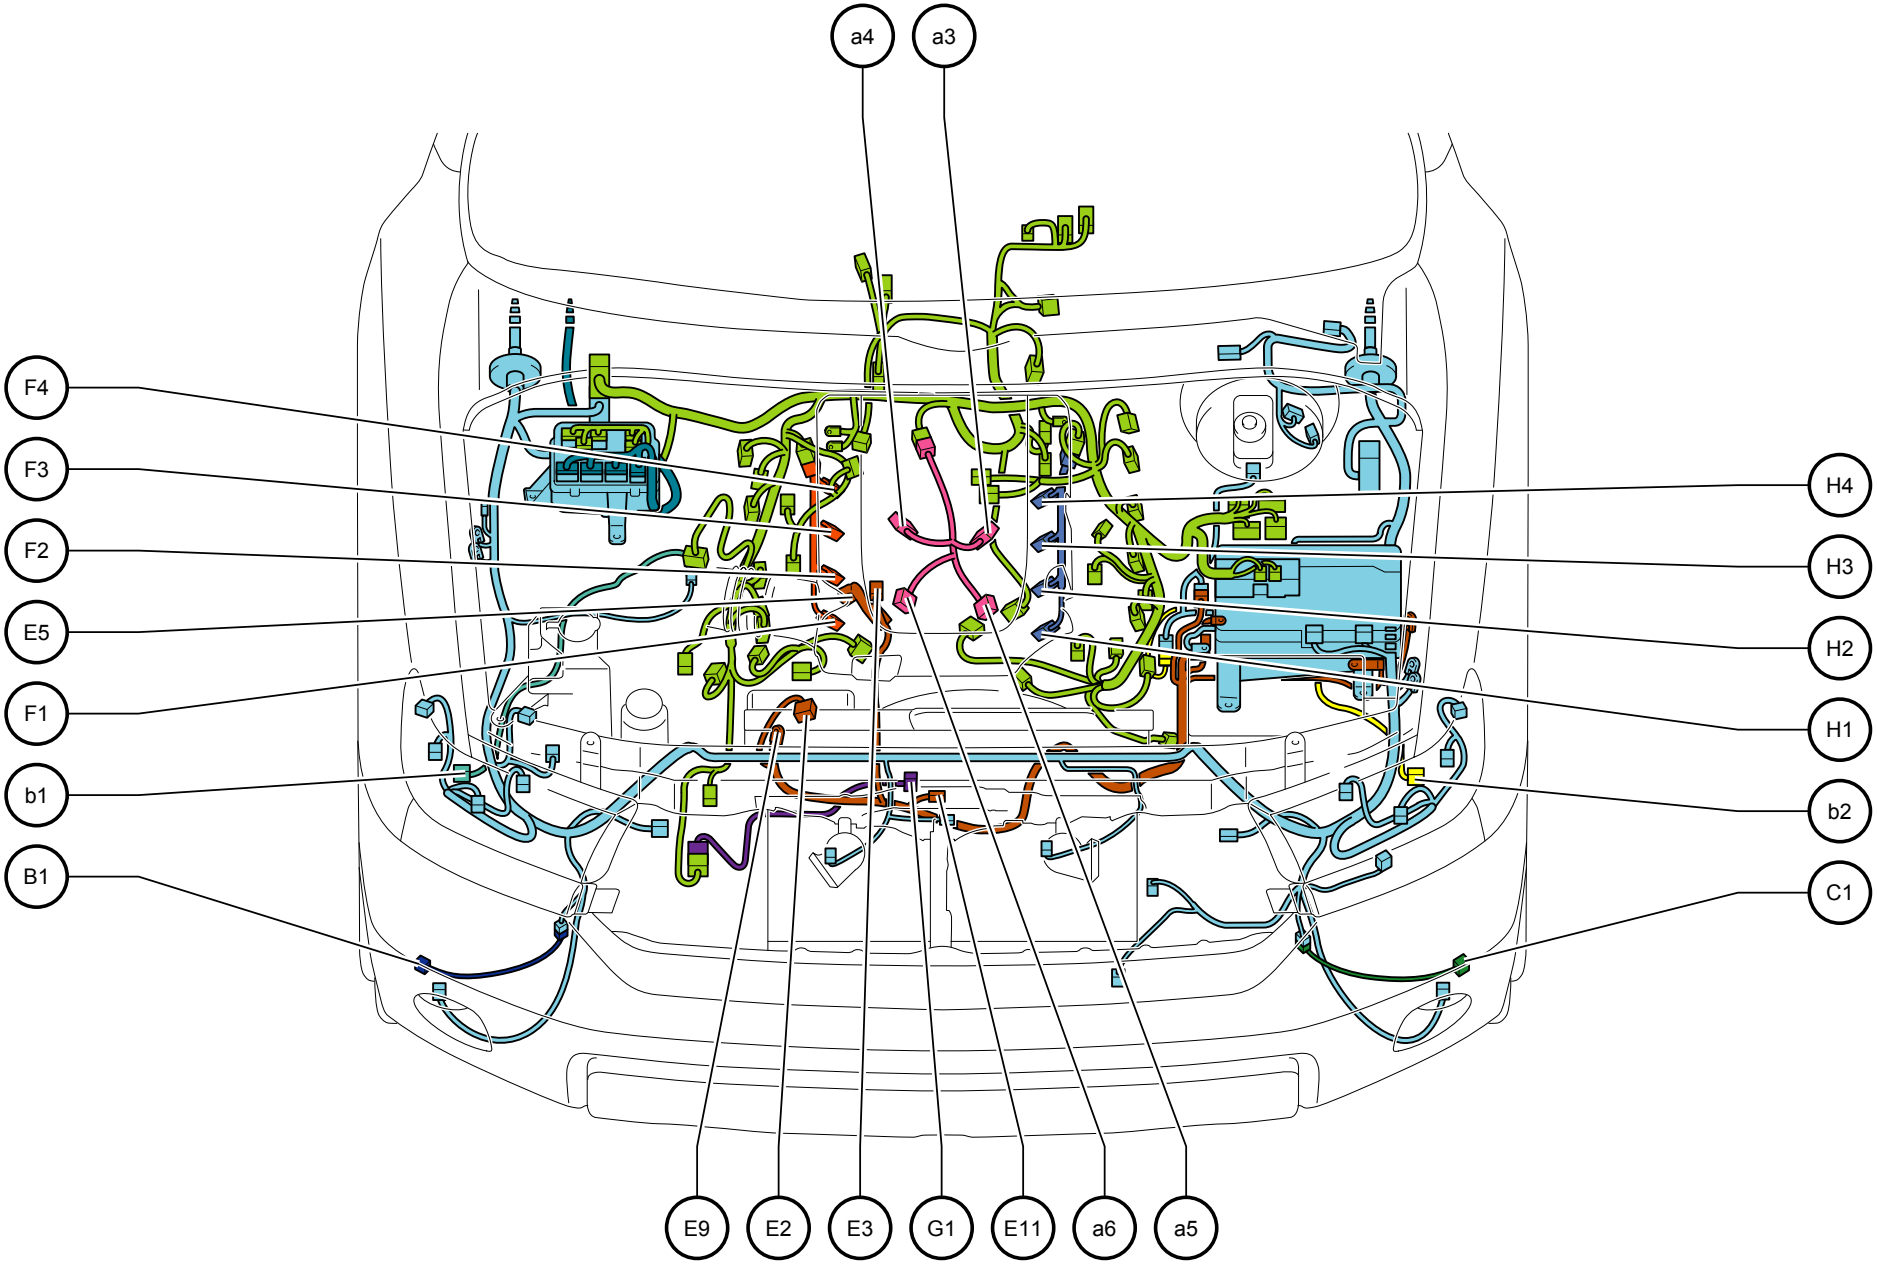

a4
a3
F4
F3
F2
E5
F1
b1
B1
H4
H3
H2
H1
b2
C1
E9
E2
E3
G1
E11
a6
a5

B 1 No.1 Ultrasonic Sensor (Front Right)

C 1 No.1 Ultrasonic Sensor (Front Left)

E 2 Generator
E 3 Starter
E 5 Starter
E 9 Generator
E 11 Oil Pressure Sender

F 1 Fuel Injector (No.2)
F 2 Fuel Injector (No.4)
F 3 Fuel Injector (No.6)
F 4 Fuel Injector (No.8)


G 1 ADD Actuator

H 1 Fuel Injector (No.1)
H 2 Fuel Injector (No.3)
H 3 Fuel Injector (No.5)
H 4 Fuel Injector (No.7)


a 3 Knock Sensor (Bank 1 Sensor 2)
a 4 Knock Sensor (Bank 2 Sensor 2)
a 5 Knock Sensor (Bank 1 Sensor 1)
a 6 Knock Sensor (Bank 2 Sensor 1)

b 1 Front Speed Sensor RH
b 2 Front Speed Sensor LH


B 1
Black

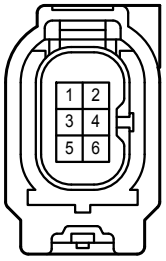

C 1
Black

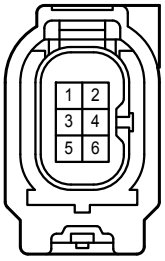


E 2



E 3
Black



E 5




E 9
Black




E 11
Black




F 1
Black

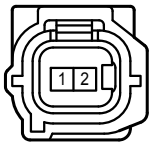


F 2
Black

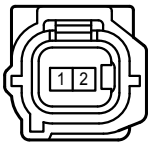


F 3
Black

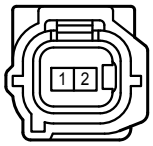


F 4
Black

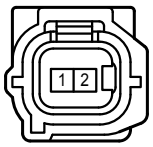

G 1
Black

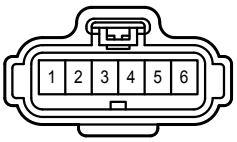


H 1
Black

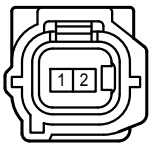


H 2
Black




H 3
Black

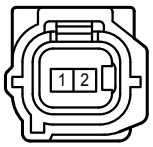


H 4
Black

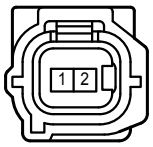


a 3
Black




a 4
Gray

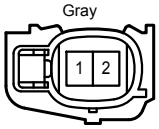


a 5
Black



a 6
Gray

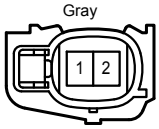

b 1
Black

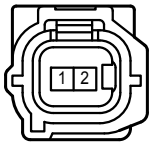

b 2
Black

