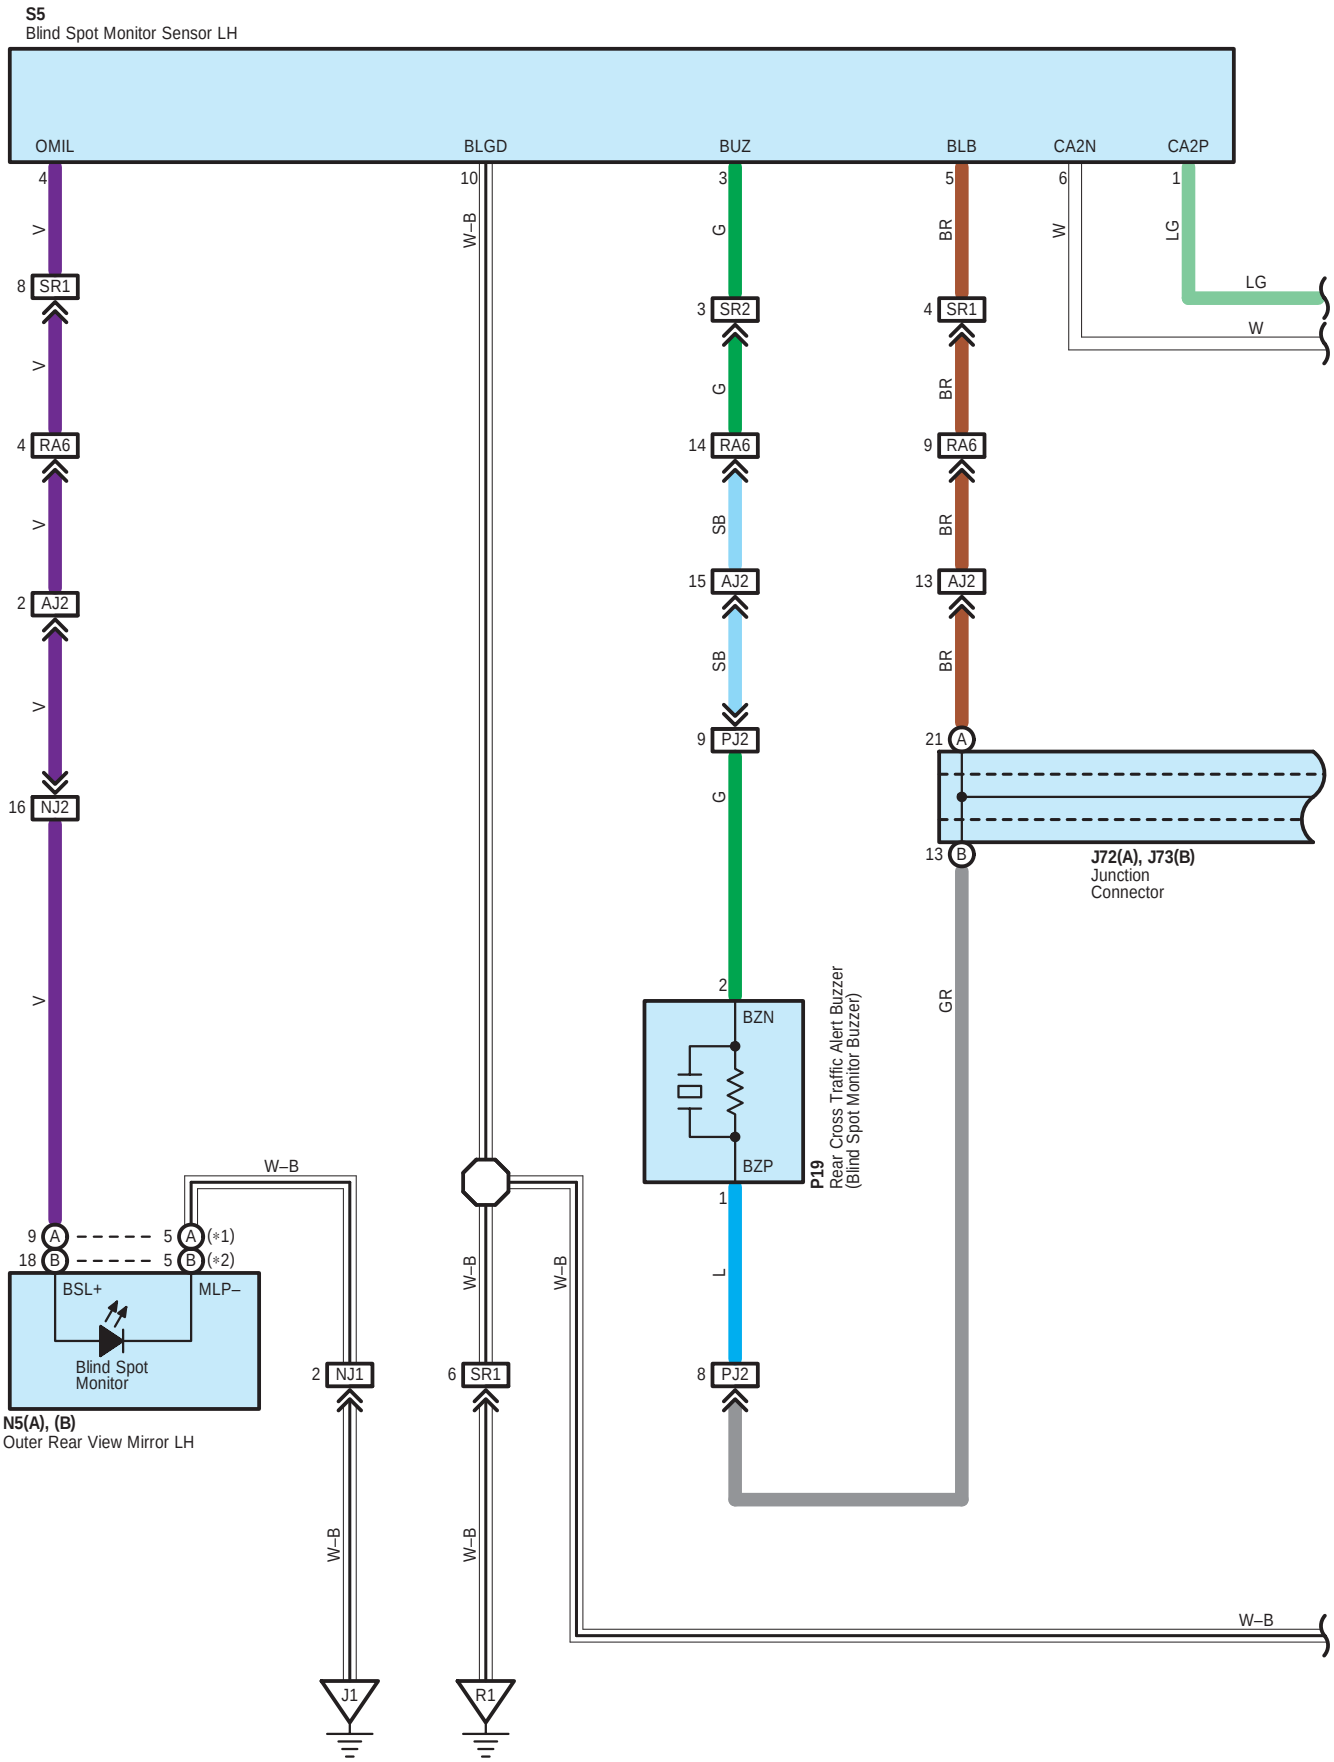
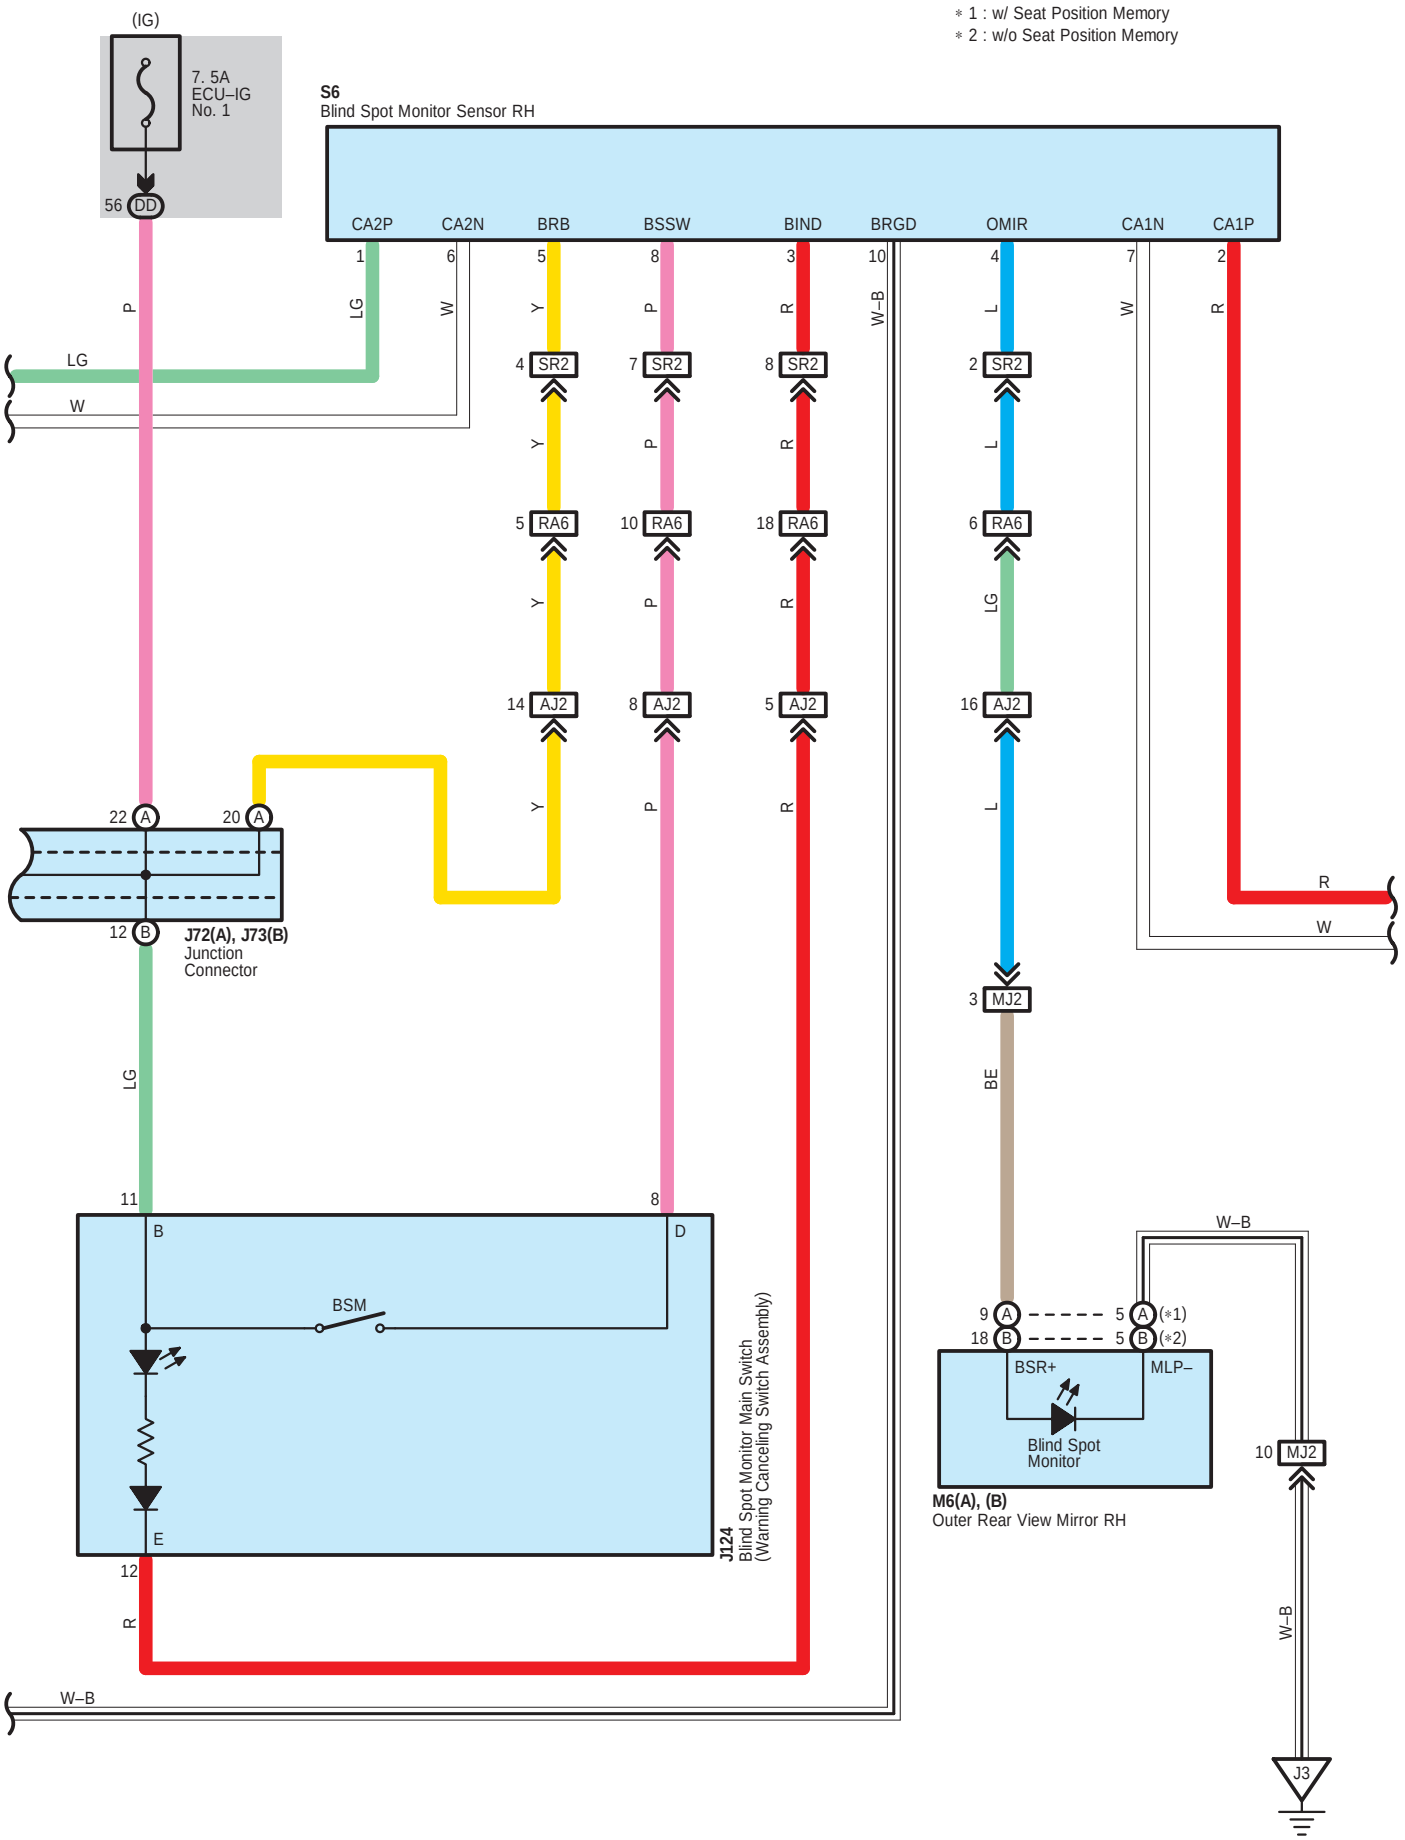
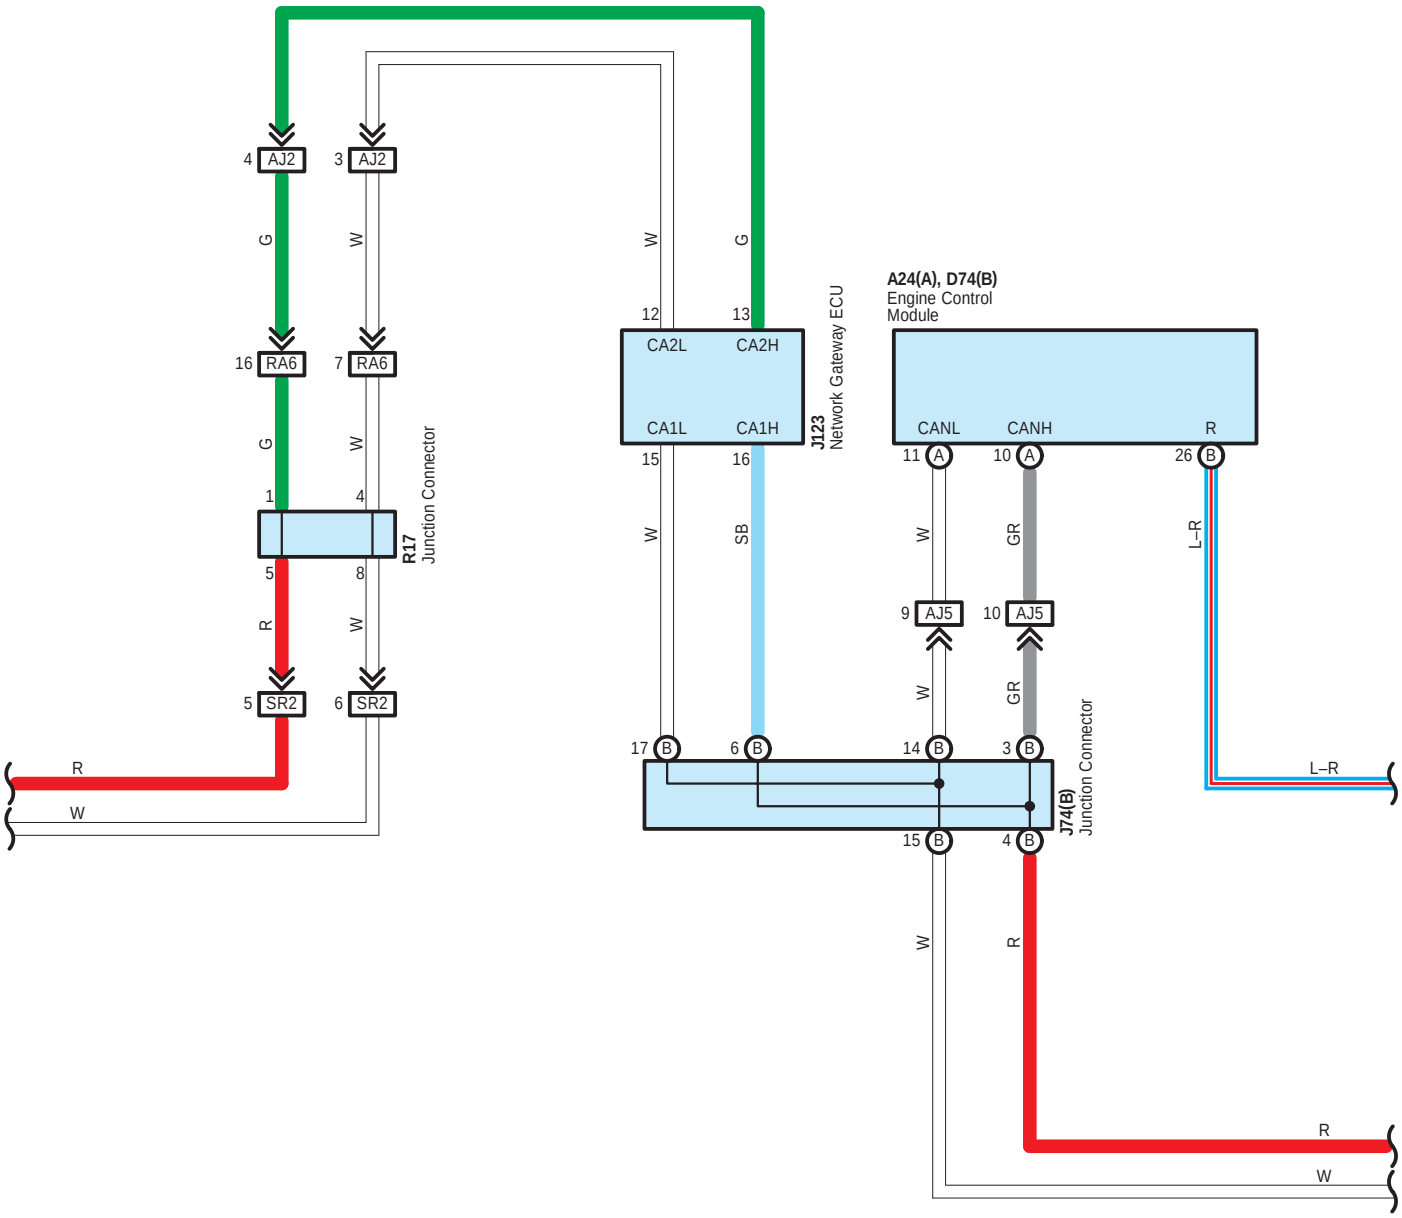
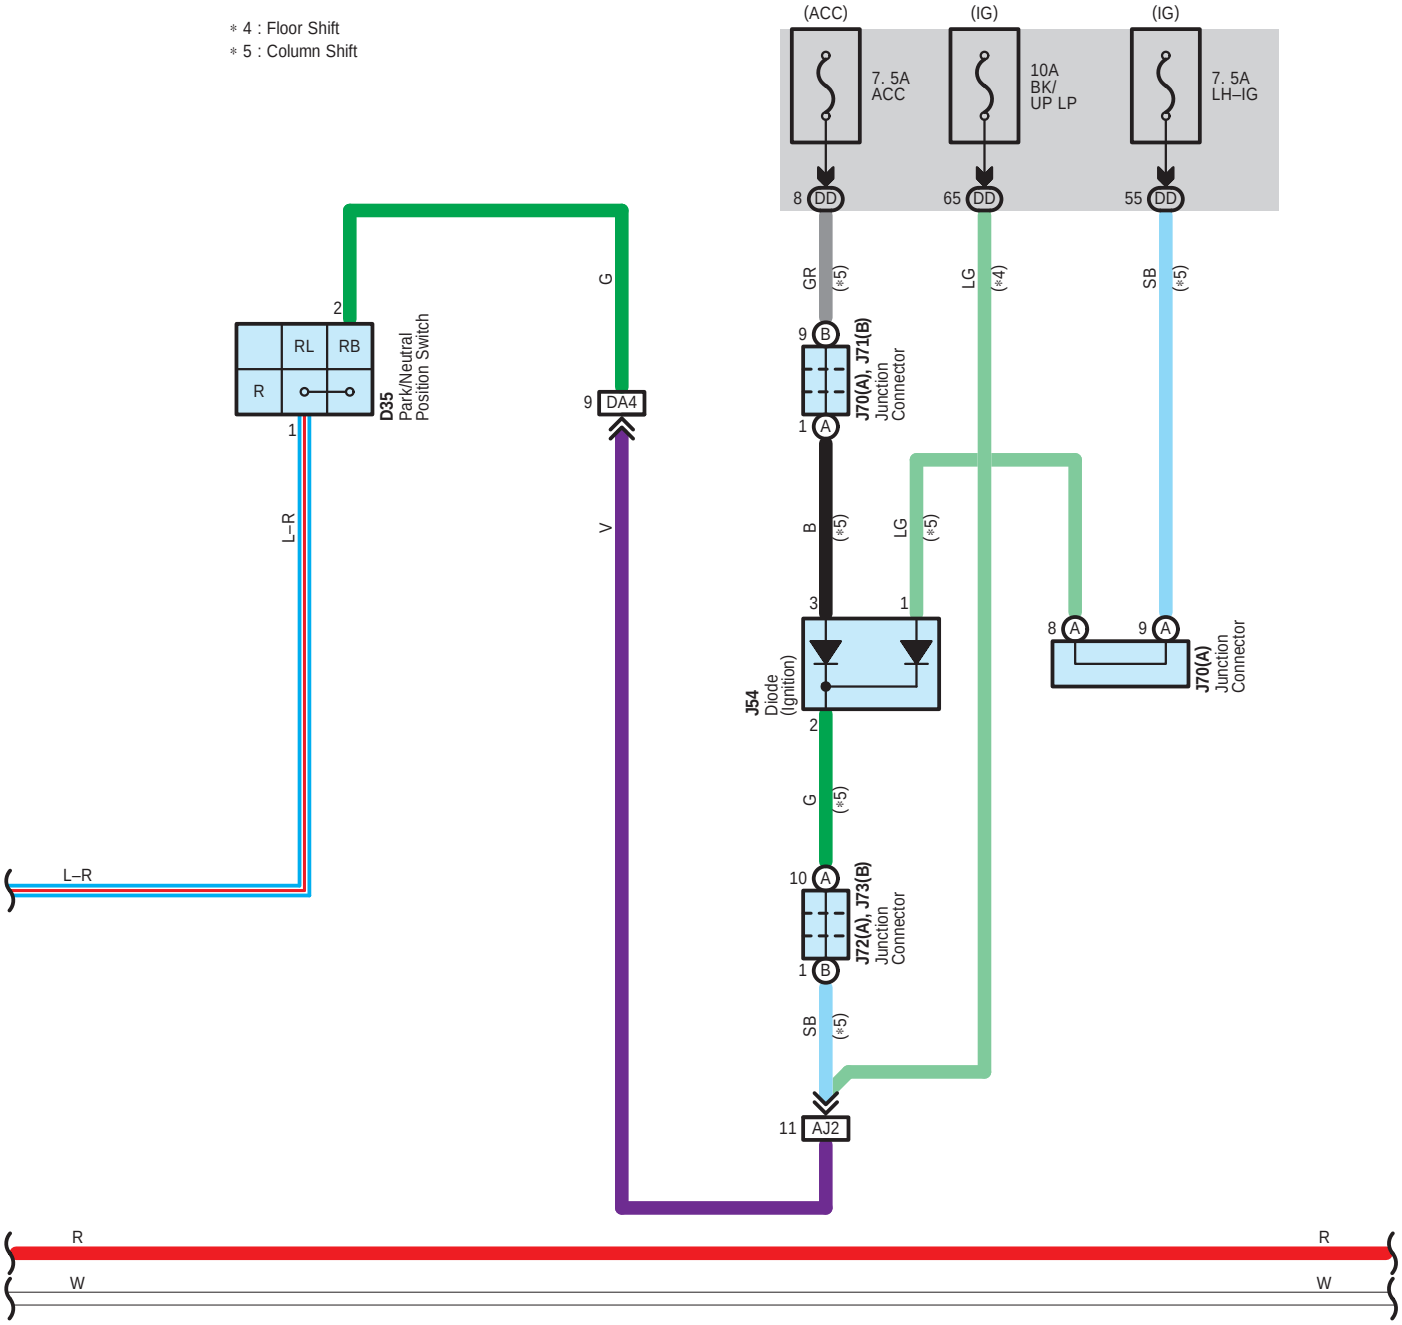
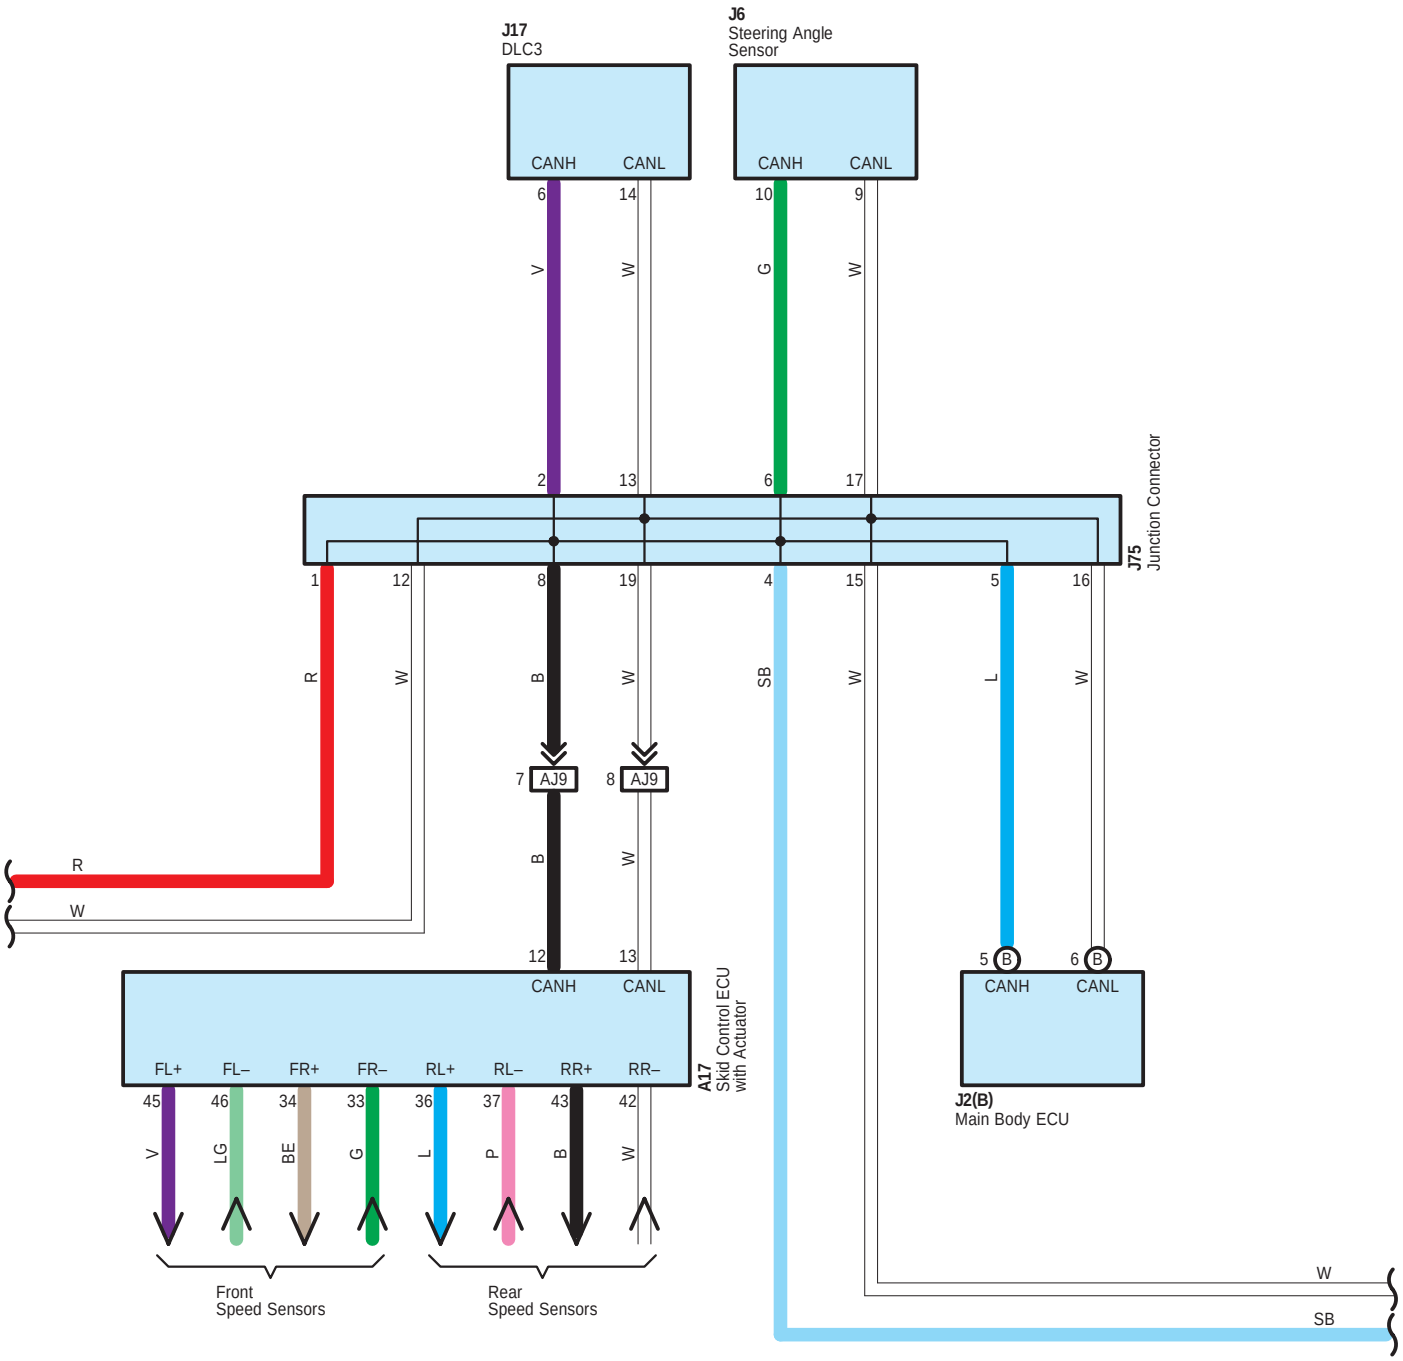
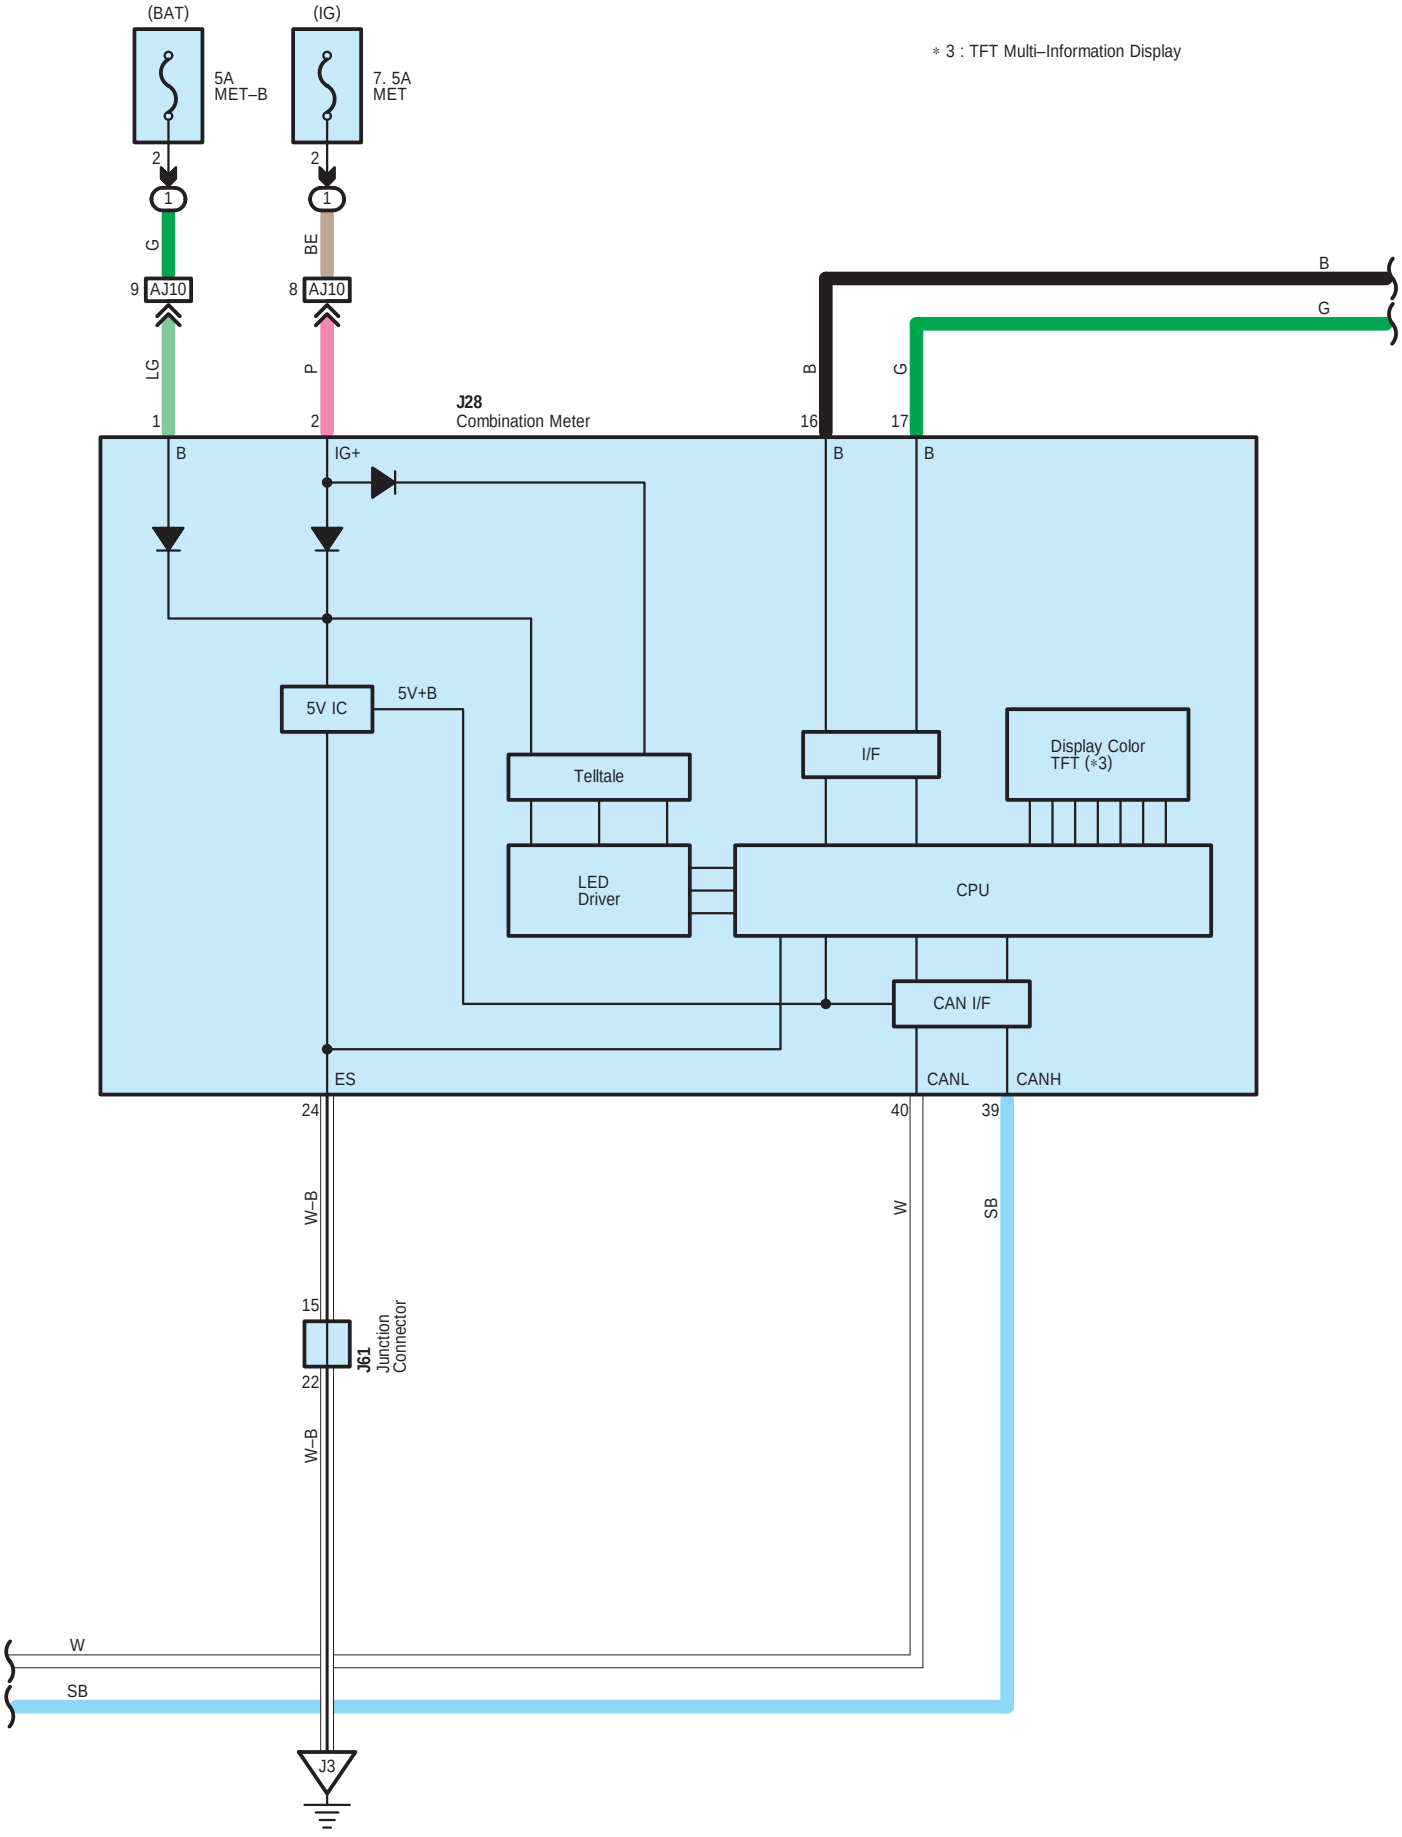

S5
Blind Spot Monitor Sensor LH
OMIL
BLGD
BUZ
BLB
CA2N
CA2P
4
V
8 SR1
V
4 RA6
V
2 AJ2
V
16 NJ2
V
10
W–B
3
G
3 SR2
G
14 RA6
SB
15 AJ2
SB
9 PJ2
G
2
5
BR
4 SR1
BR
9 RA6
BR
13 AJ2
BR
21 A
13 B
GR
6
W
1
LG
LG
W
J72(A), J73(B)
Junction
Connector
BZN
BZP
P19
Rear Cross Traffic Alert Buzzer
(Blind Spot Monitor Buzzer)
1
L
8 PJ2
W–B
9 A
18 B
5 A (*1)
5 B (*2)
BSL+
MLP–
Blind Spot
Monitor
N5(A), (B)
Outer Rear View Mirror LH
2 NJ1
6 SR1
W–B
W–B
W–B
W–B
J1
R1



∗ 1 : w/ Seat Position Memory
∗ 2 : w/o Seat Position Memory
(IG)
7. 5A
ECU–IG
No. 1
56 DD
S6
Blind Spot Monitor Sensor RH
CA2P
CA2N
BRB
BSSW
BIND
BRGD
OMIR
CA1N
CA1P
1
6
5
8
3
10
4
7
2
P
LG
W
Y
P
R
W–B
L
W
R
LG
W
4 SR2
7 SR2
8 SR2
2 SR2
5 RA6
10 RA6
18 RA6
6 RA6
14 AJ2
8 AJ2
5 AJ2
16 AJ2
LG
22 A
20 A
12 B
J72(A), J73(B)
Junction
Connector
R
W
3 MJ2
BE
LG
11
8
B
D
BSM
E
12
R
J124
Blind Spot Monitor Main Switch
(Warning Canceling Switch Assembly)
W–B
9 A
18 B
5 A (∗1)
5 B (∗2)
BSR+
MLP–
Blind Spot
Monitor
M6(A), (B)
Outer Rear View Mirror RH
W–B
10 MJ2
W–B
J3


4 AJ2
3 AJ2
G
W
16 RA6
7 RA6
G
W
1
4
5
8
R
W
R17
Junction Connector
5 SR2
6 SR2
R
W
12
13
CA2L
CA2H
CA1L
CA1H
15
16
W
SB
J123
Network Gateway ECU
17 B
6 B
A24(A), D74(B)
Engine Control
Module
CANL
CANH
R
11 A
10 A
26 B
W
GR
L–R
9 AJ5
10 AJ5
W
GR
14 B
3 B
15 B
4 B
J74(B)
Junction Connector
L–R
W
R
R
W



* 4 : Floor Shift
* 5 : Column Shift
(ACC)
(IG)
(IG)
7. 5A
ACC
10A
BK/
UP LP
7. 5A
LH–IG
8 DD
65 DD
55 DD
GR (*5)
LG (*4)
SB (*5)
9 B
1 A
J70(A), J71(B)
Junction
Connector
B (*5)
LG (*5)
3
1
J54
Diode
(Ignition)
8 A
9 A
J70(A)
Junction
Connector
2
G (*5)
10 A
1 B
J72(A), J73(B)
Junction
Connector
SB (*5)
11 AJ2
2
RL
RB
R
1
D35
Park/Neutral
Position Switch
L–R
9 DA4
G
V
L–R
R
W
R
W


J17
DLC3
CANH
CANL
6
14
V
W
J6
Steering Angle
Sensor
CANH
CANL
10
9
G
W
2
13
6
17
J75
Junction Connector
1
12
8
19
4
15
5
16
R
W
B
W
SB
W
L
W
7
AJ9
8
AJ9
R
W
B
W
12
13
CANH
CANL
5
B
6
B
CANH
CANL
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
45
46
34
33
36
37
43
42
V
LG
BE
G
L
P
B
W
A17
Skid Control ECU
with Actuator
J2(B)
Main Body ECU
Front
Speed Sensors
Rear
Speed Sensors
W
SB



(BAT)
(IG)
5A
MET–B
7. 5A
MET
2
1
G
BE
9 AJ10
8 AJ10
LG
P
1
2
J28
Combination Meter
16
17
B
G
B
G
B
IG+
B
B
5V IC
5V+B
Telltale
I/F
Display Color
TFT (*3)
LED
Driver
CPU
CAN I/F
ES
CANL
CANH
24
40
39
W–B
W
SB
15
J61
Junction
Connector
22
W–B
W
SB
J3
* 3 : TFT Multi–Information Display

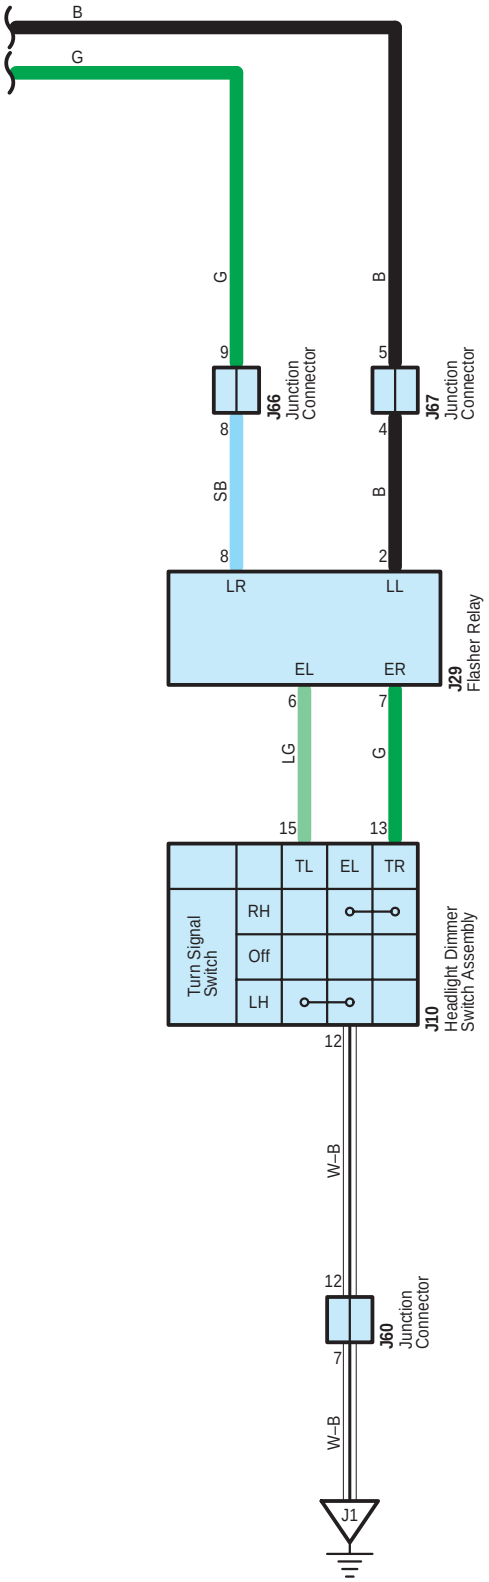
B
G
G
9
J66
Junction
Connector
8
SB
8
LR
B
5
J67
Junction
Connector
4
B
2
LL
J29
Flasher Relay
EL
ER
6
LG
15
7
G
13
TL
EL
TR
Turn Signal
Switch
RH
Off
LH
J10
Headlight Dimmer
Switch Assembly
12
W–B
12
J60
Junction
Connector
7
W–B
J1


A 17
Black

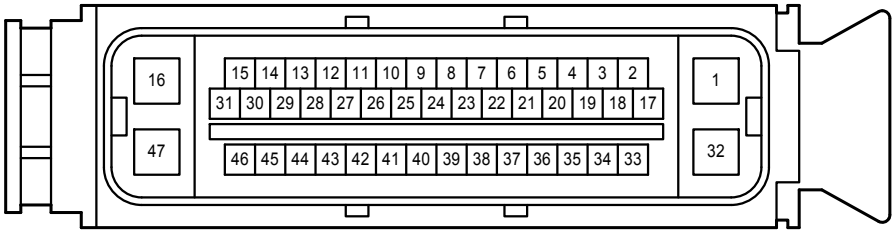


A 24
Black

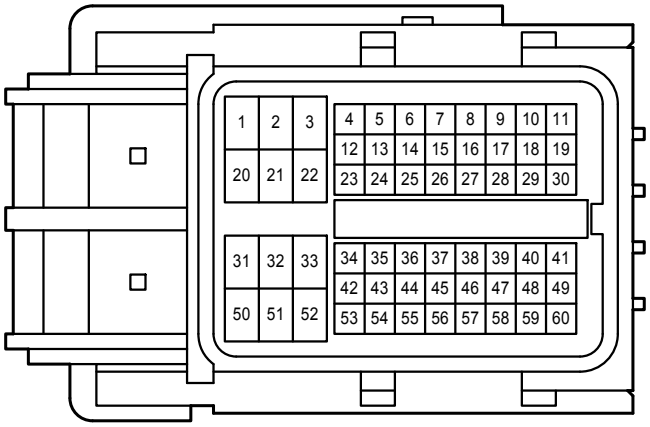


D 35
Gray

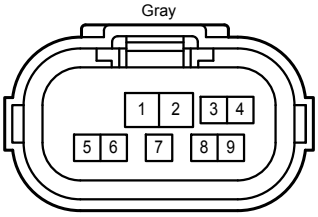


D 74
Black

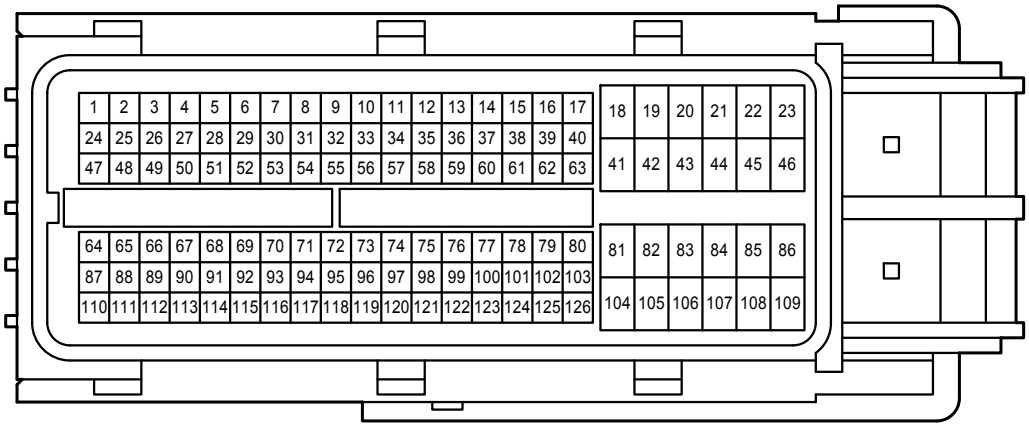


J 2
White

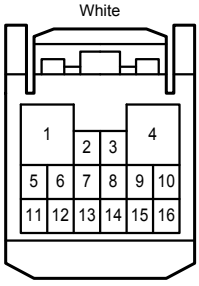


J 6
Gray

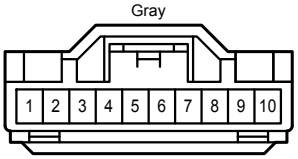


J 10
White

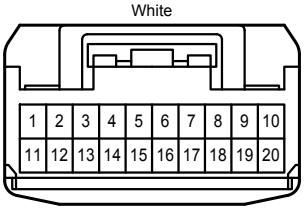


J 17
White

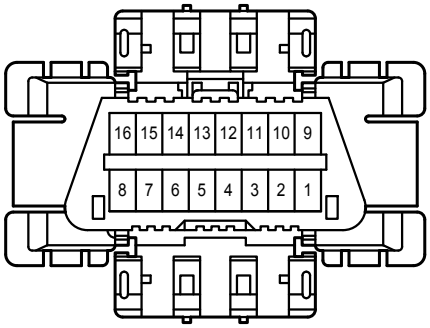


J 28
Black

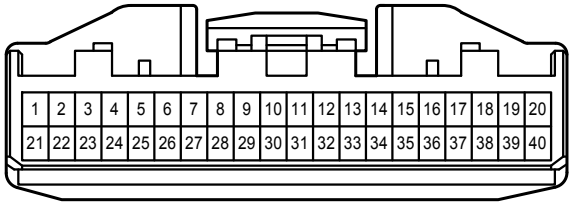


J 29
White

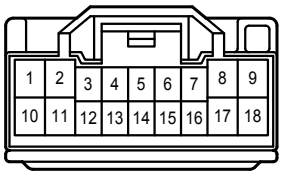


J 54
Orange




J 60
White

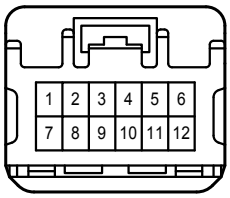


J 61
Gray

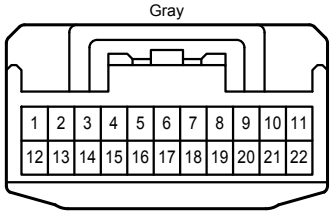


J 66
Black

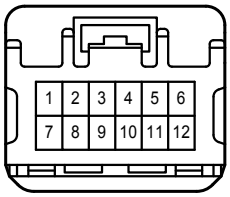


J 67
Blue

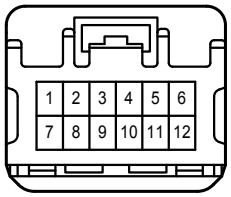


J 70
Blue

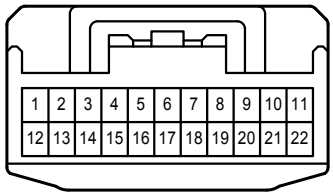


J 71
White

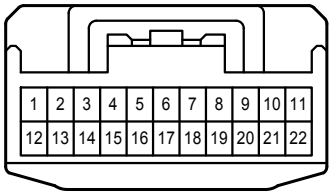


J 72
Black

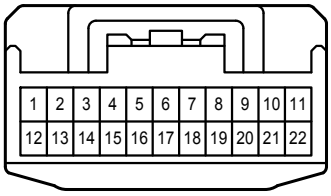


J 73
Black

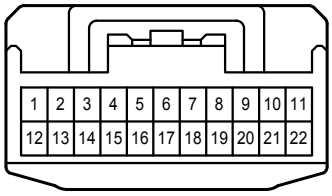


J 74
Gray

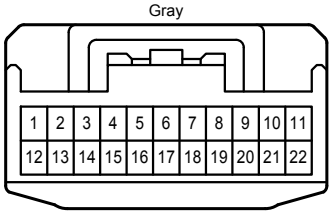


J 75
Gray

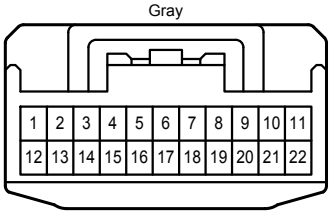


J123
White

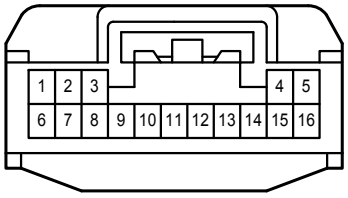


J124
Black

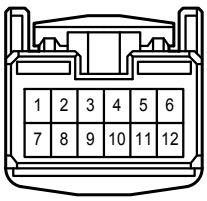

M 6
White

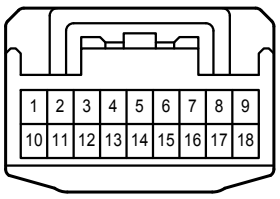

N 5
White

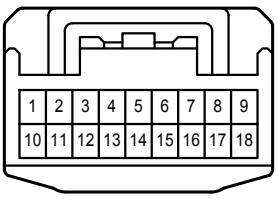


P 19
Black




R 17
Gray




S 5
Black

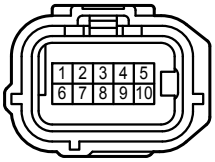


S 6
Black

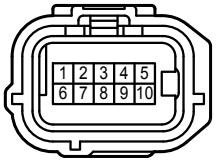


DD
White

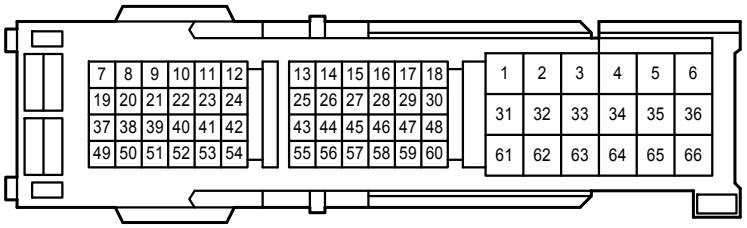


AJ2
Gray

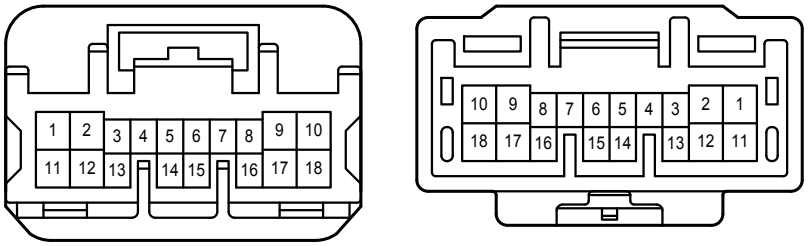


AJ5
Gray

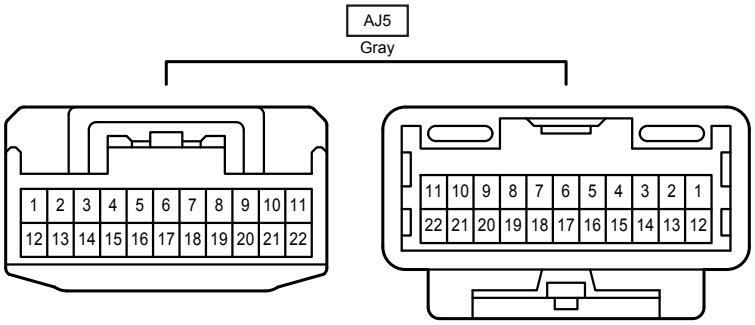


AJ9
White

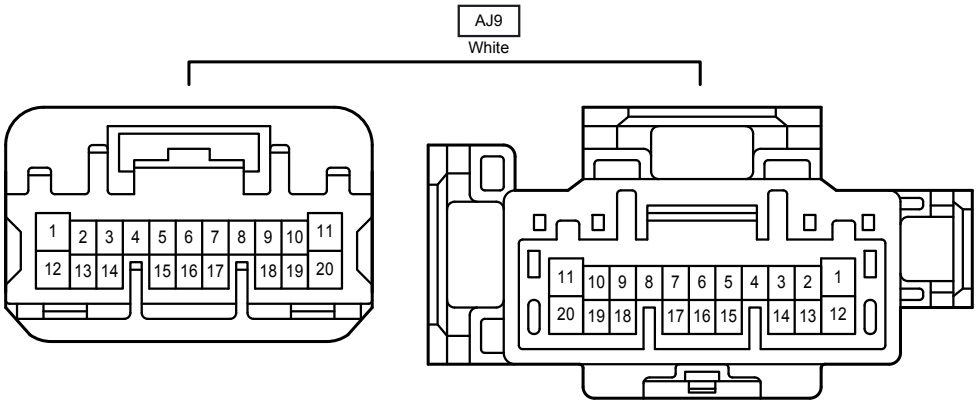


AJ10
Gray

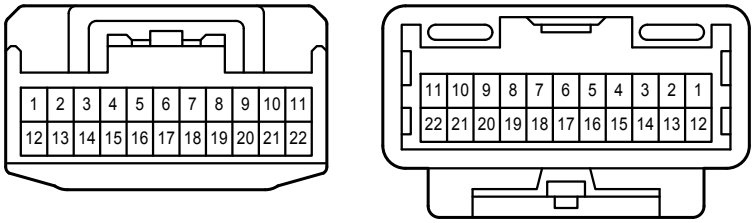


DA4
Gray

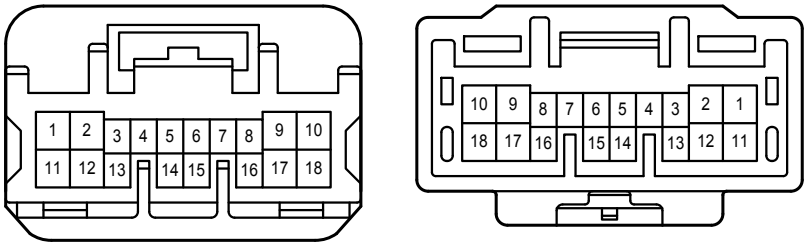


MJ2
Blue

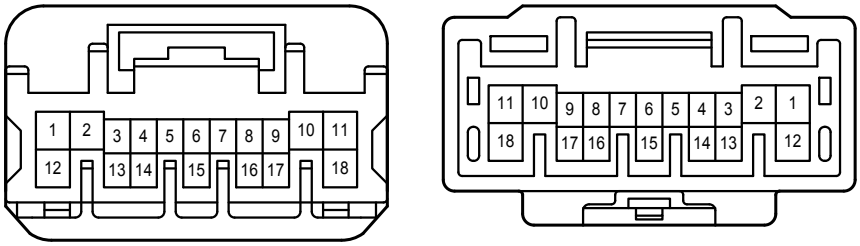


NJ1
Blue

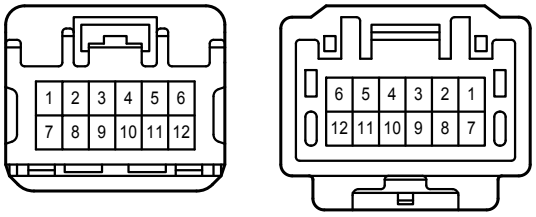

NJ2
White

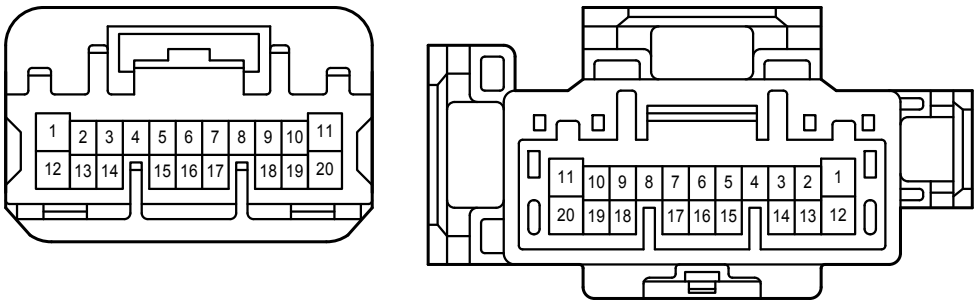

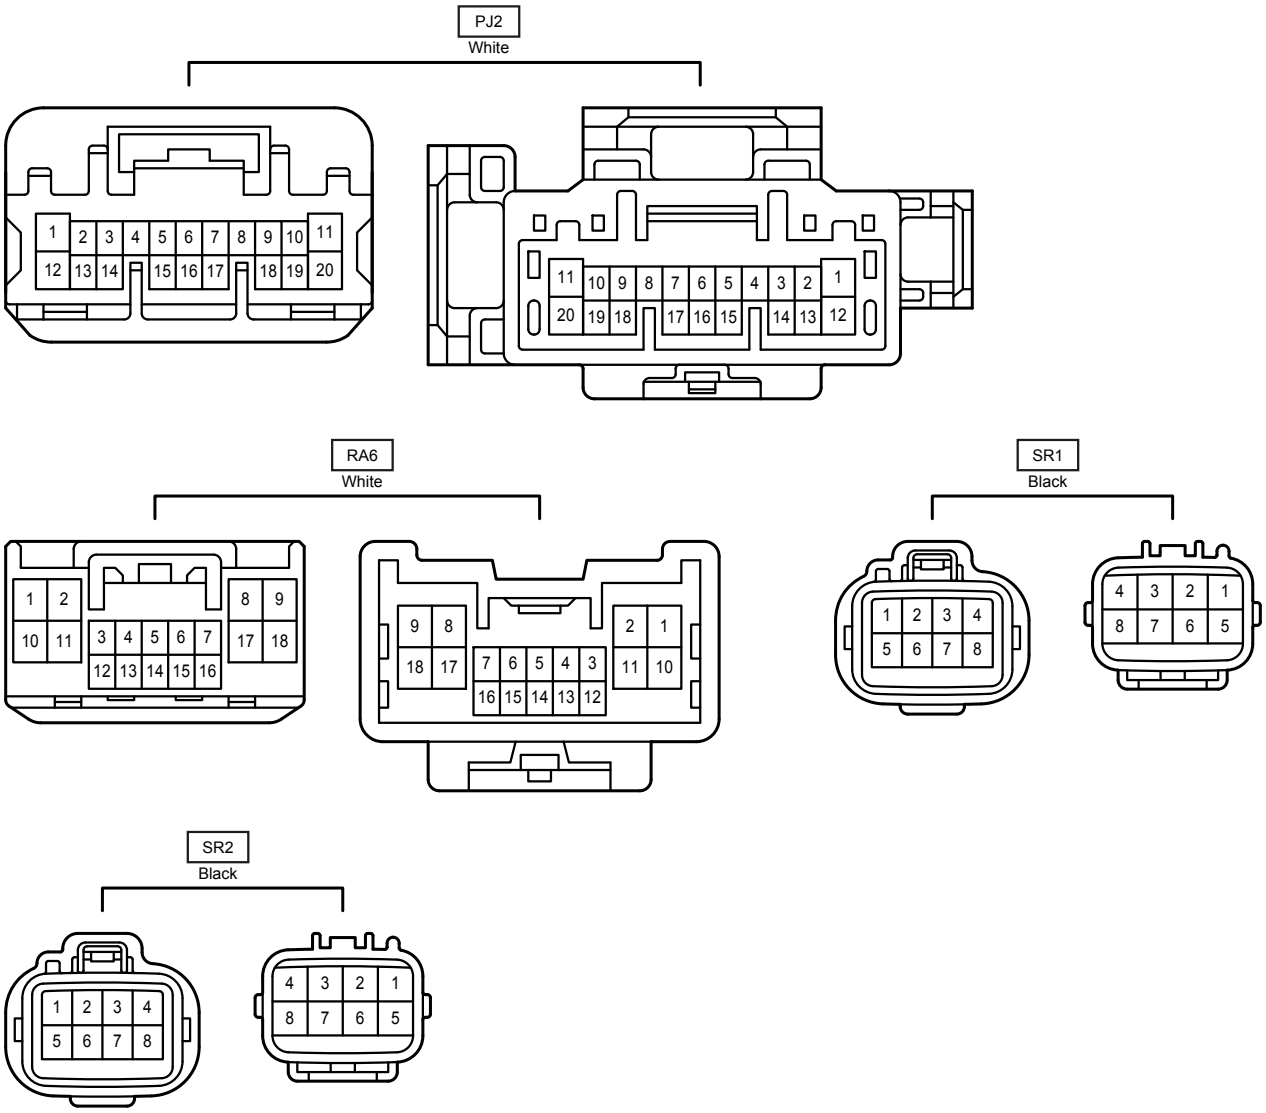
PJ2
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12
RA6
White
1 2 8 9
10 11 3 4 5 6 7 17 18
12 13 14 15 16
9 8 2 1
18 17 7 6 5 4 3 11 10
16 15 14 13 12
SR1
Black
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
SR2
Black
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5