




J46(A), P1(B), Q1(C)
Center Airbag ECU
DBE+
DBE–
FSP+
FSP–
CANH
CANL
11 B
12 B
12 C
13 C
13 A
22 A
G
L
W
B
BR
W
1 QY1
4 QY1
1
2
LBE+
LBE–
L
Y
3
14
J75
Junction Connector
8
19
4
15
8 A
4 A
FSR+
FSR–
BSW
BGND
Y2(A)
Occupant Detection ECU
B
W
SB
W
9 A
5 A
7 AJ9
8 AJ9
G
P
B
W
1
2
RBE+
RBE–
Buckle Switch
Y3
Front Seat Inner Belt Switch RH
Buckle Switch
P7
Front Seat Inner Belt Switch LH
12
13
CANH
CANL
A17
Skid Control ECU
with Actuator
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
45
46
34
33
36
37
43
42
V
LG
BE
G
L
P
B
W
W
SB
Front
Speed Sensors
Rear
Speed Sensors


(BAT)
(IG)
5A
MET–B
7. 5A
MET
2
1
G
BE
9
AJ10
8
AJ10
LG
P
1
2
J28
Combination Meter
B
IG+
Buzzer
5V IC
5V+B
Telltale
I/F
LED
Driver
CPU
CAN I/F
ES
CANL
CANH
24
40
39
W–B
W
SB
15
J61
Junction
Connector
22
W–B
W
SB
J3


A 17
Black

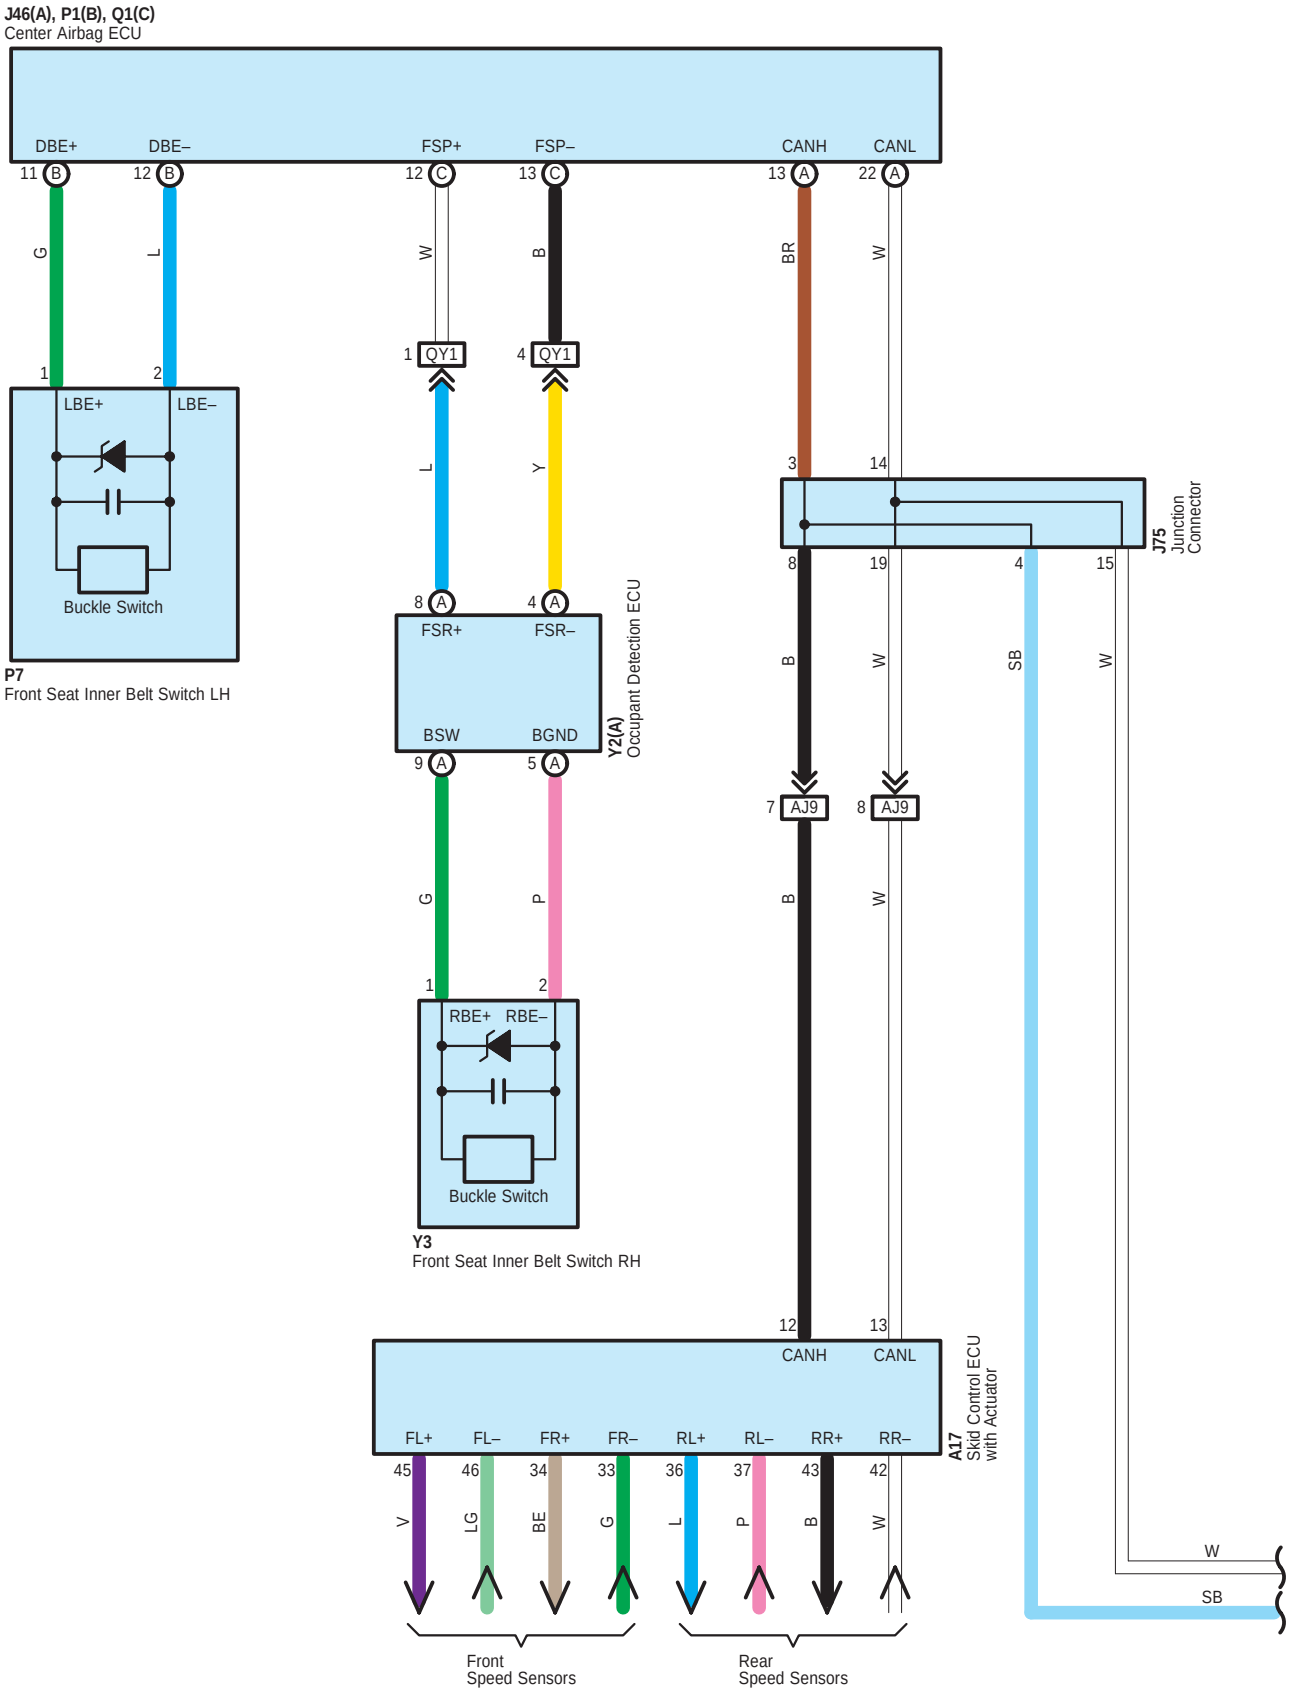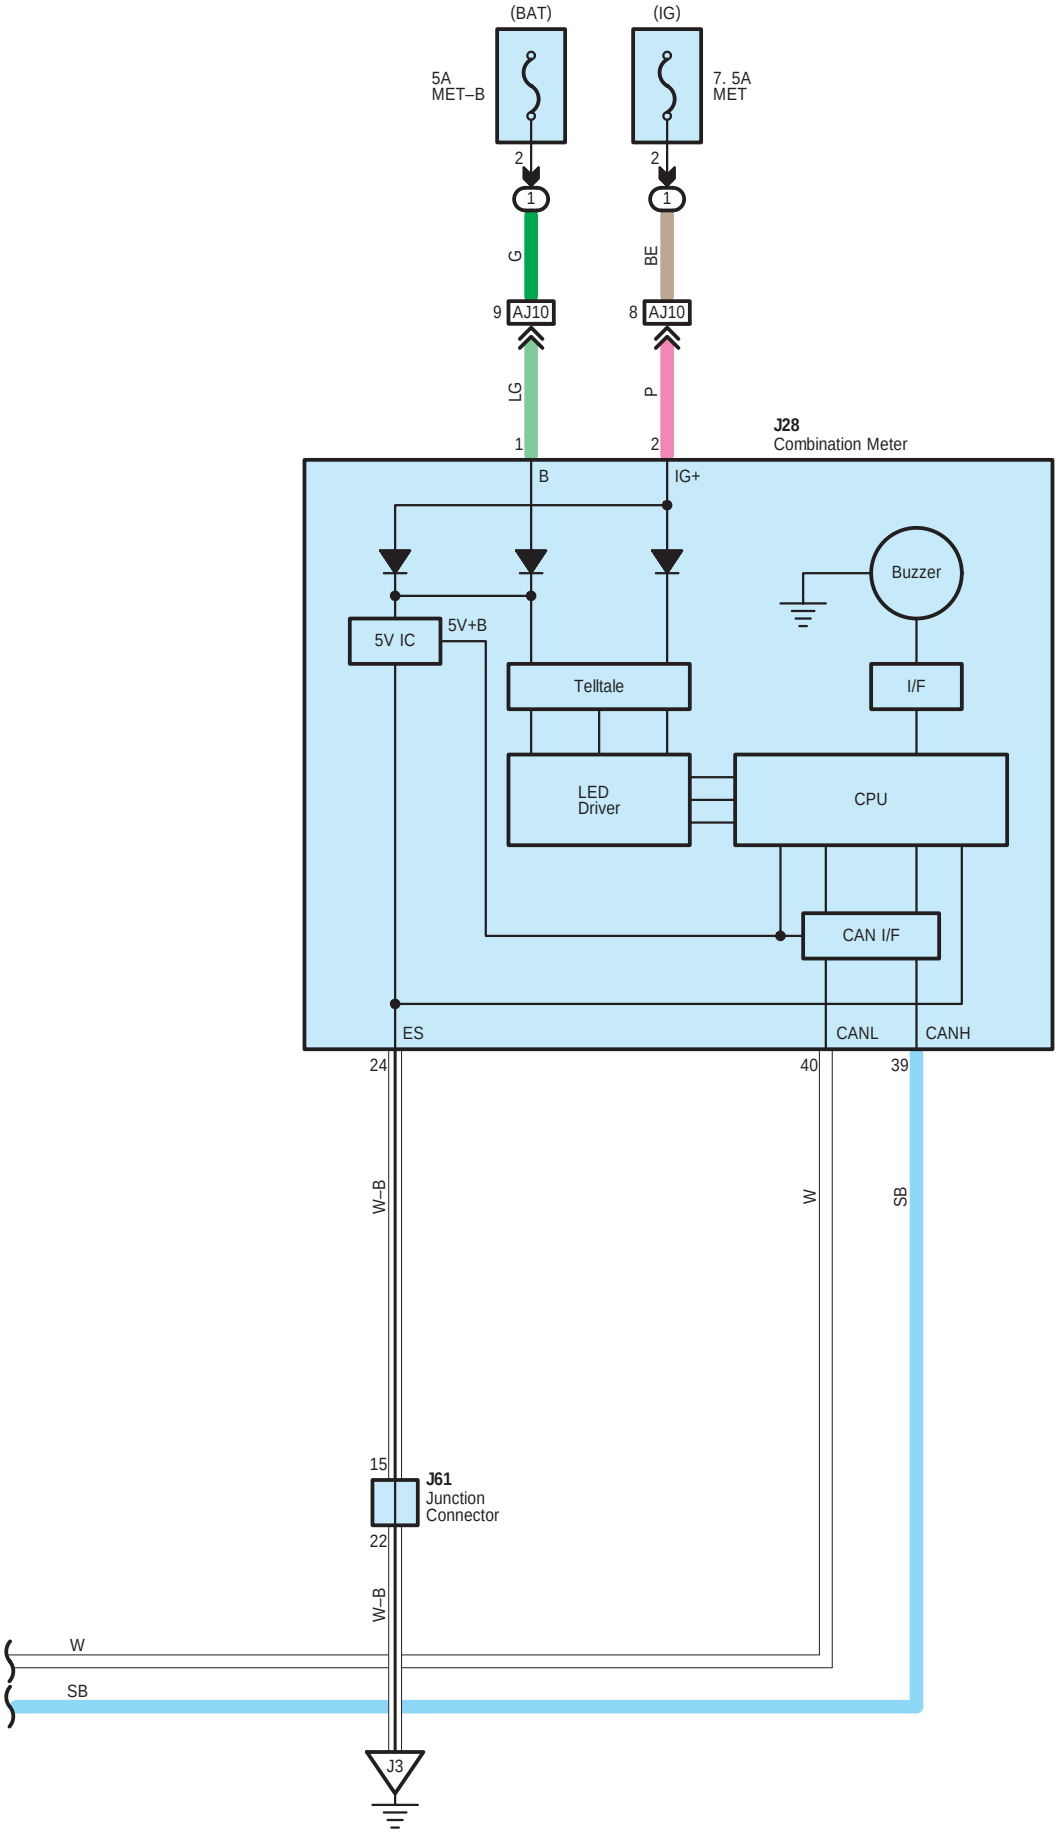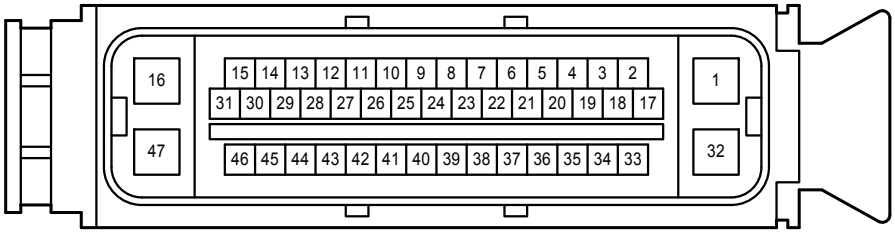


J 28
Black

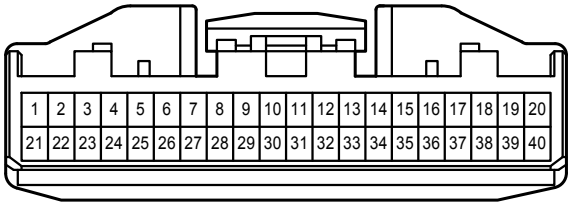


J 46
Yellow

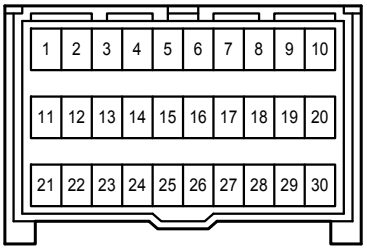


J 61
Gray

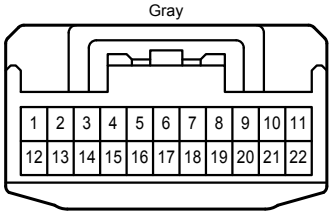


J 75
Gray

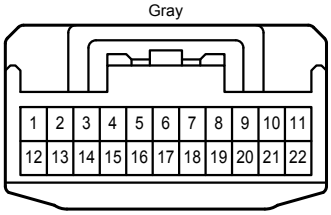


P 1
Yellow

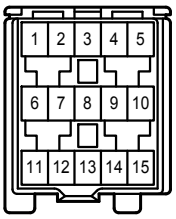


P 7
White




Q 1
Yellow

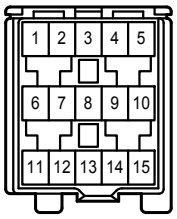


Y 2
Black

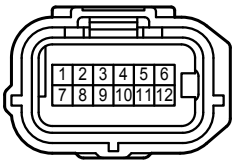


Y 3
Gray

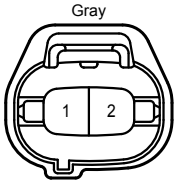

AJ9
White

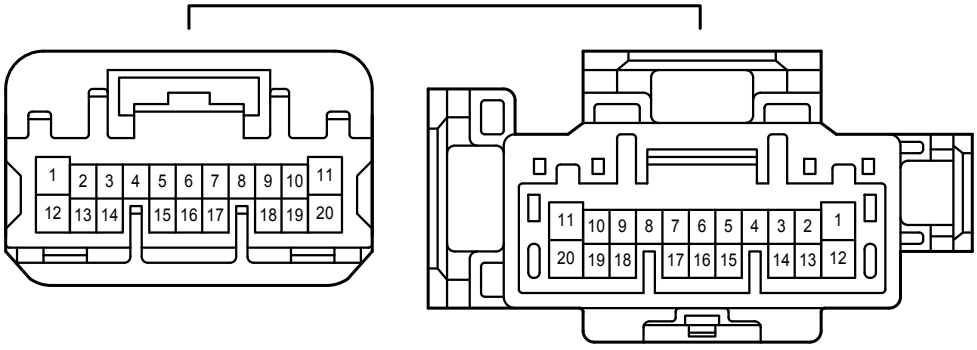

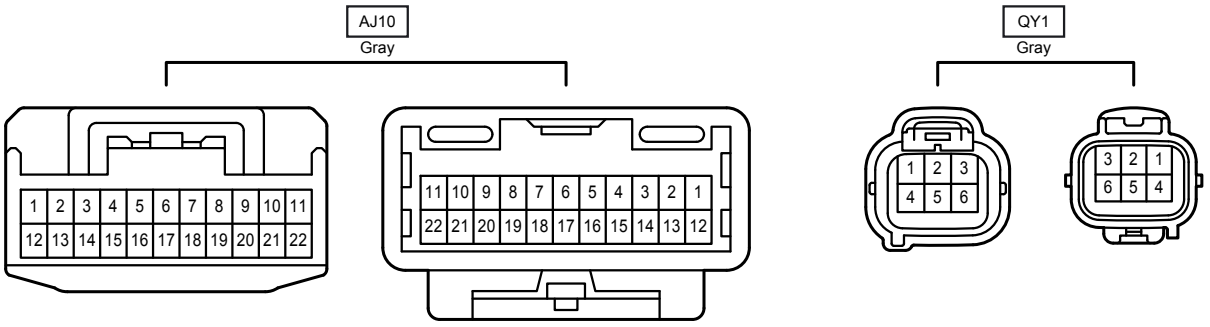
AJ10
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
QY1
Gray
1 2 3
4 5 6
3 2 1
6 5 4