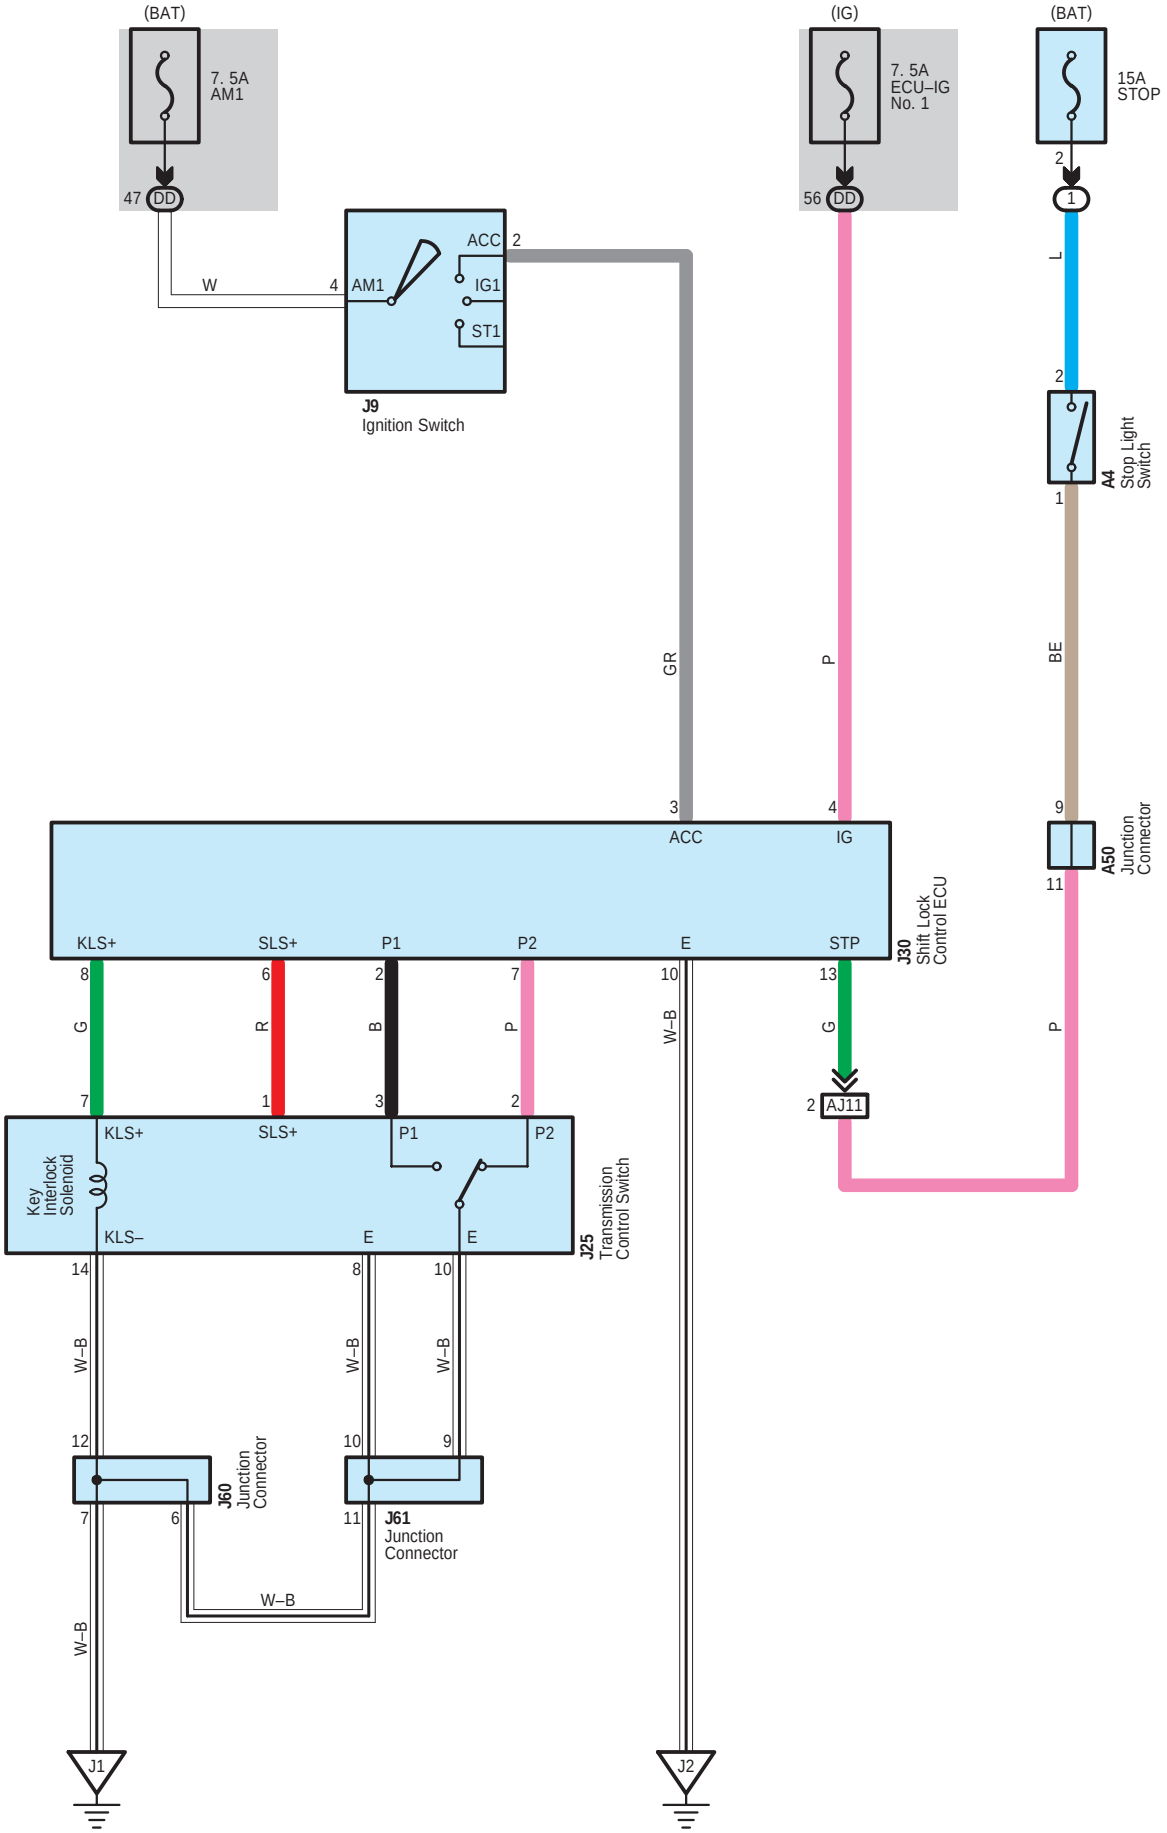
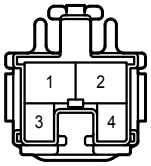
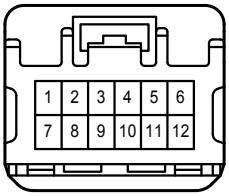

(BAT)
7. 5A
AM1
47
DD
W
4
AM1
ACC
2
IG1
ST1
J9
Ignition Switch
(IG)
7. 5A
ECU–IG
No. 1
56
DD
(BAT)
15A
STOP
2
1
L
2
A4
Stop Light
Switch
1
BE
9
A50
Junction
Connector
11
GR
P
3
4
ACC
IG
KLS+
SLS+
P1
P2
E
STP
J30
Shift Lock
Control ECU
8
6
2
7
10
13
G
R
B
P
W–B
G
7
1
3
2
2
AJ11
KLS+
SLS+
P1
P2
Key
Interlock
Solenoid
KLS–
E
E
J25
Transmission
Control Switch
14
8
10
W–B
W–B
W–B
12
10
9
J60
Junction
Connector
7
6
11
J61
Junction
Connector
W–B
W–B
J1
J2

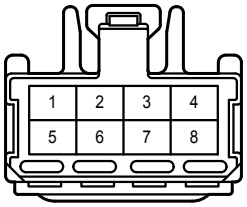
A 4
White



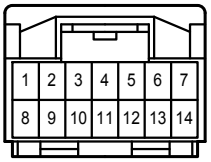

A 50
White



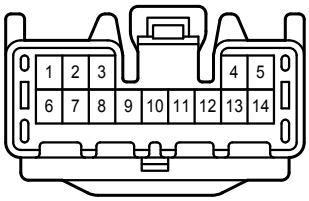

J 9
White



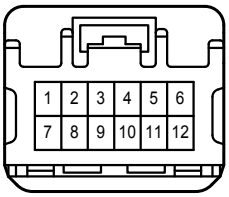

J 25
White



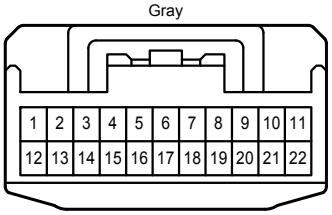

J 30
White



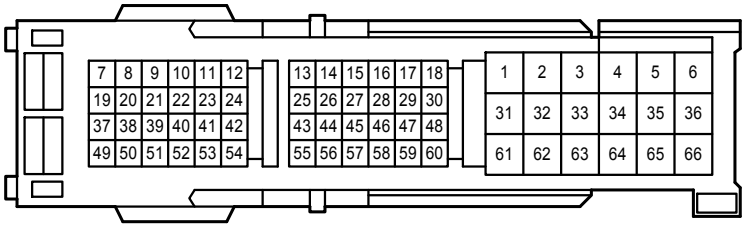

J 60
White




J 61
Gray




DD
White




AJ11
Gray

