
## ■DAYTIME RUNNING LIGHT SYSTEM

### 1. General


The daytime running light system is designed to automatically illuminate the front turn signal lights, during the daytime to keep the vehicle highly visible to other vehicles.

- This system is controlled by the Main Body ECU (Driver Side Junction Block) and FLASHER relay.
- This system is enabled when the conditions given below are met.
  - Ignition switch is ON.
  - Parking brake switch is OFF.
  - Light control switch is not in the AUTO position (The DRL will operate until the automatic light control system illuminates the headlights.).
  - Engine speed signal is input (Engine Running Condition).
  - Lo beam is not ON.

### 2. System Diagram

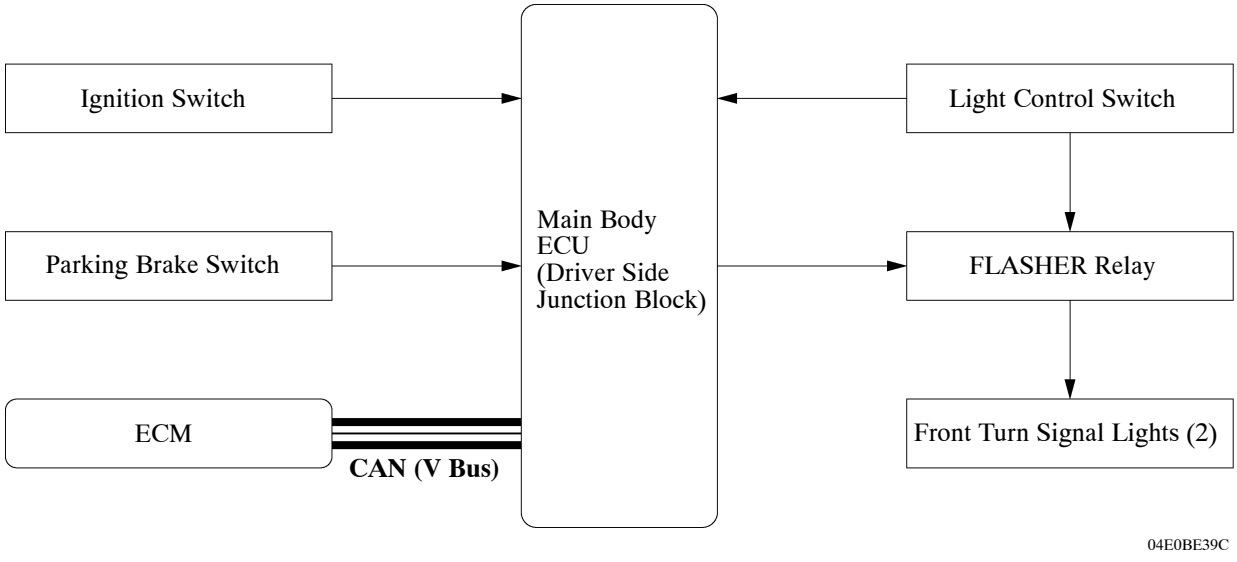

## 3. Layout of Main Components

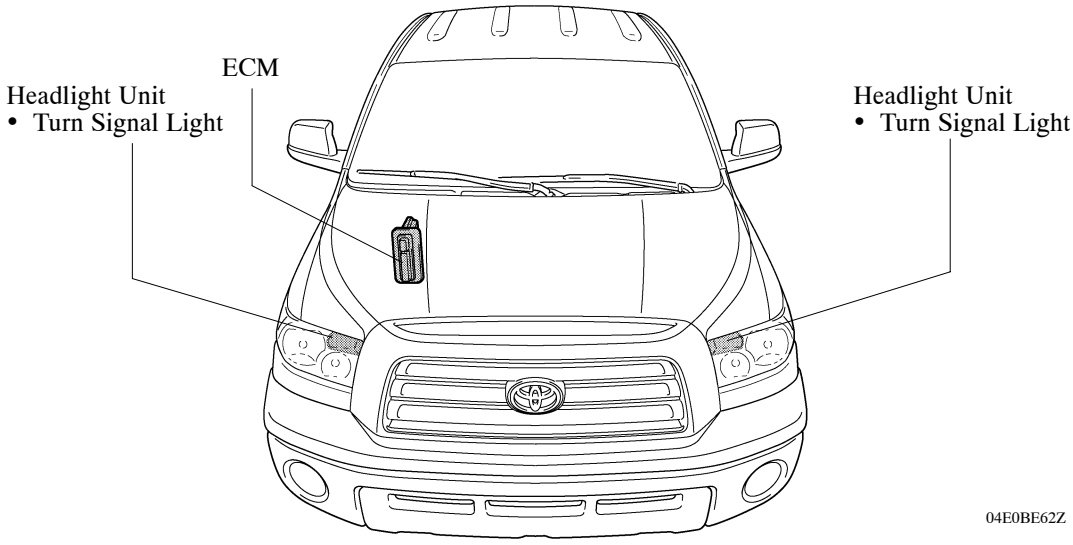


**Light Control Switch with Automatic Light Control System**

