
■AUTOMATIC LIGHT CONTROL SYSTEM

When the light control switch is in the AUTO position, the automatic light control sensor detects the ambient light level and automatically turns the headlights, taillights, parking lights, and license plate lights ON or OFF accordingly.

- This system is controlled by the Main Body ECU (Driver Side Junction Block).

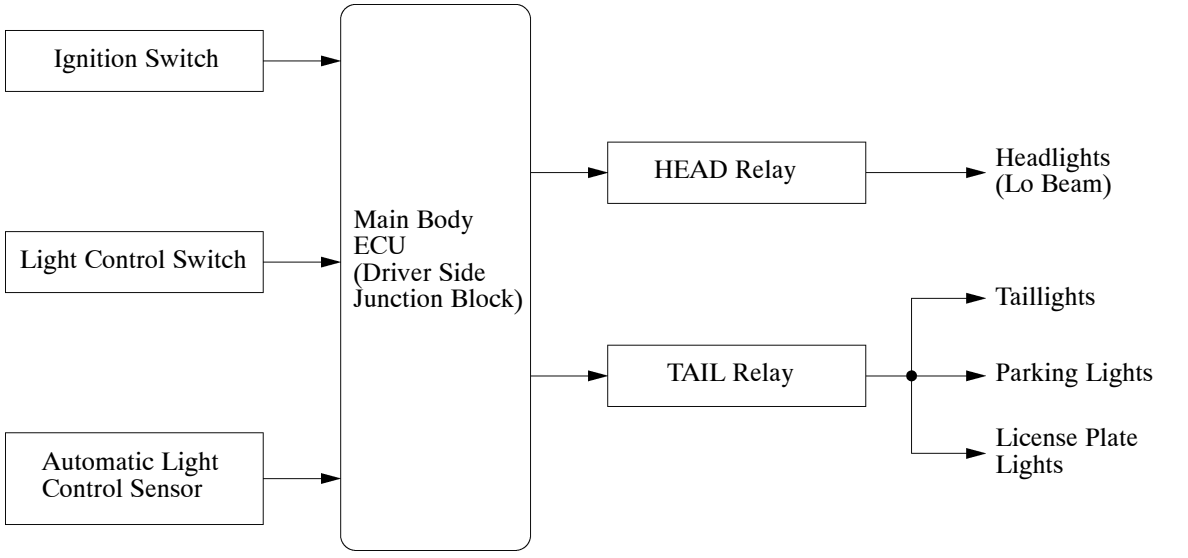

04E0BE117C