
SEAT HEATER SYSTEM

■ DESCRIPTION


The seat heater system can steplessly adjust the temperature of the seat surface between 30°C (86°F) and 50°C (122°F) through the operation of a dial-type heater switch.

- A thermostat detects the temperature of the seat surface and the seat heater controller controls it.
- This system is optional equipment on the driver and front passenger seats for Limited grade.

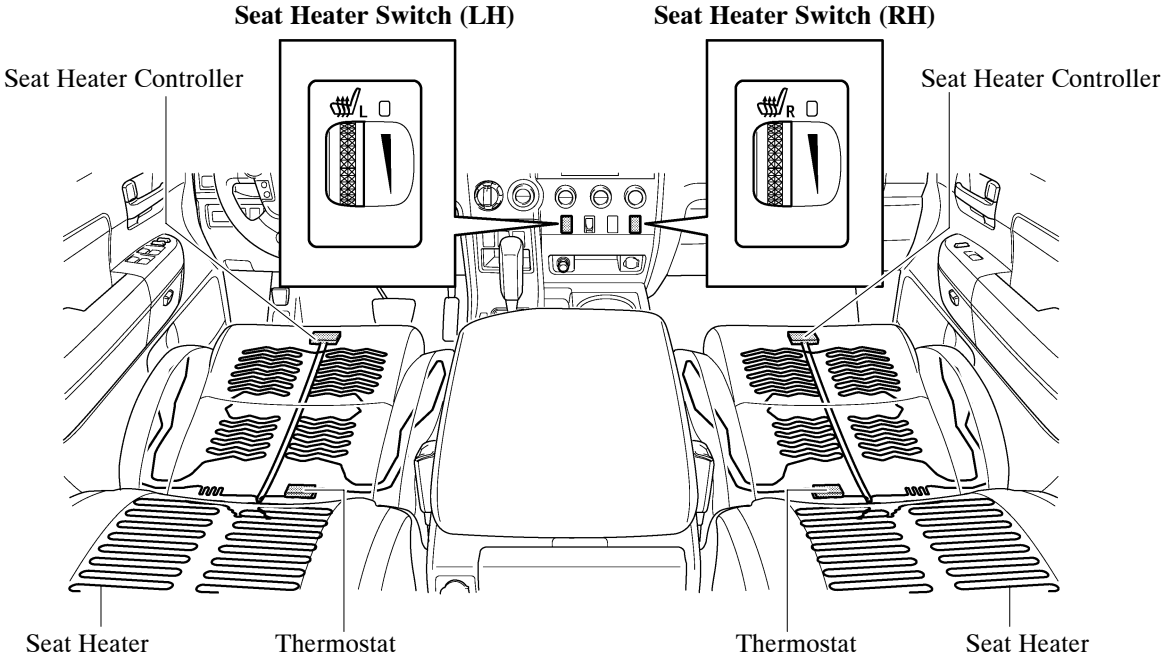

04E0BE110Z

■ SYSTEM DIAGRAM

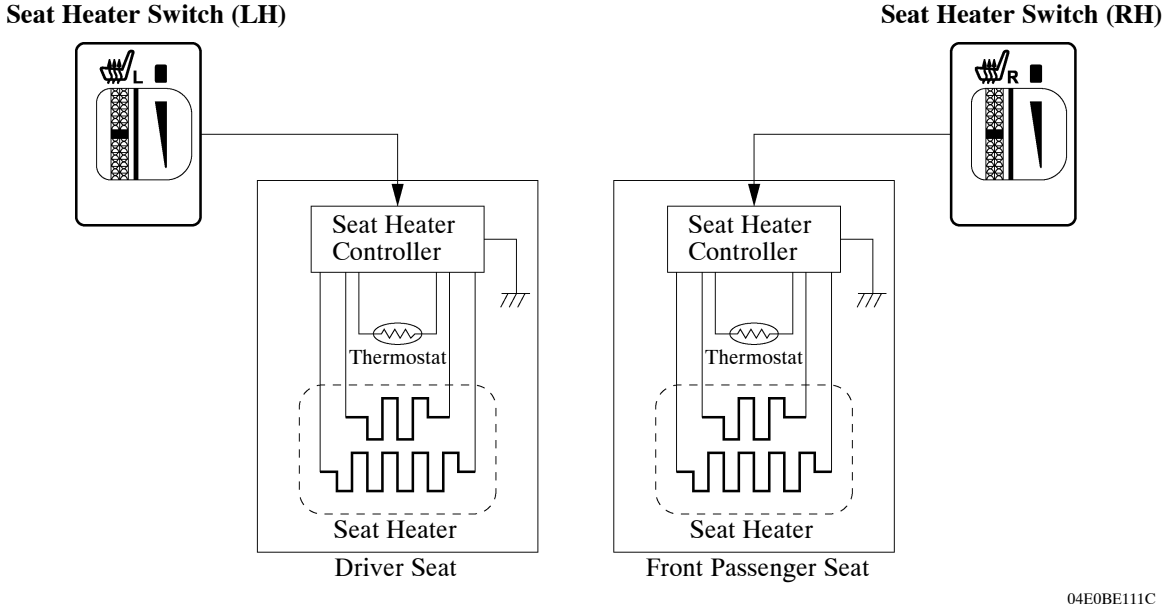

04E0BE111C