■SEAT BELT

1. General

The following types of seat belts are provided.


Seat			Seat Belt Type	Remarks
Driver			3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter
Front Passenger	Bench Seat	Center	3-point ELR*1 & ALR*2	—
		Outer		Electrical Sensing Type Pretensioner & Force Limiter
	Separate Seat		3-point ELR*1 & ALR*2	Electrical Sensing Type Pretensioner & Force Limiter
Rear Passenger (For Double Cab or CrewMax)			3-point ELR*1 & ALR*2	—

*1: Emergency Locking Retractor *2: Automatic Locking Retractor

2. Pretensioner and Force Limiter

In accordance with the ignition signal from the Airbag Sensor Assembly, the seat belt pretensioners activate simultaneously with the deployment of SRS airbags for a frontal collision.

In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

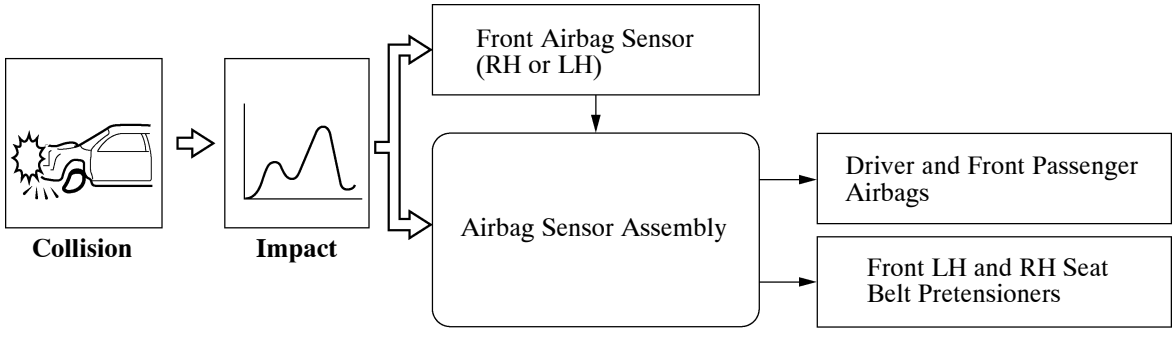

04E0BO19C

BO