

■ATF FILLING PROCEDURE

An ATF filling procedure is used in order to improve the accuracy of the ATF level when the transmission is being repaired or replaced. As a result, the oil filler tube and the oil level gauge used in the conventional automatic transmission have been discontinued, eliminating the need to inspect the fluid level as a part of routine maintenance.

- This filling procedure uses a refill plug, overflow plug, ATF temperature sensor No.2, and shift position indicator light “D”.
- ATF filling procedures are different for models with an ATF cooler and without an ATF cooler.

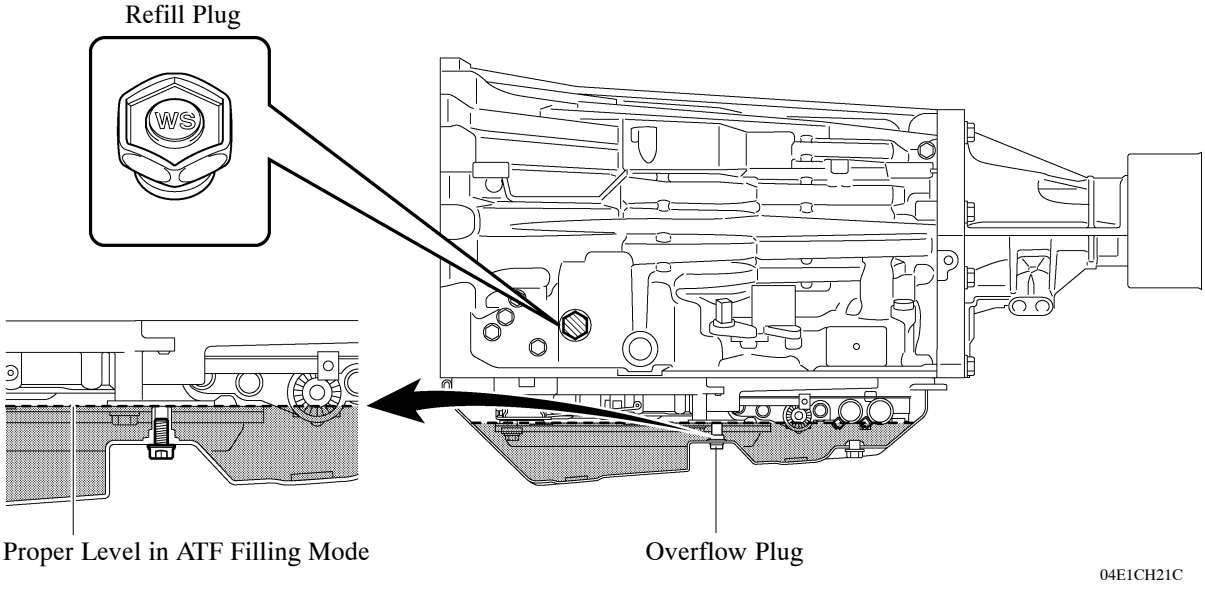

AB60E Automatic Transmission

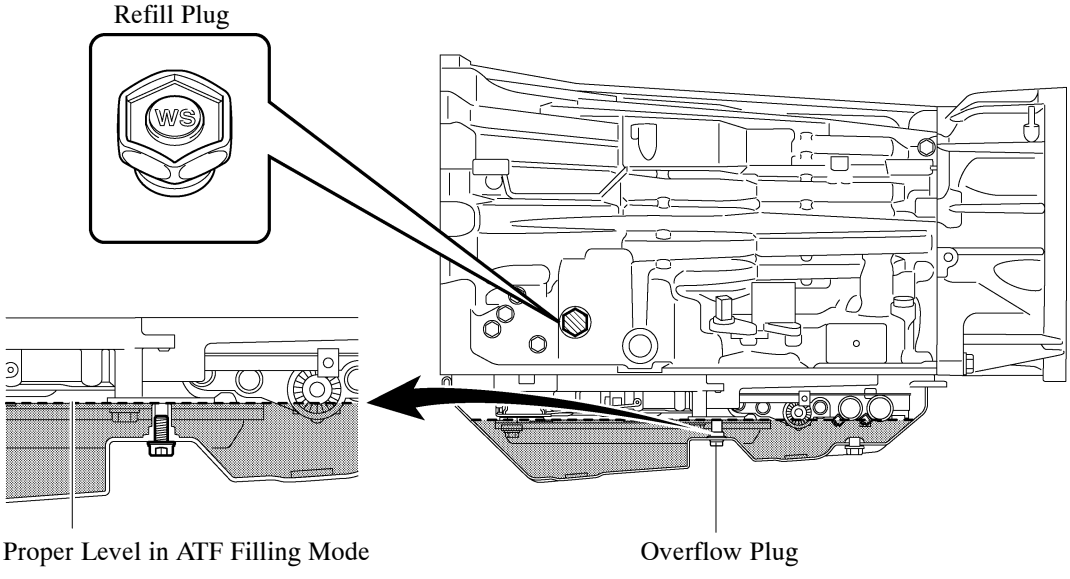

AB60F Automatic Transmission

04E1CH22C

CH