
TIRE PRESSURE WARNING SYSTEM

■ DESCRIPTION

- When the tire pressure warning system detects that the pressure of a tire becomes lower than the threshold, it will turn ON the tire pressure warning light to warn the driver.
- The tire pressure warning antenna and receiver receives the tire inflation pressure, temperature, and ID No. information from the four tire pressure warning valve and transmitters and transmits this information to the Tire Pressure Warning ECU.
- The Tire Pressure Warning ECU monitors the tire pressure warning valve and transmitters to detect the low tire pressure of 4 tires except for spare.

▶ System Diagram ◀

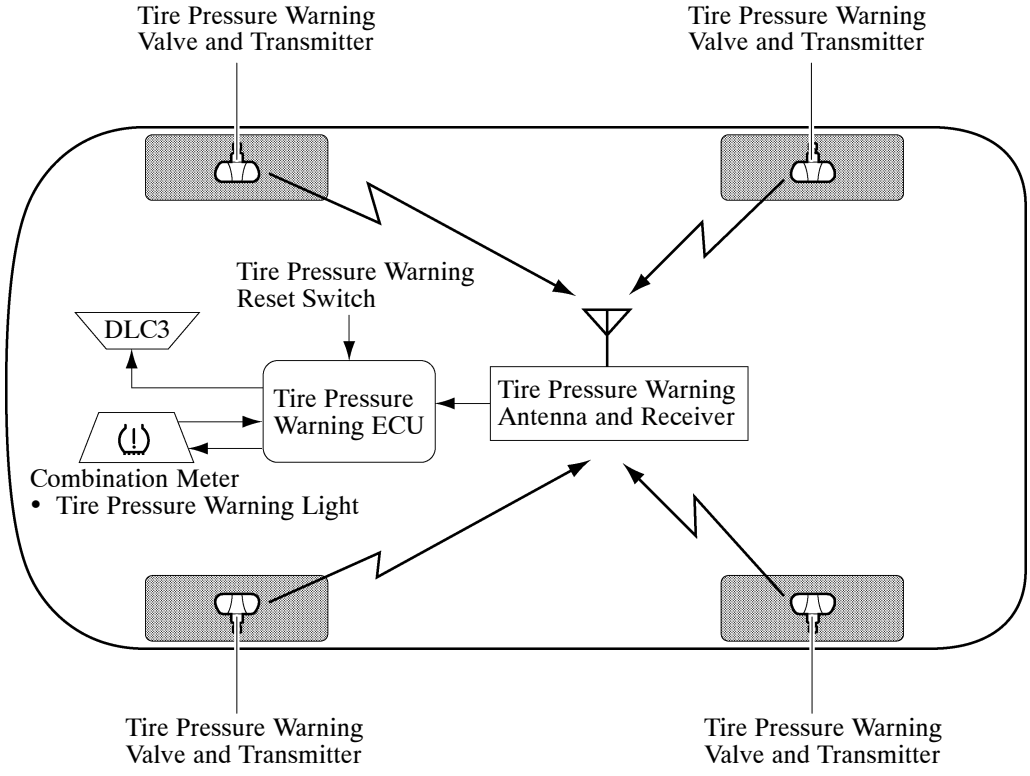

04E0CH11C