

(Cont. next page)

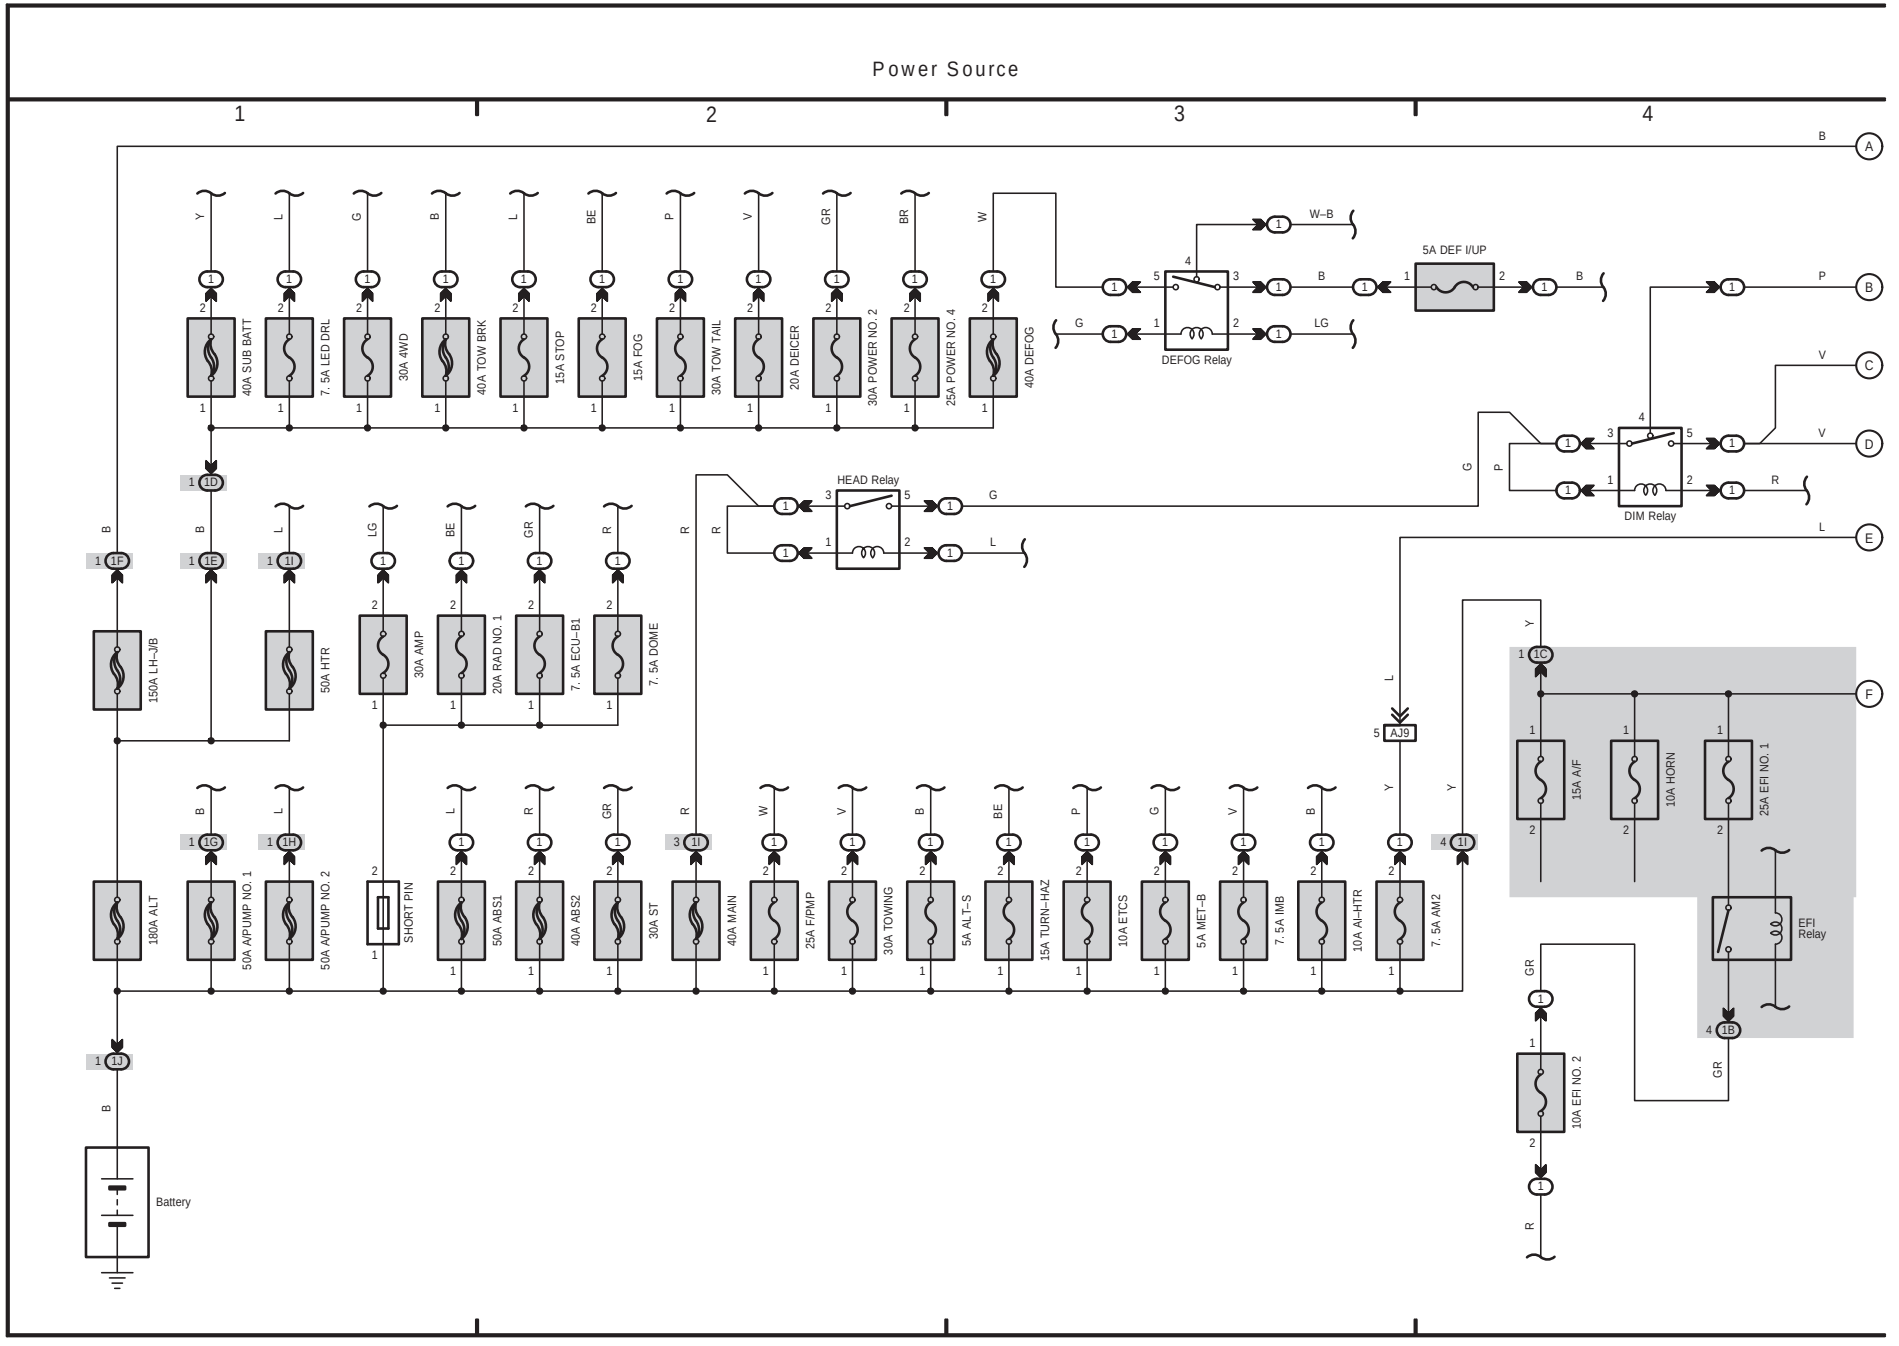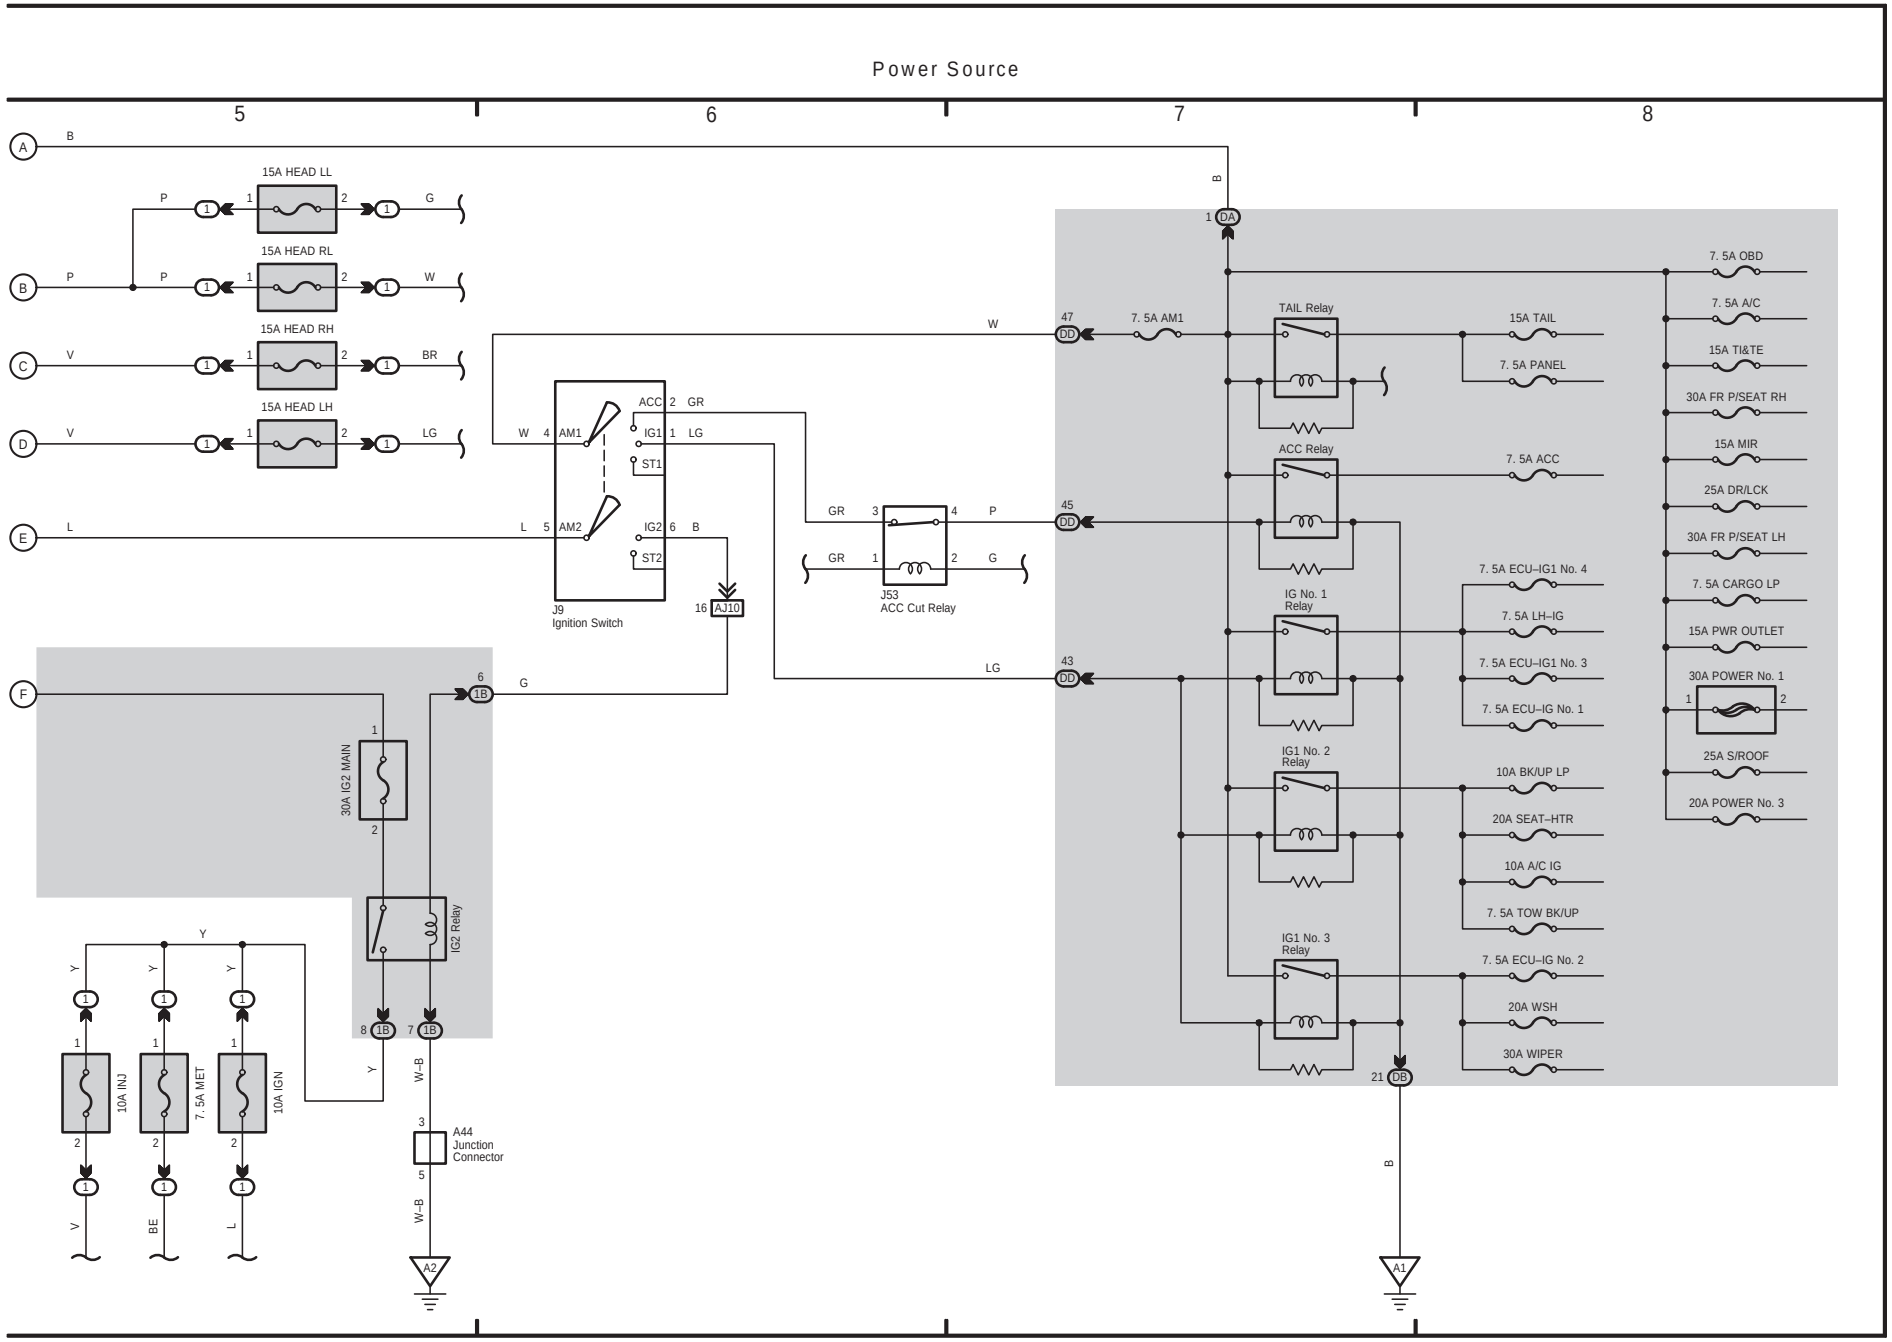


Power Source
5
6
7
8
15A HEAD LL
15A HEAD RL
15A HEAD RH
15A HEAD LH
J9
Ignition Switch
J53
ACC Cut Relay
30A IG2 MAIN
IG2 Relay
10A INJ
7. 5A MET
10A IGN
A44
Junction
Connector
TAIL Relay
ACC Relay
IG No. 1
Relay
IG1 No. 2
Relay
IG1 No. 3
Relay
7. 5A AM1
7. 5A OBD
7. 5A A/C
15A TI&TE
30A FR P/SEAT RH
15A MIR
25A DR/LCK
30A FR P/SEAT LH
7. 5A CARGO LP
15A PWR OUTLET
30A POWER No. 1
25A S/ROOF
20A POWER No. 3
15A TAIL
7. 5A PANEL
7. 5A ACC
7. 5A ECU–IG1 No. 4
7. 5A LH–IG
7. 5A ECU–IG1 No. 3
7. 5A ECU–IG No. 1
10A BK/UP LP
20A SEAT–HTR
10A A/C IG
7. 5A TOW BK/UP
7. 5A ECU–IG No. 2
20A WSH
30A WIPER