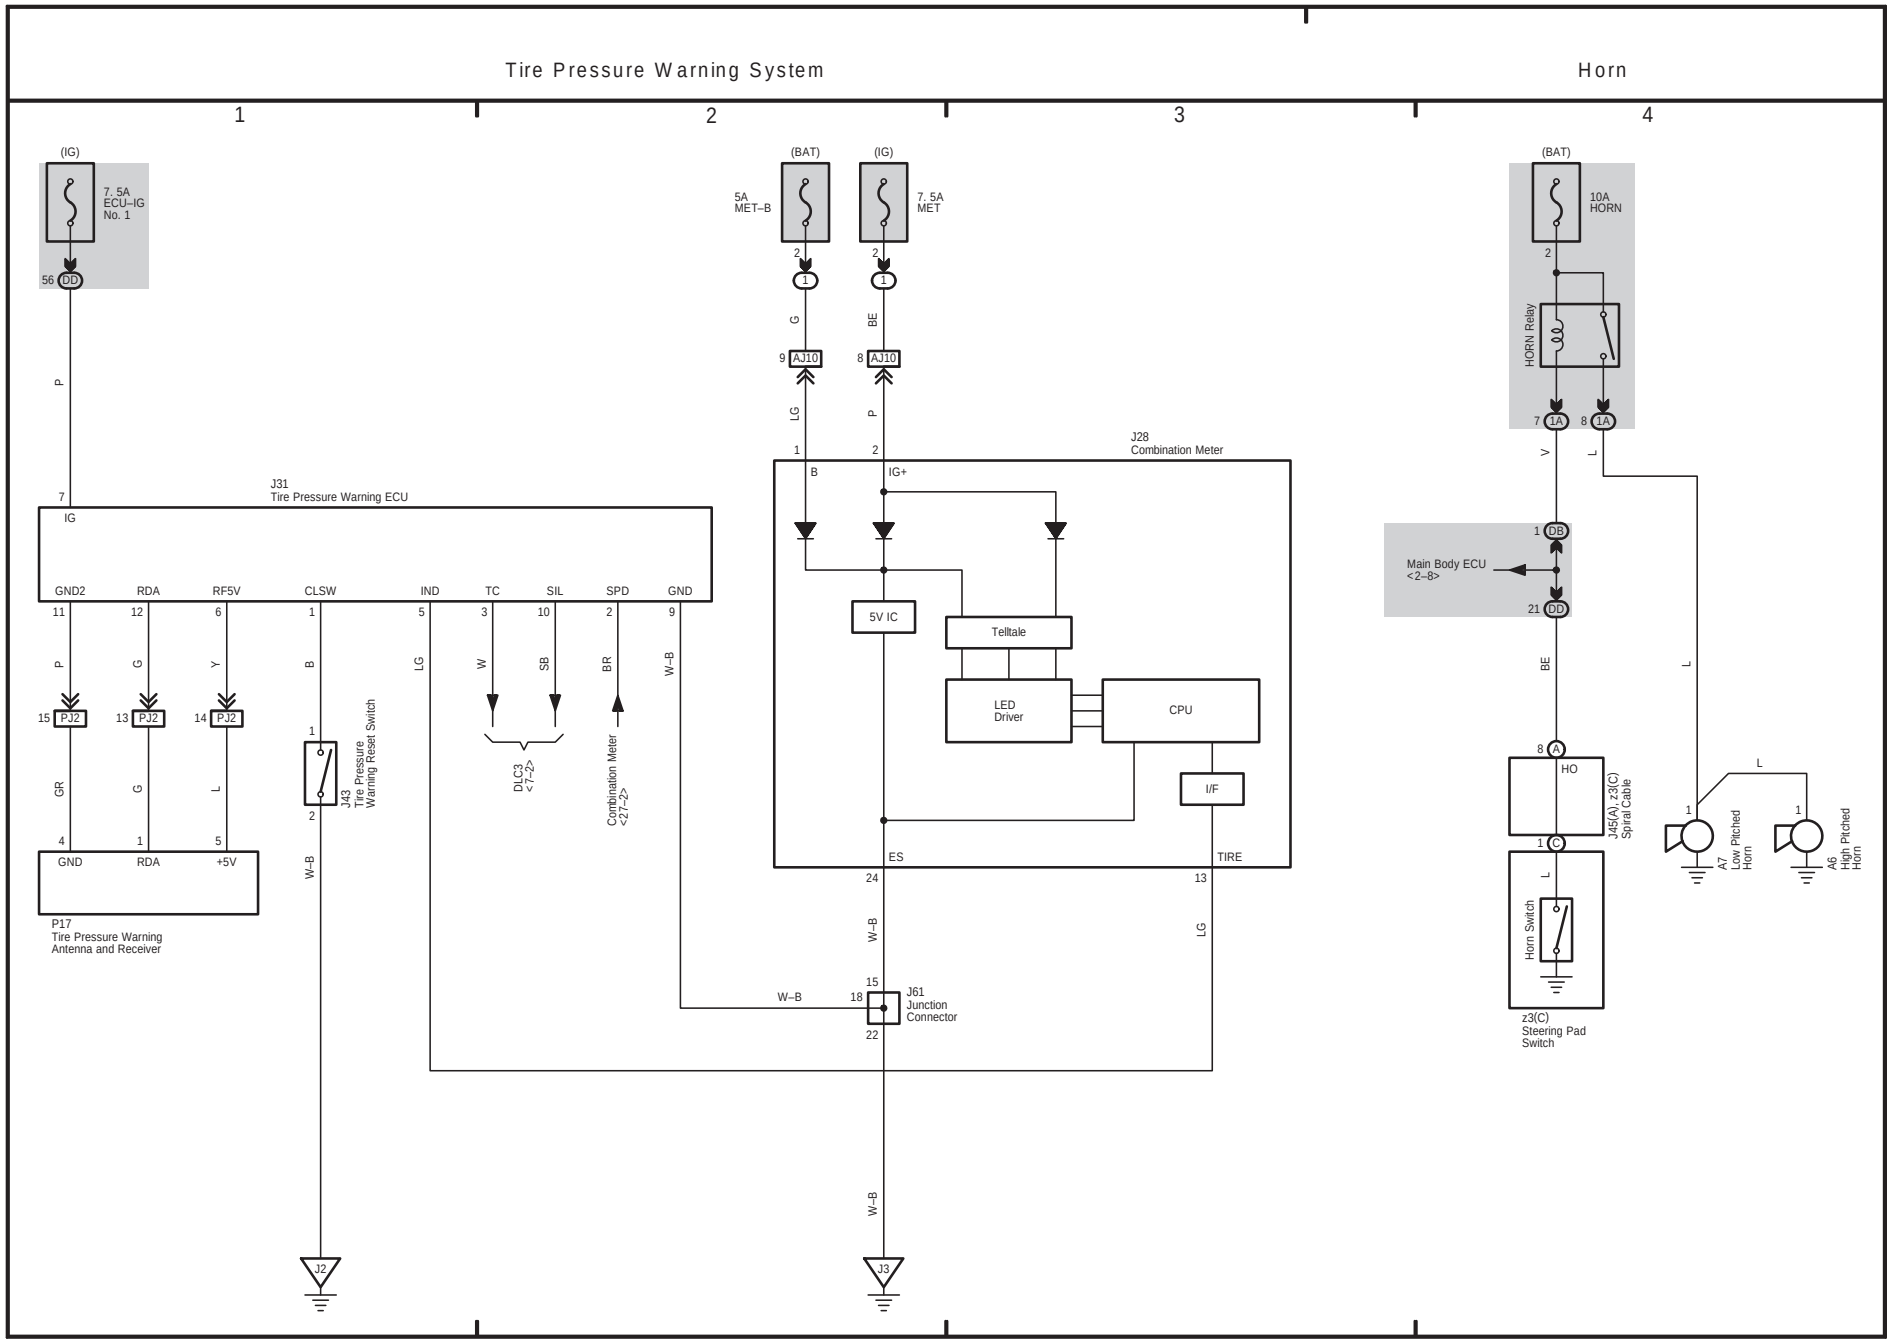

Tire Pressure Warning System
Horn
1
2
3
4
(IG)
7. 5A
ECU–IG
No. 1
56 DD
P
7
J31
Tire Pressure Warning ECU
IG
GND2
RDA
RF5V
CLSW
IND
TC
SIL
SPD
GND
11
12
6
1
5
3
10
2
9
P
G
Y
B
LG
W
SB
BR
W–B
15 PJ2
13 PJ2
14 PJ2
GR
G
L
4
1
5
GND
RDA
+5V
P17
Tire Pressure Warning
Antenna and Receiver
J43
Tire Pressure
Warning Reset Switch
2
W–B
J2
DLC3
<7–2>
Combination Meter
<27–2>
(BAT)
(IG)
5A
MET–B
7. 5A
MET
2
1
G
BE
9 AJ10
8 AJ10
LG
P
1
2
J28
Combination Meter
B
IG+
5V IC
Telltale
LED
Driver
CPU
I/F
ES
TIRE
24
13
W–B
LG
15
W–B
18
J61
Junction
Connector
22
W–B
J3
(BAT)
10A
HORN
2
HORN Relay
7 1A
8 1A
V
L
1 DB
Main Body ECU
<2–8>
21 DD
BE
L
8 A
HO
J45(A), z3(C)
Spiral Cable
1 C
L
Horn Switch
z3(C)
Steering Pad
Switch
L
1
1
A7
Low Pitched
Horn
A6
High Pitched
Horn