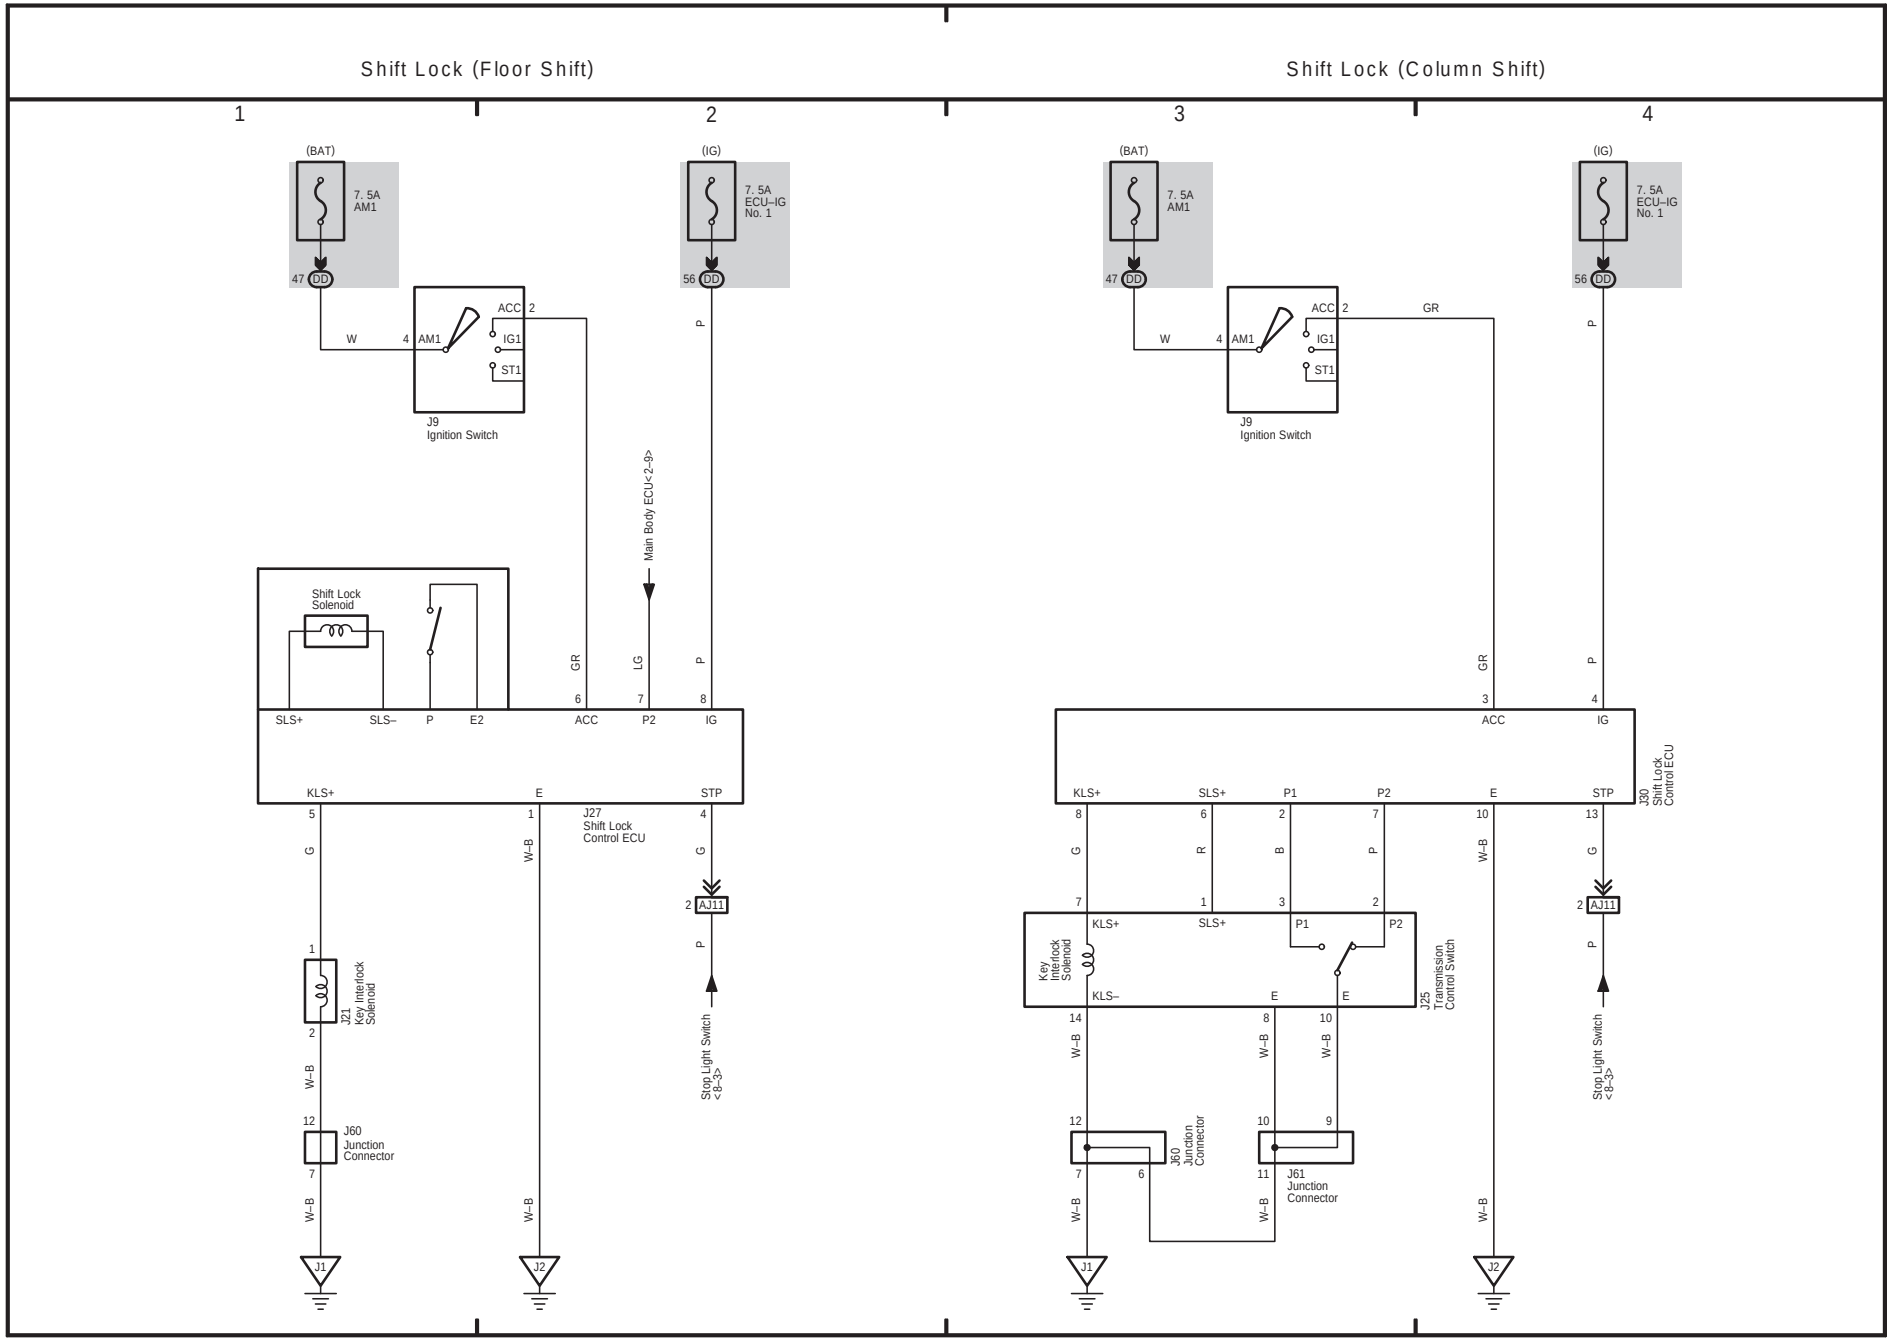

Shift Lock (Floor Shift)
Shift Lock (Column Shift)
1
2
3
4
(BAT)
(IG)
7. 5A
AM1
7. 5A
ECU–IG
No. 1
47
56
DD
W
AM1
ACC
IG1
ST1
J9
Ignition Switch
Main Body ECU<2-9>
Shift Lock
Solenoid
SLS+
SLS–
P
E2
ACC
P2
IG
GR
LG
KLS+
E
STP
J27
Shift Lock
Control ECU
G
W–B
AJ11
Stop Light Switch
<8-3>
J21
Key Interlock
Solenoid
J60
Junction
Connector
J1
J2
SLS+
P1
P2
KLS–
J25
Transmission
Control Switch
J61
Junction
Connector
J30
Shift Lock
Control ECU
R
B