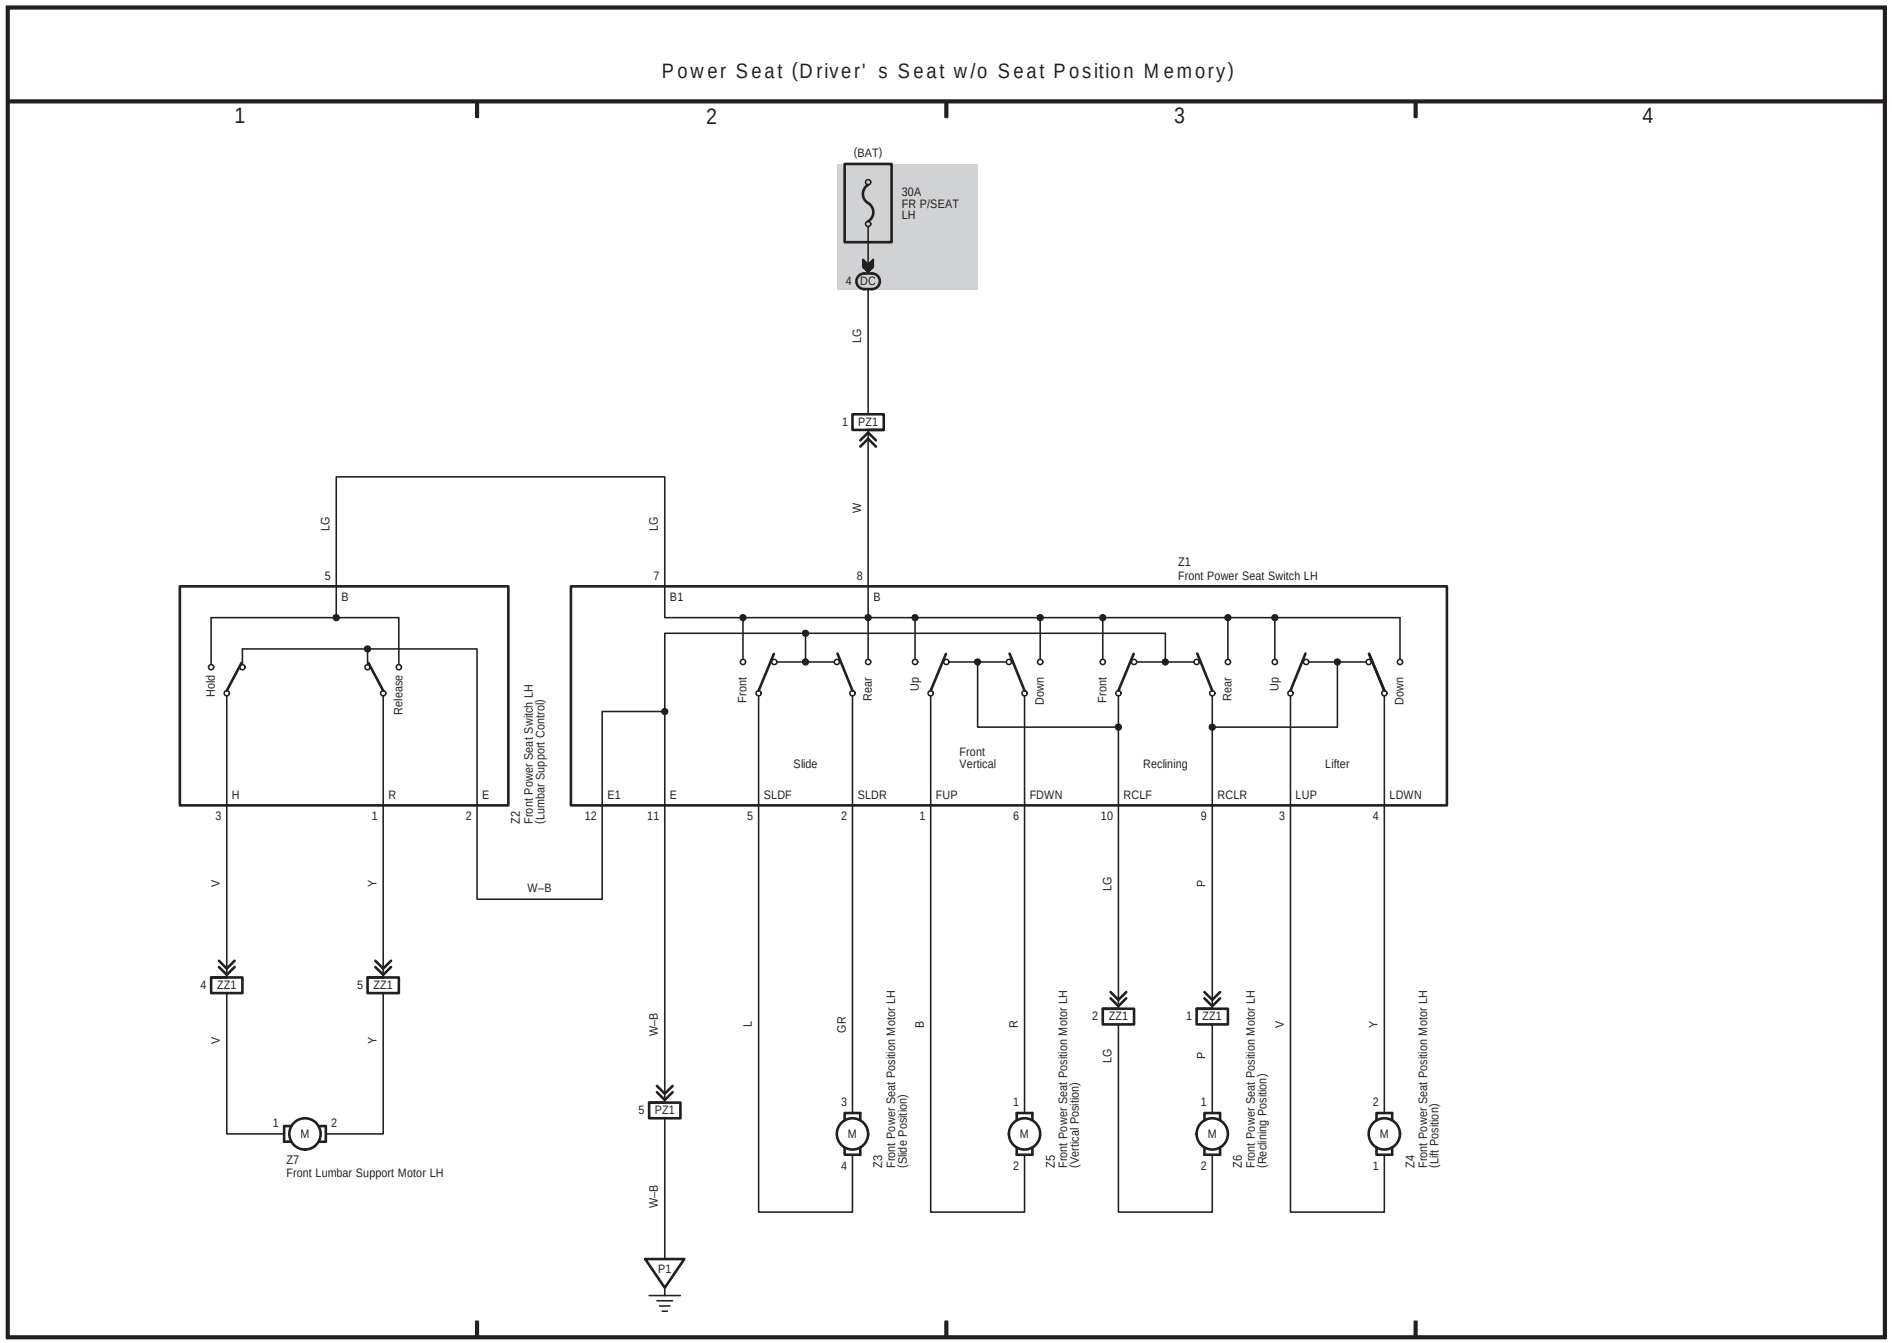

Power Seat (Driver' s Seat w/o Seat Position Memory)
1
2
3
4
(BAT)
30A
FR P/SEAT
LH
4 DC
LG
1 PZ1
W
LG
LG
5
7
8
Z1
Front Power Seat Switch LH
B
B1
B
Hold
Release
Front
Rear
Up
Down
Front
Rear
Up
Down
Slide
Front
Vertical
Reclining
Lifter
H
R
E
E1
E
SLDF
SLDR
FUP
FDWN
RCLF
RCLR
LUP
LDWN
3
1
2
12
11
5
2
1
6
10
9
3
4
Z2
Front Power Seat Switch LH
(Lumbar Support Control)
W–B
V
Y
LG
P
4 ZZ1
5 ZZ1
2 ZZ1
1 ZZ1
V
Y
L
GR
B
R
LG
P
V
Y
1
2
M
Z7
Front Lumbar Support Motor LH
W–B
5 PZ1
W–B
P1
3
4
Z3
Front Power Seat Position Motor LH
(Slide Position)
1
2
Z5
Front Power Seat Position Motor LH
(Vertical Position)
1
2
Z6
Front Power Seat Position Motor LH
(Reclining Position)
2
1
Z4
Front Power Seat Position Motor LH
(Lift Position)