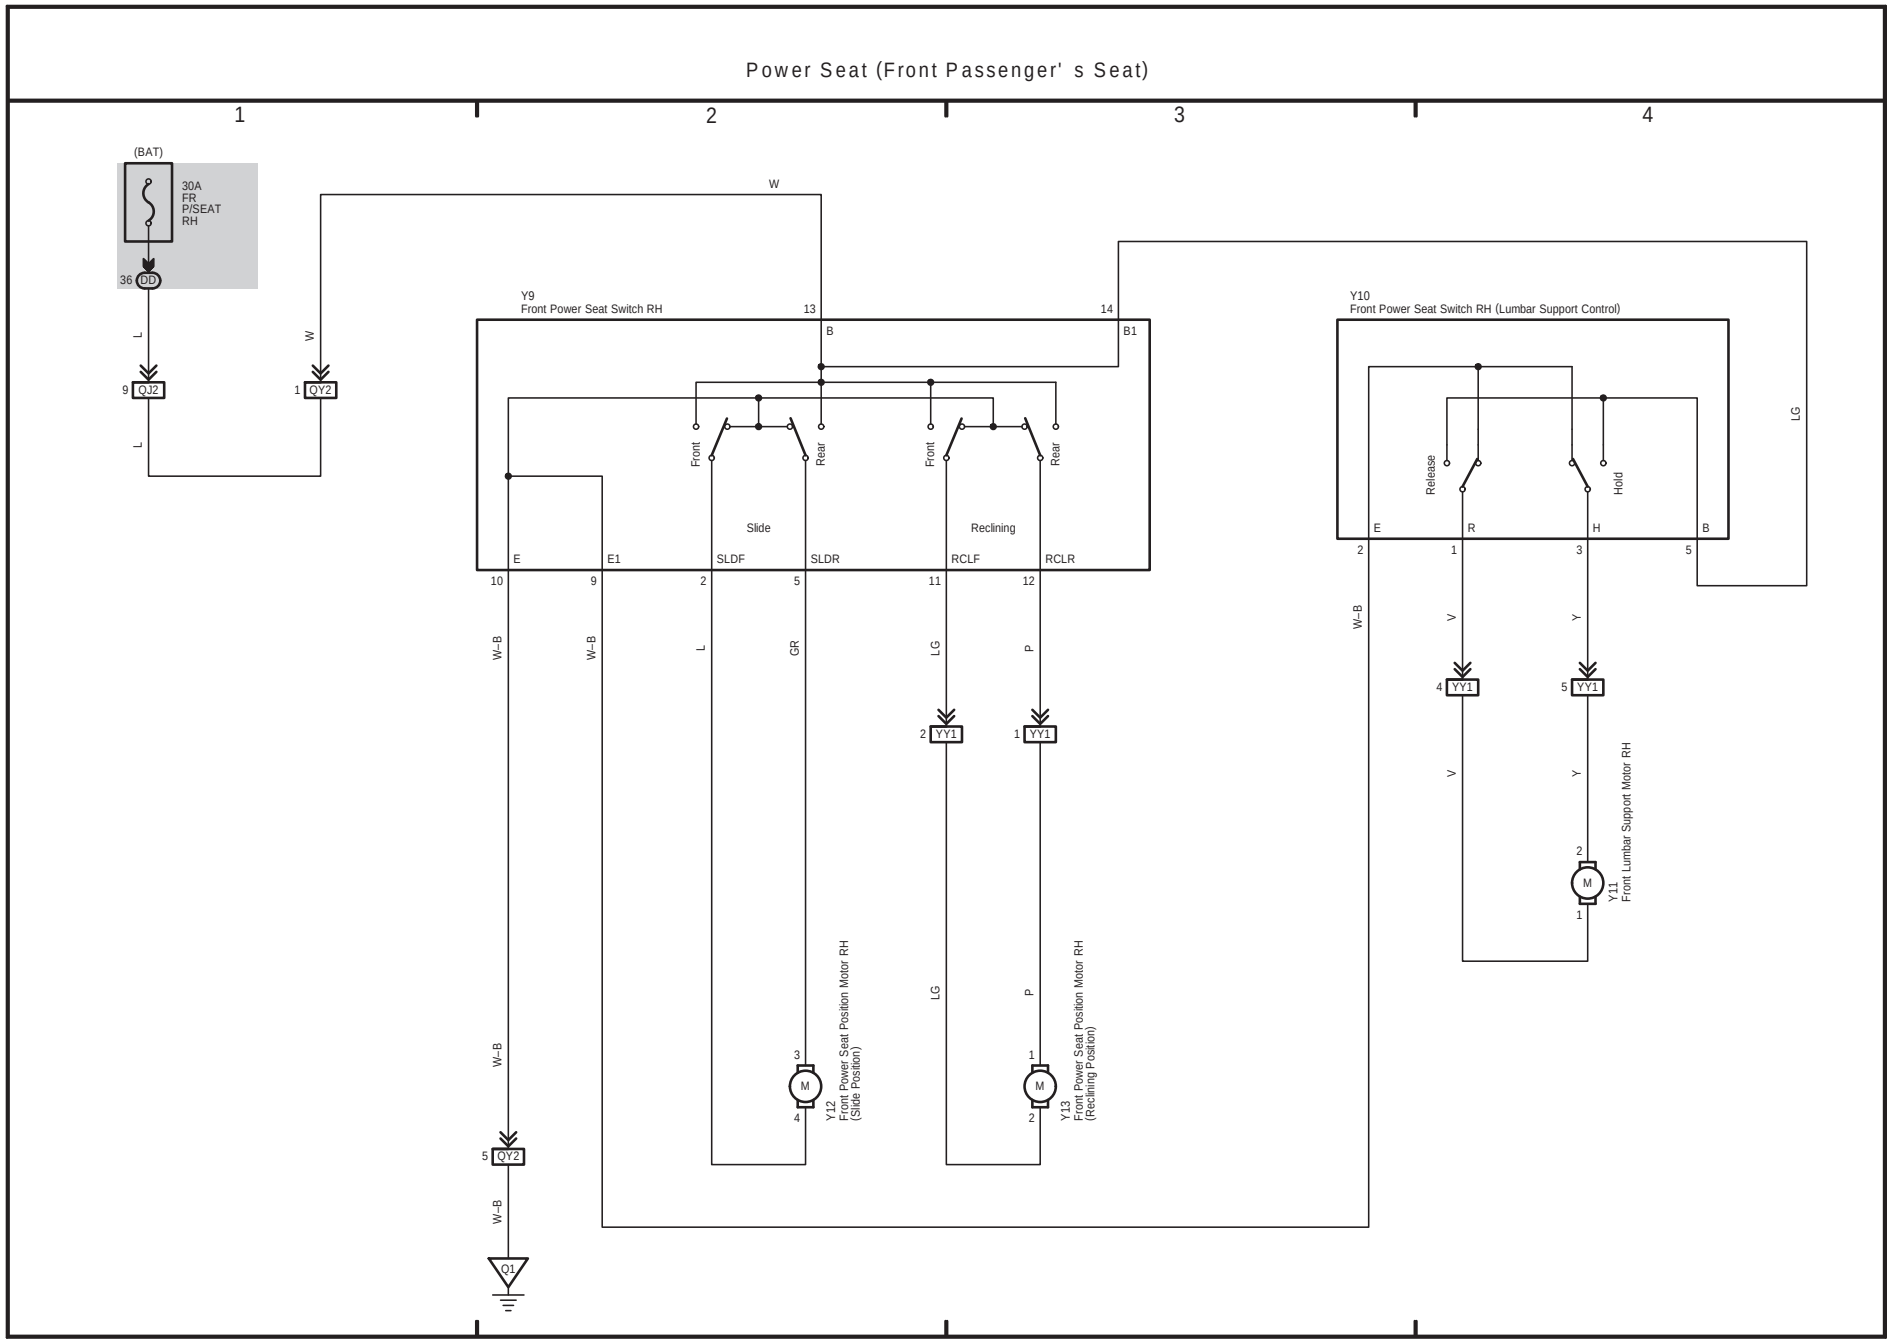

Power Seat (Front Passenger' s Seat)
1
2
3
4
(BAT)
30A
FR
P/SEAT
RH
36 DD
L
9 QJ2
L
W
1 QY2
W
Y9
Front Power Seat Switch RH
13
14
B
B1
Front
Rear
Front
Rear
Slide
Reclining
E
E1
SLDF
SLDR
RCLF
RCLR
10
9
2
5
11
12
W–B
W–B
L
GR
LG
P
2 YY1
1 YY1
3
M
4
Y12
Front Power Seat Position Motor RH
(Slide Position)
LG
P
1
M
2
Y13
Front Power Seat Position Motor RH
(Reclining Position)
W–B
5 QY2
W–B
Q1
Y10
Front Power Seat Switch RH (Lumbar Support Control)
Release
Hold
E
R
H
B
2
1
3
5
LG
W–B
V
Y
4 YY1
5 YY1
V
Y
2
M
1
Y11
Front Lumbar Support Motor RH