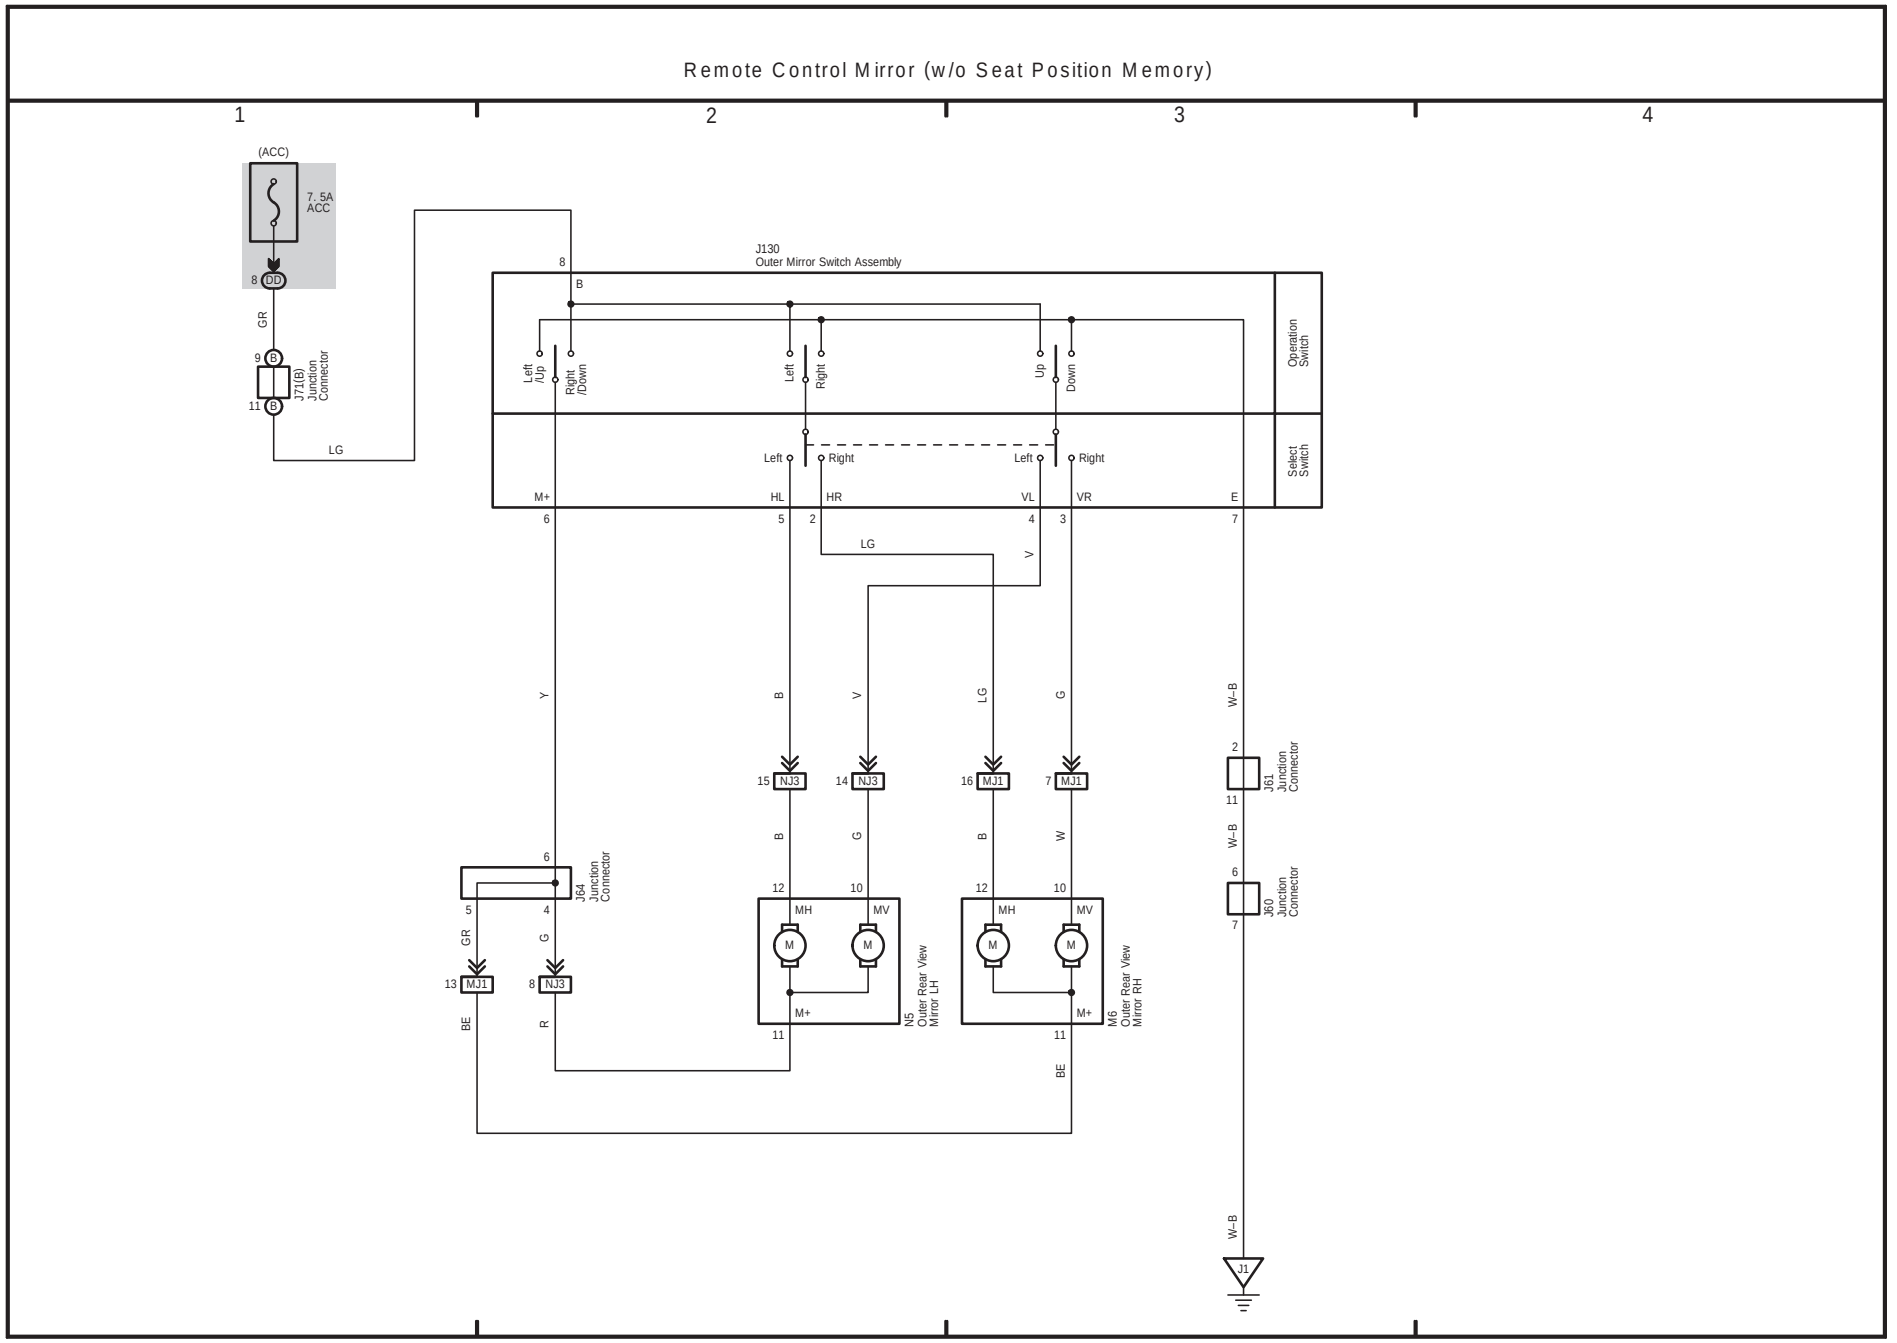

Remote Control Mirror (w/o Seat Position Memory)
1
2
3
4
(ACC)
7. 5A
ACC
8 DD
GR
9 B
11 B
J71(B)
Junction
Connector
LG
8
B
J130
Outer Mirror Switch Assembly
Left
/Up
Right
/Down
Left
Right
Up
Down
Operation
Switch
Left
Right
Left
Right
Select
Switch
M+
HL
HR
VL
VR
E
6
5
2
4
3
7
LG
V
Y
B
V
LG
G
W-B
15 NJ3
14 NJ3
16 MJ1
7 MJ1
2
J61
Junction
Connector
11
W-B
6
J60
Junction
Connector
7
6
J64
Junction
Connector
5
4
GR
G
13 MJ1
8 NJ3
BE
R
B
G
B
W
12
10
12
10
MH
MV
MH
MV
M
M
M
M
M+
M+
11
11
N5
Outer Rear View
Mirror LH
M6
Outer Rear View
Mirror RH
BE
W-B
J1