

(Cont. next page)

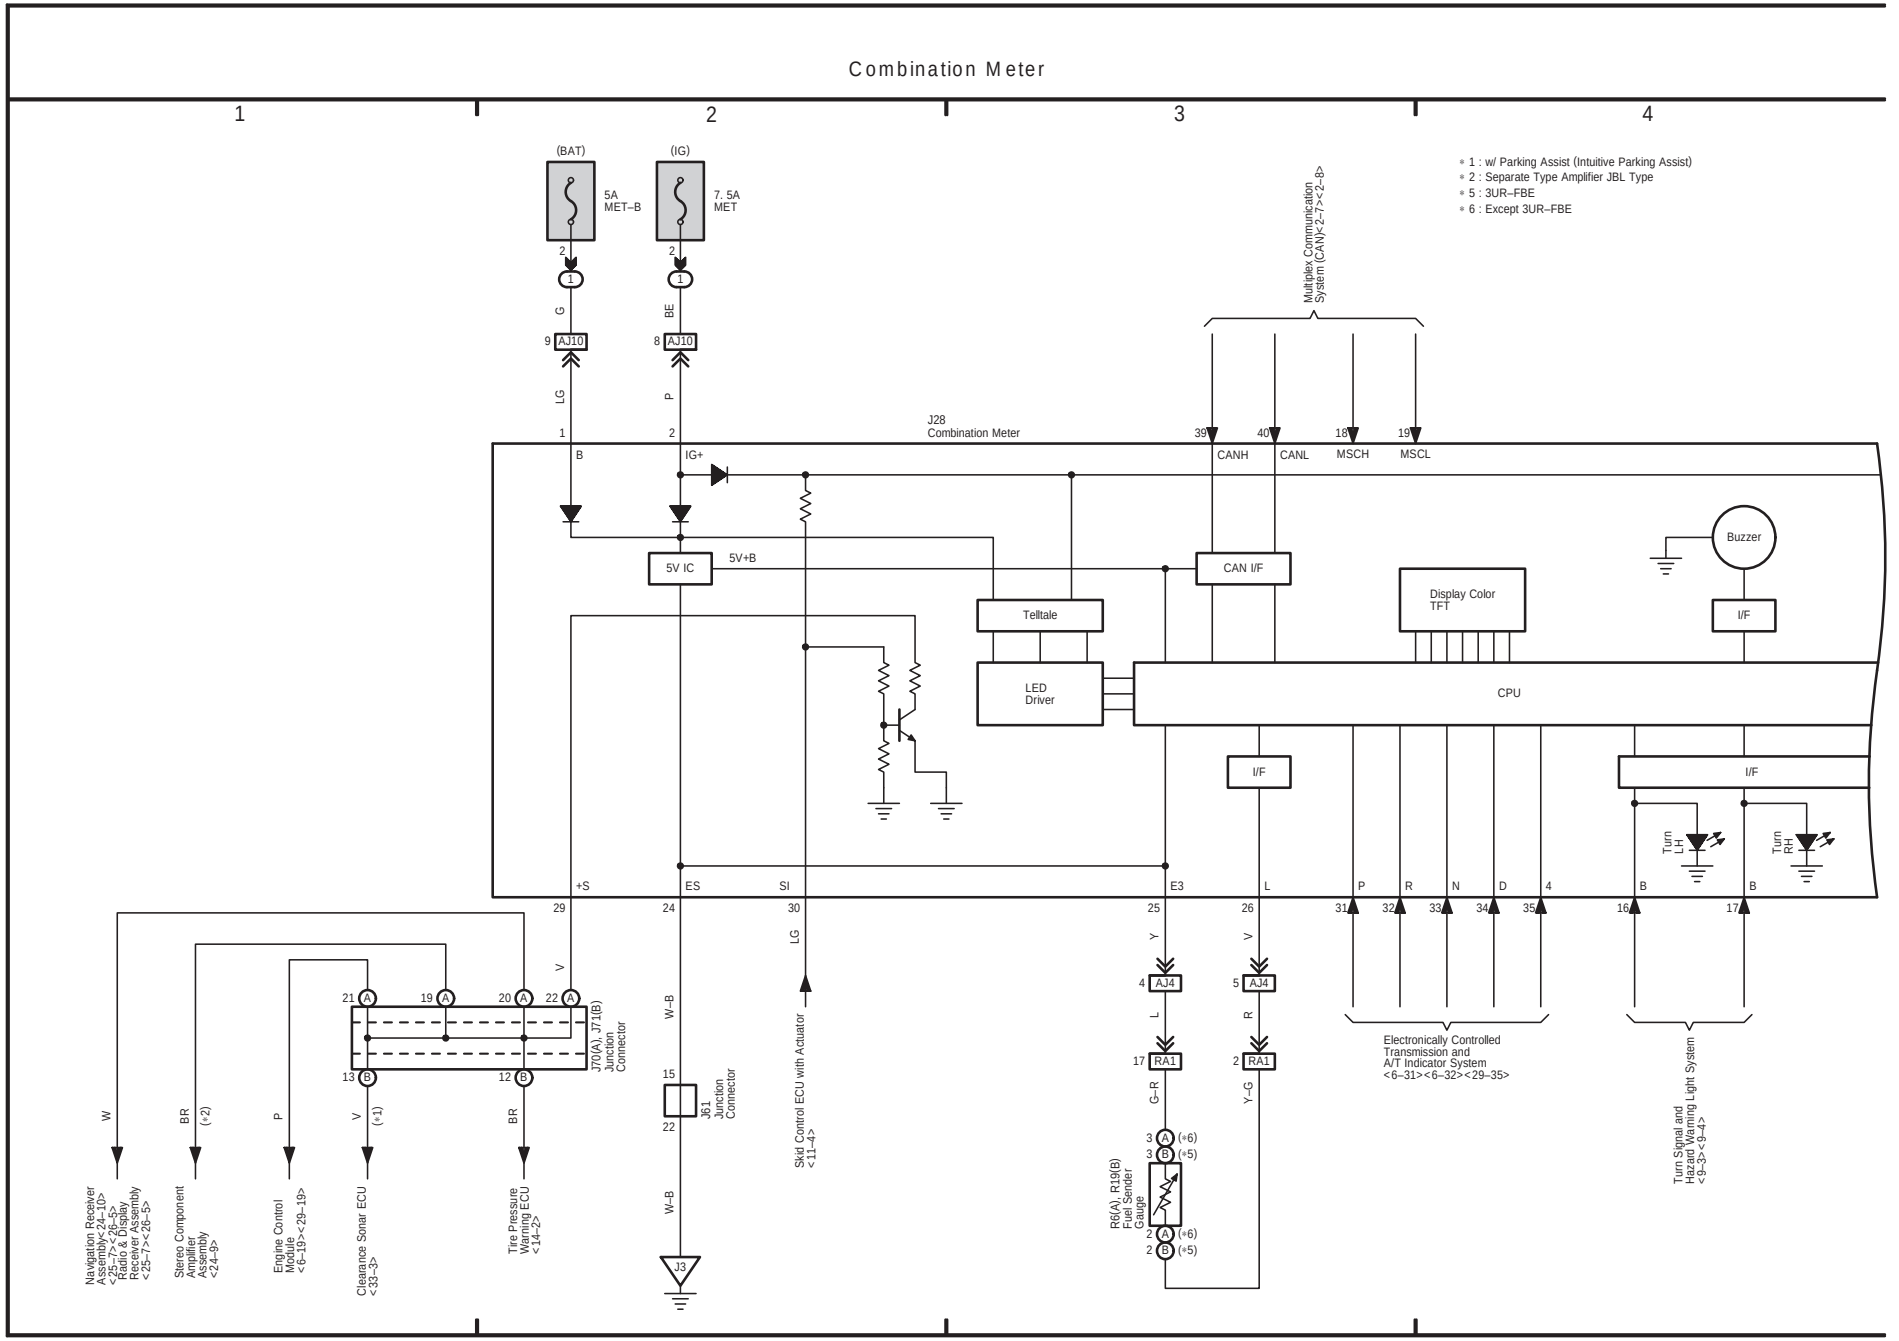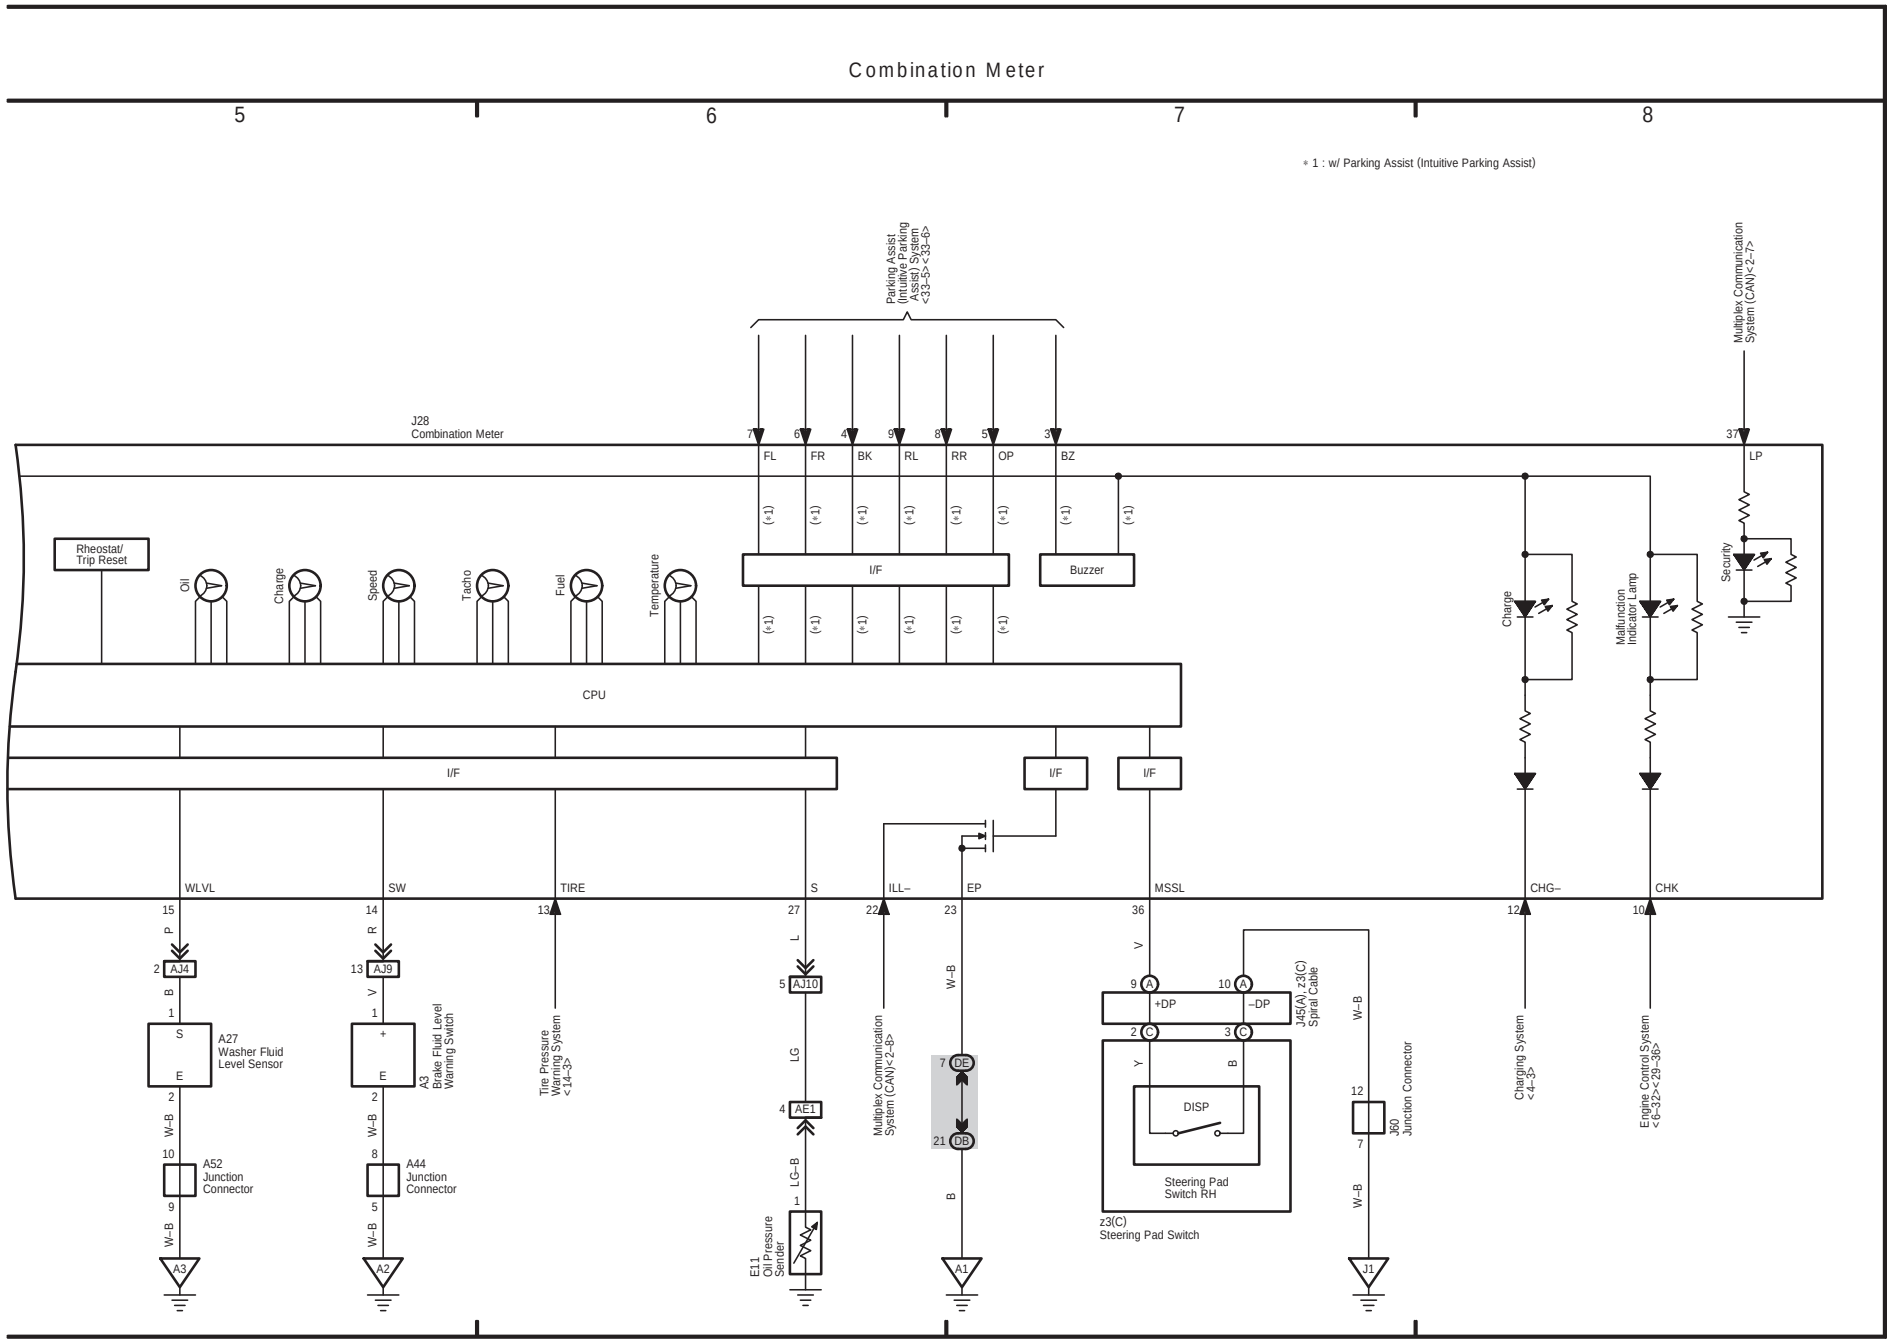


Combination Meter
5
6
7
8
* 1 : w/ Parking Assist (Intuitive Parking Assist)
Parking Assist (Intuitive Parking Assist) System <33–5>,<33–6>
Multiplex Communication System (CAN)<2–7>
J28
Combination Meter
FL
FR
BK
RL
RR
OP
BZ
LP
Rheostat/ Trip Reset
Oil
Charge
Speed
Tacho
Fuel
Temperature
I/F
Buzzer
CPU
Charge
Malfunction Indicator Lamp
Security
WLVL
SW
TIRE
S
ILL–
EP
MSSL
CHG–
CHK
A27 Washer Fluid Level Sensor
A3 Brake Fluid Level Warning Switch
A52 Junction Connector
A44 Junction Connector
A3
A2
A1
J1
AJ4
AJ9
AJ10
AE1
E11 Oil Pressure Sender
Tire Pressure Warning System <14–3>
Multiplex Communication System (CAN)<2–6>
+DP
–DP
J45(A),z3(C) Spiral Cable
DISP
Steering Pad Switch RH
z3(C) Steering Pad Switch
J60 Junction Connector
Charging System <4–3>
Engine Control System <6–32>,<29–36>
M