

(Cont. next page)

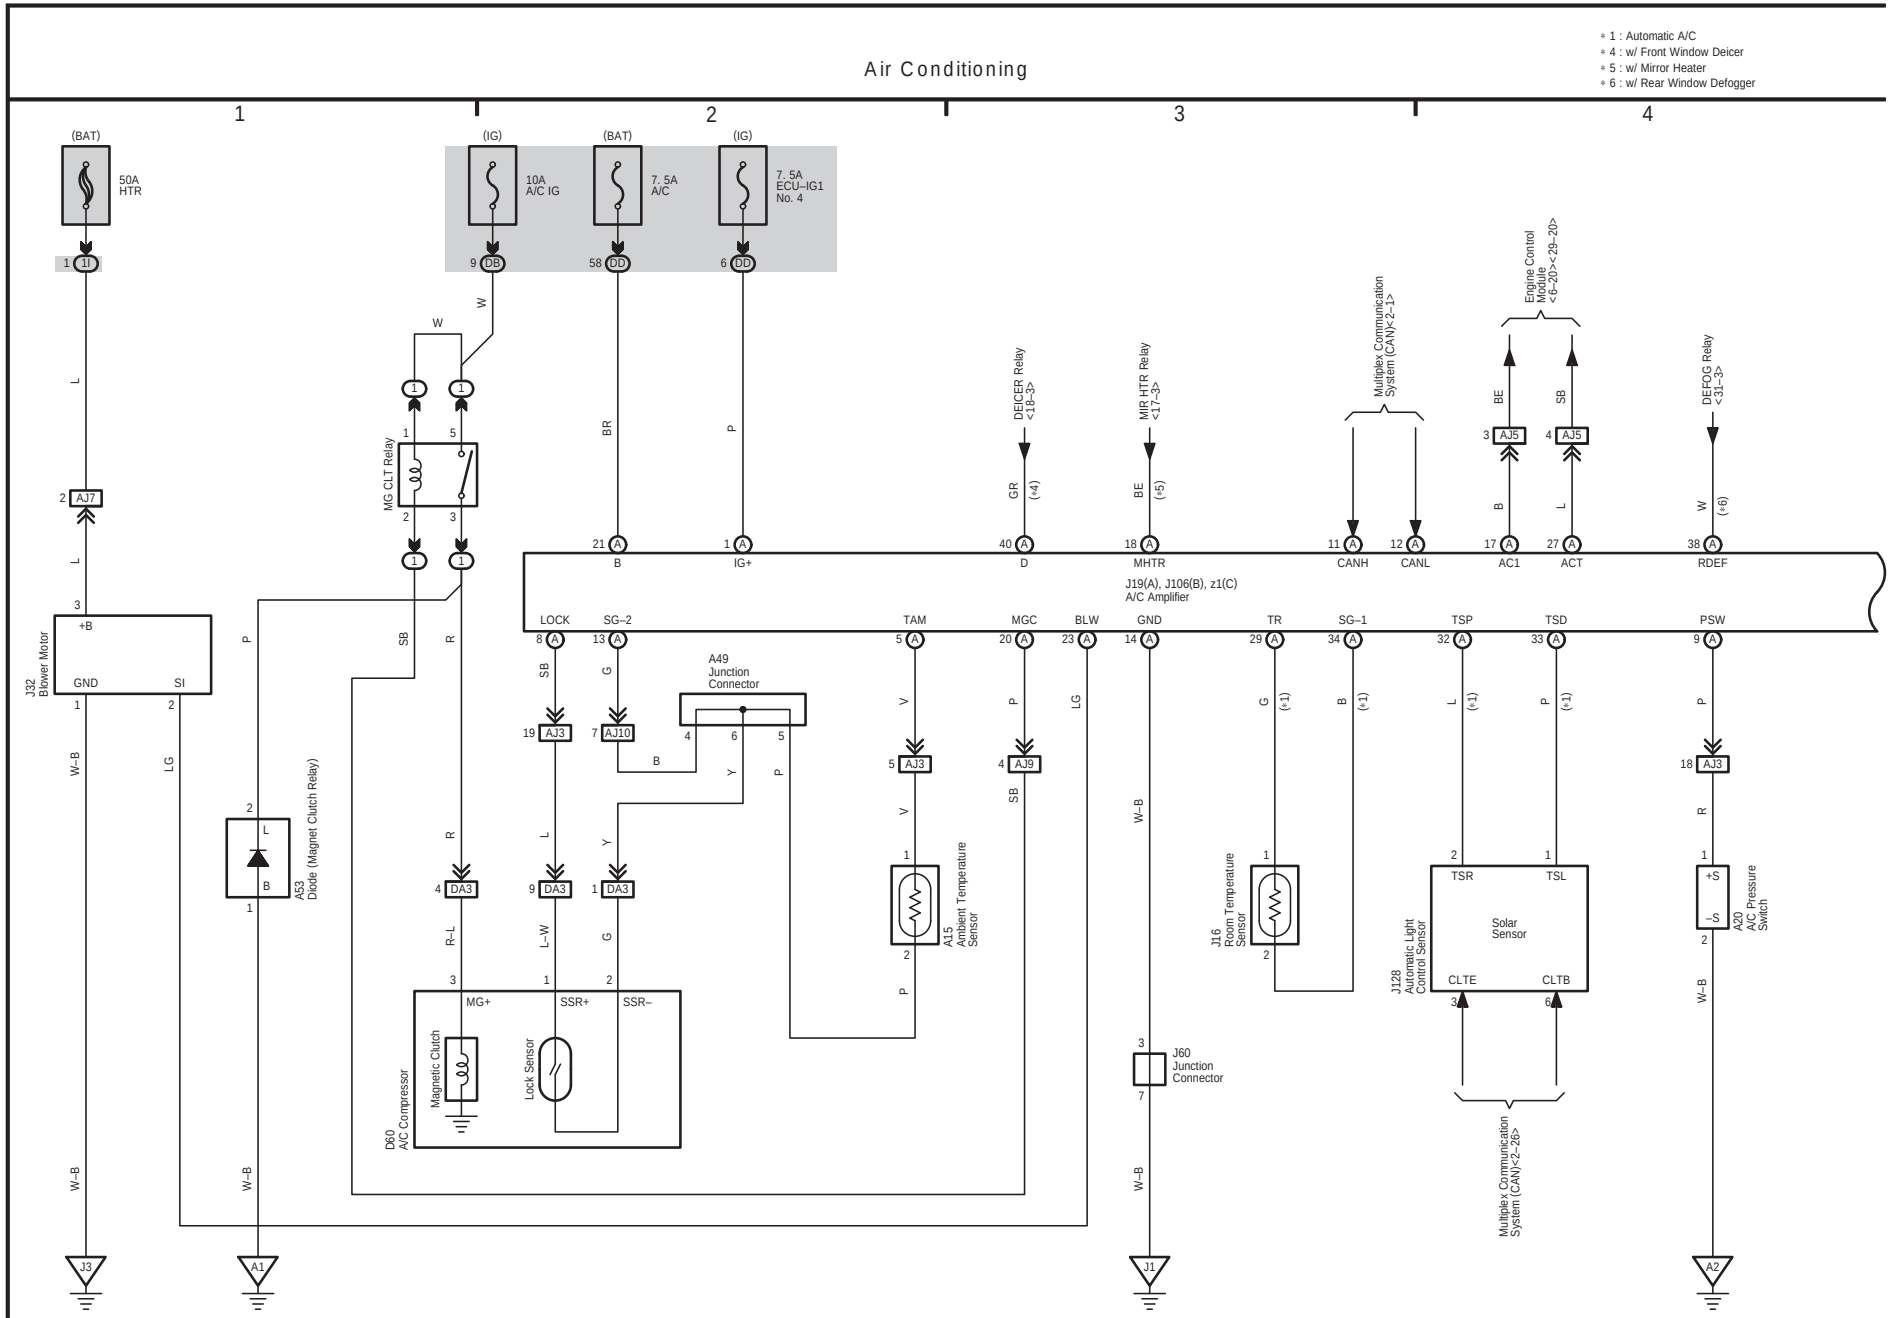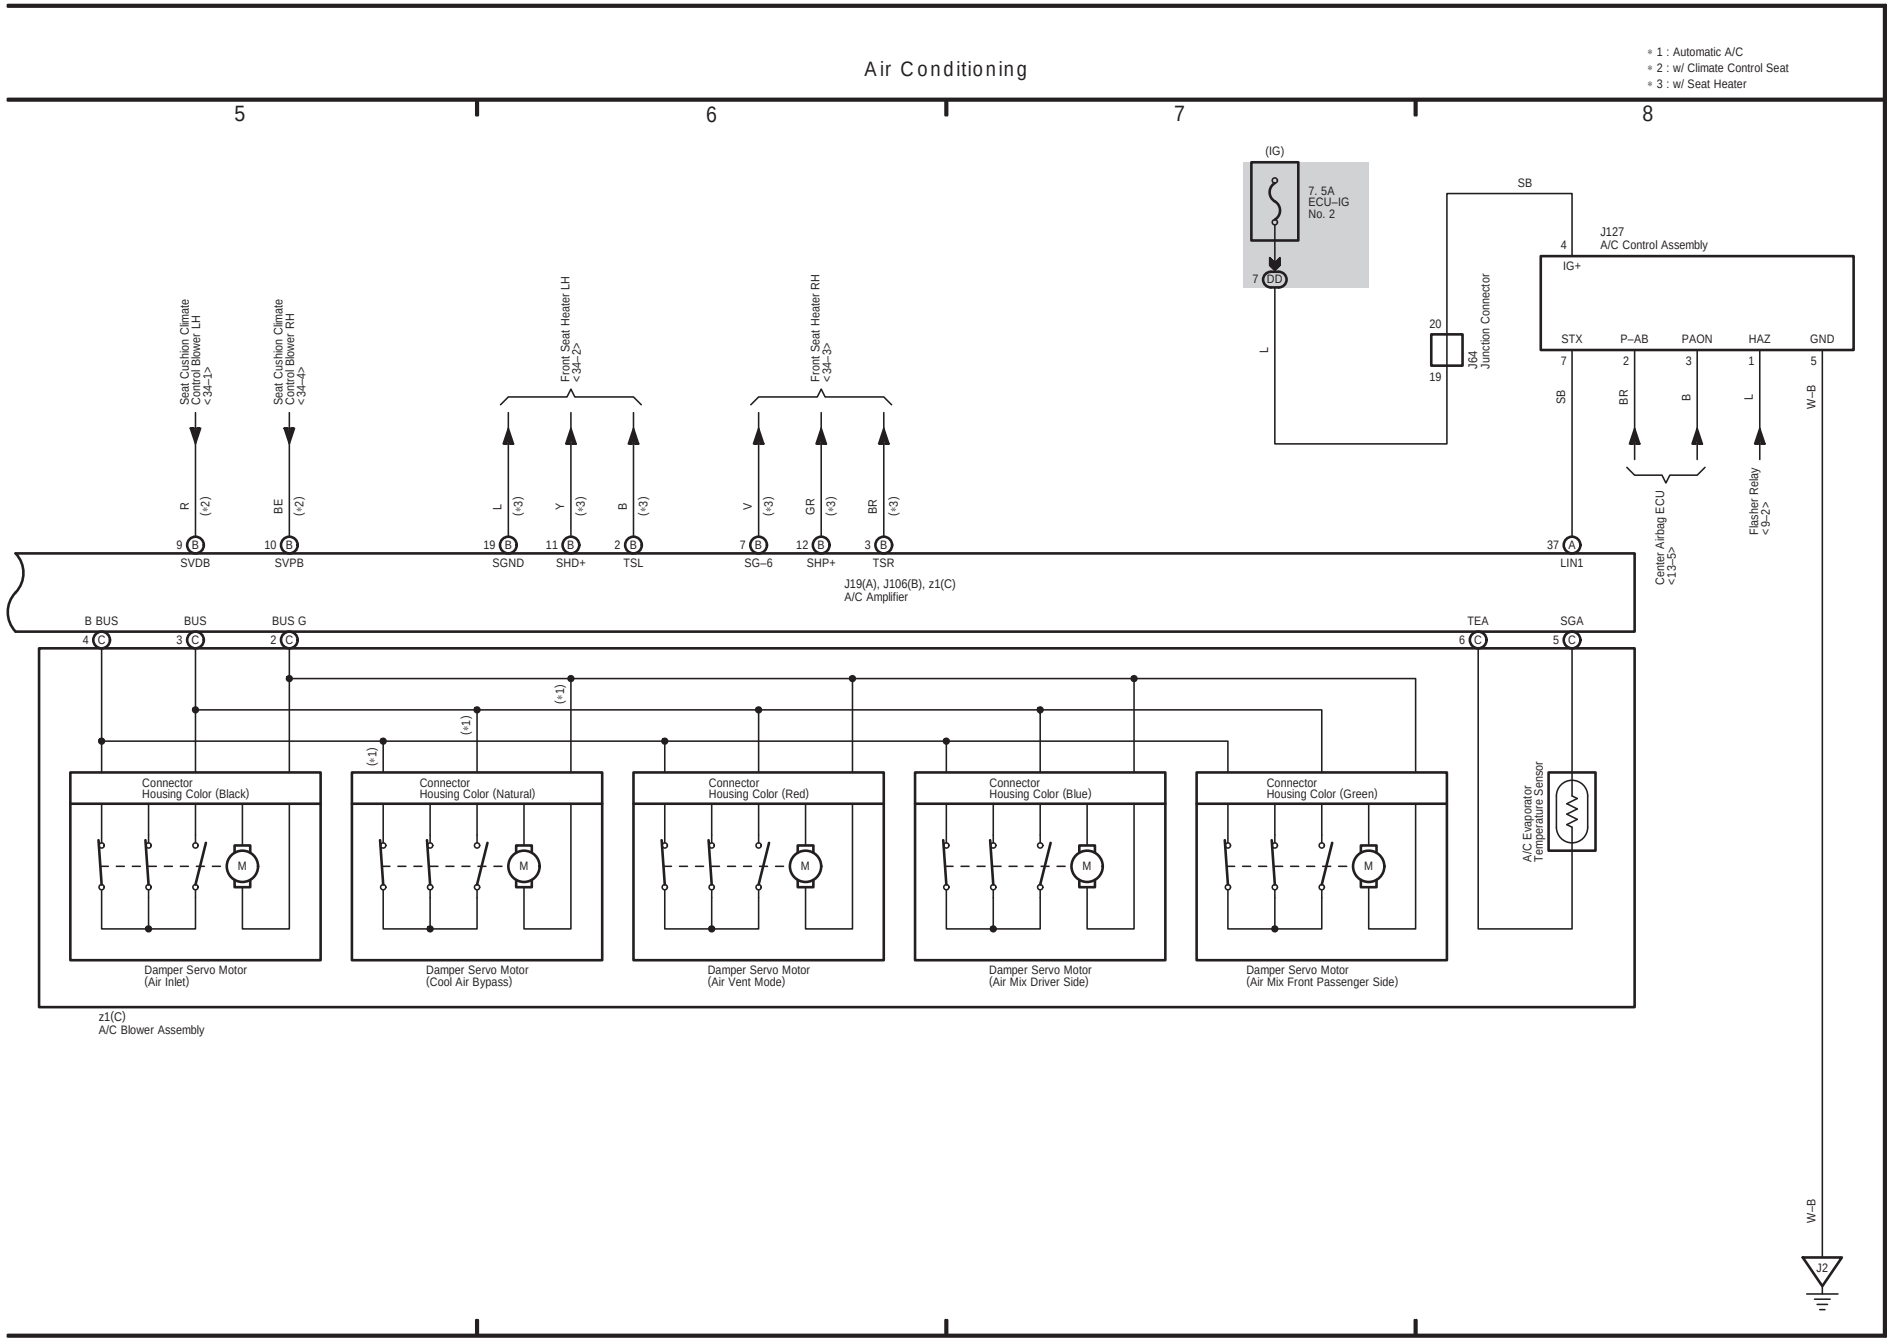


Air Conditioning
* 1 : Automatic A/C
* 2 : w/ Climate Control Seat
* 3 : w/ Seat Heater
5
6
7
8
(IG)
7. 5A
ECU–IG
No. 2
7 DD
L
SB
20
J64
Junction Connector
19
J127
A/C Control Assembly
4
IG+
STX
P–AB
PAON
HAZ
GND
7
2
3
1
5
SB
BR
B
L
W–B
Seat Cushion Climate Control Blower LH <34–1>
Seat Cushion Climate Control Blower RH <34–4>
Front Seat Heater LH <34–2>
Front Seat Heater RH <34–3>
R (*2)
B E (*2)
L (*3)
Y (*3)
B (*3)
V (*3)
G R (*3)
B R (*3)
9 B SVDB
10 B SVPB
19 B SGND
11 B SHD+
2 B TSL
7 B SG–6
12 B SHP+
3 B TSR
37 A LIN1
Center Airbag ECU <13–5>
Flasher Relay <9–2>
J19(A), J106(B), z1(C)
A/C Amplifier
B BUS
BUS
BUS G
TEA
SGA
4 C
3 C
2 C
6 C
5 C
(*1)
Connector
Housing Color (Black)
Connector
Housing Color (Natural)
Connector
Housing Color (Red)
Connector
Housing Color (Blue)
Connector
Housing Color (Green)
M
A/C Evaporator
Temperature Sensor
Damper Servo Motor
(Air Inlet)
Damper Servo Motor
(Cool Air Bypass)
Damper Servo Motor
(Air Vent Mode)
Damper Servo Motor
(Air Mix Driver Side)
Damper Servo Motor
(Air Mix Front Passenger Side)
z1(C)
A/C Blower Assembly
W–B
J2