
(Cont. next page)

Engine Control (3UR–FE, 3UR–FBE)


* 6 : 3UR–FE
* 7 : 3UR–FBE

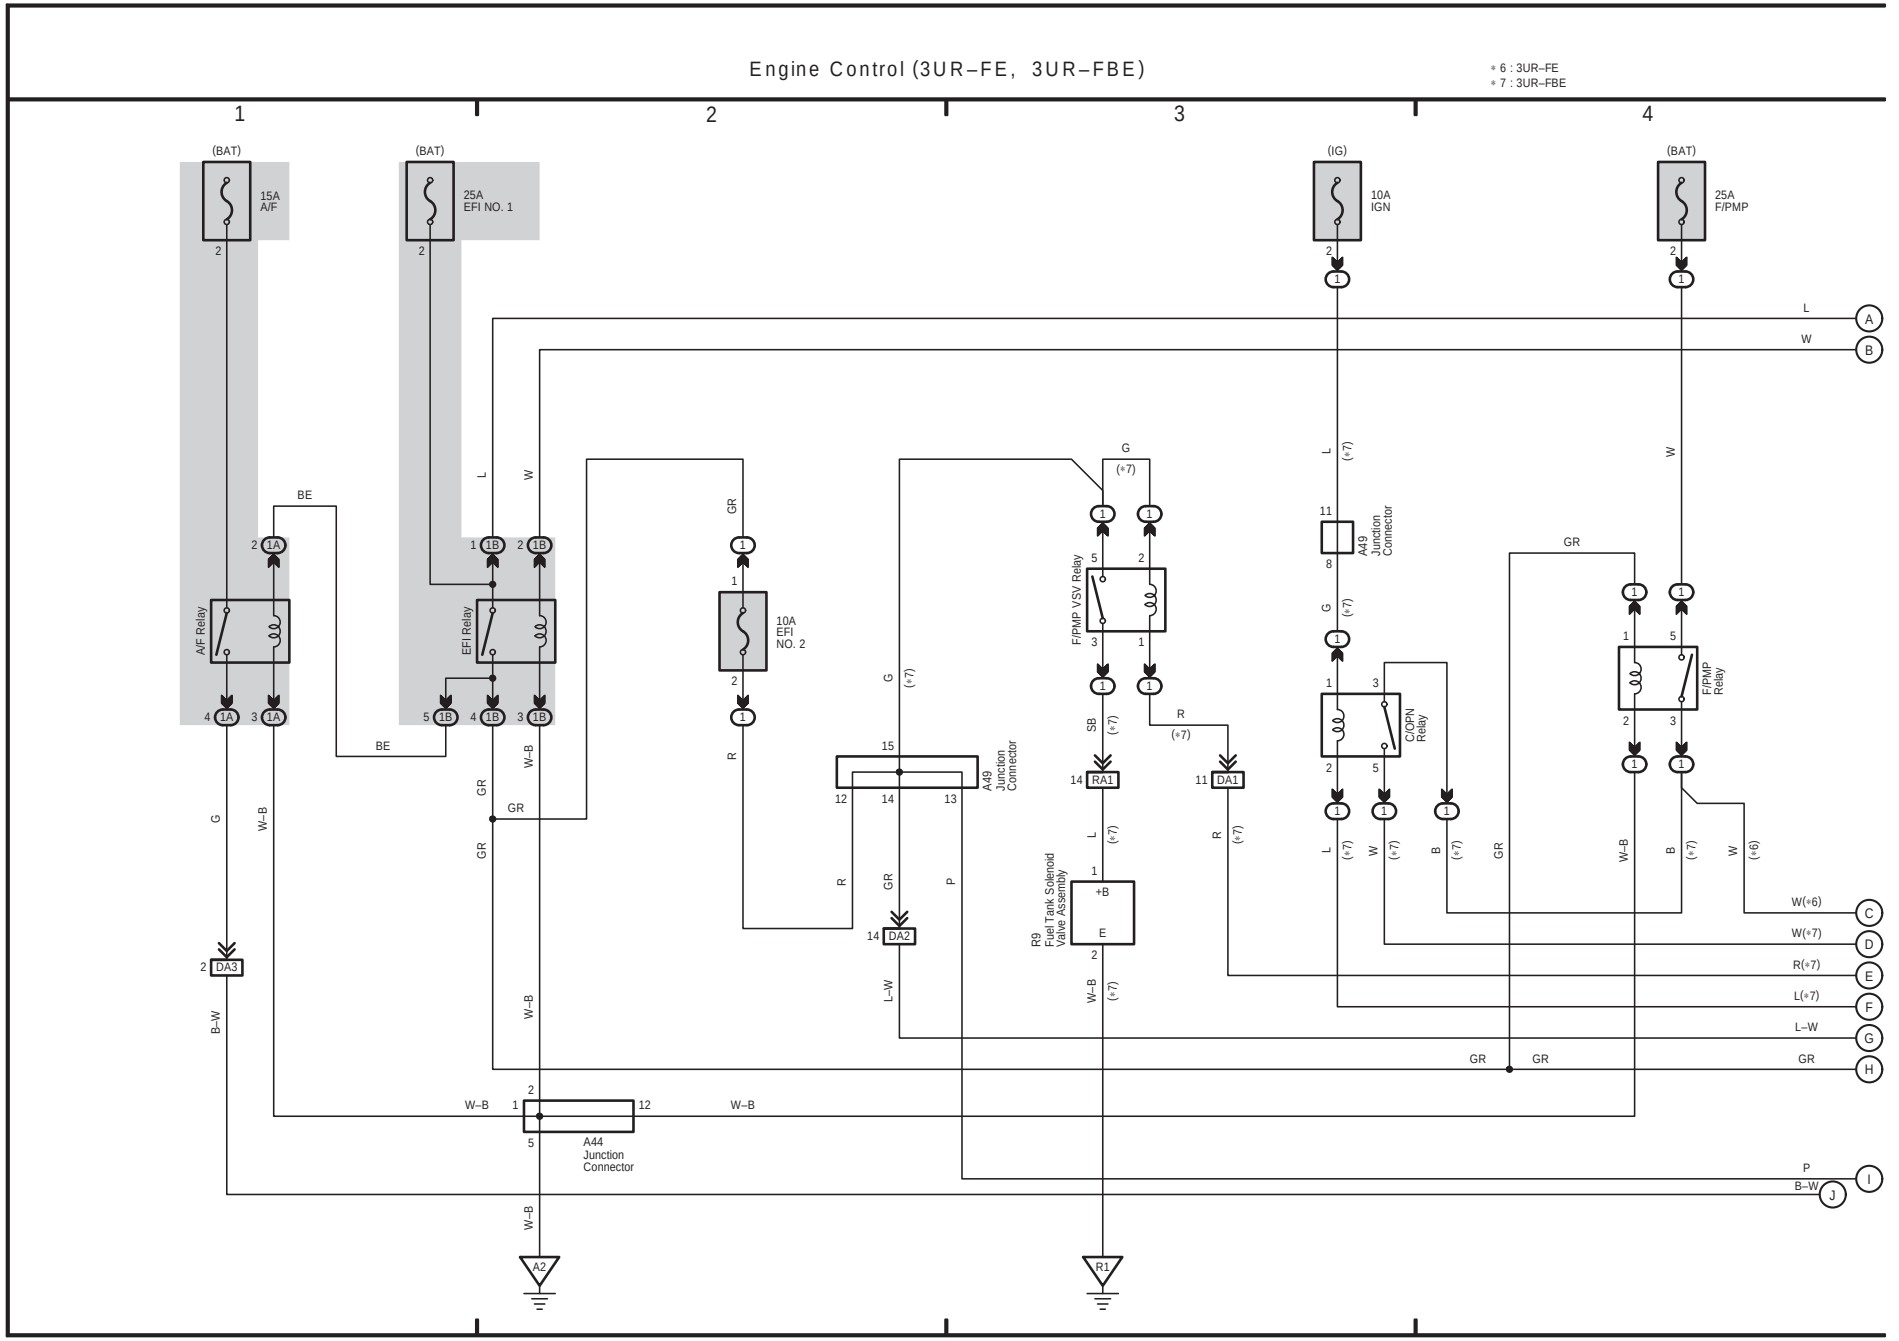

(Cont. next page)

Engine Control (3UR–FE, 3UR–FBE)


* 6 : 3UR–FE
* 7 : 3UR–FBE

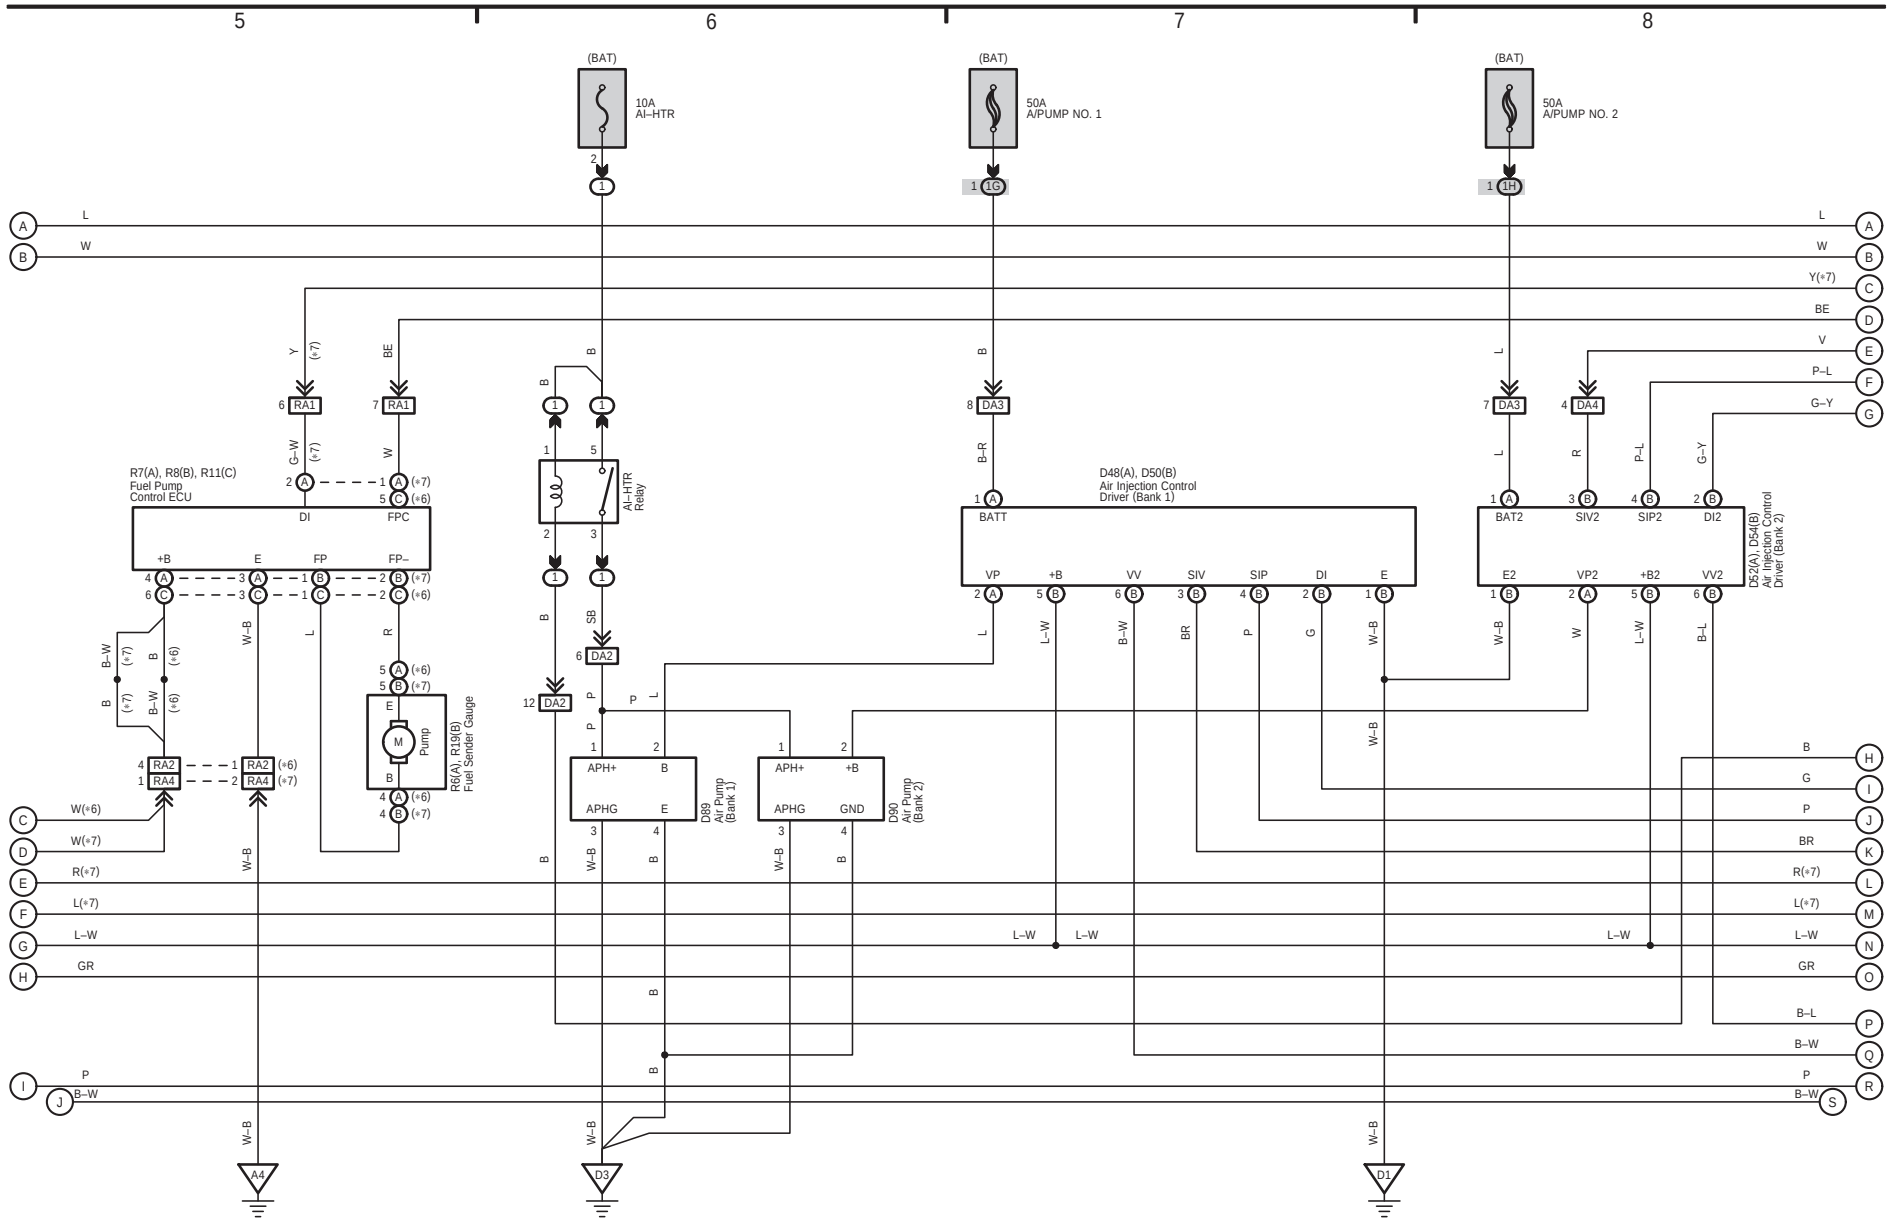

(Cont. next page)

Engine Control (3UR–FE, 3UR–FBE)


* 7 : 3UR–FBE

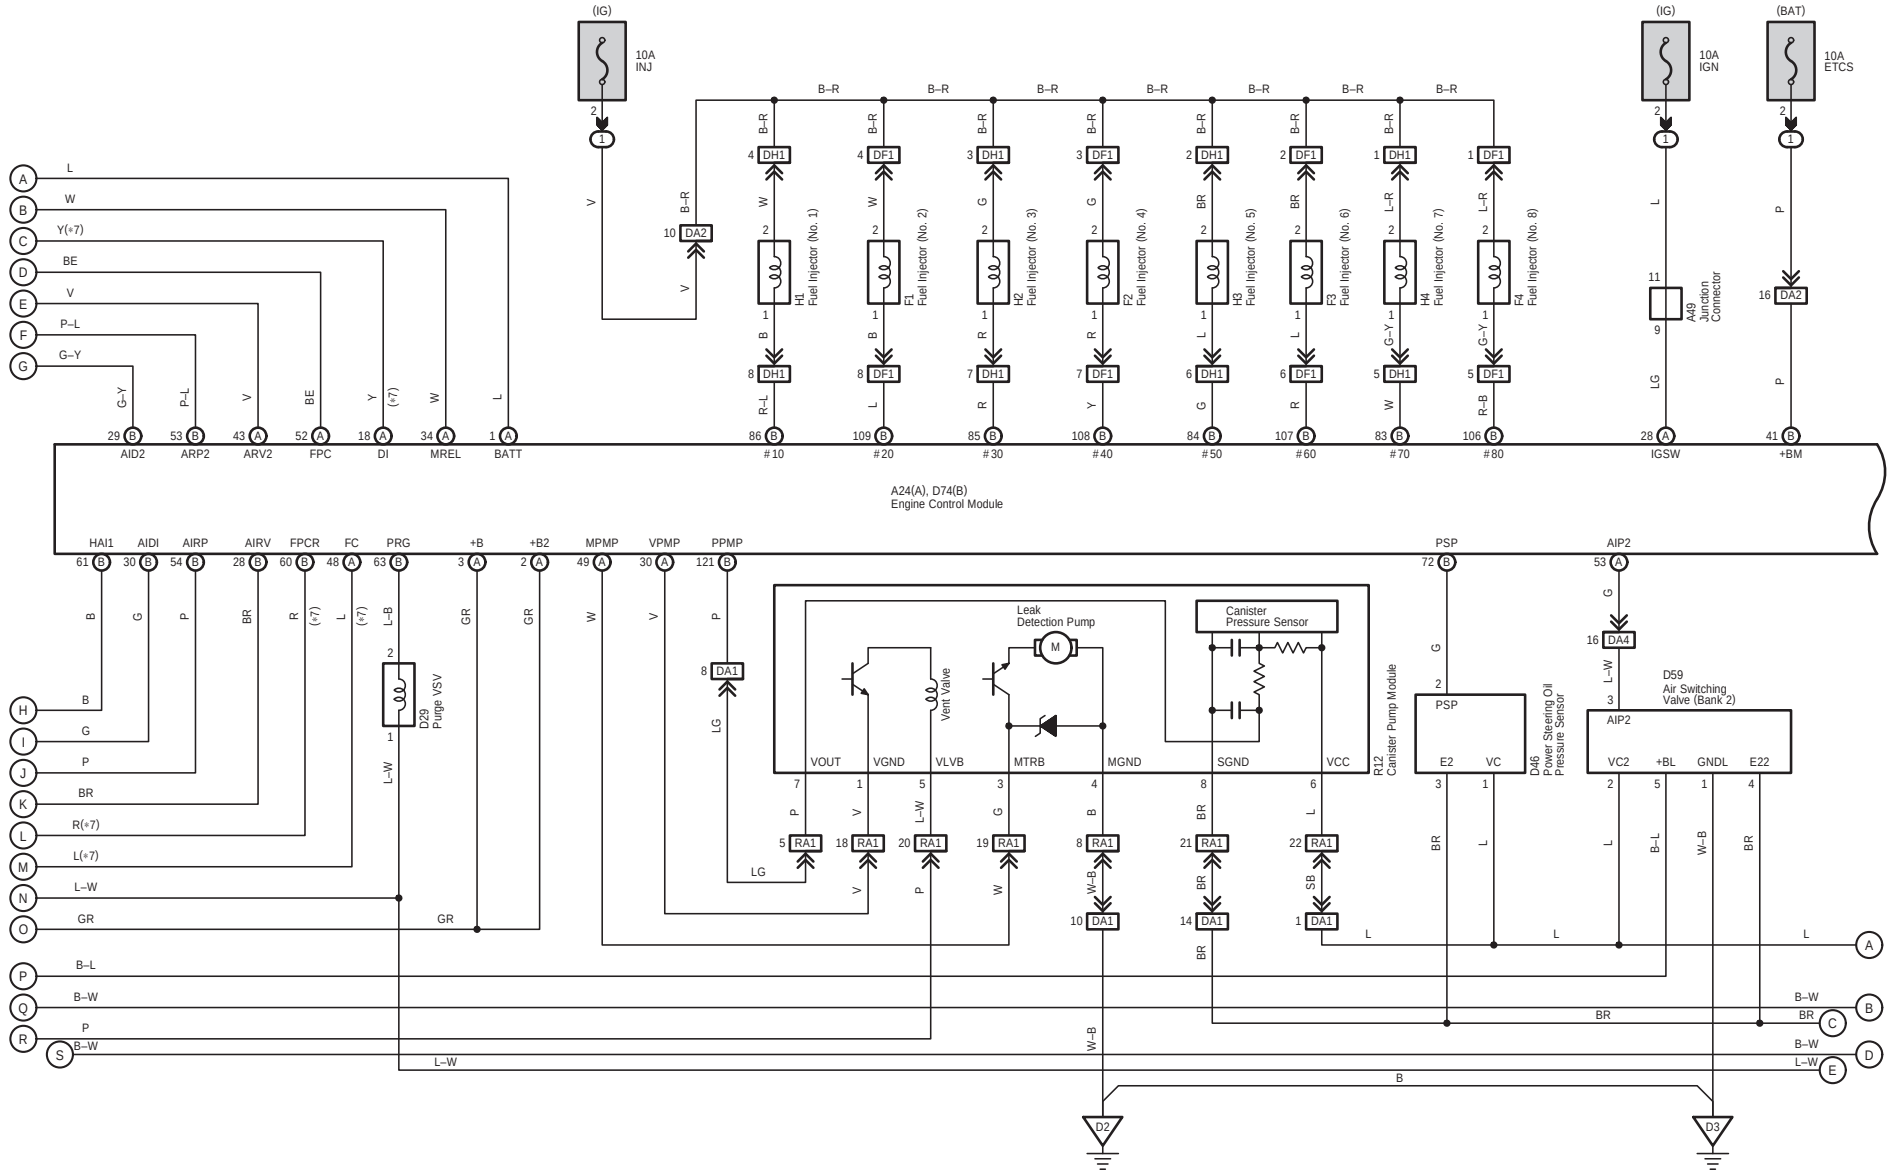

(Cont. next page)

Engine Control (3UR–FE, 3UR–FBE)


* 1 : Shielded

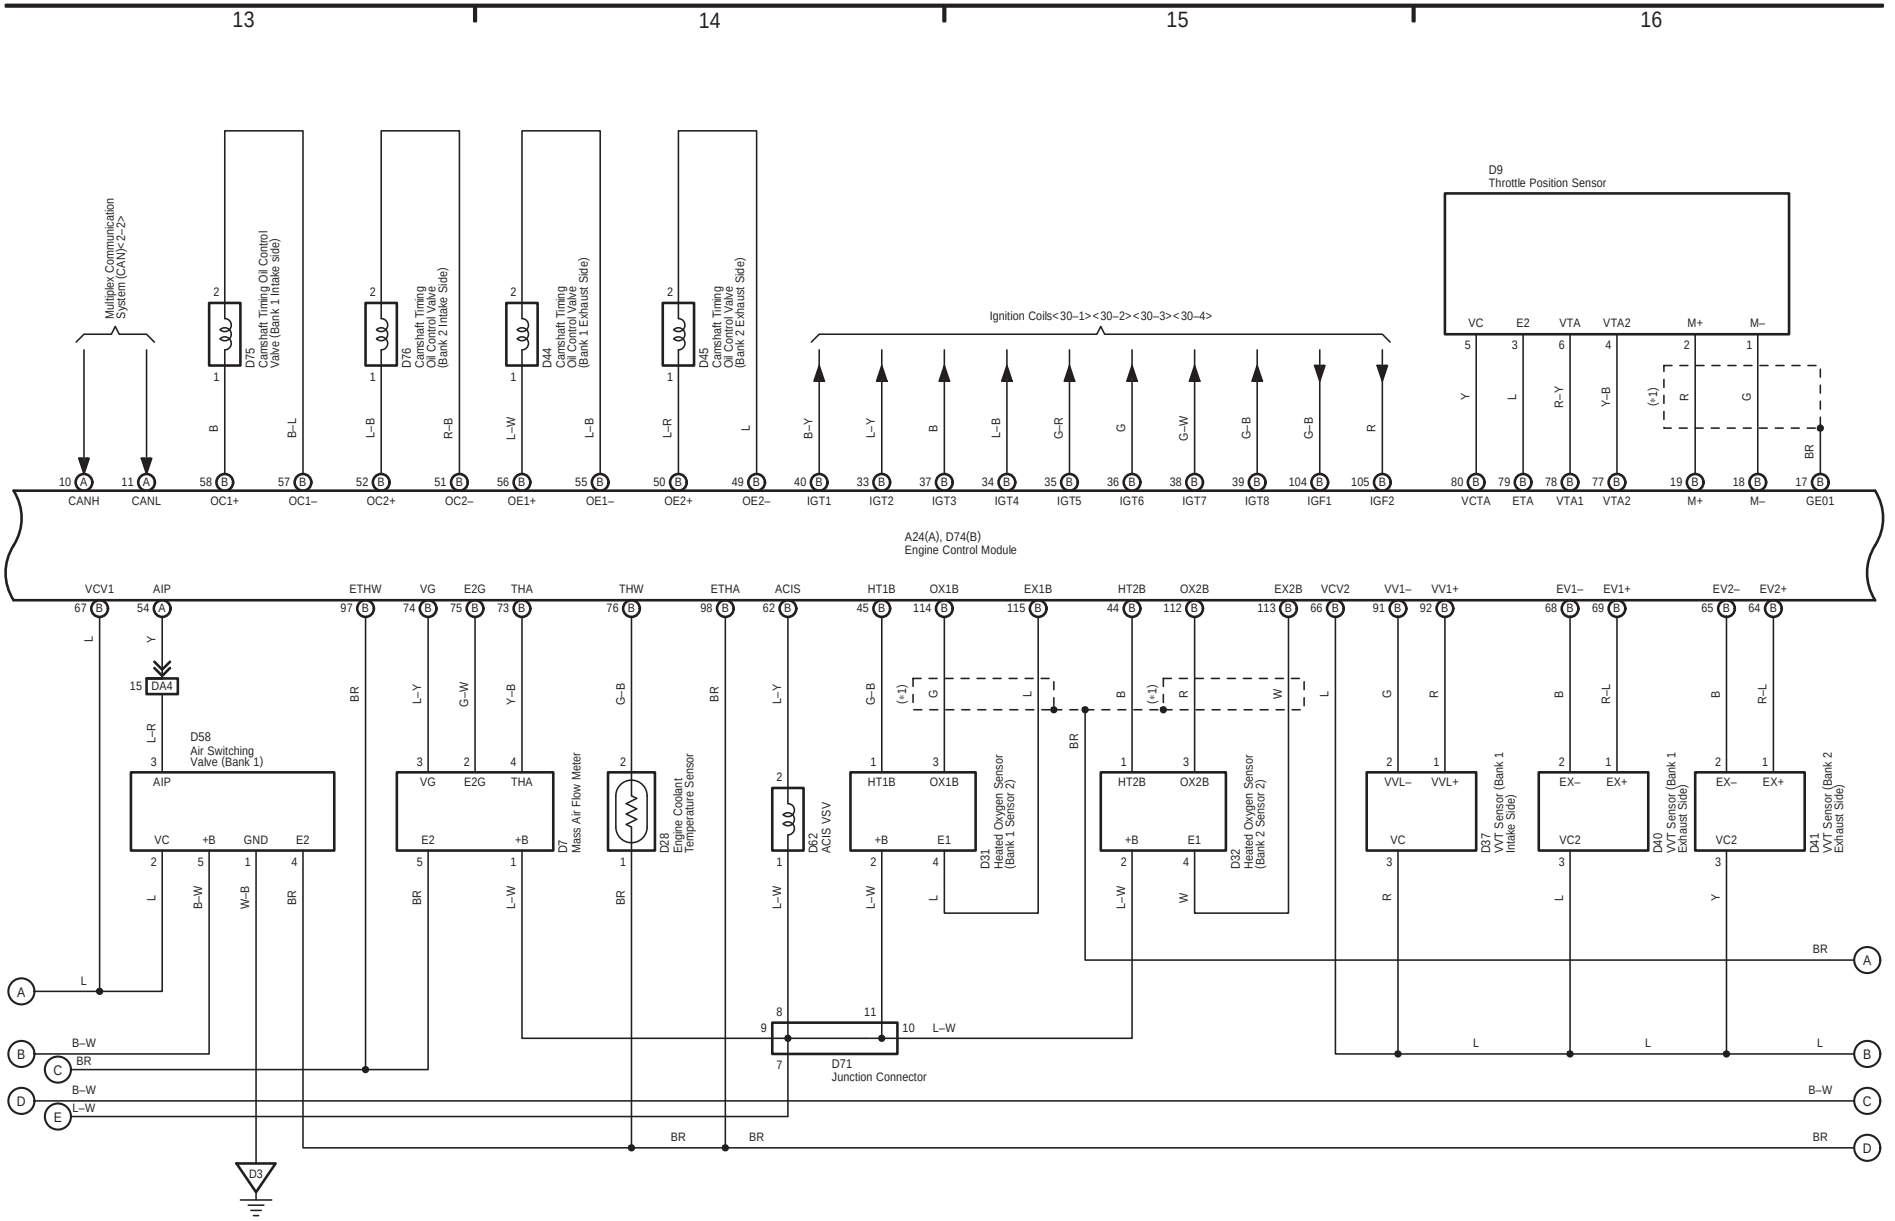

(Cont. next page)

Engine Control (3UR–FE, 3UR–FBE)


* 1 : Shielded

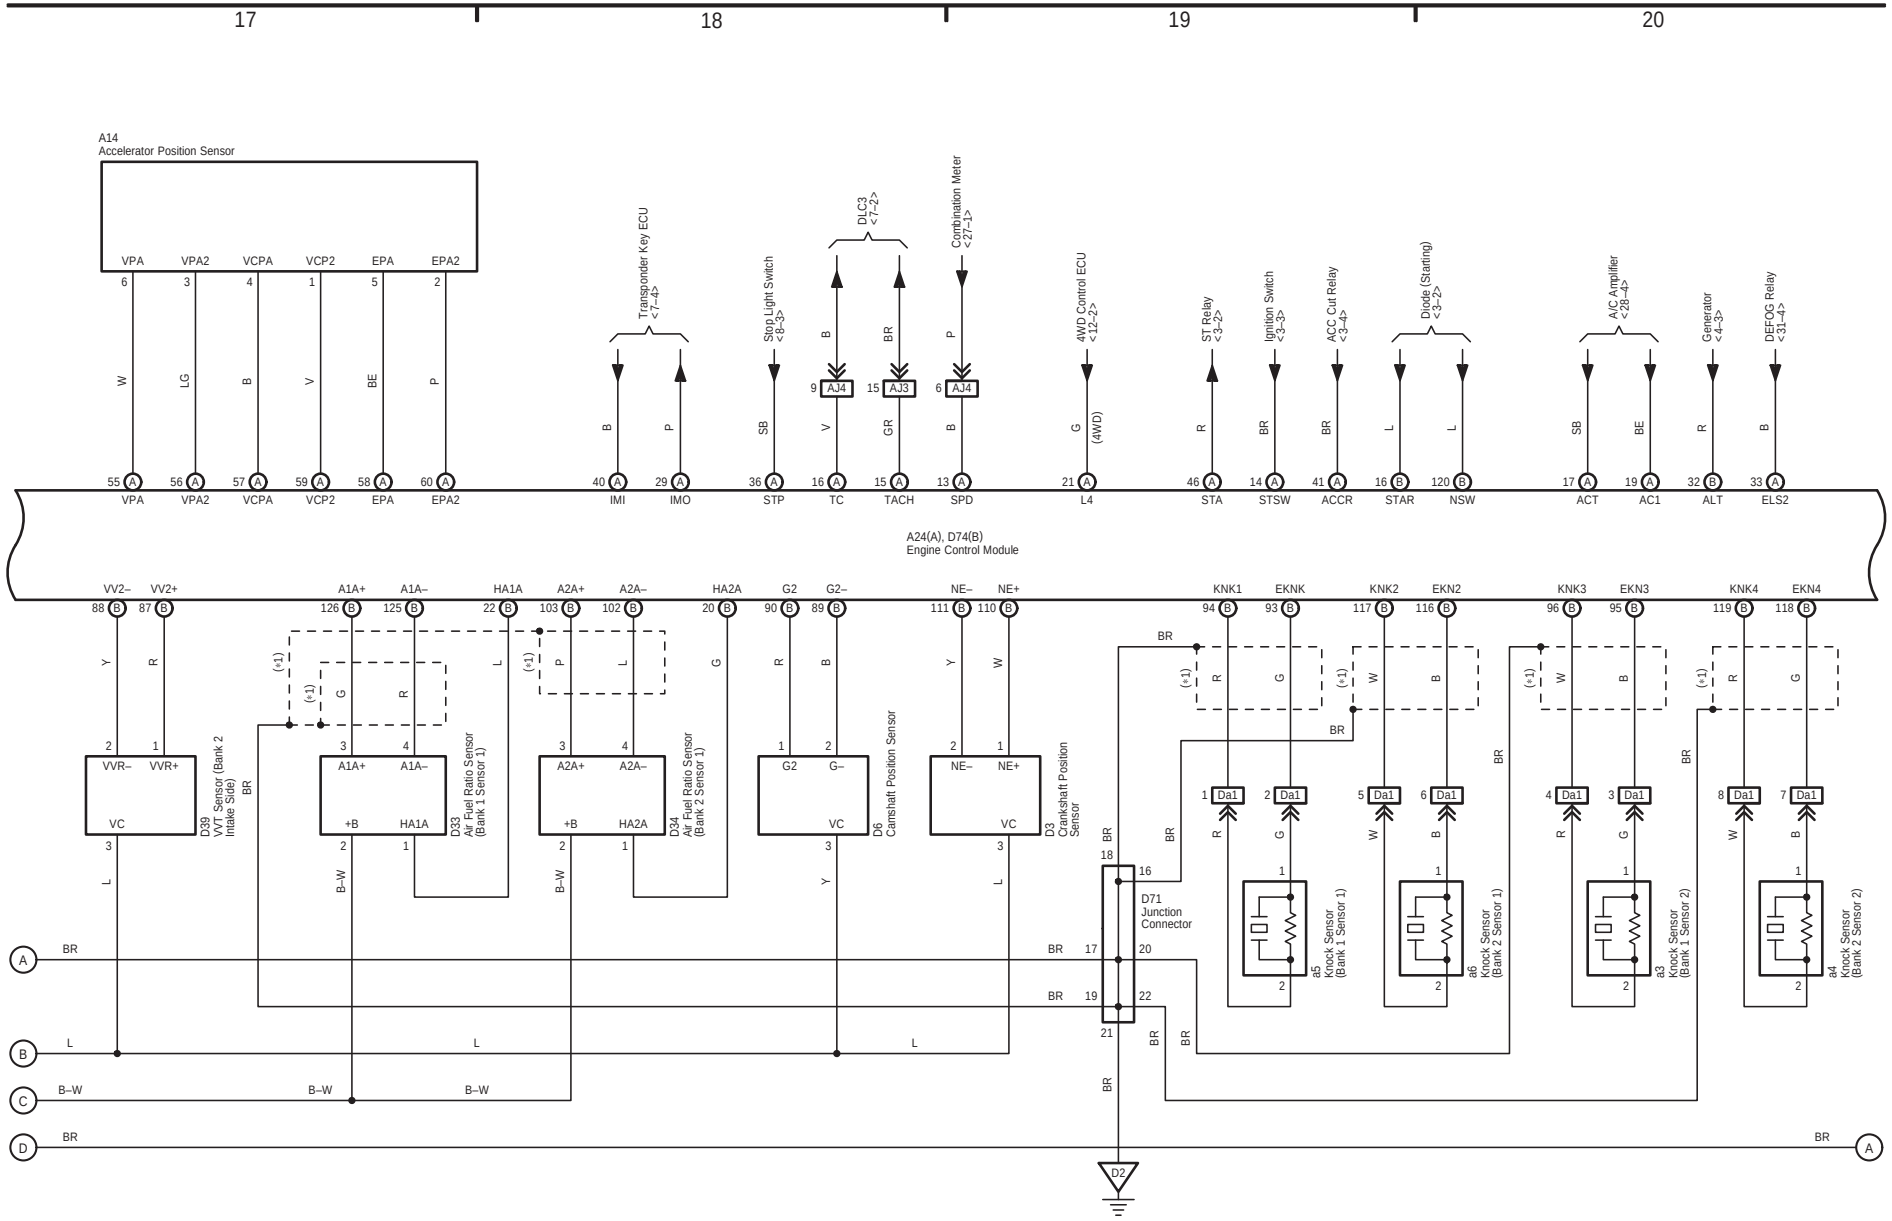

(Cont. next page)

Cruise Control (3UR–FE, 3UR–FBE)

*10 : w/ Cruise Control

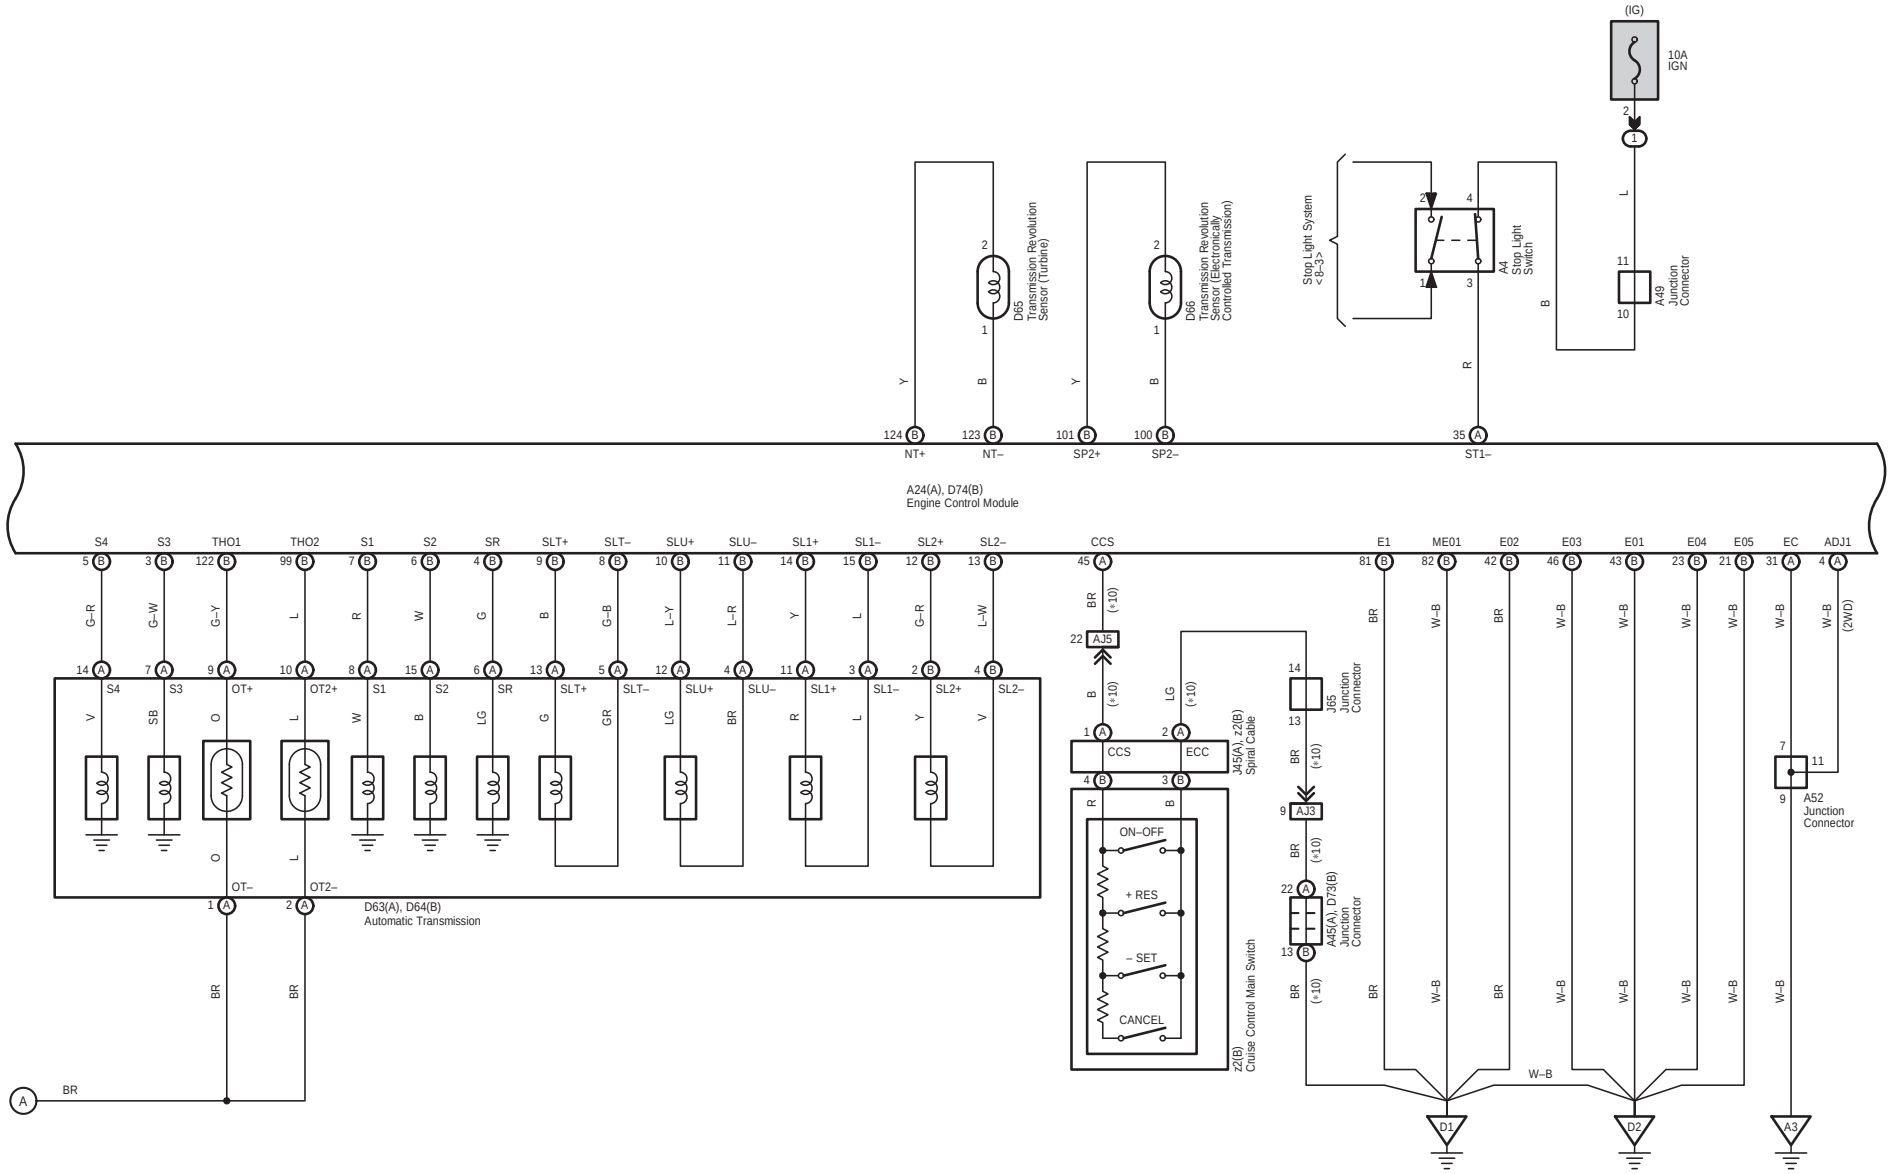


M

(Cont. next page)

Electronically Controlled Transmission and A/T Indicator (3UR–FE, 3UR–FBE)


* 2 : Floor Shift
* 3 : Column Shift

25 26 27 28

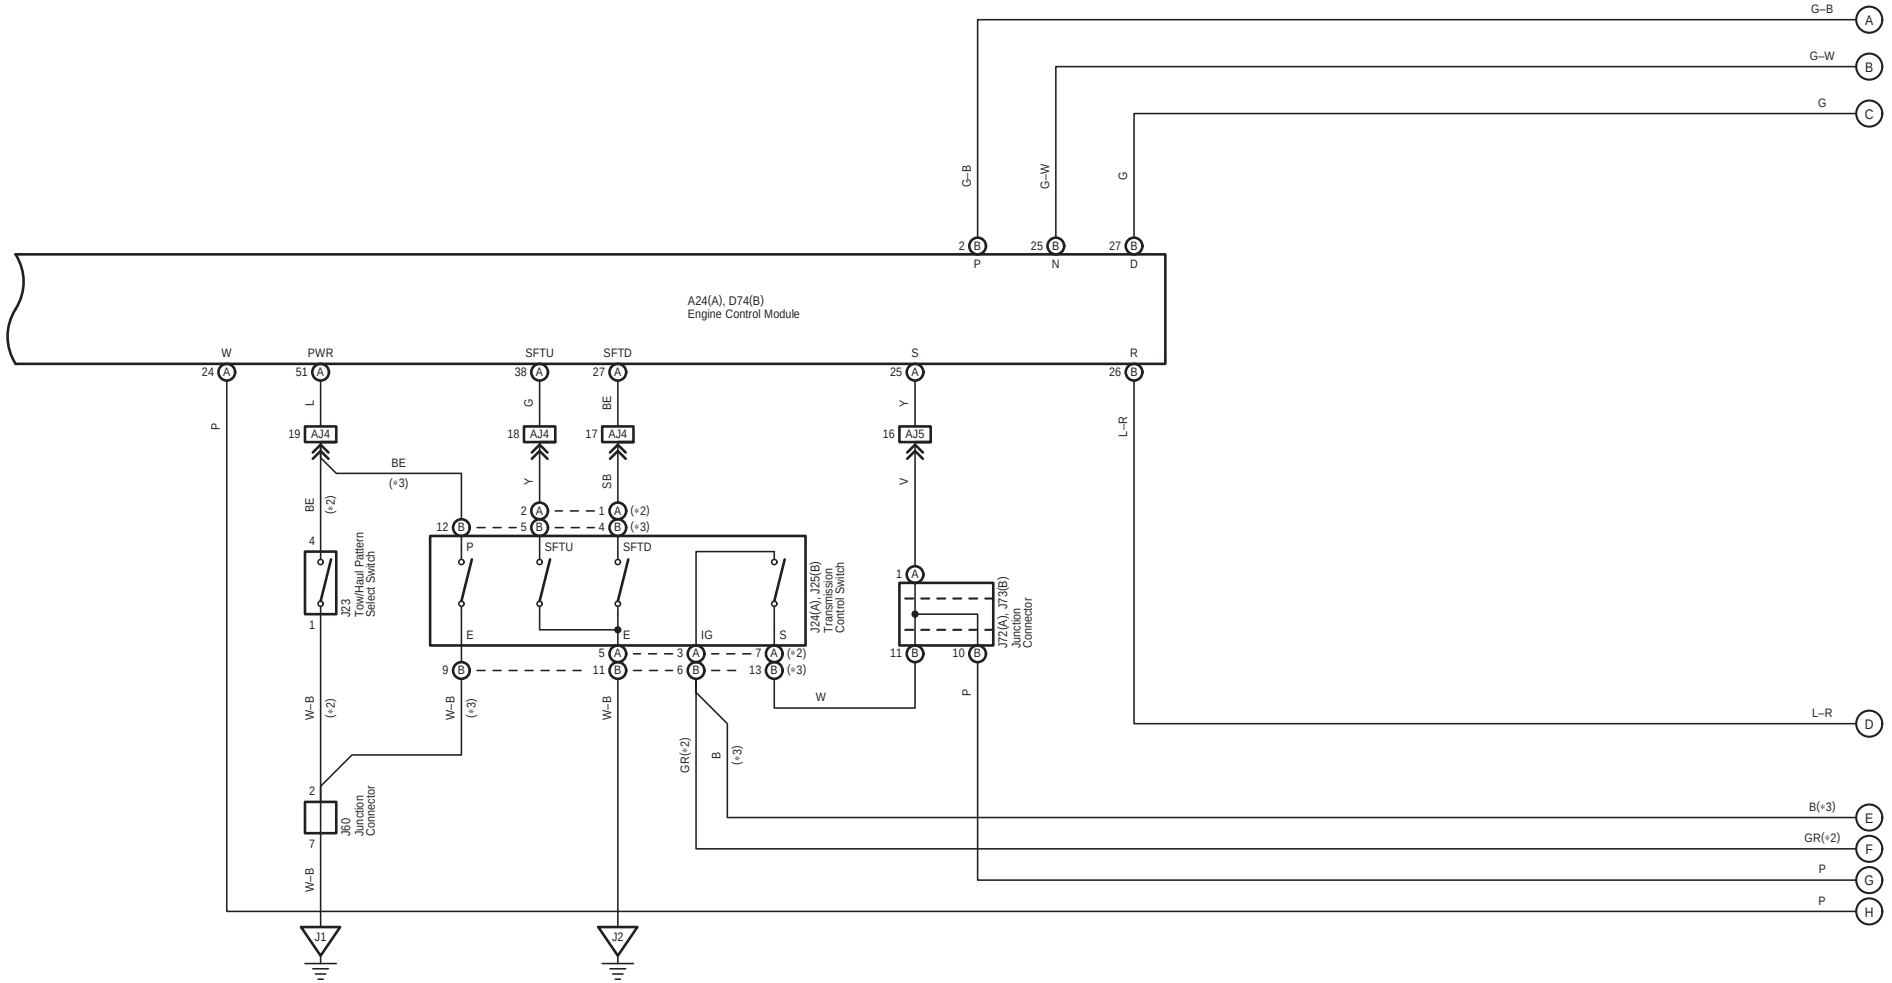

(Cont. next page)

Electronically Controlled Transmission and A/T Indicator (3UR–FE, 3UR–FBE)

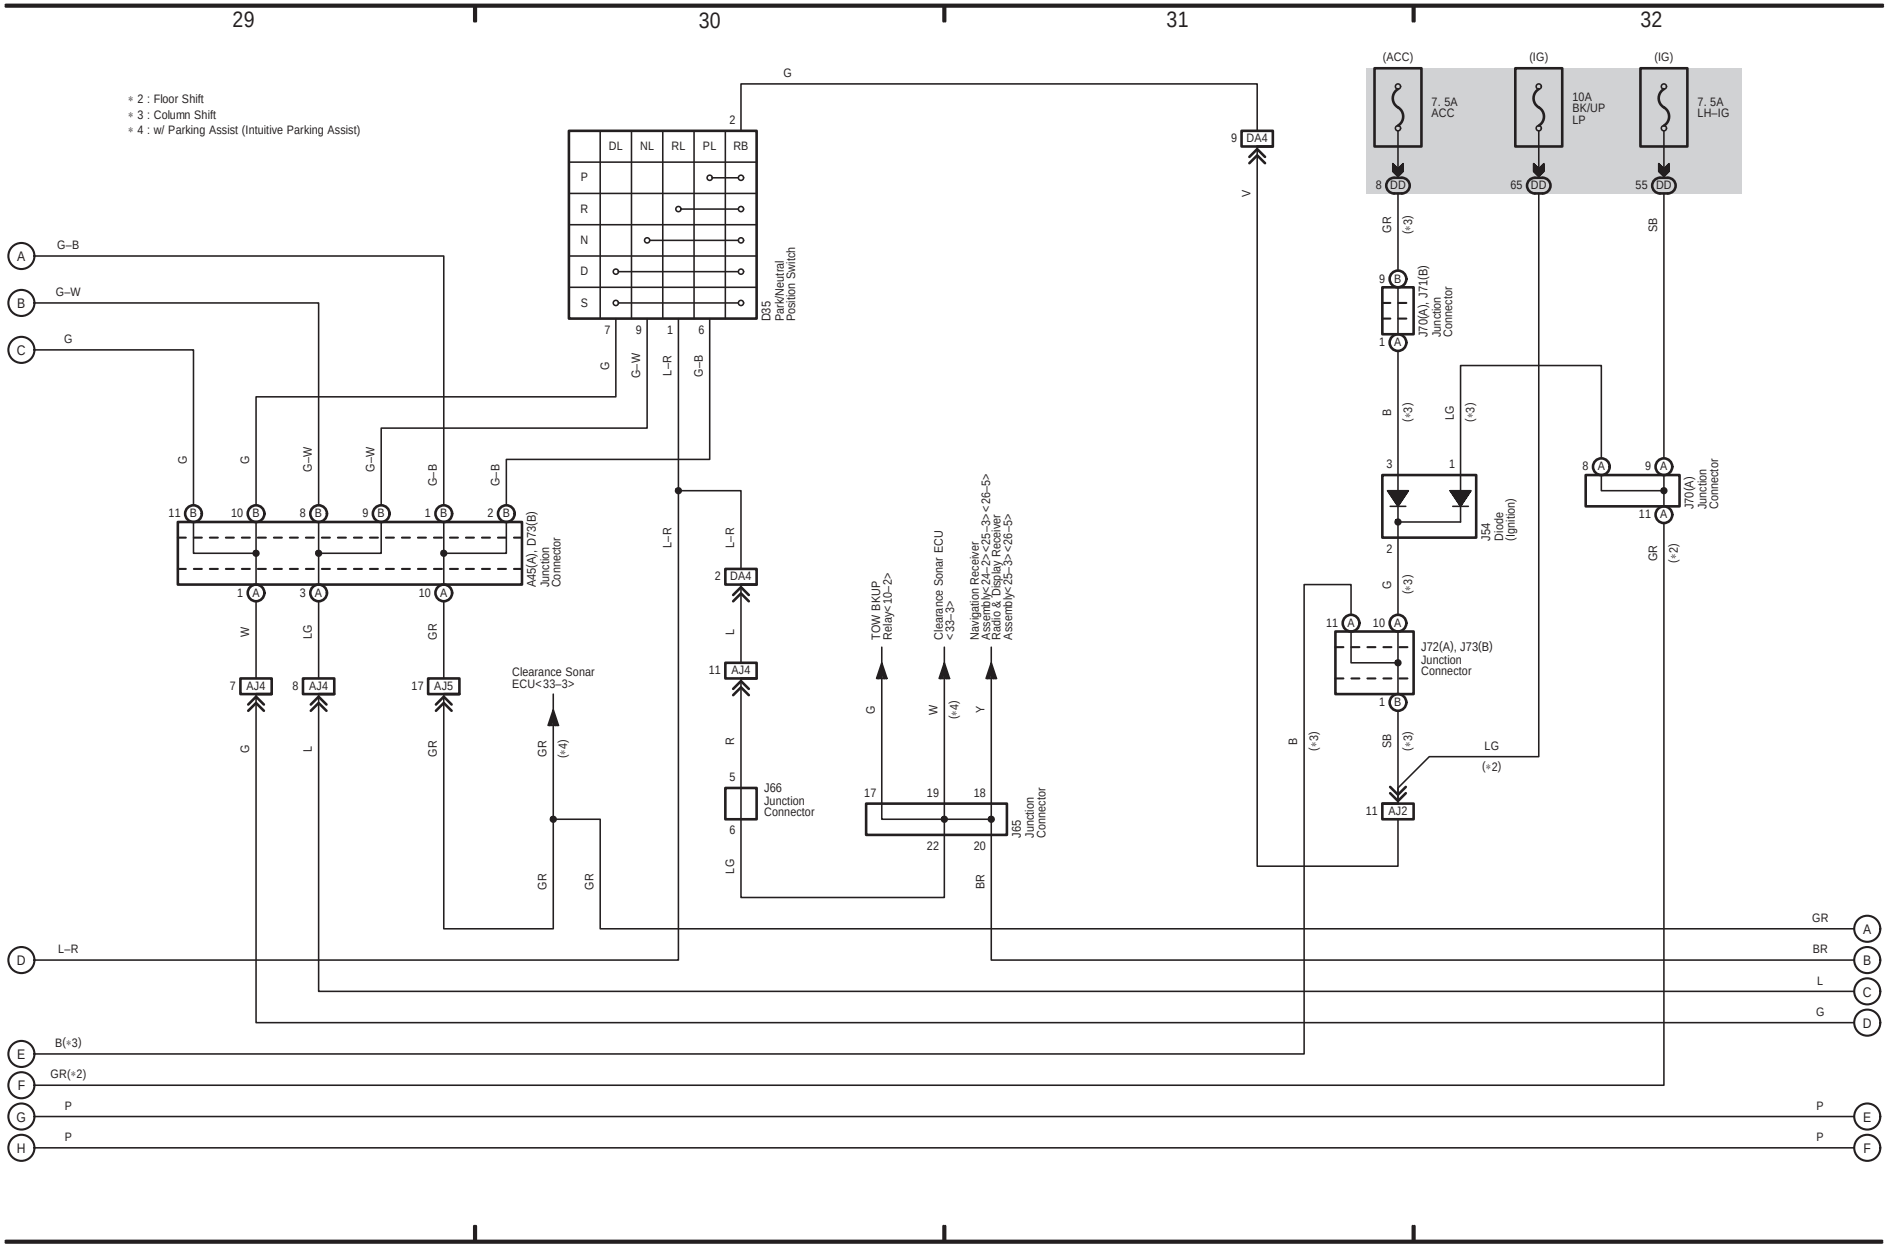

Electronically Controlled Transmission and A/T Indicator (3UR–FE, 3UR–FBE)

