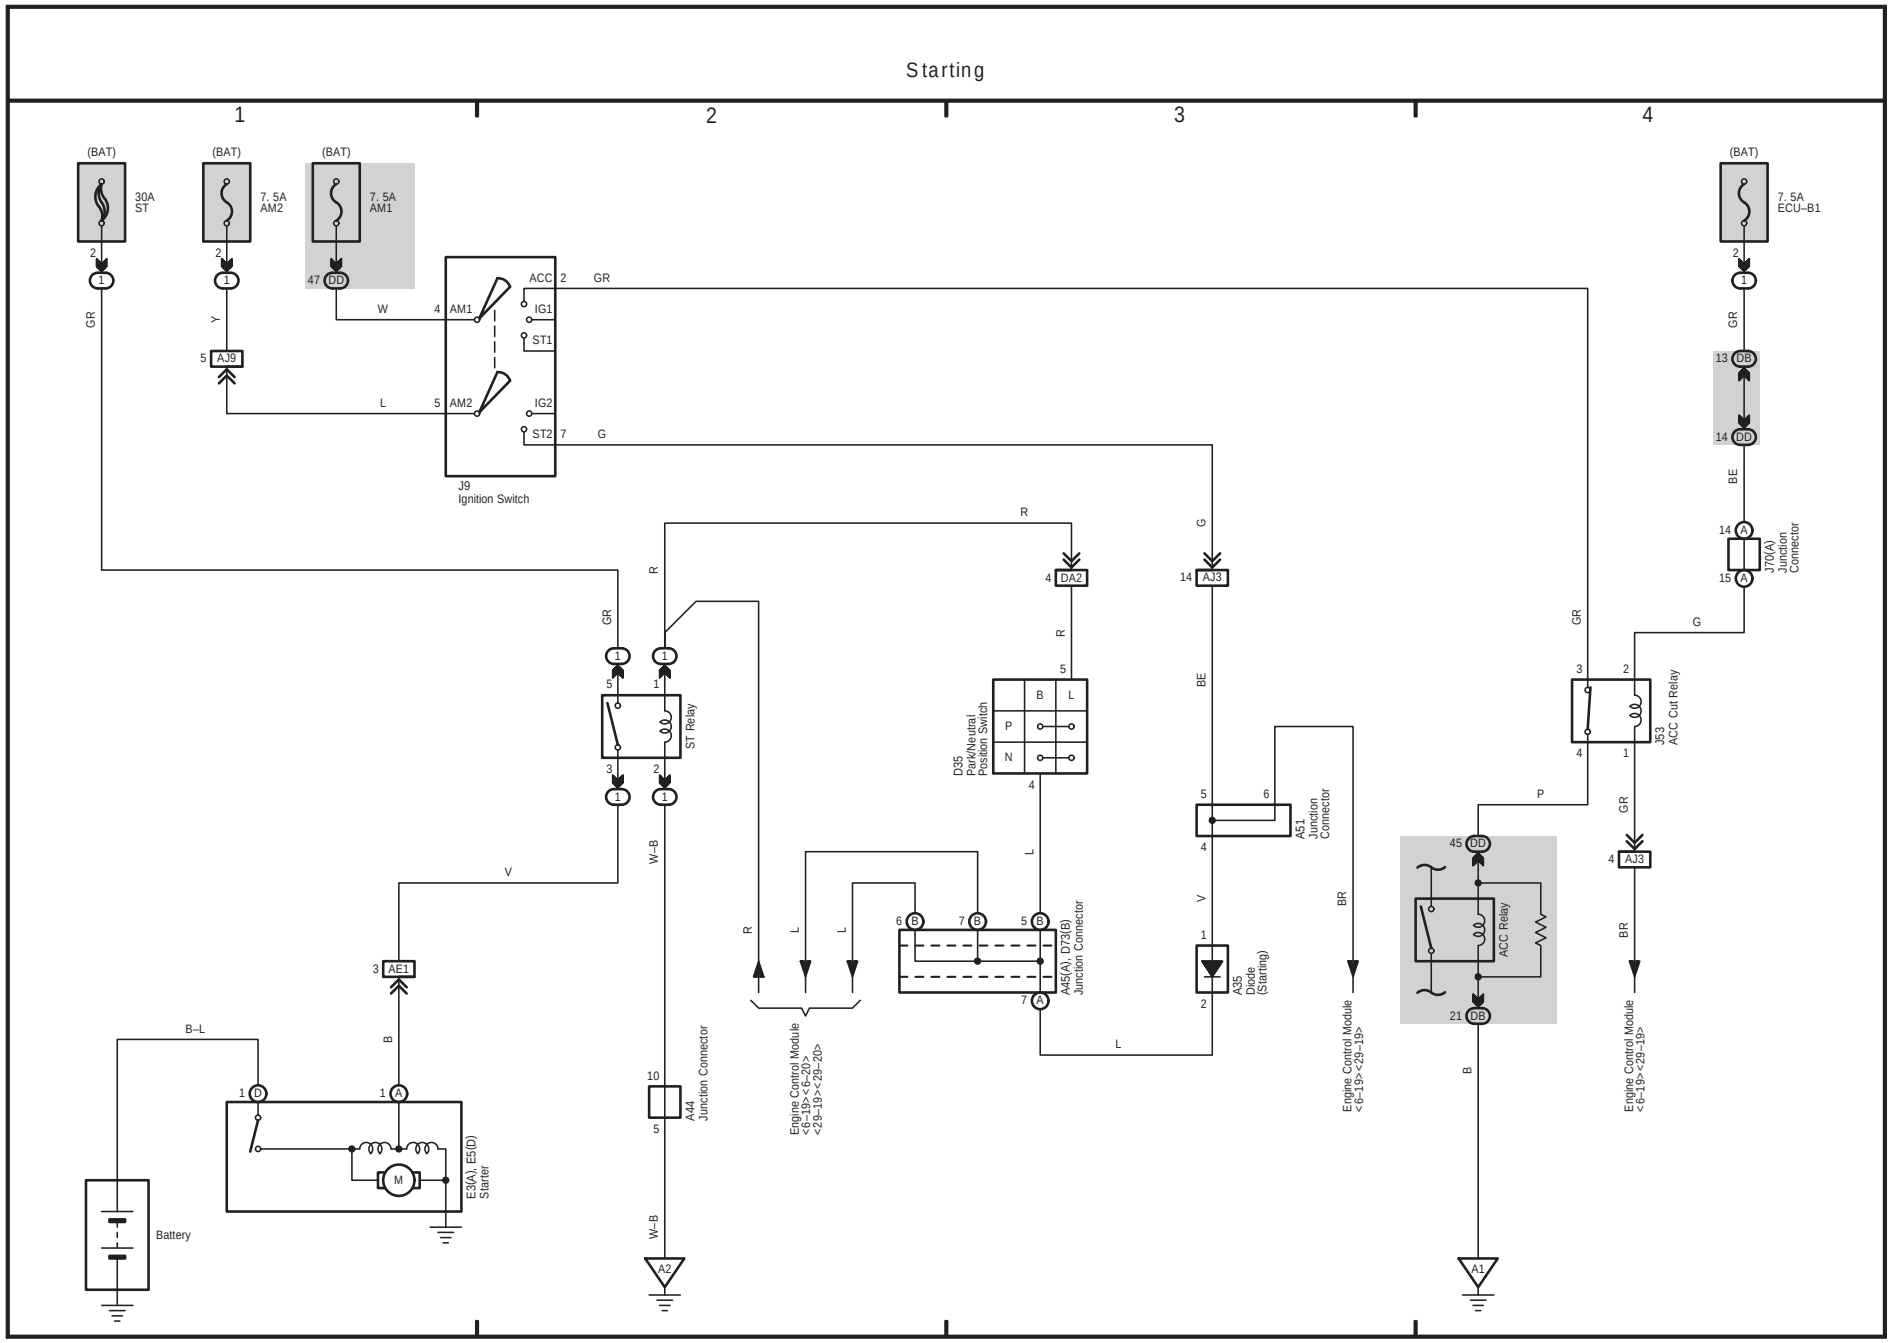

Starting
1
2
3
4
(BAT)
30A
ST
7. 5A
AM2
7. 5A
AM1
7. 5A
ECU–B1
J9
Ignition Switch
ACC
IG1
ST1
IG2
ST2
AM1
AM2
ST Relay
D35
Park/Neutral
Position Switch
A51
Junction
Connector
A45(A), D73(B)
Junction Connector
A35
Diode
(Starting)
ACC Relay
J53
ACC Cut Relay
J70(A)
Junction
Connector
A44
Junction Connector
E3(A), E5(D)
Starter
Battery
Engine Control Module
<6–19><6–20>
<29–19><29–20>
Engine Control Module
<6–19><29–19>
Engine Control Module
<6–19><29–19>
A1
A2