

(Cont. next page)

Parking Assist (Intuitive Parking Assist)

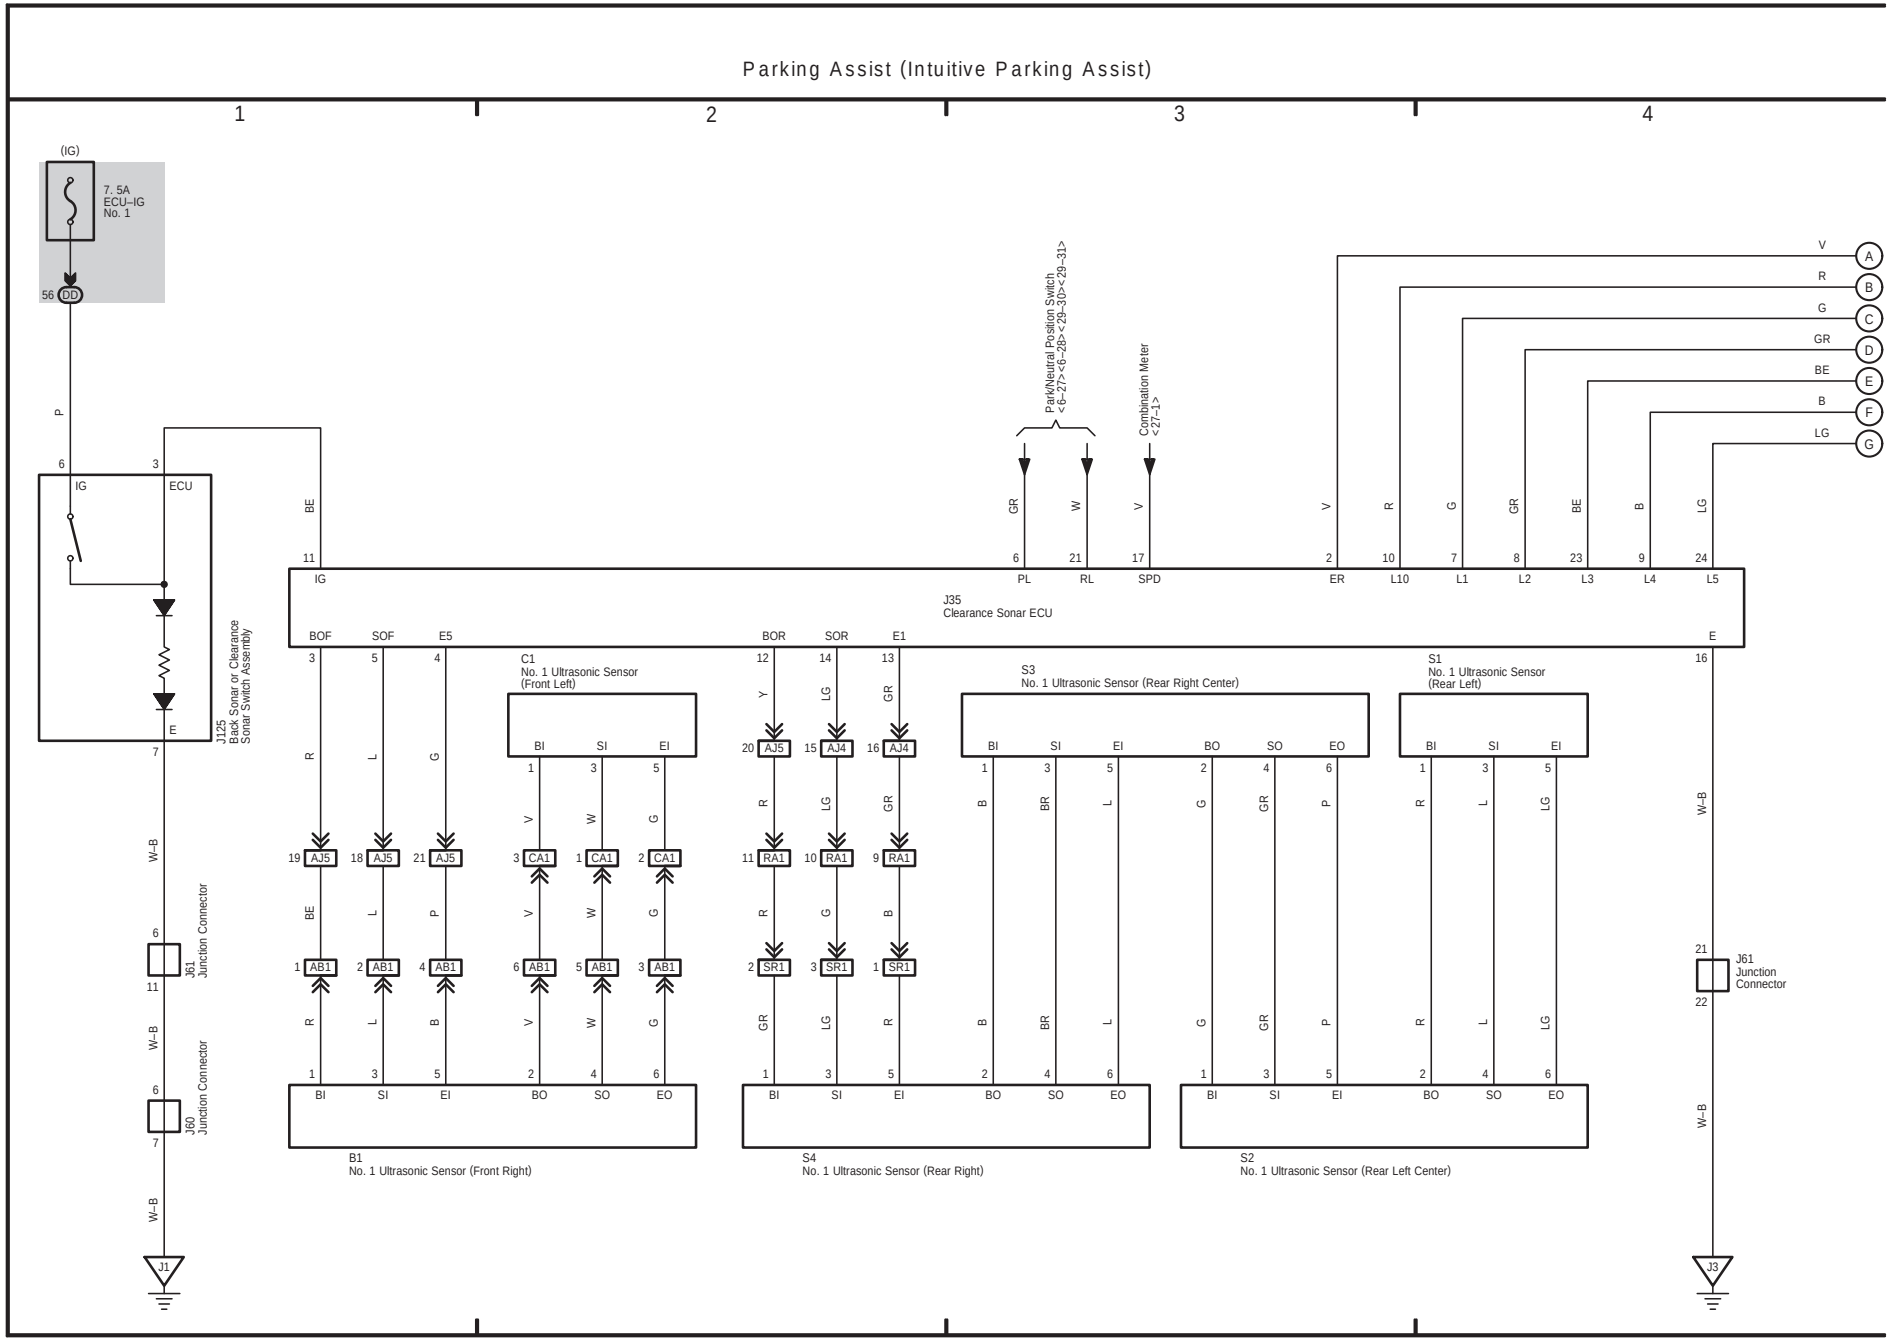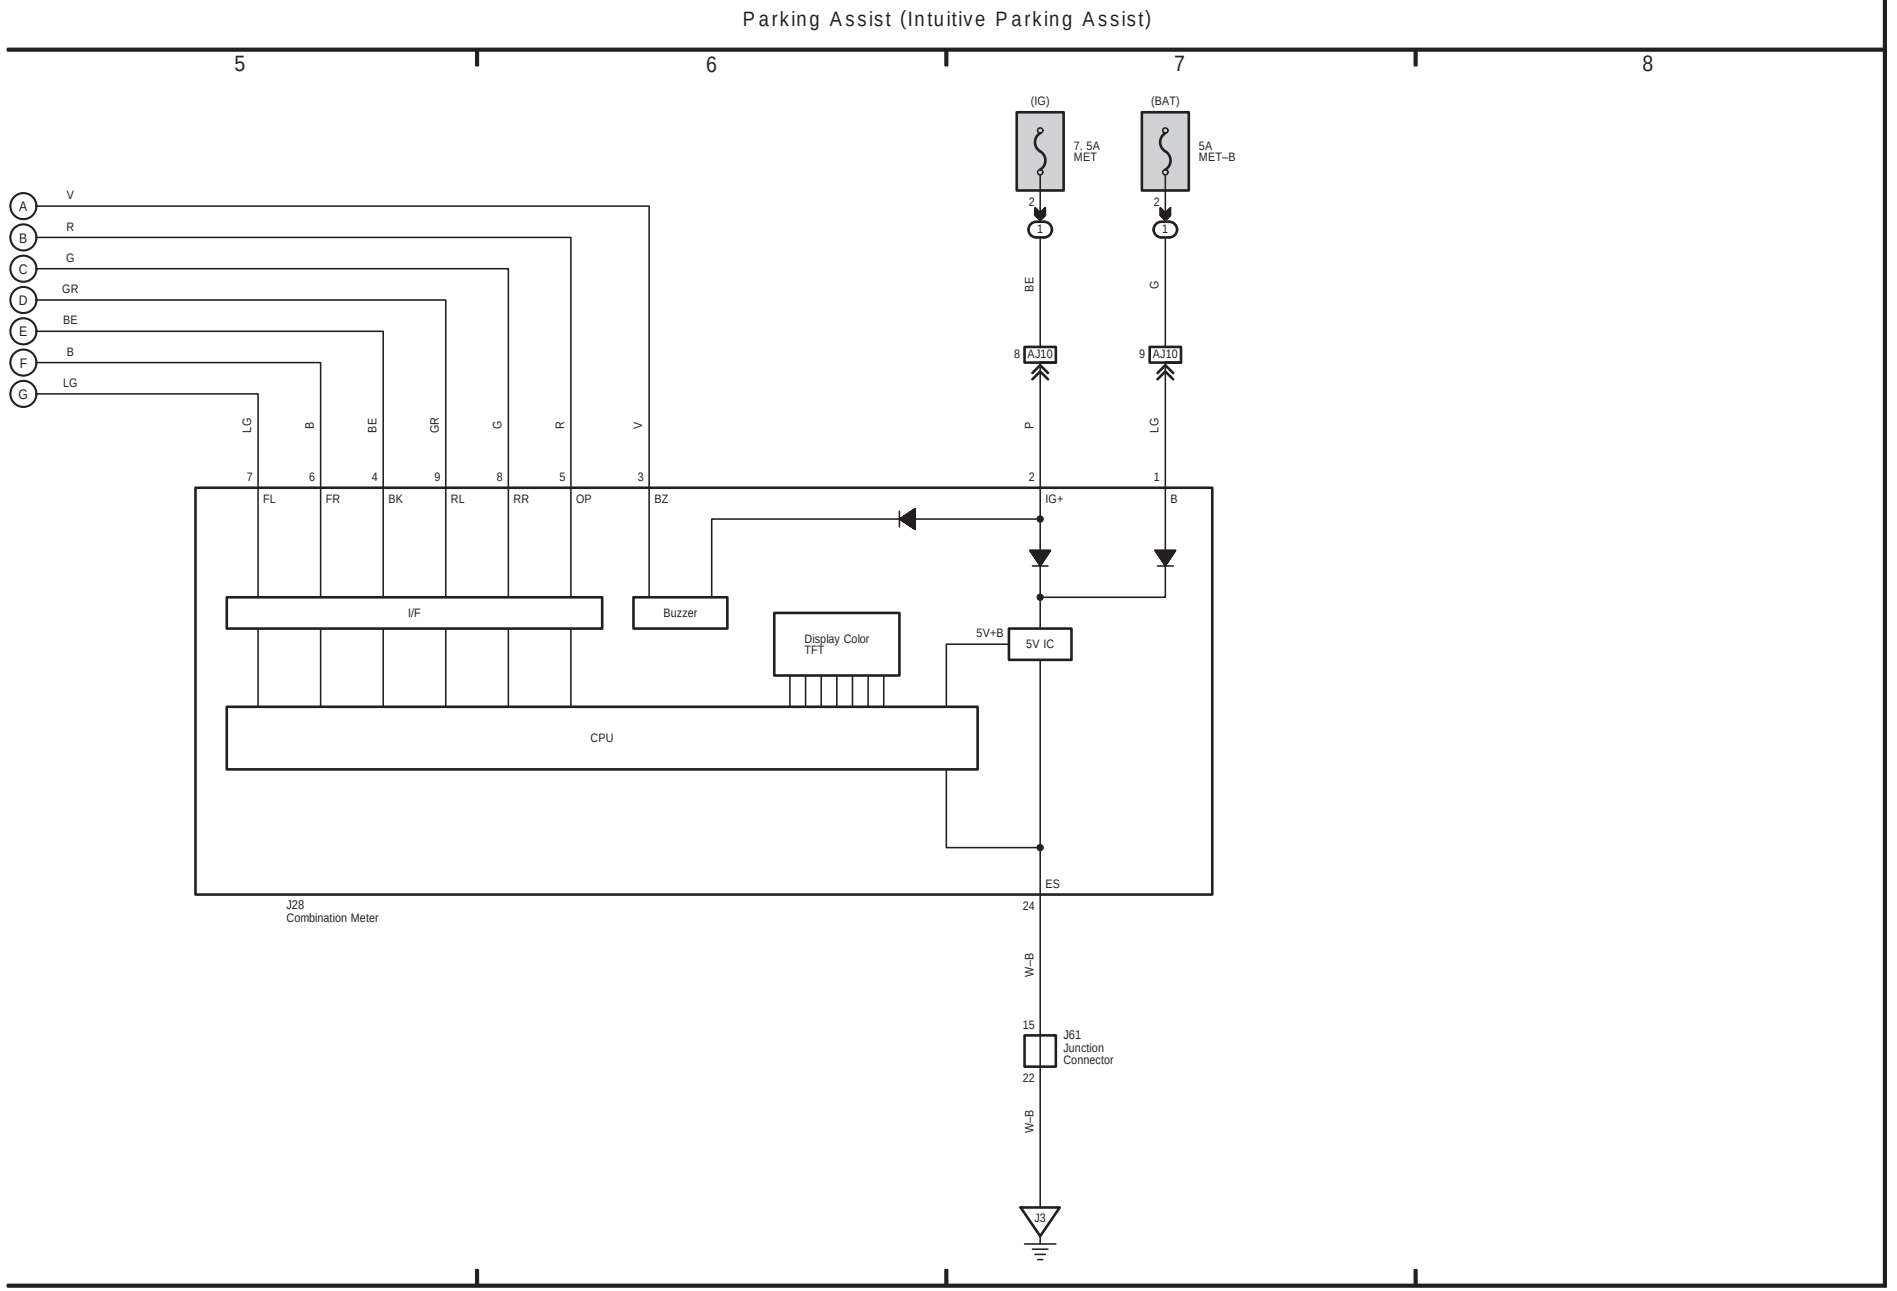


Parking Assist (Intuitive Parking Assist)
5
6
7
8
(IG)
(BAT)
7. 5A
MET
5A
MET–B
A
B
C
D
E
F
G
V
R
G
GR
BE
B
LG
LG
B
BE
GR
G
R
V
7
6
4
9
8
5
3
BE
G
8 AJ10
9 AJ10
P
LG
2
1
FL
FR
BK
RL
RR
OP
BZ
IG+
B
I/F
Buzzer
Display Color
TFT
5V+B
5V IC
CPU
ES
J28
Combination Meter
24
W–B
15
J61
Junction
Connector
22
W–B
J3