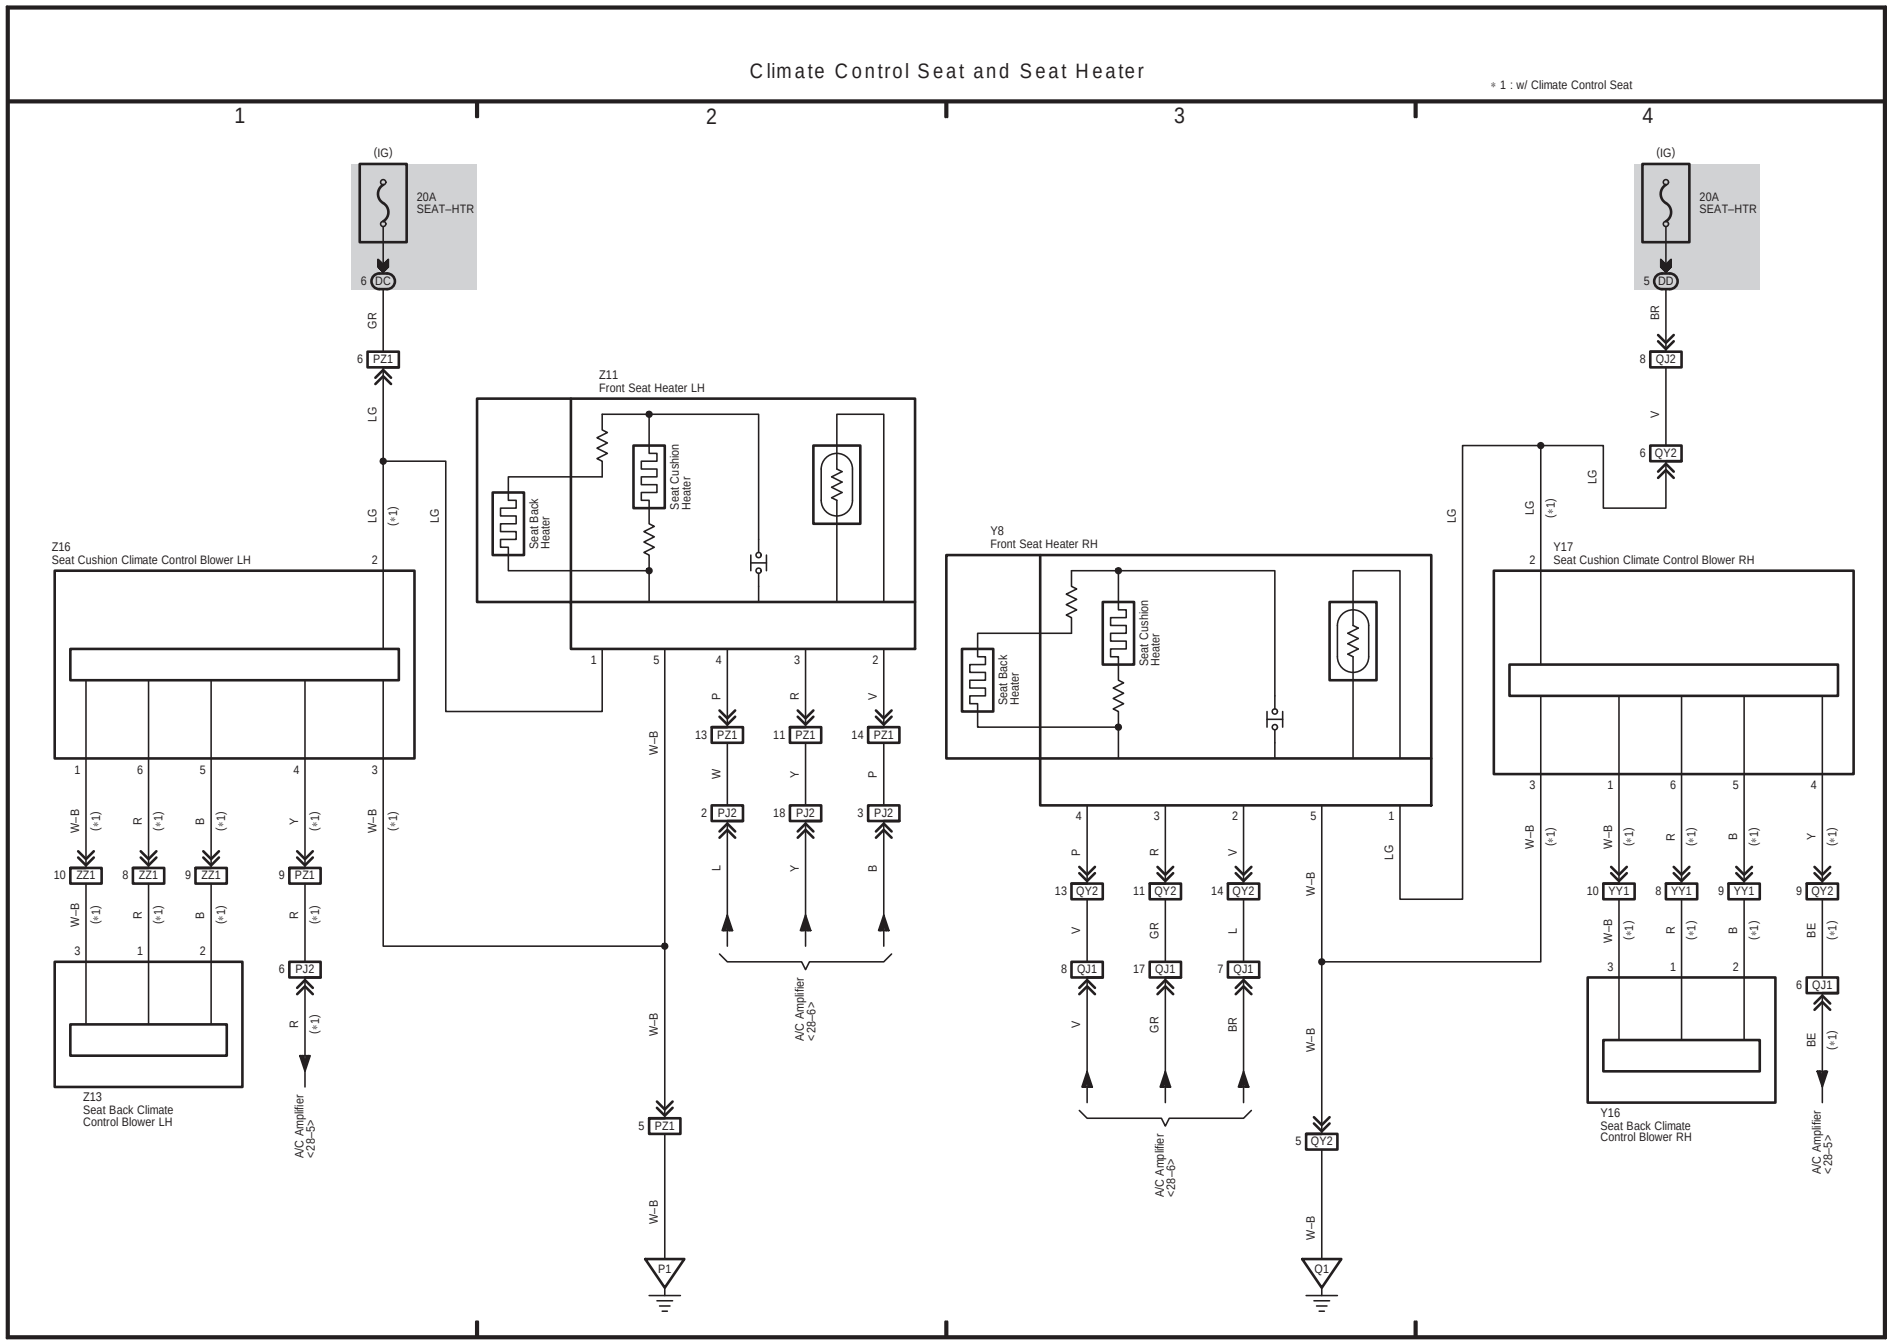

Climate Control Seat and Seat Heater
* 1 : w/ Climate Control Seat
1
2
3
4
(IG)
20A
SEAT–HTR
6 DC
GR
6 PZ1
LG
LG (*1)
LG
Z11
Front Seat Heater LH
Seat Back Heater
Seat Cushion Heater
Z16
Seat Cushion Climate Control Blower LH
2
1 5 4 3 2
P
R
V
W–B
13 PZ1
11 PZ1
14 PZ1
W
Y
P
2 PJ2
18 PJ2
3 PJ2
L
Y
B
A/C Amplifier
<28–6>
1 6 5 4 3
W–B (*1)
R (*1)
B (*1)
Y (*1)
W–B (*1)
10 ZZ1
8 ZZ1
9 ZZ1
9 PZ1
W–B (*1)
R (*1)
B (*1)
R (*1)
3 1 2
6 PJ2
R (*1)
Z13
Seat Back Climate
Control Blower LH
A/C Amplifier
<28–5>
W–B
5 PZ1
W–B
P1
Y8
Front Seat Heater RH
Seat Back Heater
Seat Cushion Heater
4 3 2 5 1
P
R
V
W–B
LG
13 QY2
11 QY2
14 QY2
V
GR
L
8 QJ1
17 QJ1
7 QJ1
V
GR
BR
A/C Amplifier
<28–6>
W–B
5 QY2
W–B
Q1
(IG)
20A
SEAT–HTR
5 DD
BR
8 QJ2
V
6 QY2
LG
LG (*1)
LG
Y17
Seat Cushion Climate Control Blower RH
2
3 1 6 5 4
W–B (*1)
R (*1)
B (*1)
Y (*1)
W–B (*1)
10 YY1
8 YY1
9 YY1
9 QY2
W–B (*1)
R (*1)
B (*1)
BE (*1)
3 1 2
6 QJ1
BE (*1)
Y16
Seat Back Climate
Control Blower RH
A/C Amplifier
<28–5>