

(Cont. next page)

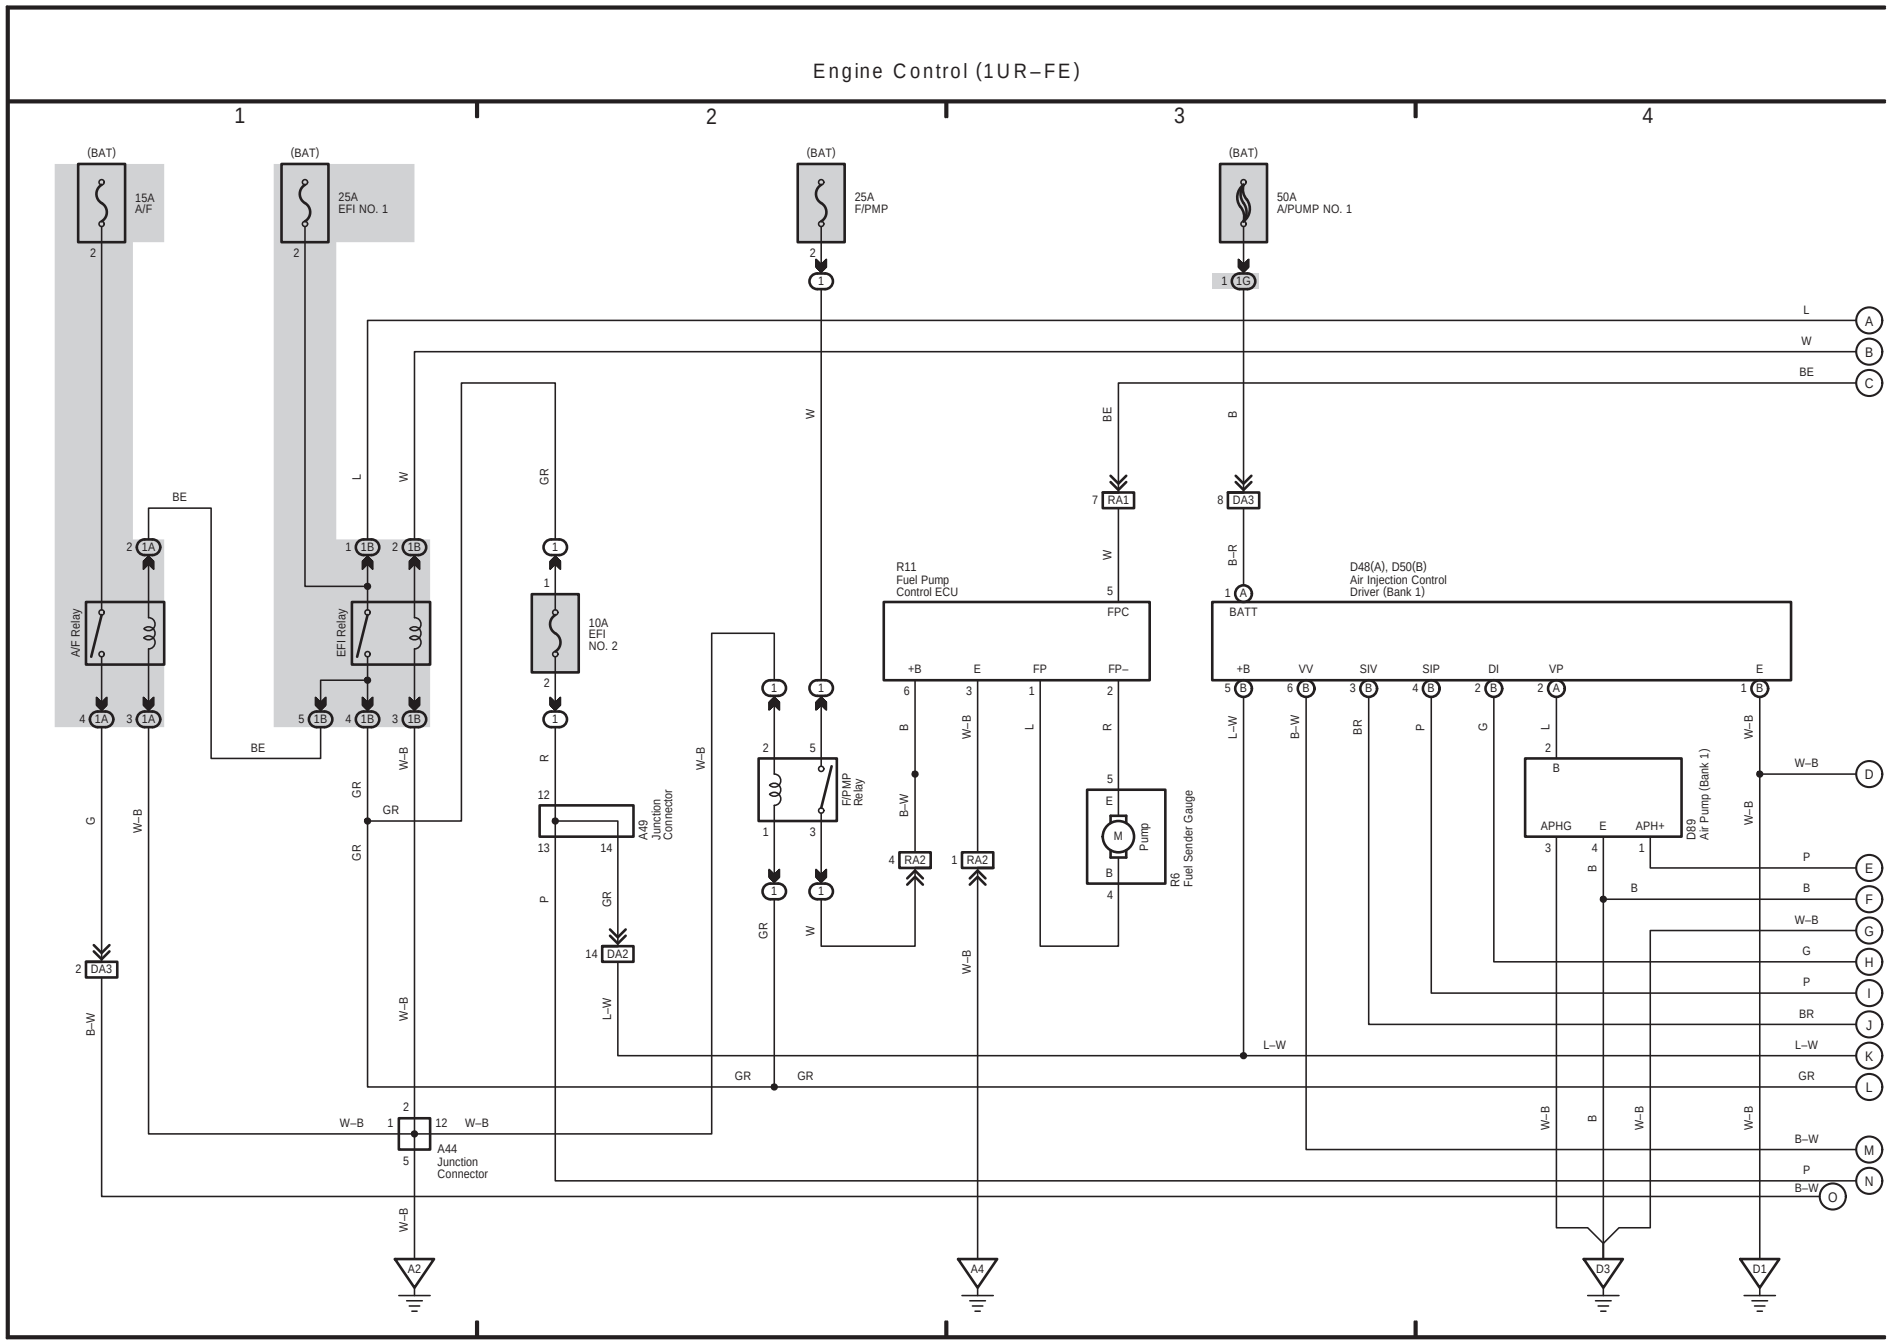


(Cont. next page)

Engine Control (1UR–FE)

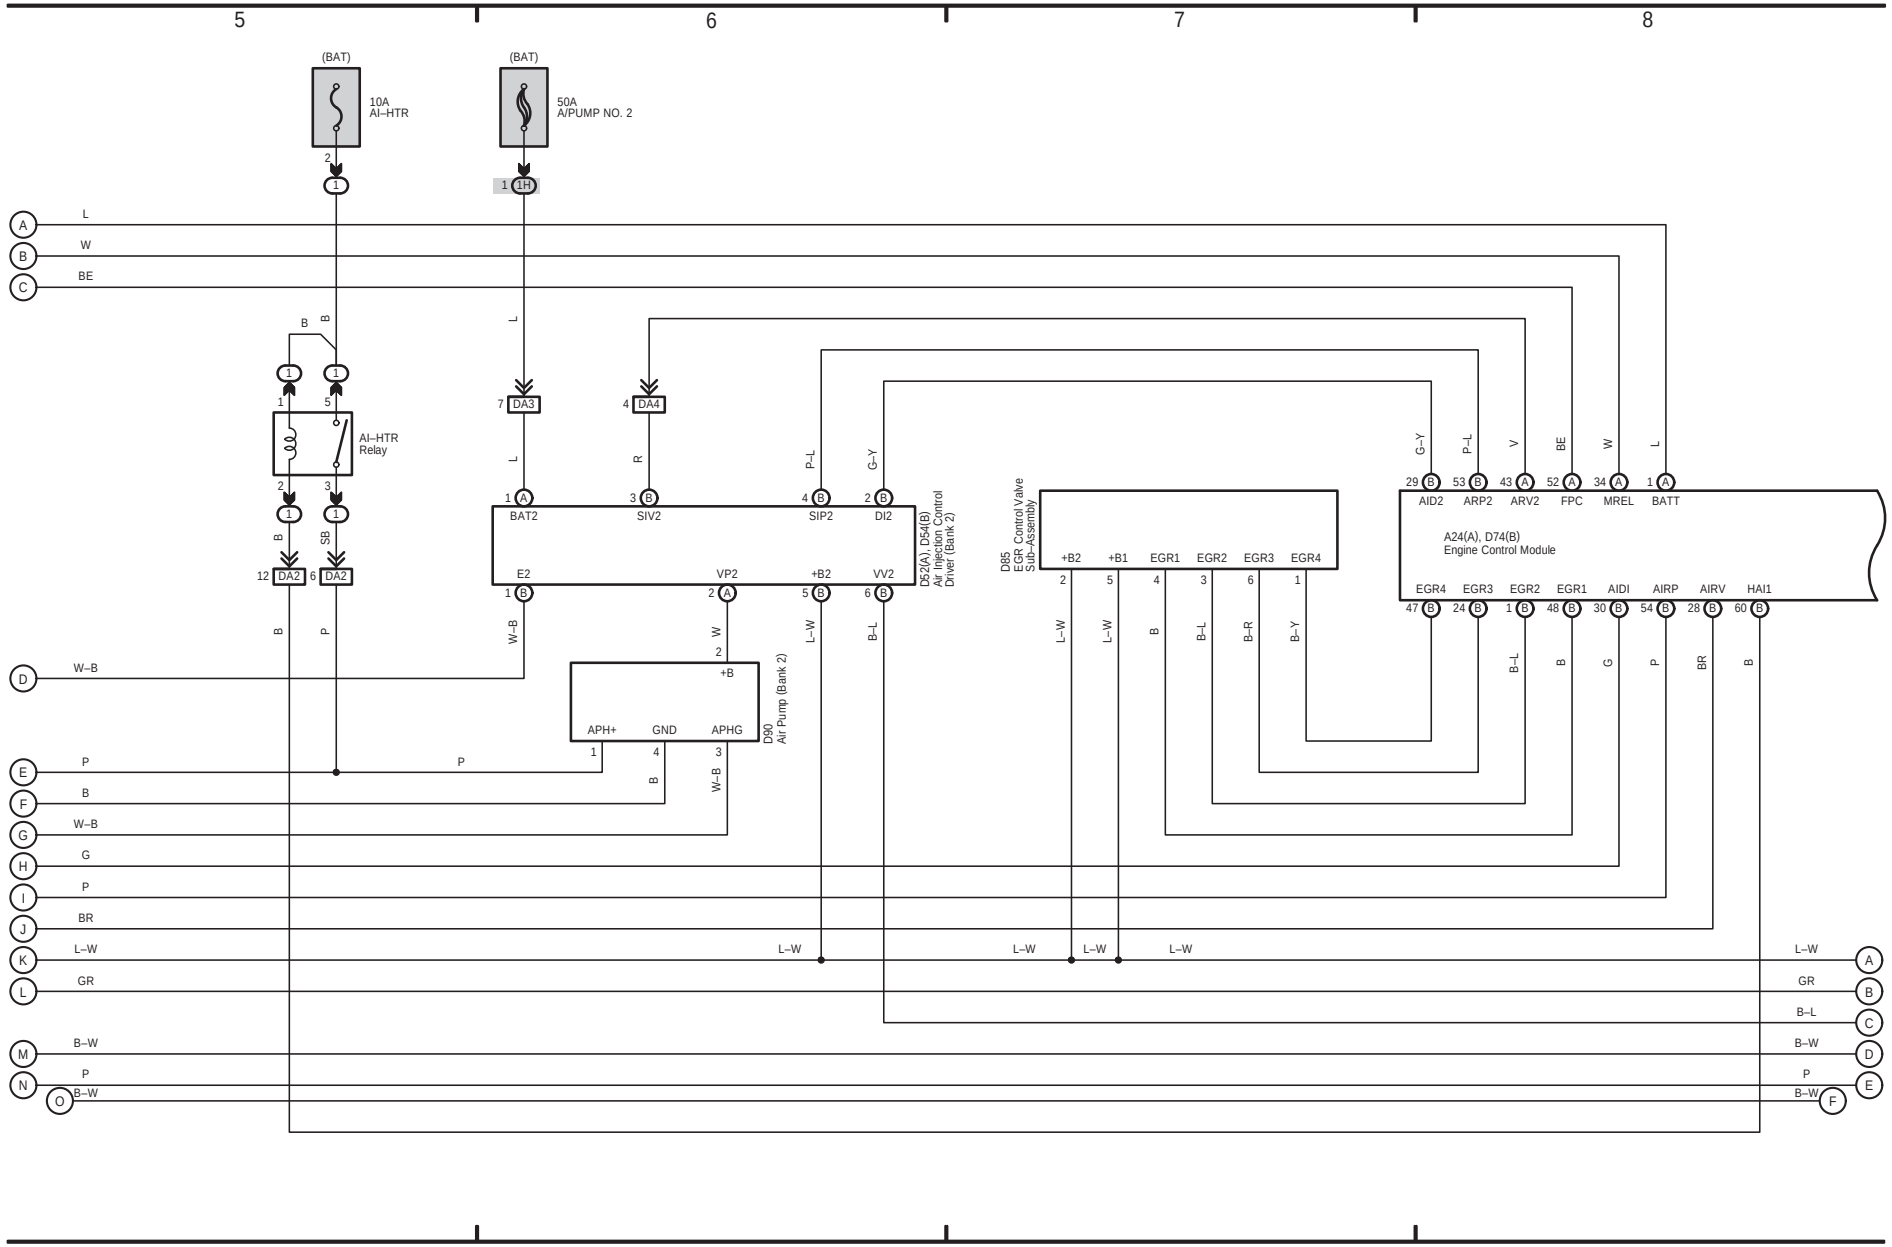

(Cont. next page)


Engine Control (1UR–FE)

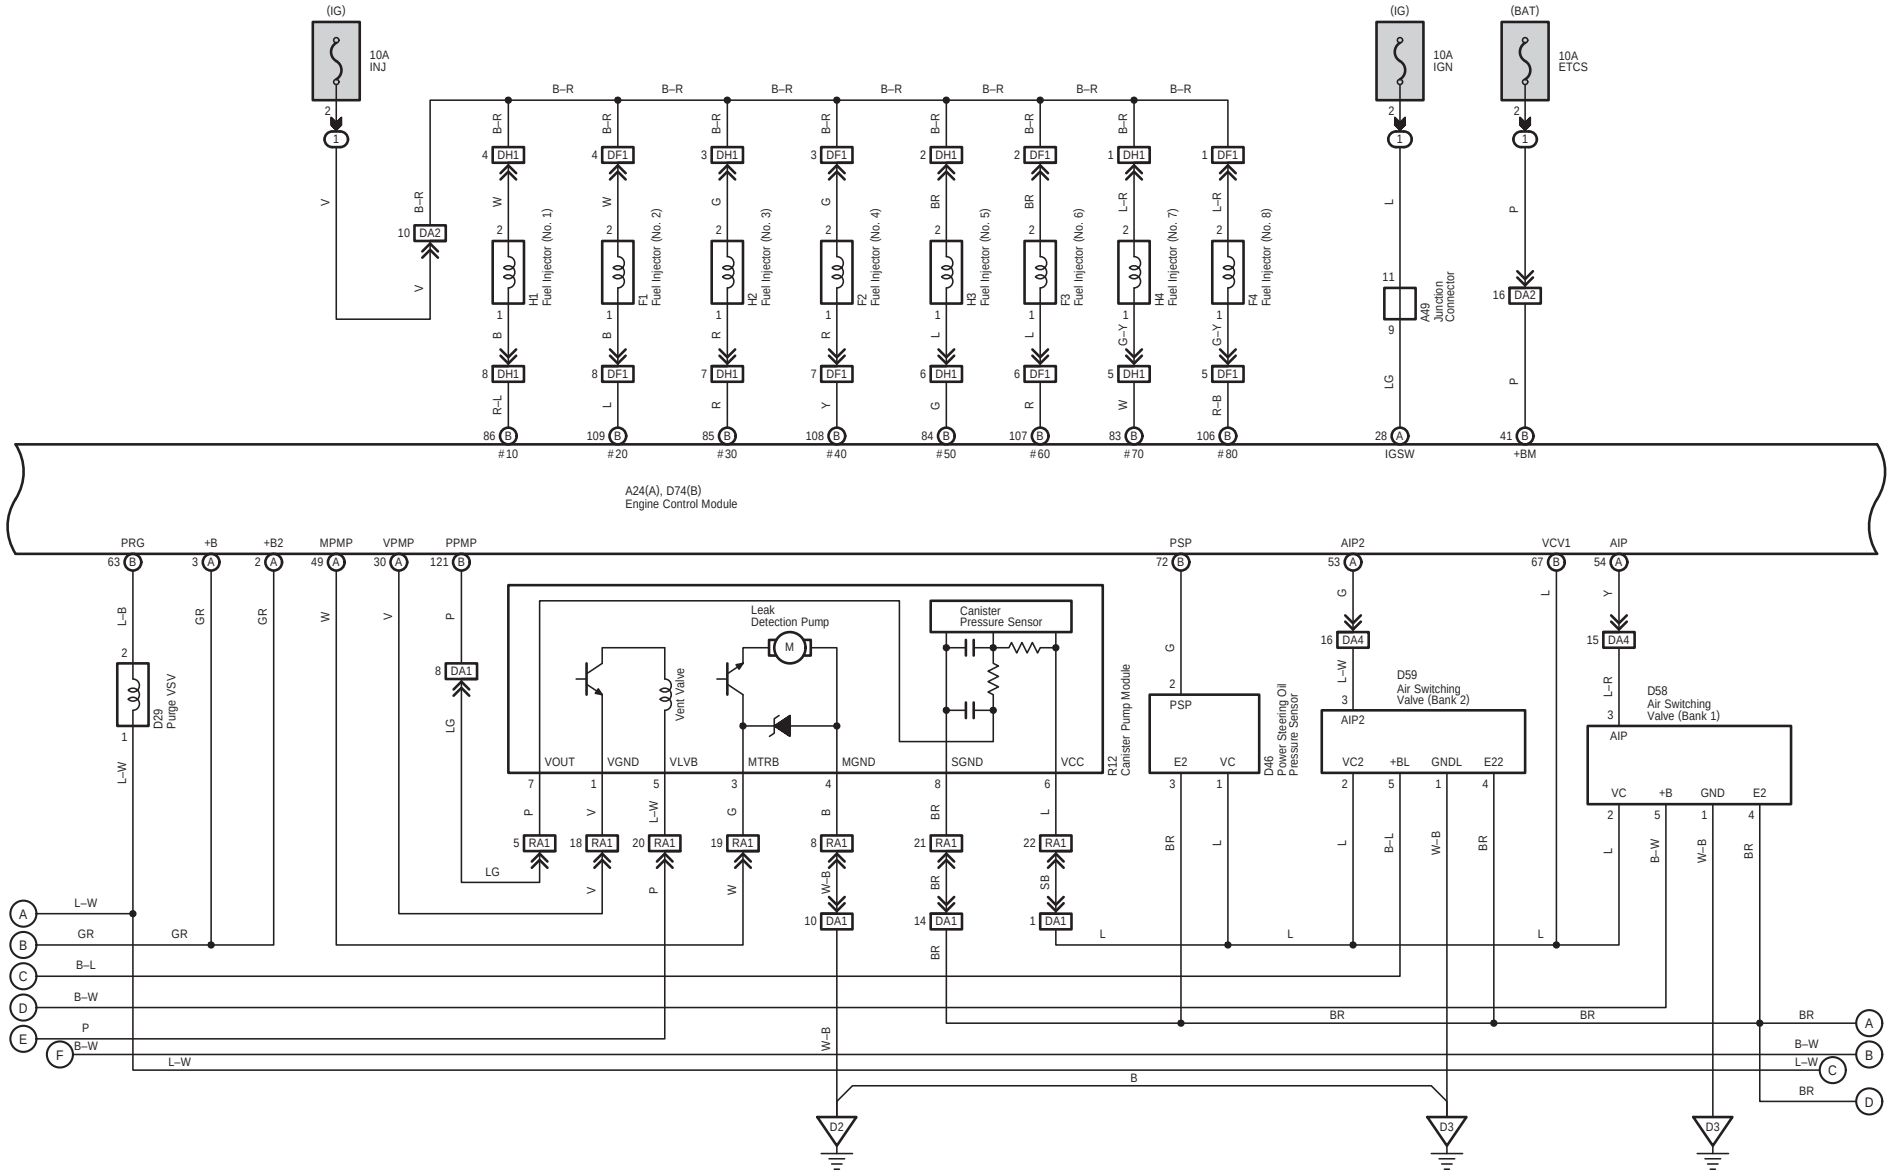

(Cont. next page)

Engine Control (1UR–FE)


* 1 : Shielded

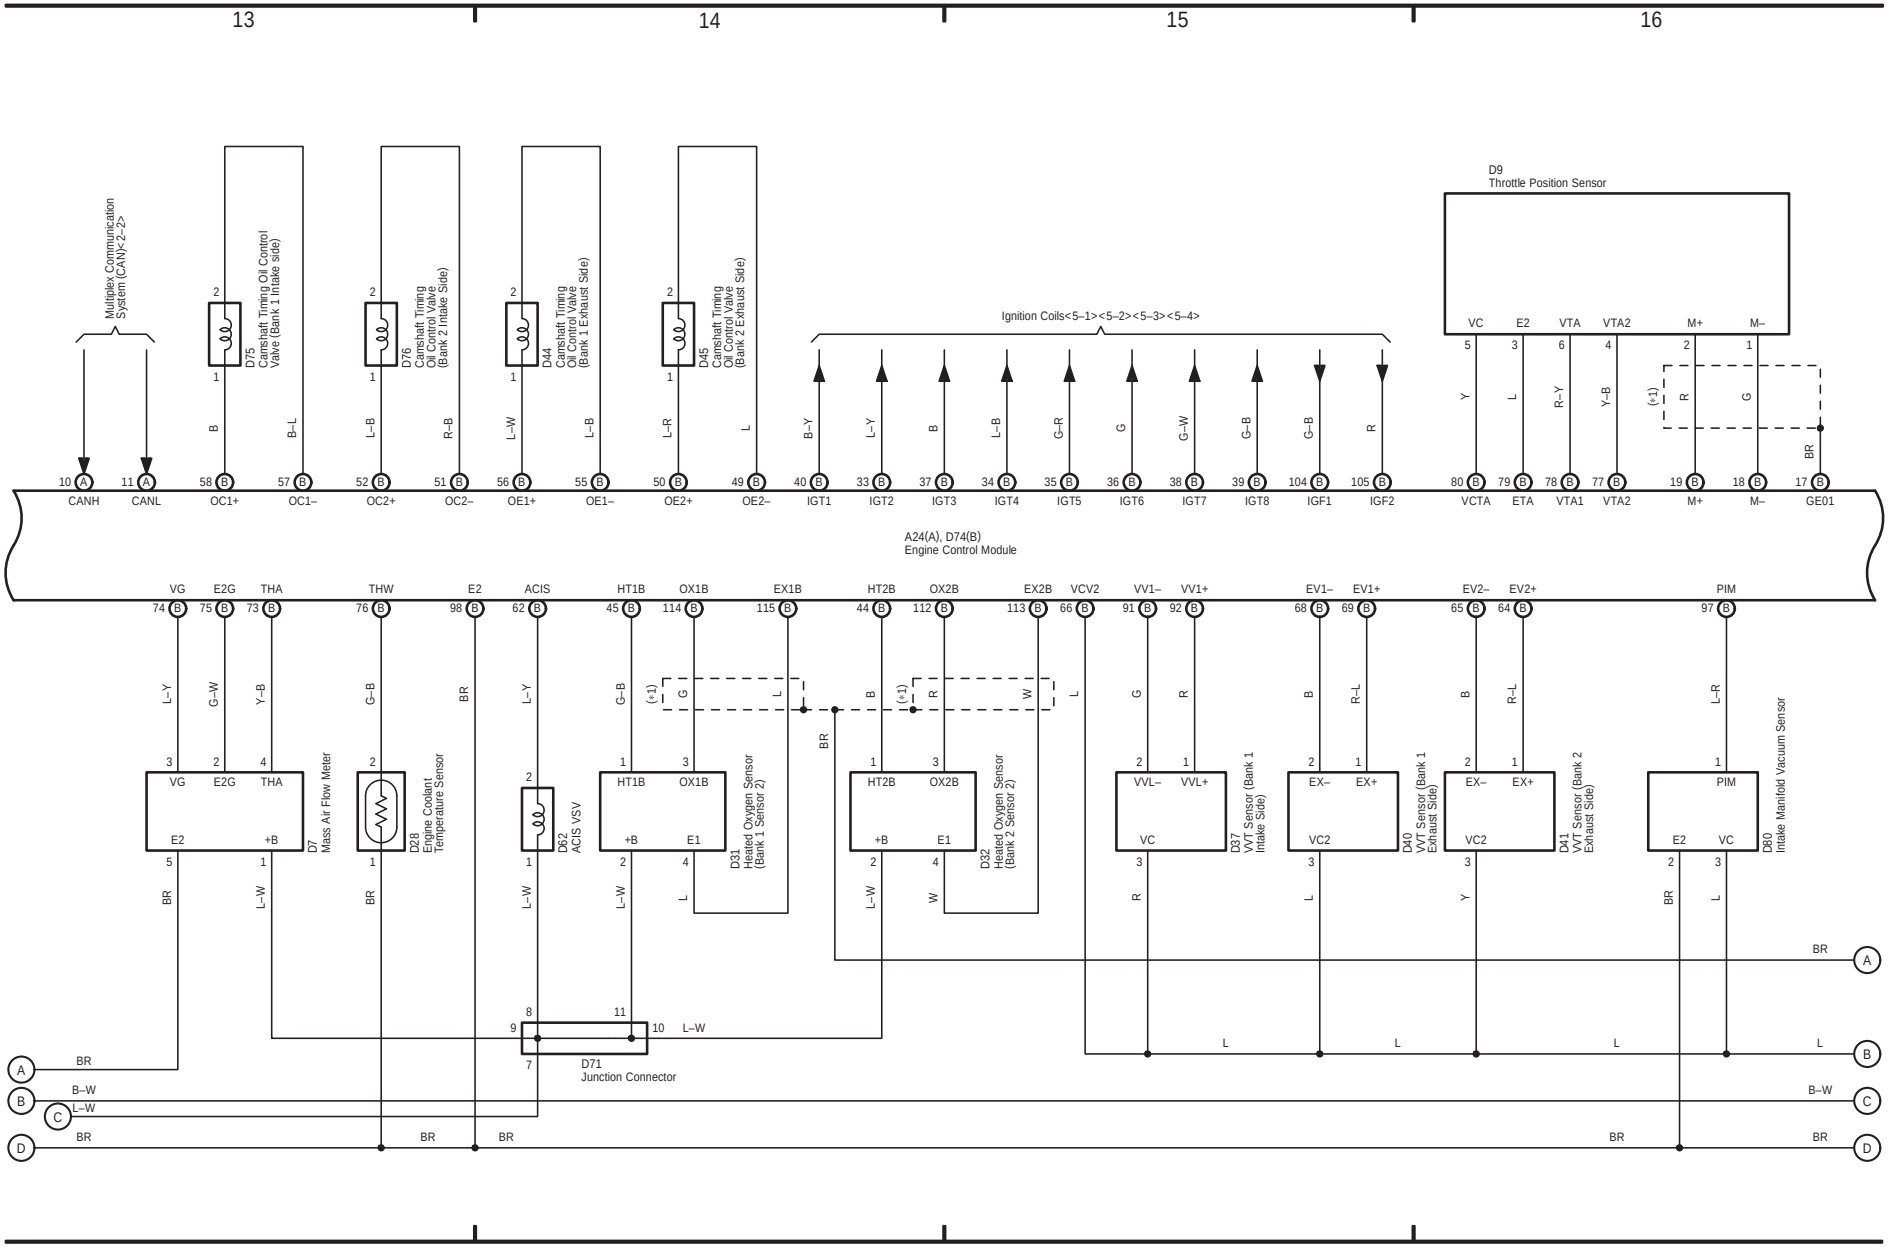

(Cont. next page)

Engine Control (1UR–FE)


* 1 : Shielded

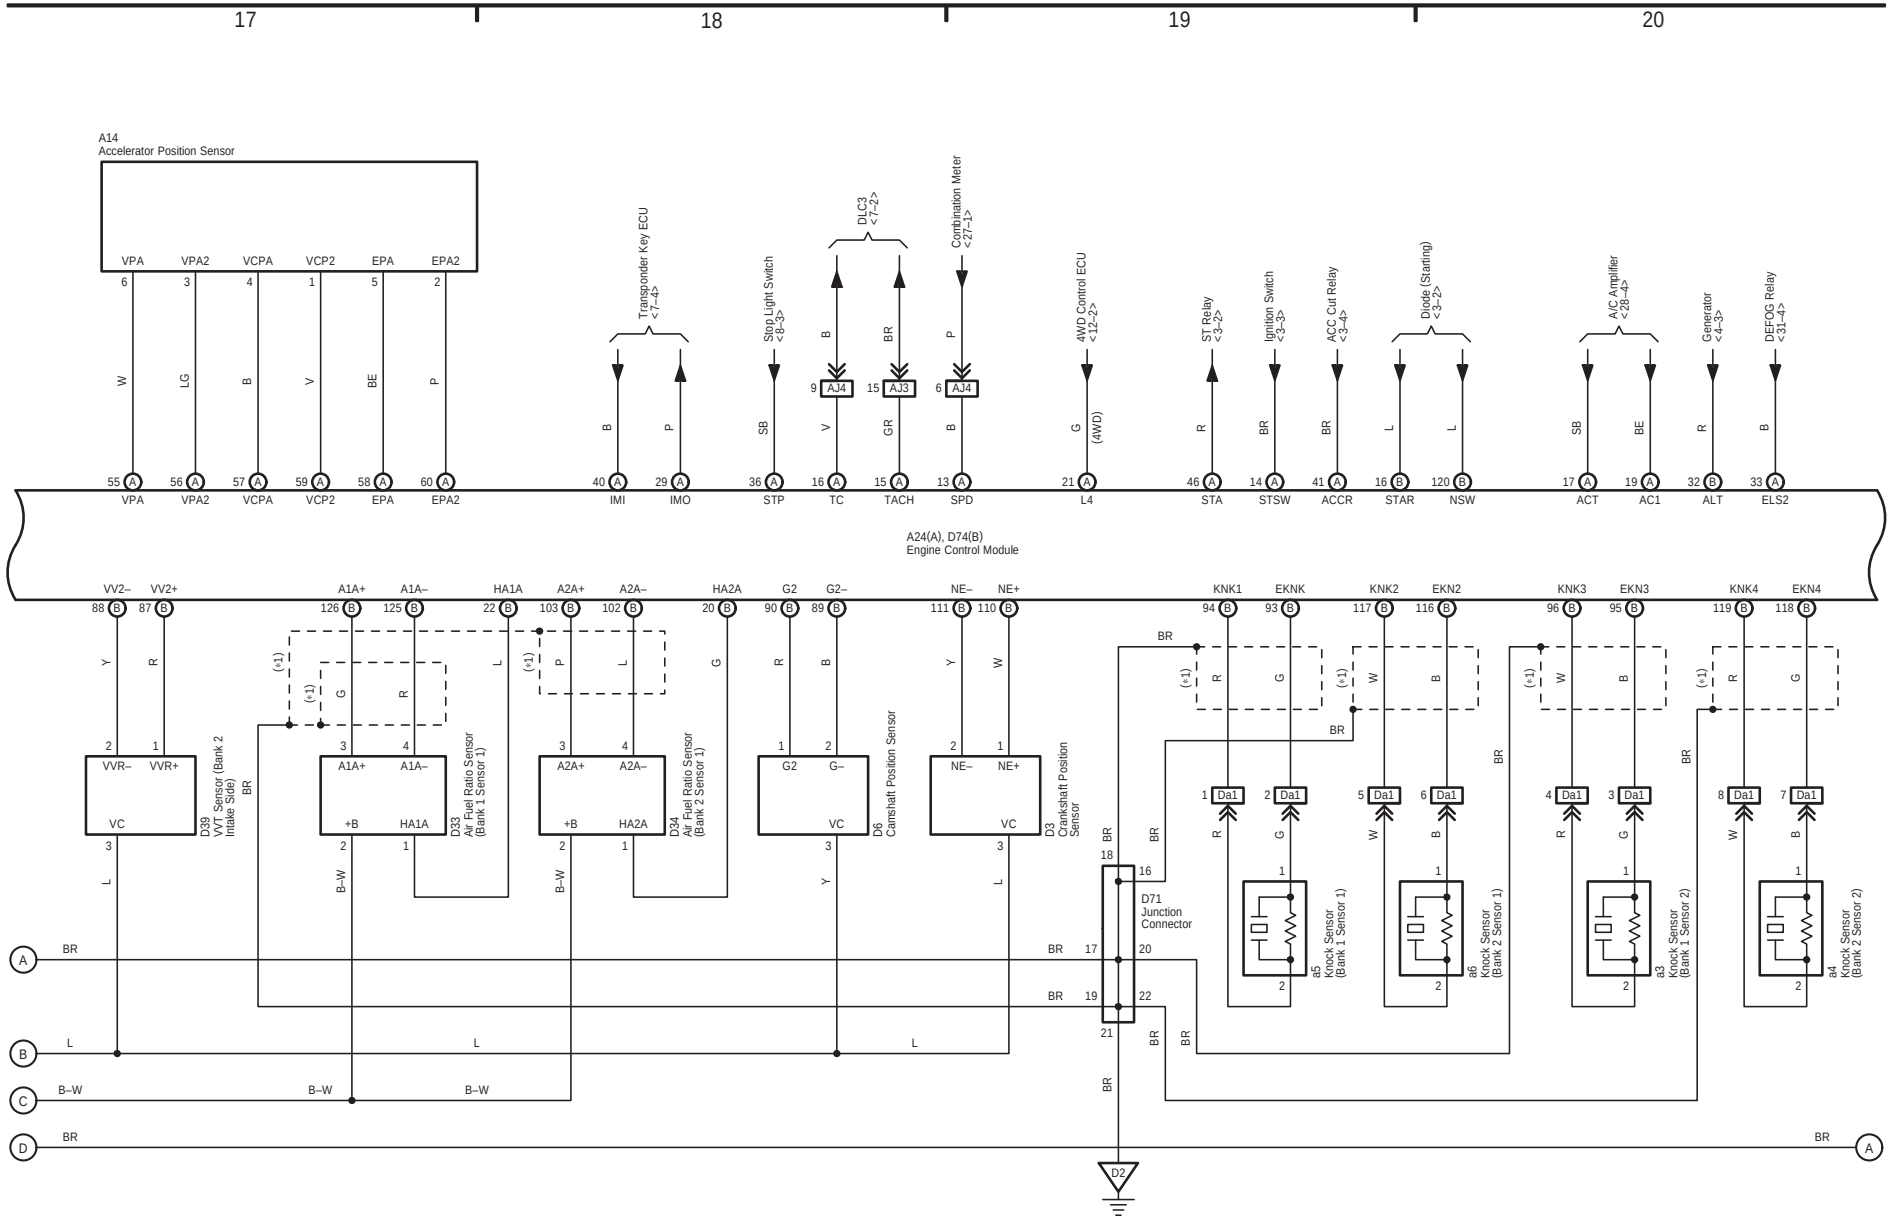

(Cont. next page)

Cruise Control (1UR–FE)

* 7 : w/ Cruise Control

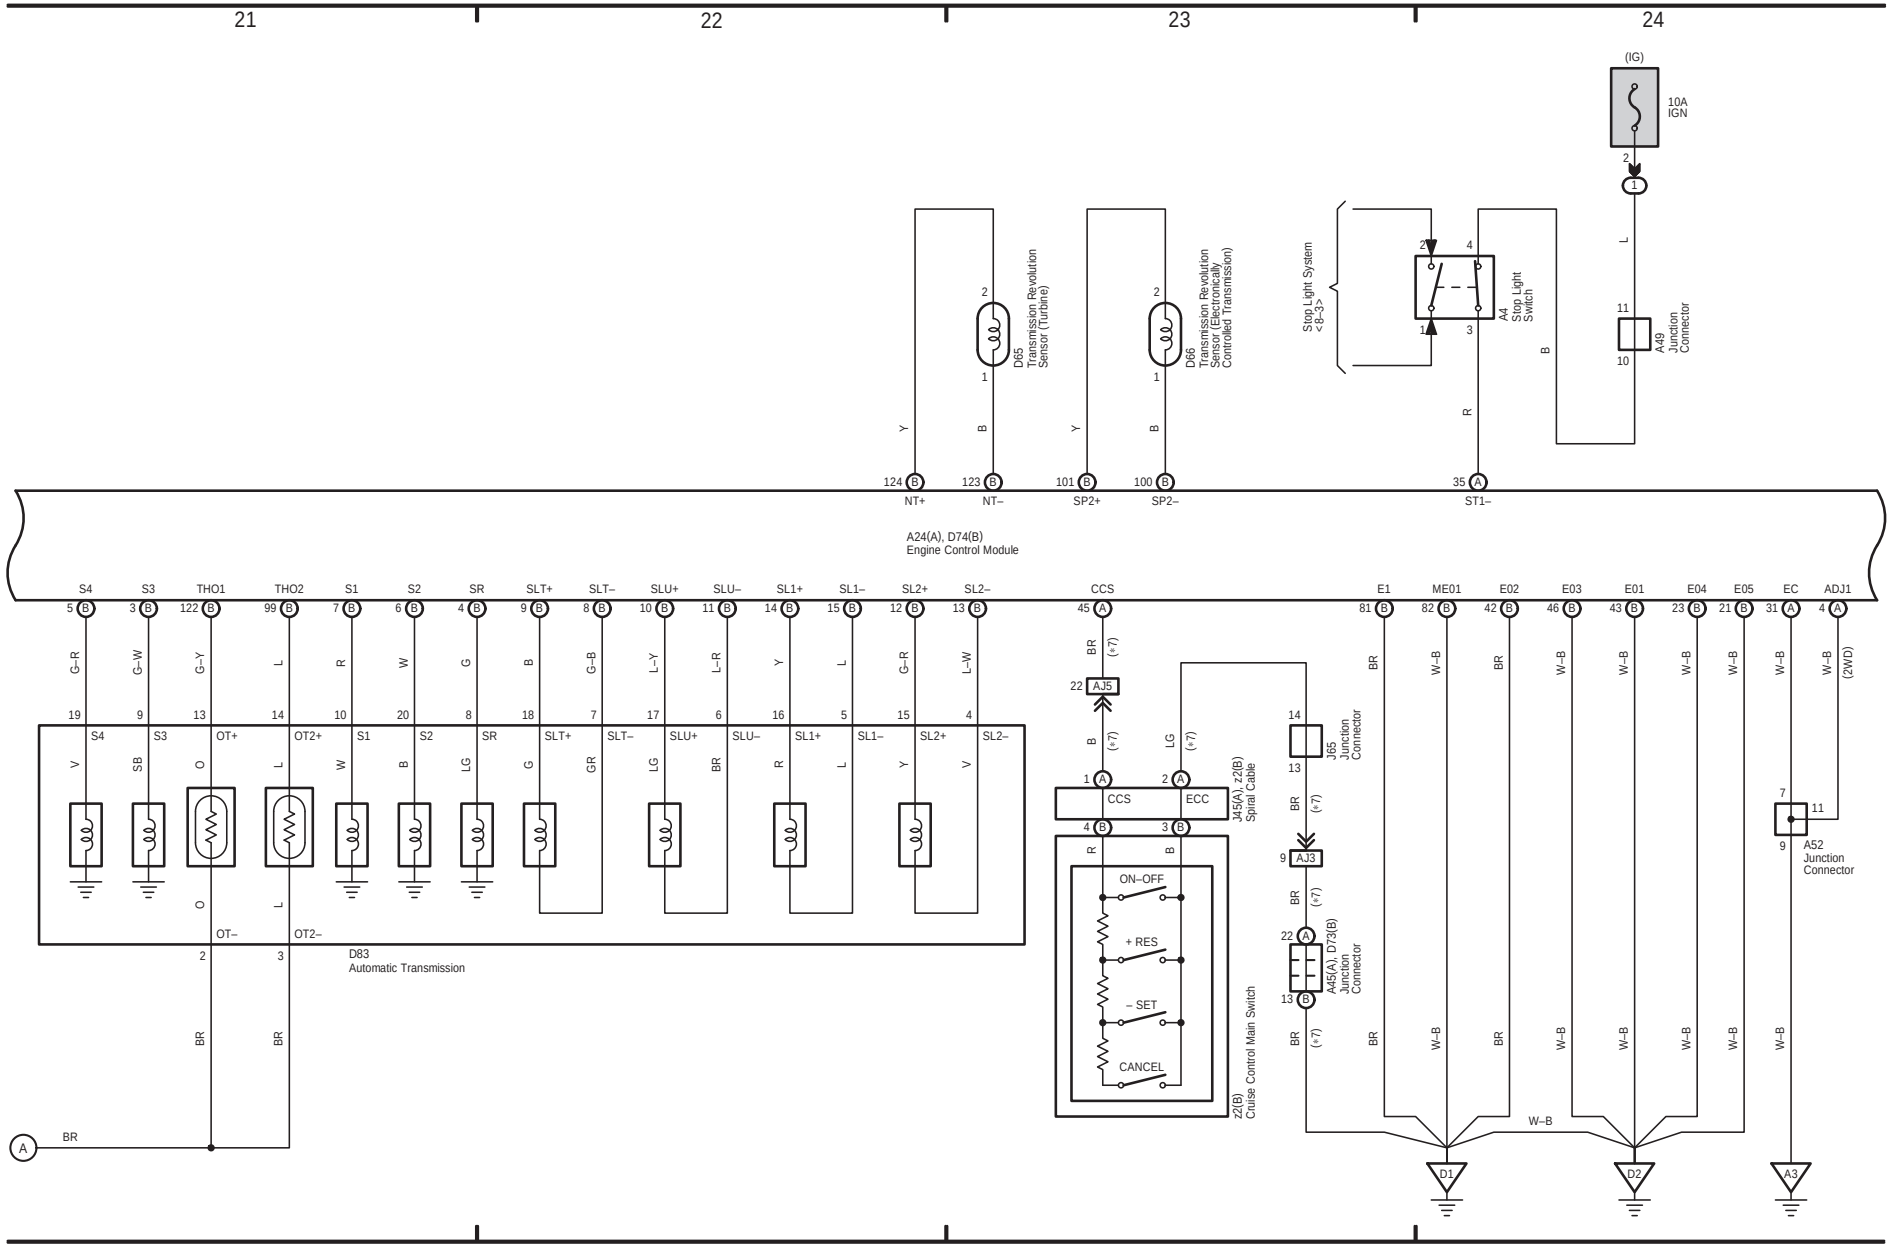



(Cont. next page)

Electronically Controlled Transmission and A/T Indicator (1UR–FE)

* 2 : Floor Shift
* 3 : Column Shift
* 4 : w/ Parking Assist (Intuitive Parking Assist)

25 26 27 28

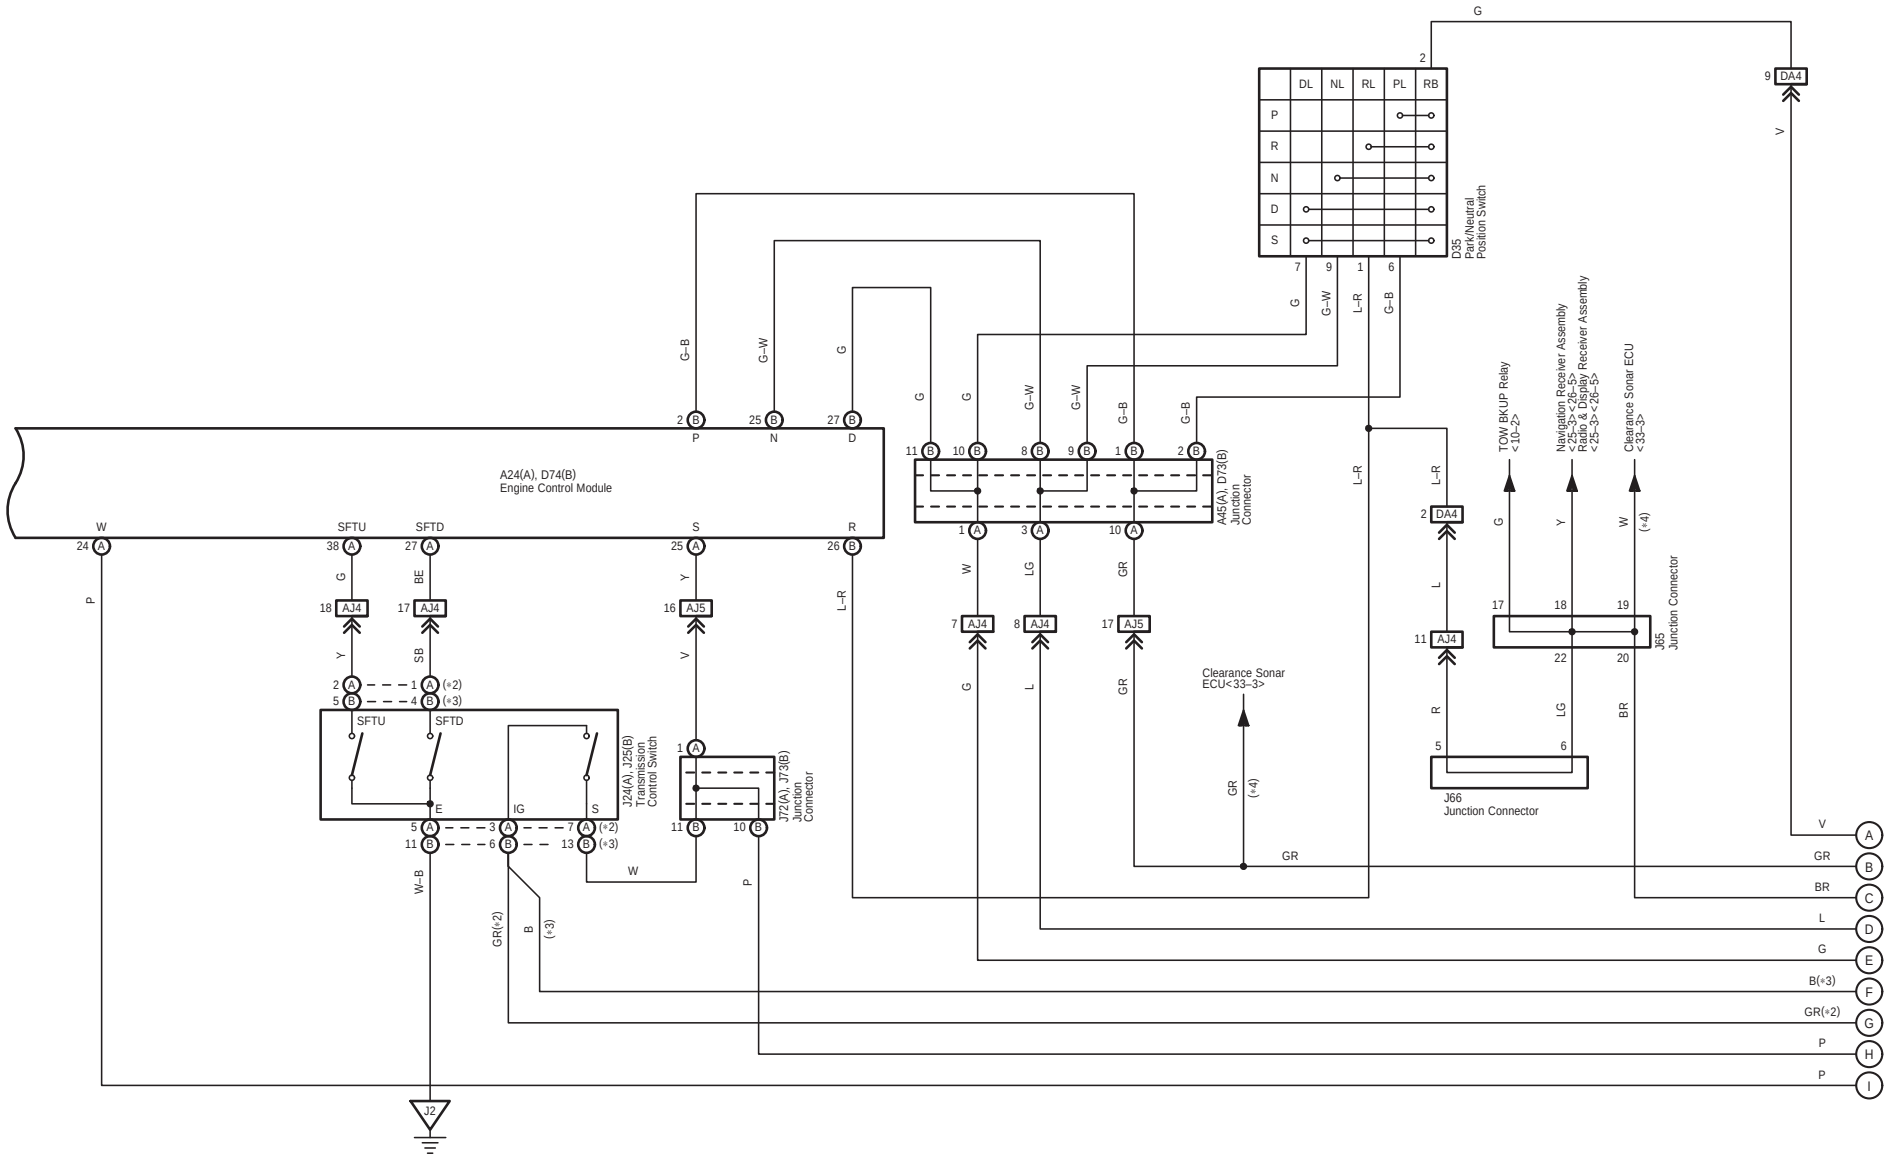

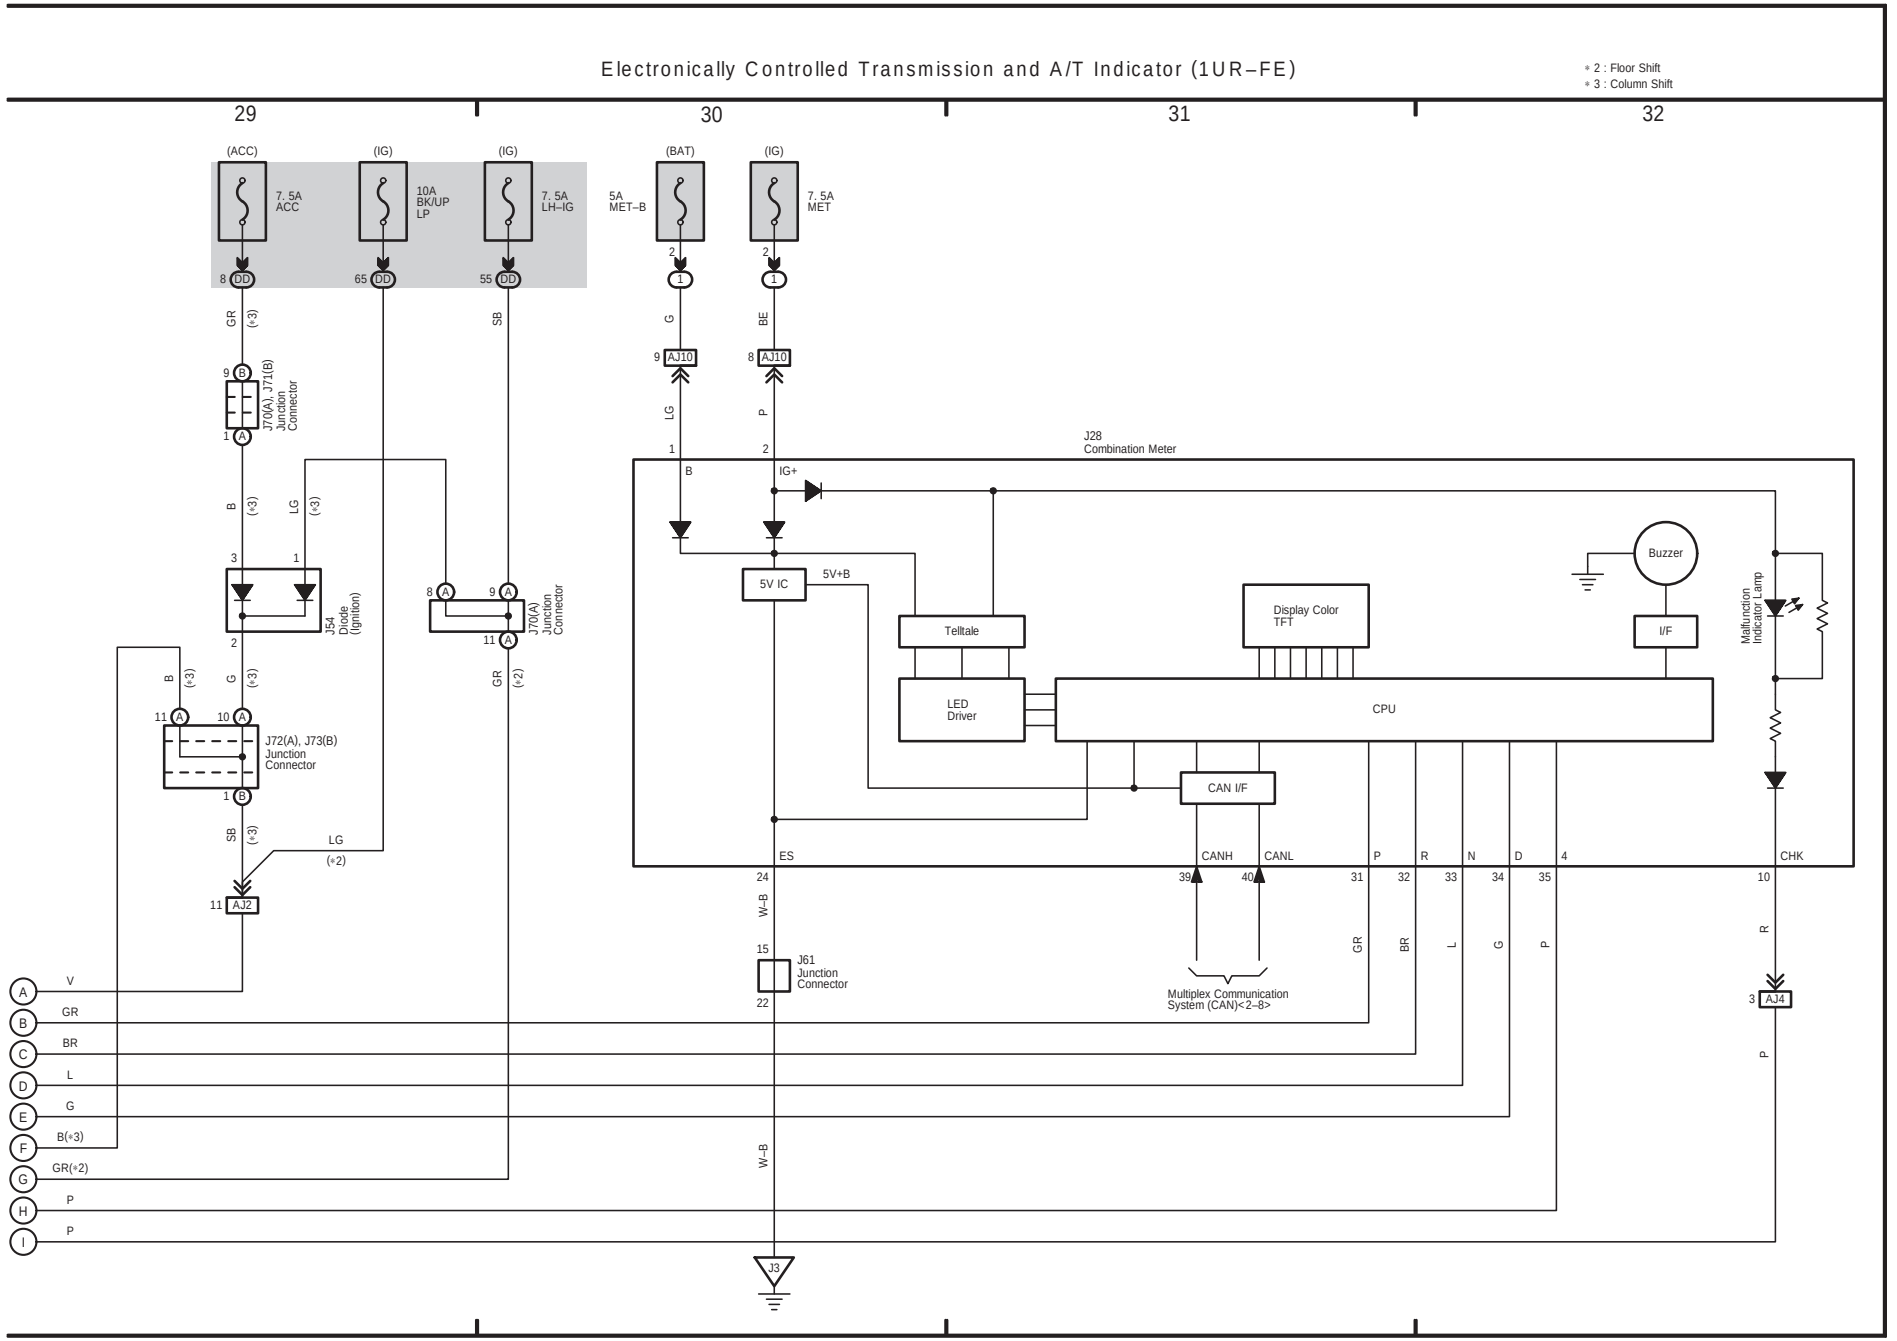
Electronically Controlled Transmission and A/T Indicator (1UR–FE)
* 2 : Floor Shift
* 3 : Column Shift
29
30
31
32
(ACC)
(IG)
(IG)
(BAT)
(IG)
7. 5A ACC
10A BK/UP LP
7. 5A LH–IG
5A MET–B
7. 5A MET
J70(A), J71(B) Junction Connector
J54 Diode (Ignition)
J70(A) Junction Connector
J72(A), J73(B) Junction Connector
J28 Combination Meter
IG+
5V IC
5V+B
Telltale
LED Driver
Display Color TFT
CPU
CAN I/F
Buzzer
I/F
Malfunction Indicator Lamp
ES
CANH
CANL
P
R
N
D
4
CHK
J61 Junction Connector
Multiplex Communication System (CAN)<2–8>
AJ10
AJ2
AJ4
J3
V
GR
BR
L
G
B(*3)
GR(*2)
P
P
W–B
LG
SB
BE
B
GR
R