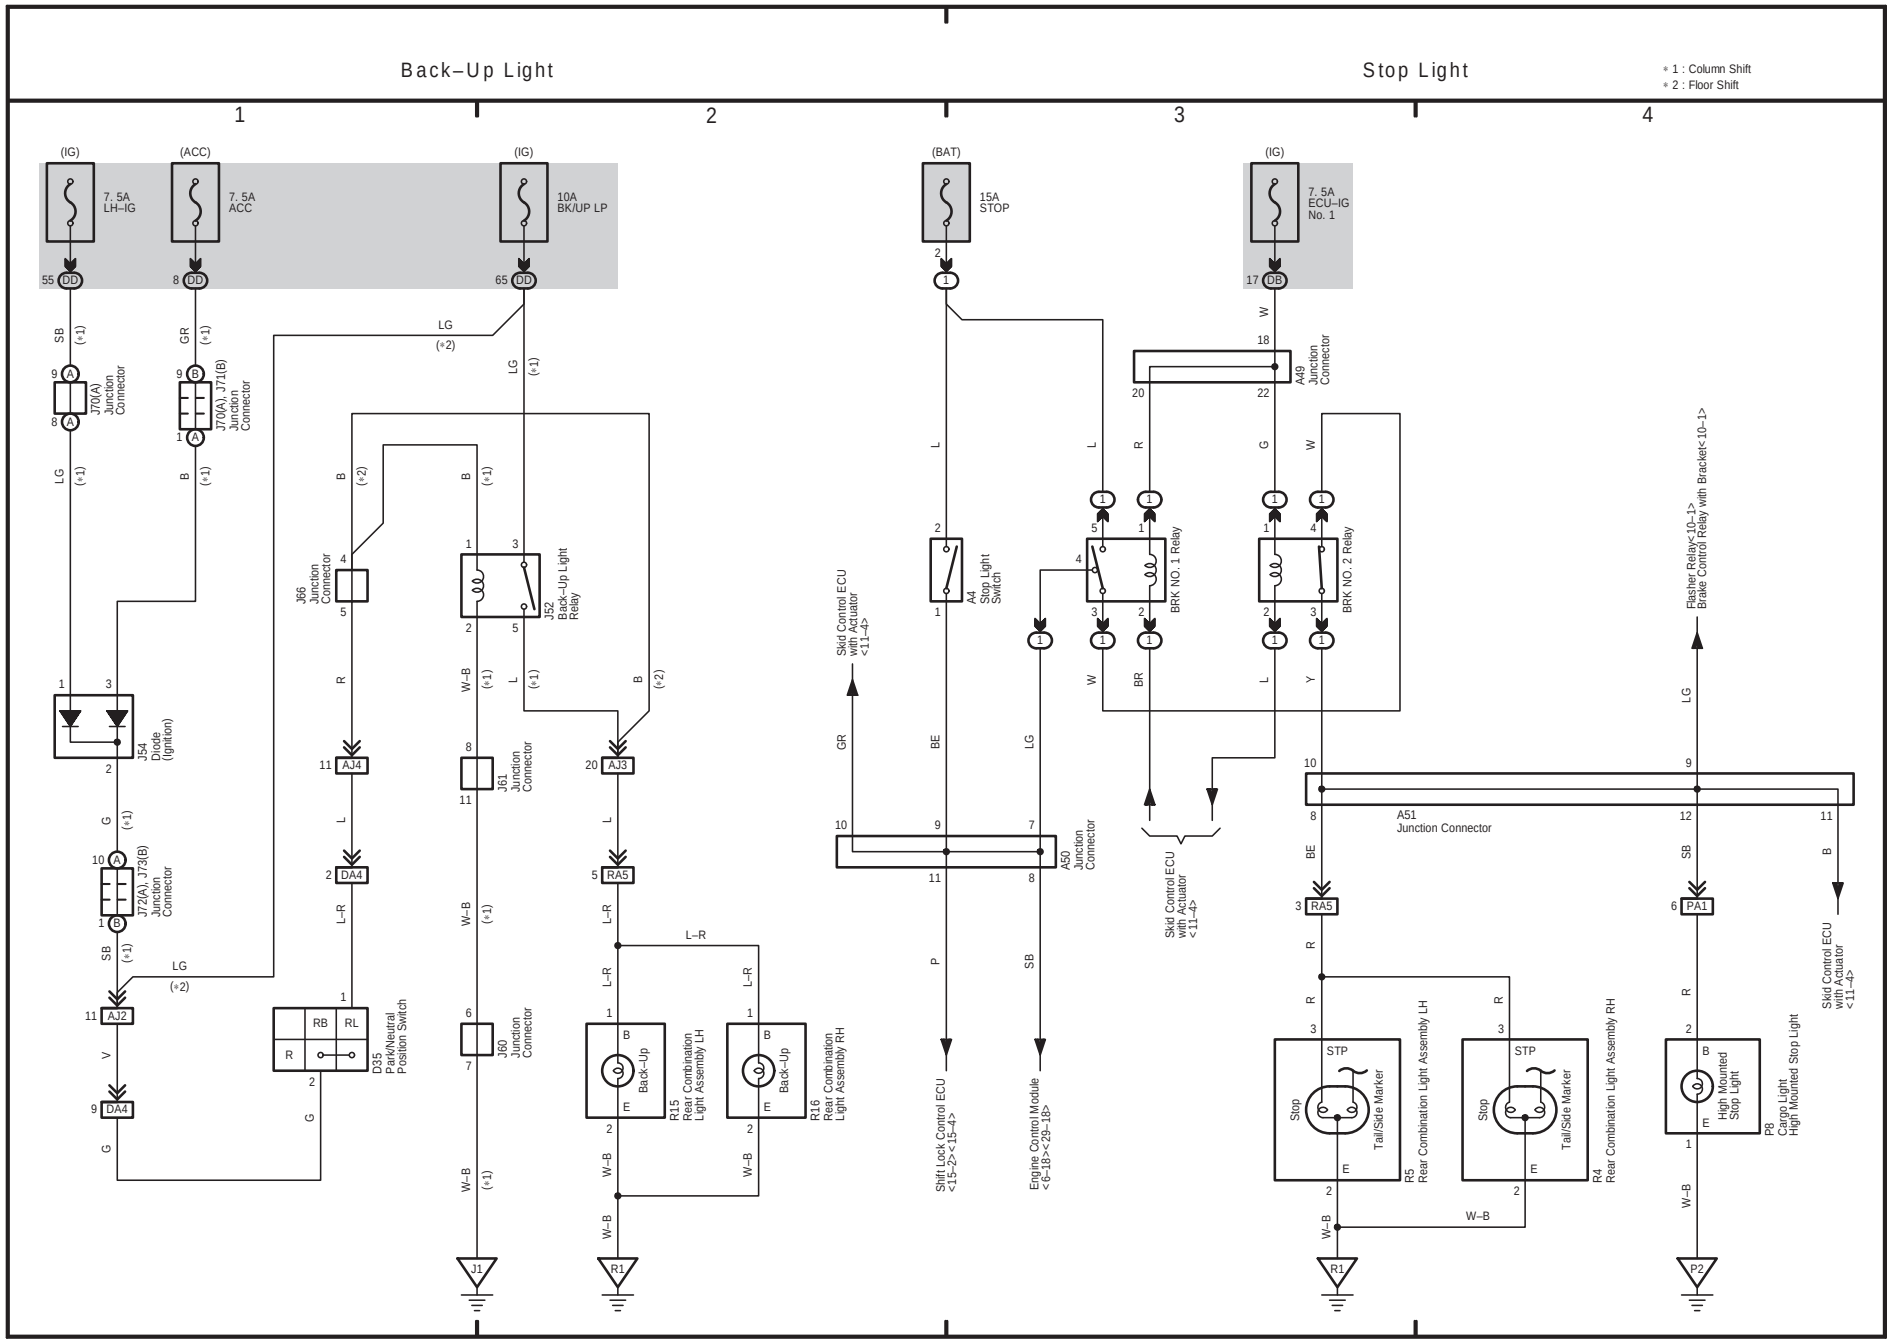

Back–Up Light
Stop Light
* 1 : Column Shift
* 2 : Floor Shift
1
2
3
4
(IG)
(ACC)
(IG)
(BAT)
(IG)
7. 5A LH–IG
7. 5A ACC
10A BK/UP LP
15A STOP
7. 5A ECU–IG No. 1
J70(A) Junction Connector
J71(B) Junction Connector
J54 Diode (Ignition)
J72(A), J73(B) Junction Connector
J66 Junction Connector
J52 Back–Up Light Relay
J61 Junction Connector
J60 Junction Connector
D35 Park/Neutral Position Switch
R15 Rear Combination Light Assembly LH
R16 Rear Combination Light Assembly RH
A4 Stop Light Switch
A50 Junction Connector
A49 Junction Connector
BRK NO. 1 Relay
BRK NO. 2 Relay
A51 Junction Connector
R5 Rear Combination Light Assembly LH
R4 Rear Combination Light Assembly RH
P8 Cargo Light High Mounted Stop Light
Flasher Relay<10–1>
Brake Control Relay with Bracket<10–1>
Skid Control ECU with Actuator <11–4>
Shift Lock Control ECU <15–2><15–4>
Engine Control Module <6–18><29–18>
Back–Up
Stop
Tail/Side Marker
High Mounted Stop Light
J1
R1
P2