

F RELAY LOCATIONS

: Driver Side J/B	Cowl Side Left (See Page 21)

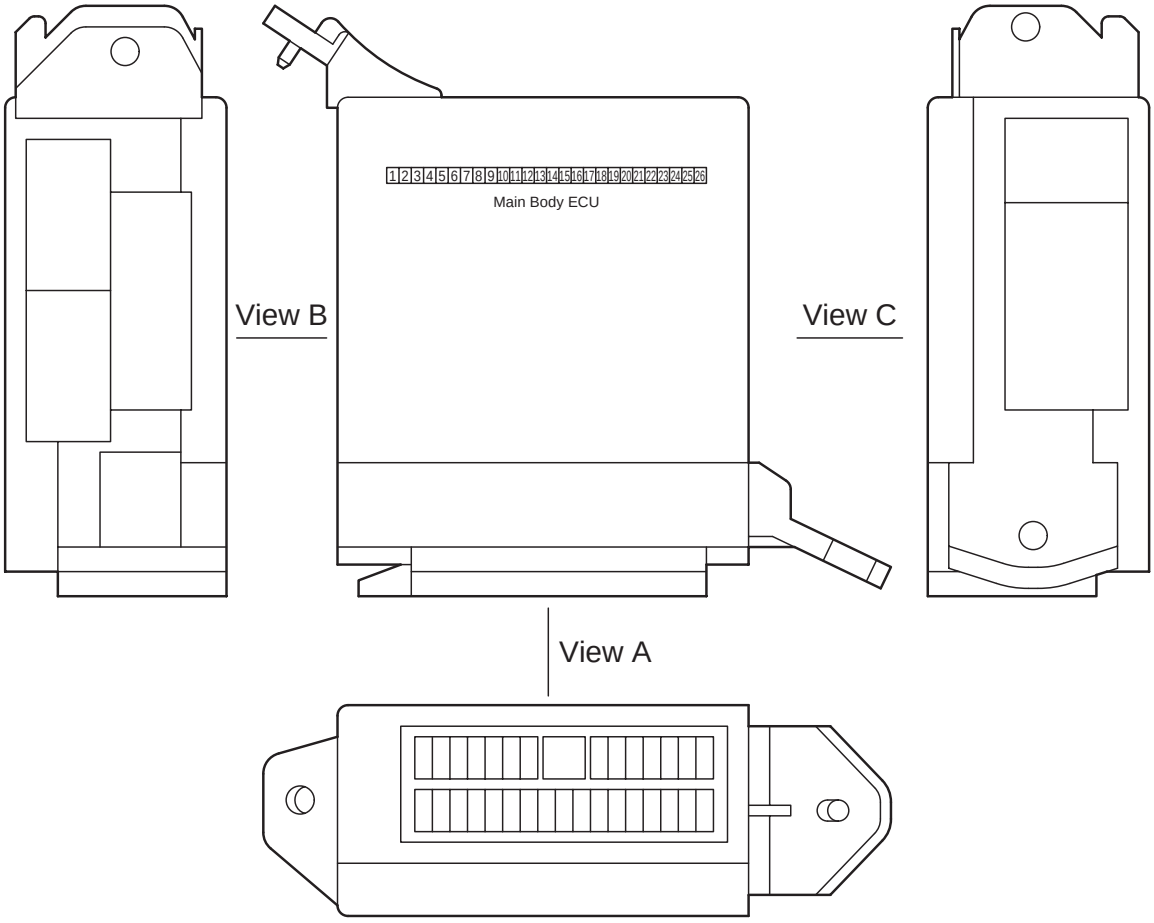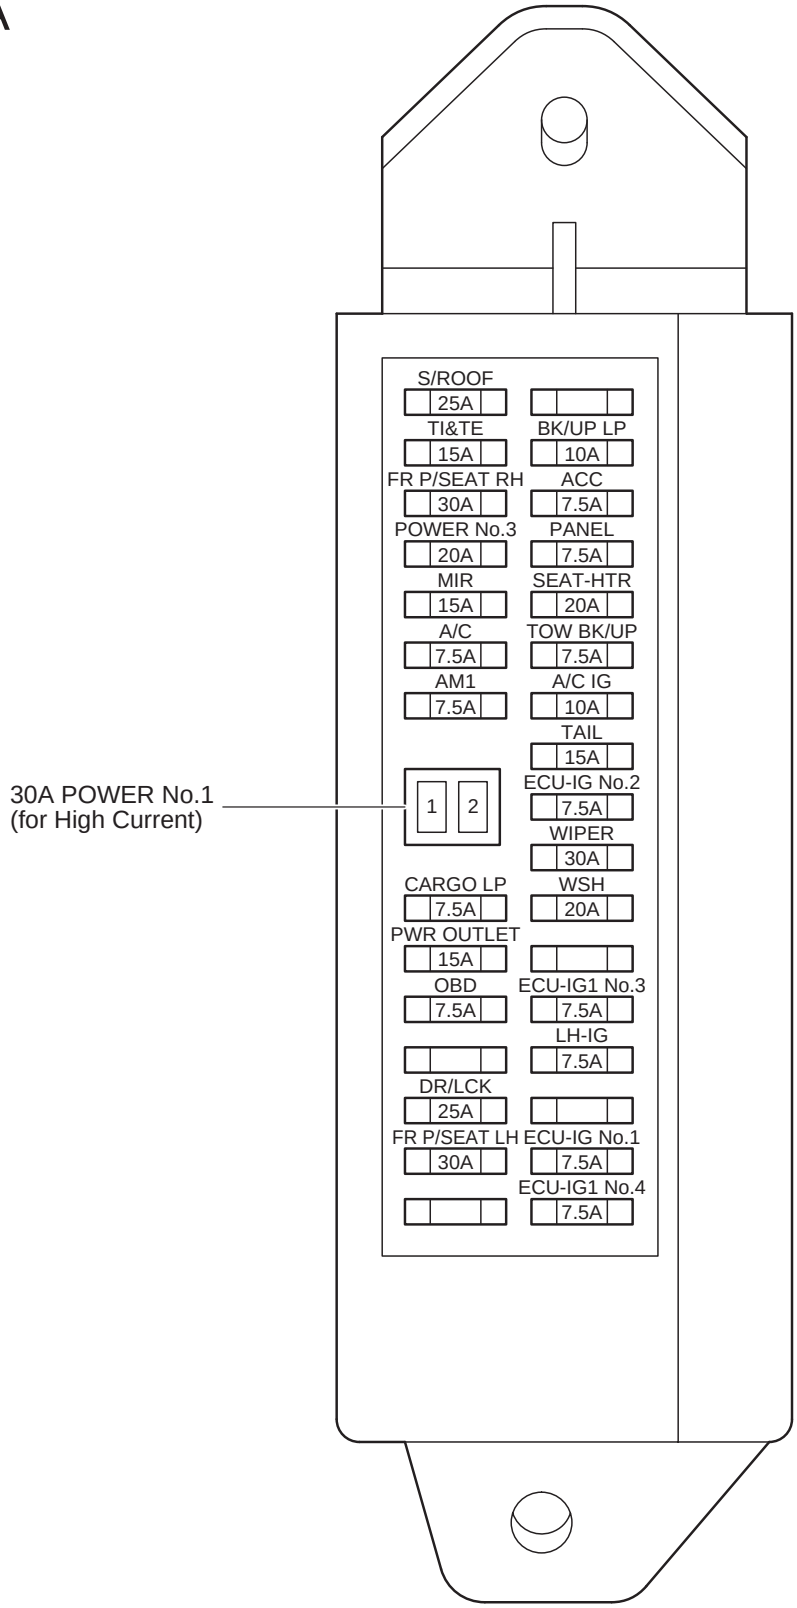


View A


S/ROOF
25A
TI&TE
15A
FR P/SEAT RH
30A
POWER No.3
20A
MIR
15A
A/C
7.5A
AM1
7.5A
BK/UP LP
10A
ACC
7.5A
PANEL
7.5A
SEAT-HTR
20A
TOW BK/UP
7.5A
A/C IG
10A
TAIL
15A
ECU-IG No.2
7.5A
WIPER
30A
WSH
20A
CARGO LP
7.5A
PWR OUTLET
15A
OBD
7.5A
ECU-IG1 No.3
7.5A
LH-IG
7.5A
DR/LCK
25A
FR P/SEAT LH
30A
ECU-IG No.1
7.5A
ECU-IG1 No.4
7.5A
30A POWER No.1
(for High Current)
1
2


F RELAY LOCATIONS

: Driver Side J/B	Cowl Side Left (See Page 21)

View B

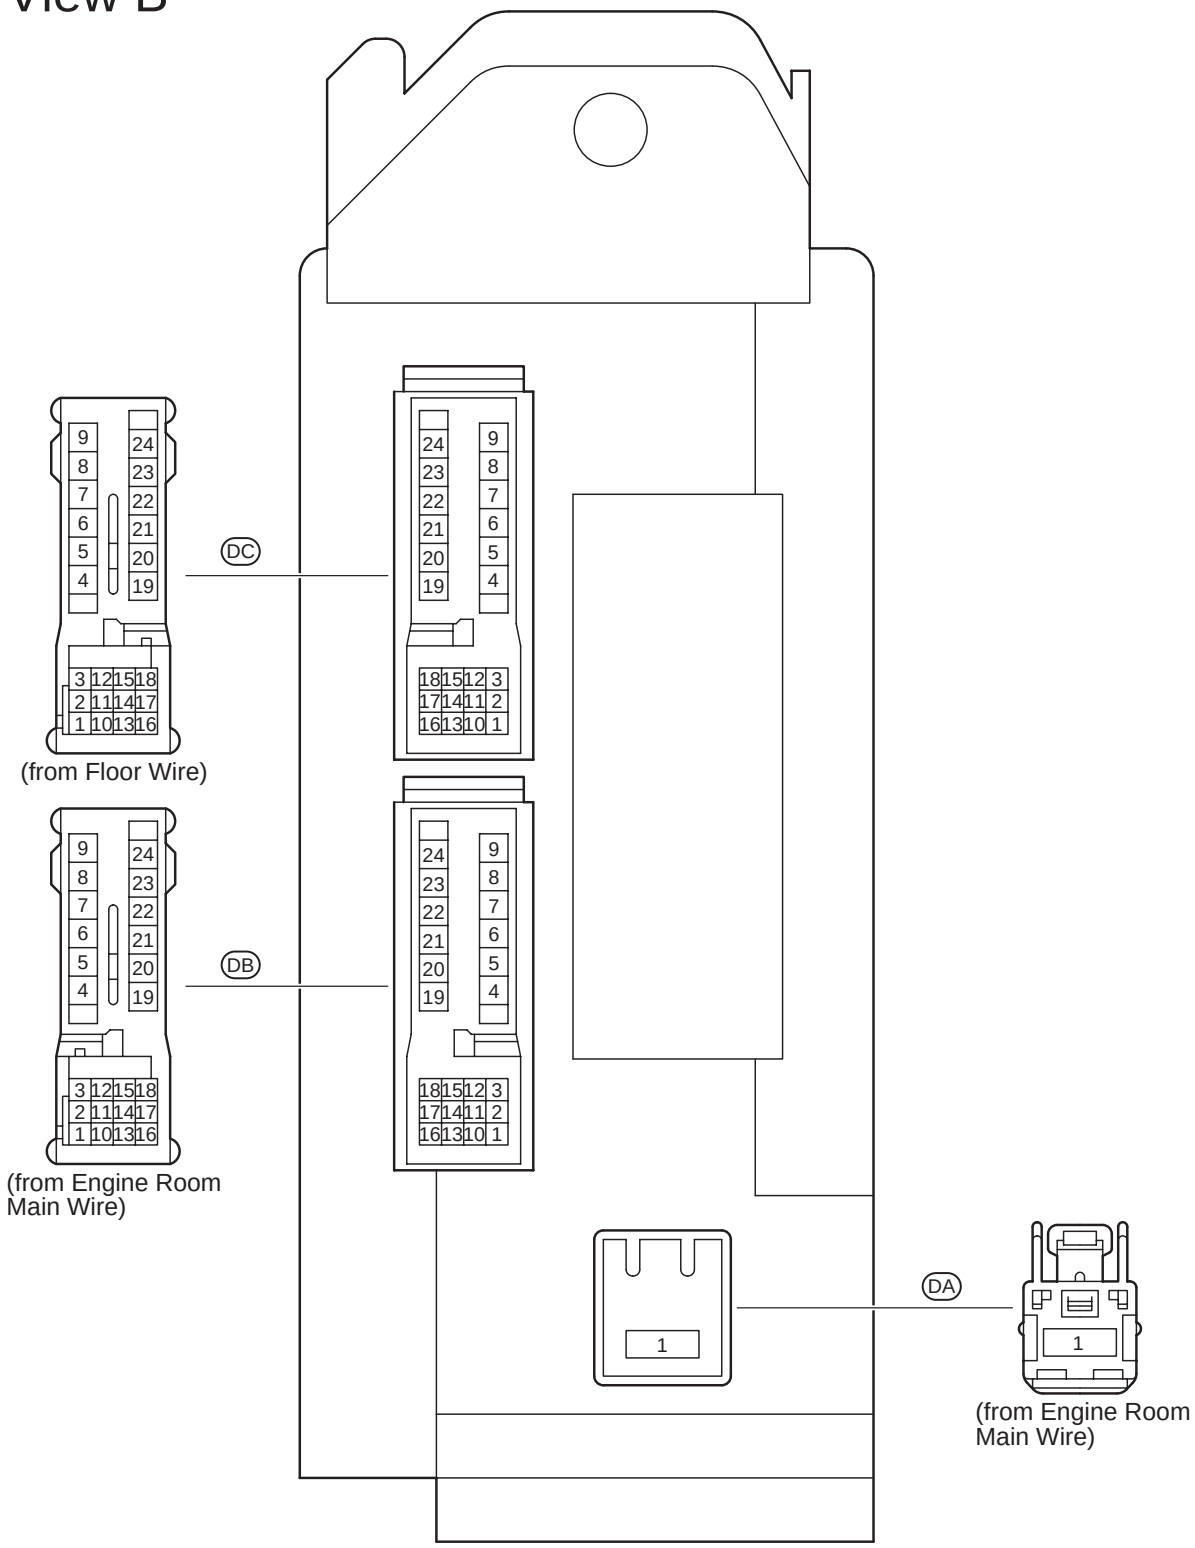

View C

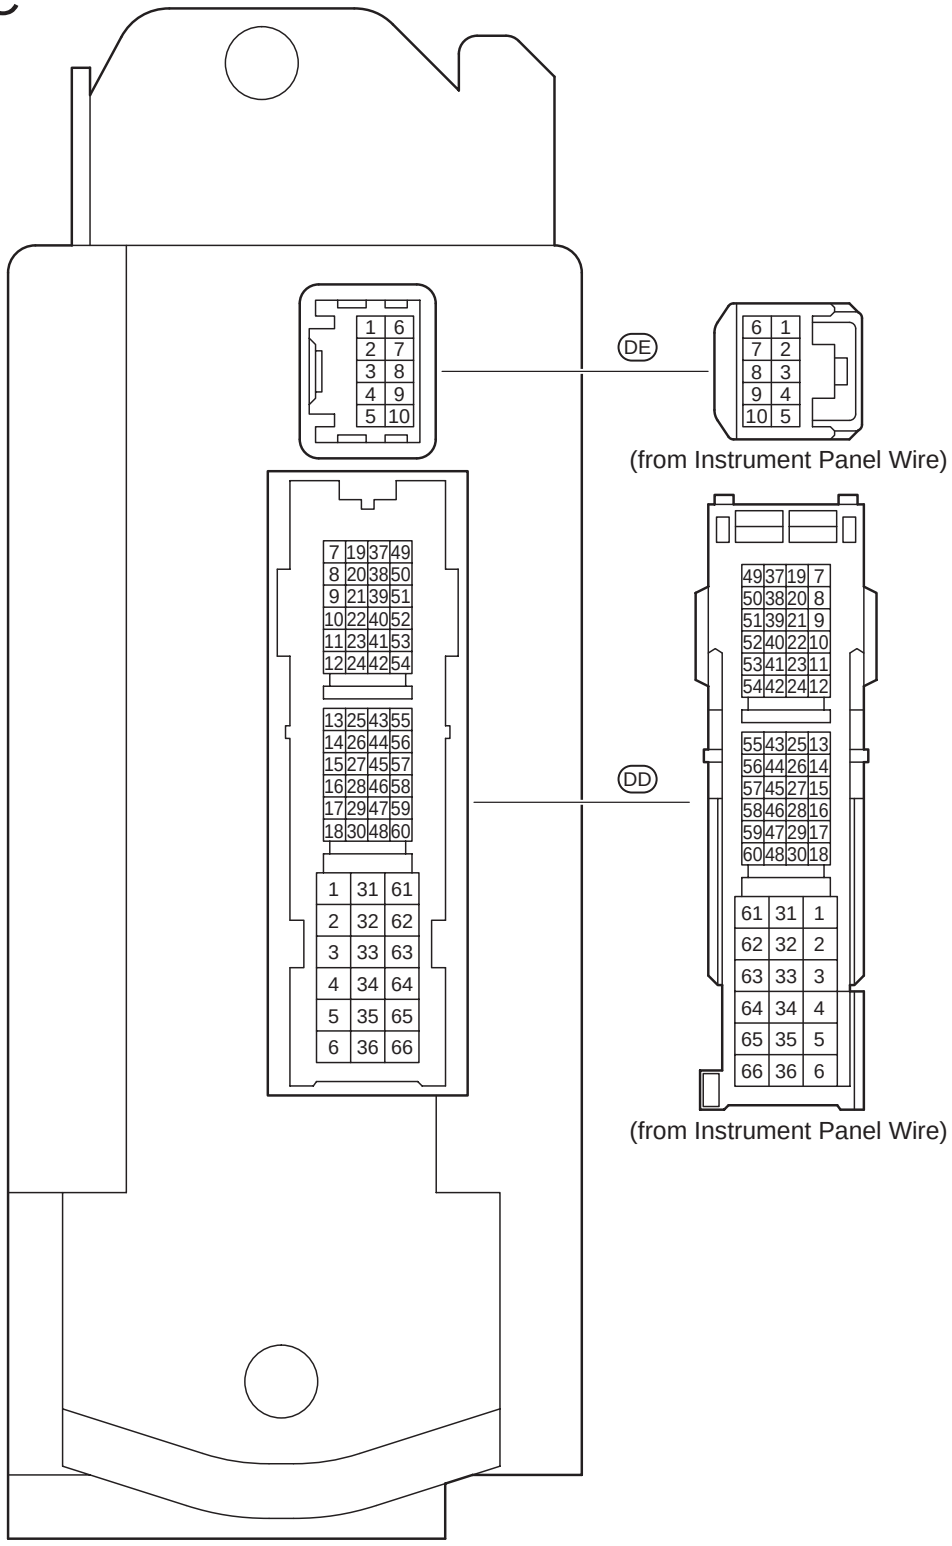
1 6
2 7
3 8
4 9
5 10
DE
6 1
7 2
8 3
9 4
10 5
(from Instrument Panel Wire)
7 19 37 49
8 20 38 50
9 21 39 51
10 22 40 52
11 23 41 53
12 24 42 54
13 25 43 55
14 26 44 56
15 27 45 57
16 28 46 58
17 29 47 59
18 30 48 60
1 31 61
2 32 62
3 33 63
4 34 64
5 35 65
6 36 66
DD
49 37 19 7
50 38 20 8
51 39 21 9
52 40 22 10
53 41 23 11
54 42 24 12
55 43 25 13
56 44 26 14
57 45 27 15
58 46 28 16
59 47 29 17
60 48 30 18
61 31 1
62 32 2
63 33 3
64 34 4
65 35 5
66 36 6
(from Instrument Panel Wire)