

F RELAY LOCATIONS

① : Engine Room R/B ⬭ : Engine Room J/B	Engine Compartment Left (See Page 20)

* 1:SUB BATT Relay
* 2:TOW TAIL Relay
* 3:SECURITY HORN Relay
* 4:FOG Relay
* 5:ST Relay
* 7:MG CLT Relay
* 8:DEICER Relay
* 10:BRK NO.2 Relay
* 11:DIM Relay
* 12:HEAD Relay
* 13:50A HTR (for High Current)
* 14:40A MAIN (for High Current)
* 15:50A A/PUMP NO.2 (for High Current)
* 16:50A A/PUMP NO.1 (for High Current)
* 17:180A ALT (for High Current)
* 18:F/PMP Relay
* 19:150A LH-J/B (for High Current)
* 20:DEFOG Relay
* 21:BACK P/W NO.1 Relay
* 22:BACK P/W NO.2 Relay
* 23:F/PMP VSV Relay
* 24:C/OPN Relay
* 25:BRK NO.1 Relay
* 26:AI-HTR Relay
* 27:LED DRL Relay
* 28:DOME Relay
* 29:TOW BKUP Relay

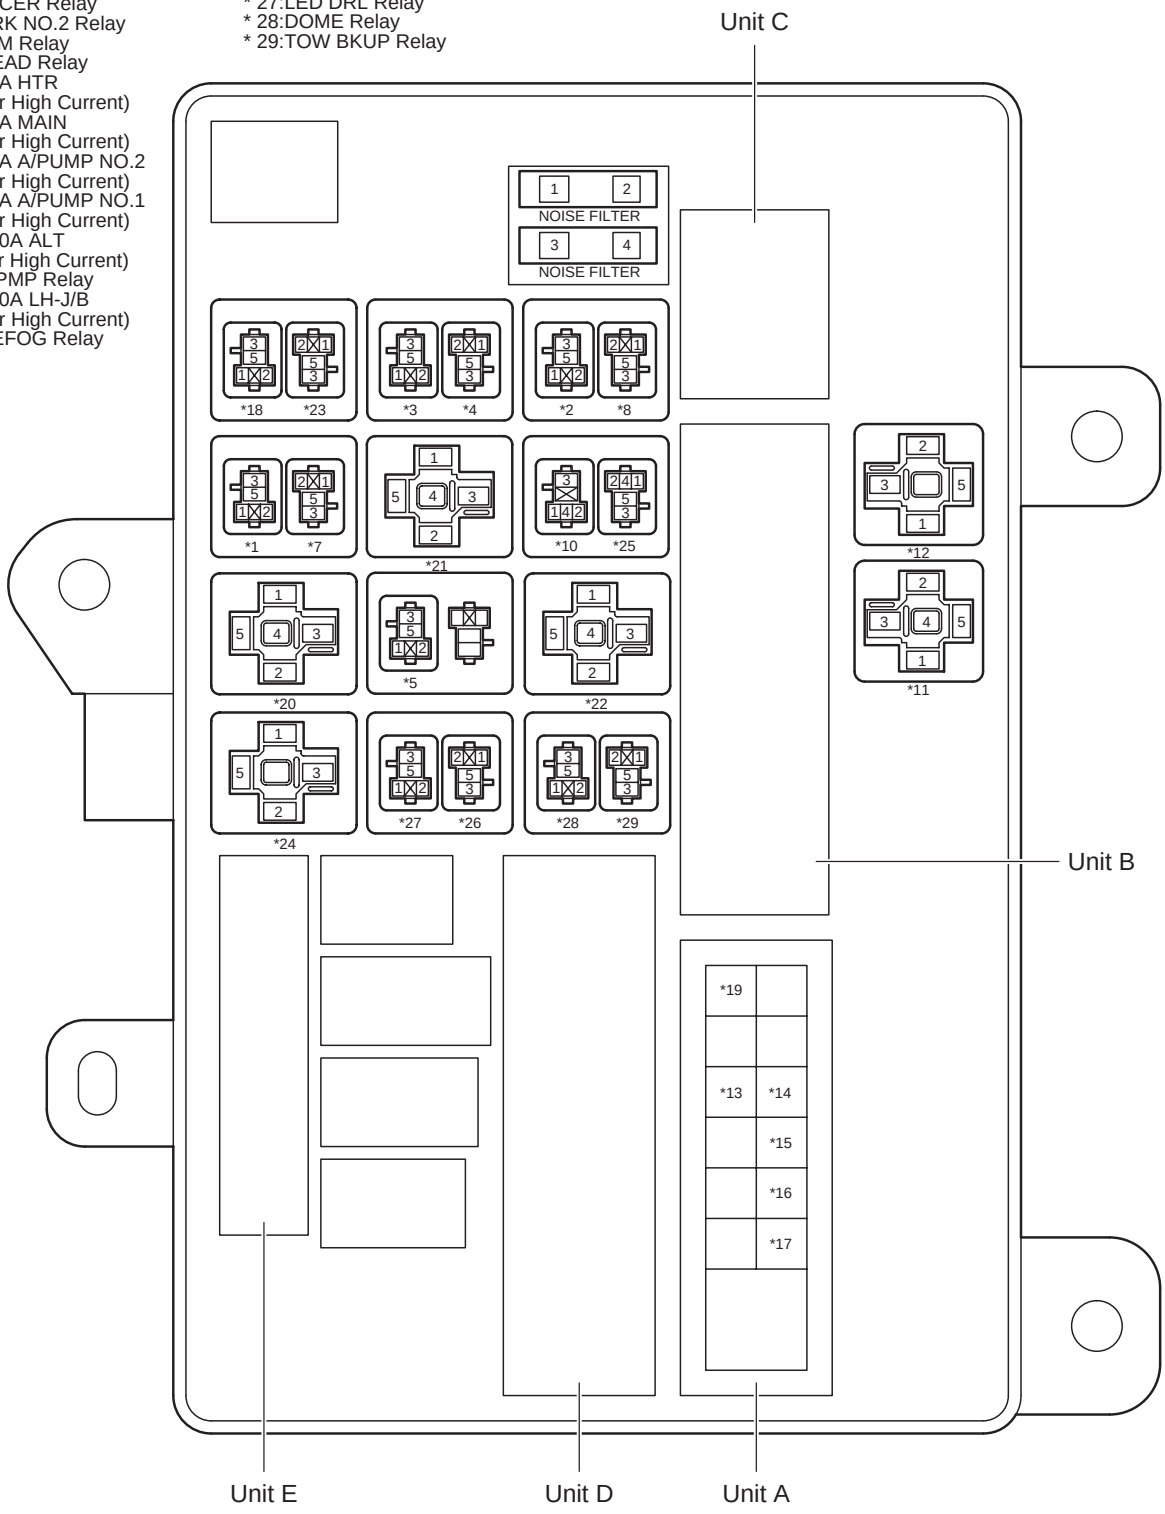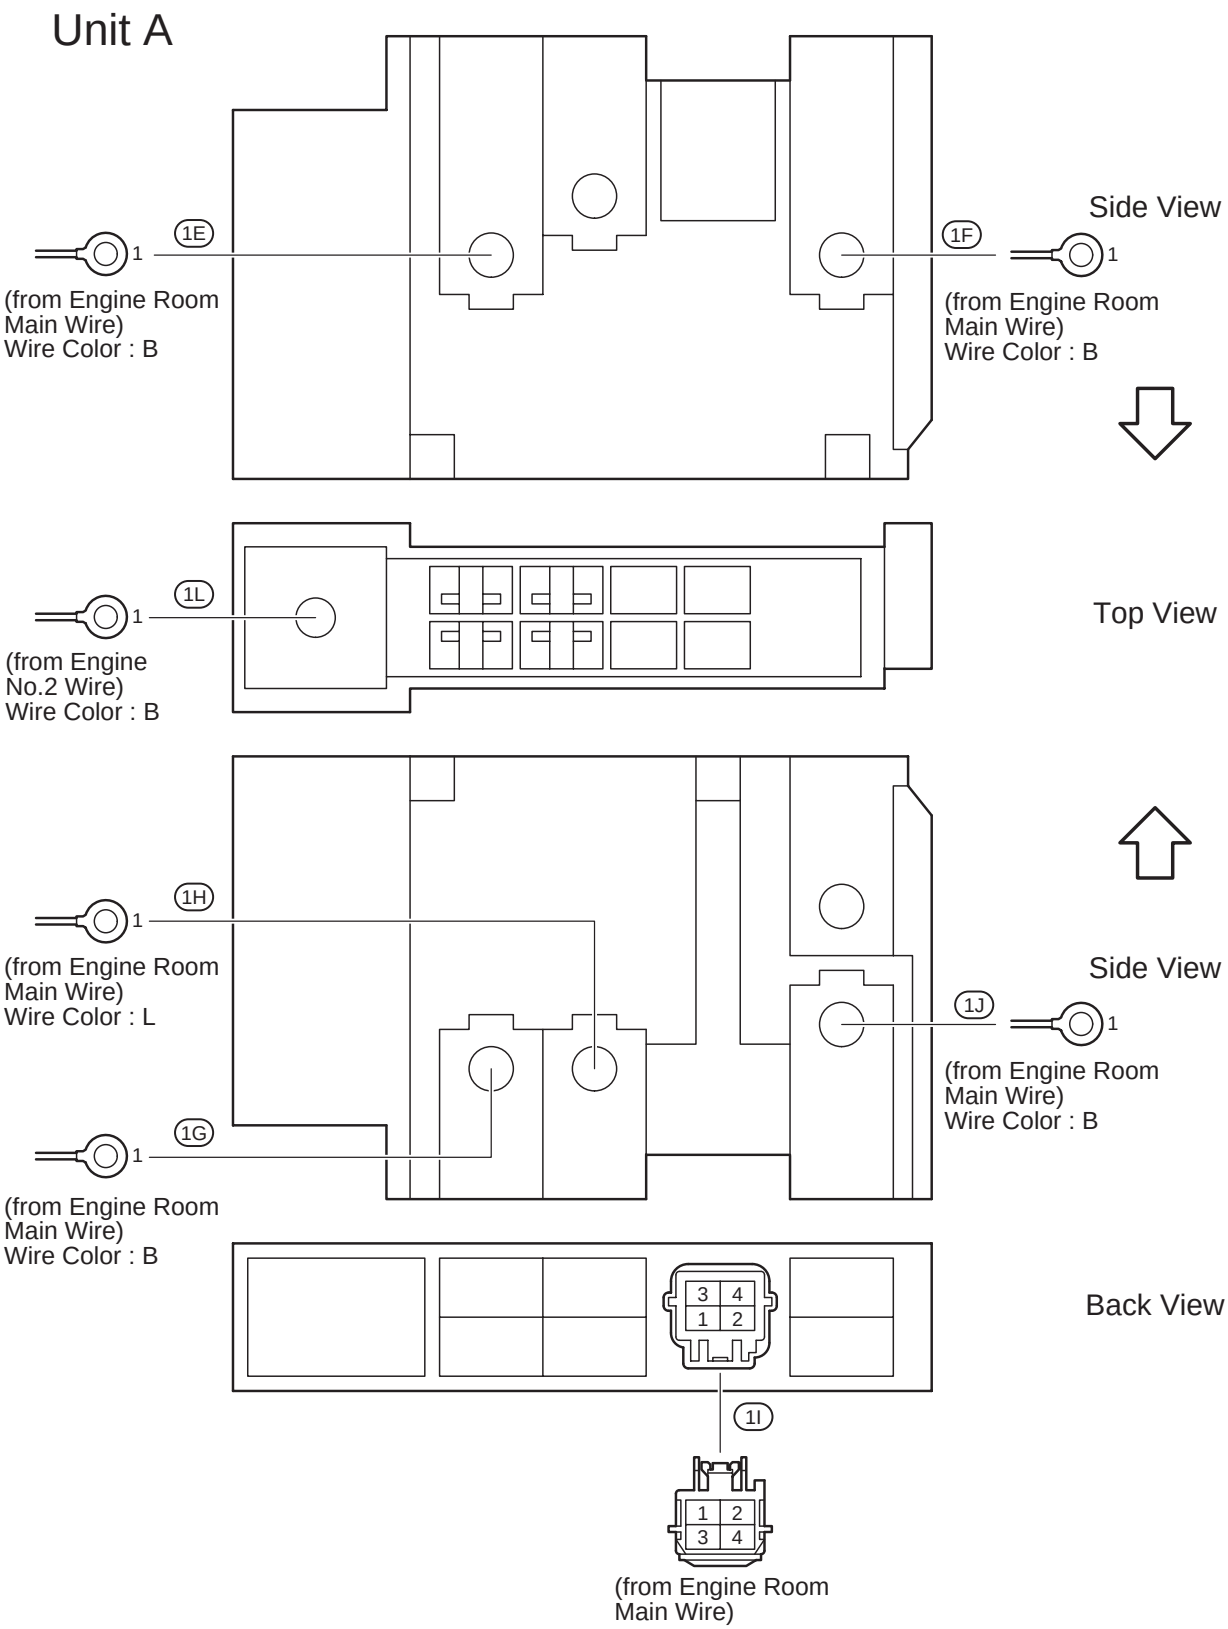



Unit A
Side View
1E
1F
1
1
(from Engine Room Main Wire)
Wire Color : B
(from Engine Room Main Wire)
Wire Color : B
1L
1
(from Engine No.2 Wire)
Wire Color : B
Top View
1H
1
(from Engine Room Main Wire)
Wire Color : L
1G
1
(from Engine Room Main Wire)
Wire Color : B
Side View
1J
1
(from Engine Room Main Wire)
Wire Color : B
3 4
1 2
Back View
1I
1 2
3 4
(from Engine Room Main Wire)


F RELAY LOCATIONS

① : Engine Room R/B ⬭ : Engine Room J/B	Engine Compartment Left (See Page 20)

Unit B

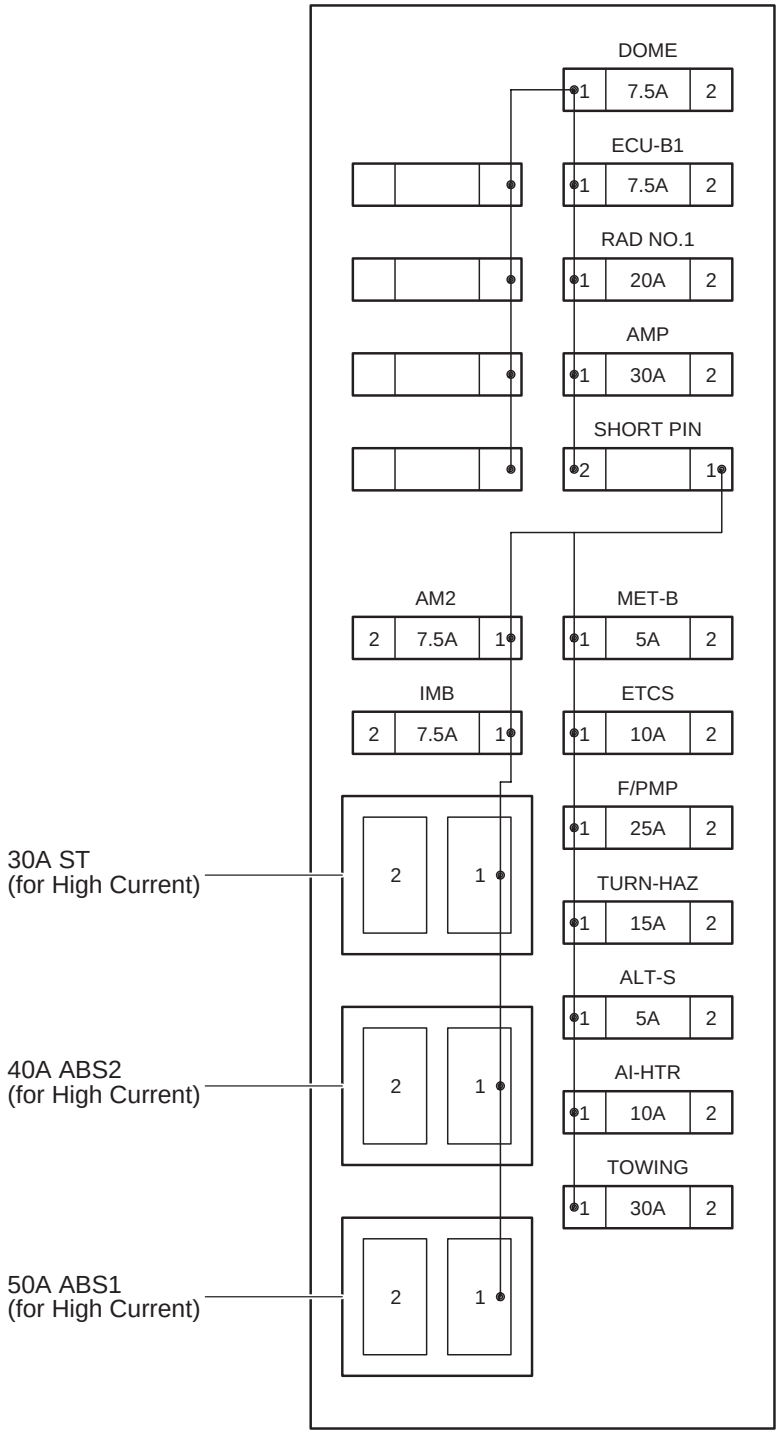


Unit C

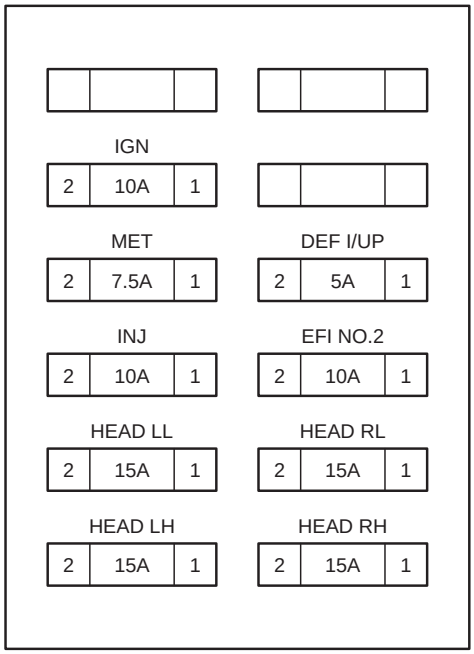
IGN
2
10A
1
MET
2
7.5A
1
DEF I/UP
2
5A
1
INJ
2
10A
1
EFI NO.2
2
10A
1
HEAD LL
2
15A
1
HEAD RL
2
15A
1
HEAD LH
2
15A
1
HEAD RH
2
15A
1


F RELAY LOCATIONS

① : Engine Room R/B ⬭ : Engine Room J/B	Engine Compartment Left (See Page 20)

Unit D

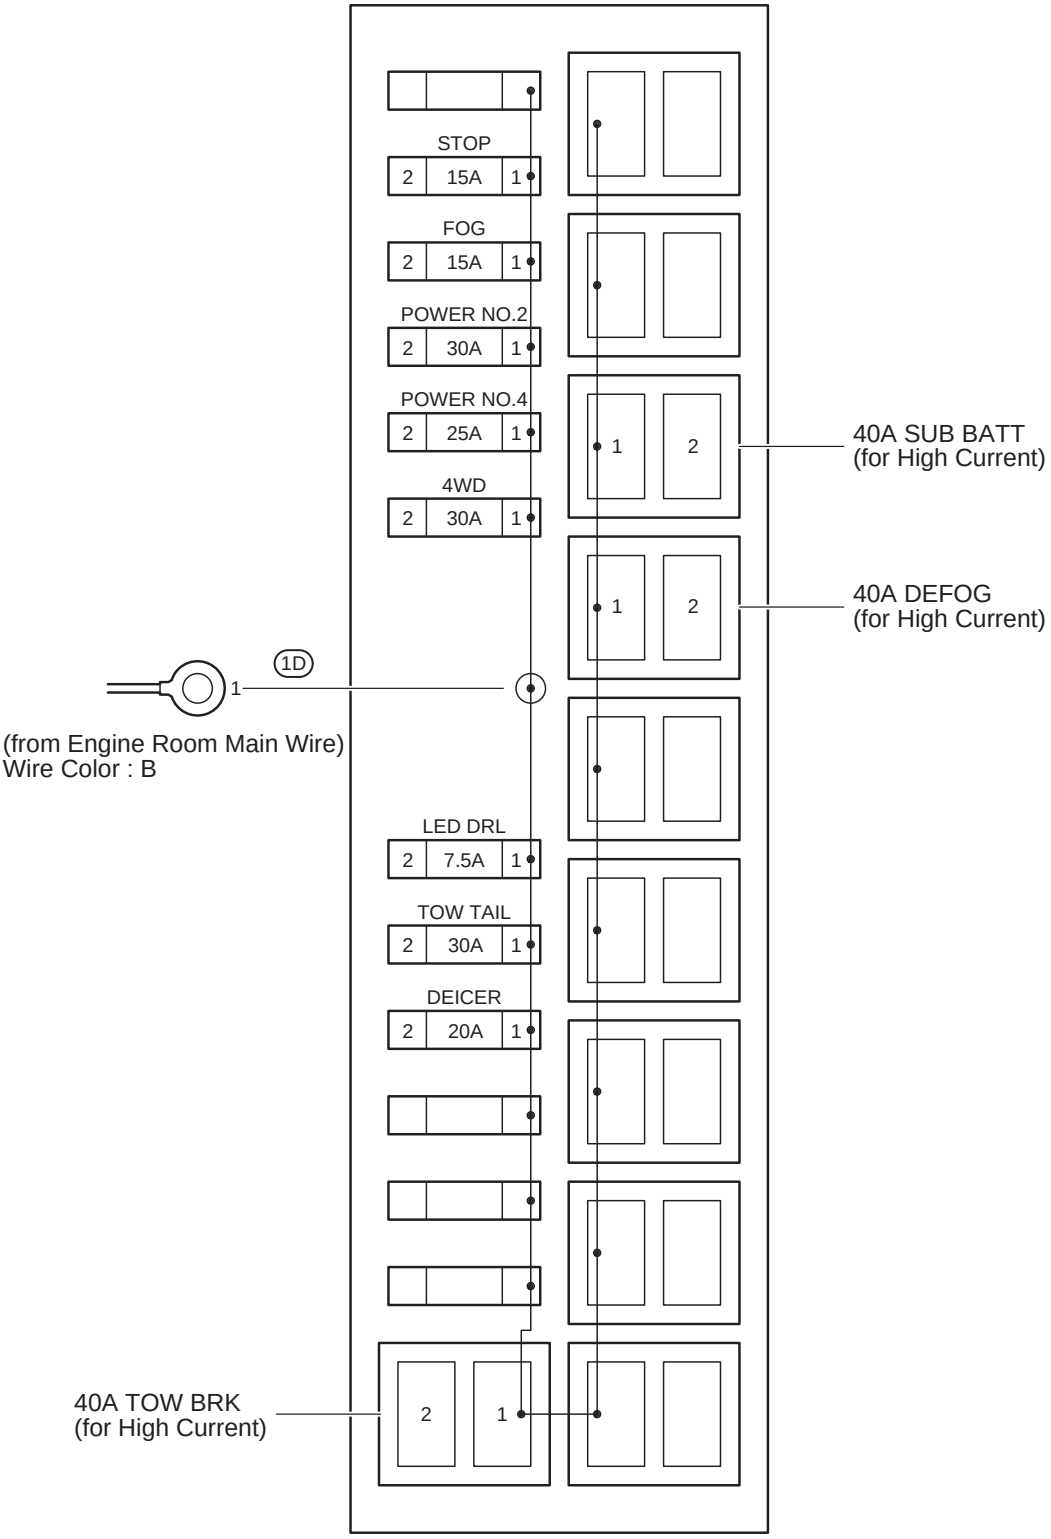

Unit E

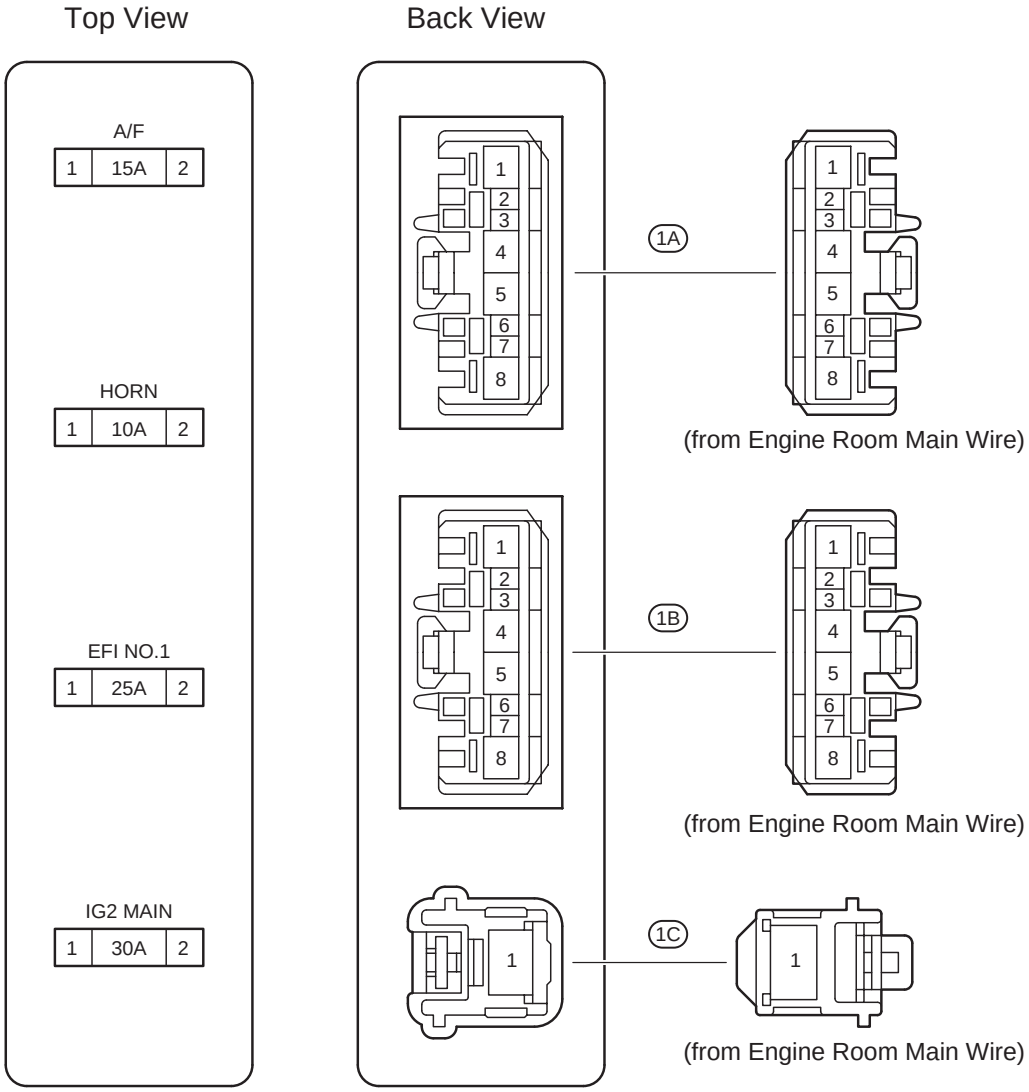
Top View
Back View
A/F
1
15A
2
HORN
1
10A
2
EFI NO.1
1
25A
2
IG2 MAIN
1
30A
2
1A
1B
1C
(from Engine Room Main Wire)
(from Engine Room Main Wire)
(from Engine Room Main Wire)