



D7
D21
D19
D34
D32
D35
D29
D31
D33
D16
D14
D12
D37
D40
D10
D23
D41
D25
D45
D39
D9
D3
D28
D6
D44

D 3 Crankshaft Position Sensor
D 6 Camshaft Position Sensor
D 7 Mass Air Flow Meter
D 9 Throttle Position Sensor
D 10 Ignition Coil (No.1)
D 12 Ignition Coil (No.3)
D 14 Ignition Coil (No.5)
D 16 Ignition Coil (No.7)
D 19 Ignition Coil (No.8)
D 21 Ignition Coil (No.6)
D 23 Ignition Coil (No.4)
D 25 Ignition Coil (No.2)
D 28 Engine Coolant Temperature Sensor
D 29 Purge VSV
D 31 Heated Oxygen Sensor (Bank 1 Sensor 2)
D 32 Heated Oxygen Sensor (Bank 2 Sensor 2)
D 33 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D 34 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
D 35 Park/Neutral Position Switch
D 37 VVT Sensor (Bank 1 Intake Side)
D 39 VVT Sensor (Bank 2 Intake Side)
D 40 VVT Sensor (Bank 1 Exhaust Side)
D 41 VVT Sensor (Bank 2 Exhaust Side)
D 44 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
D 45 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)


D 3
Black

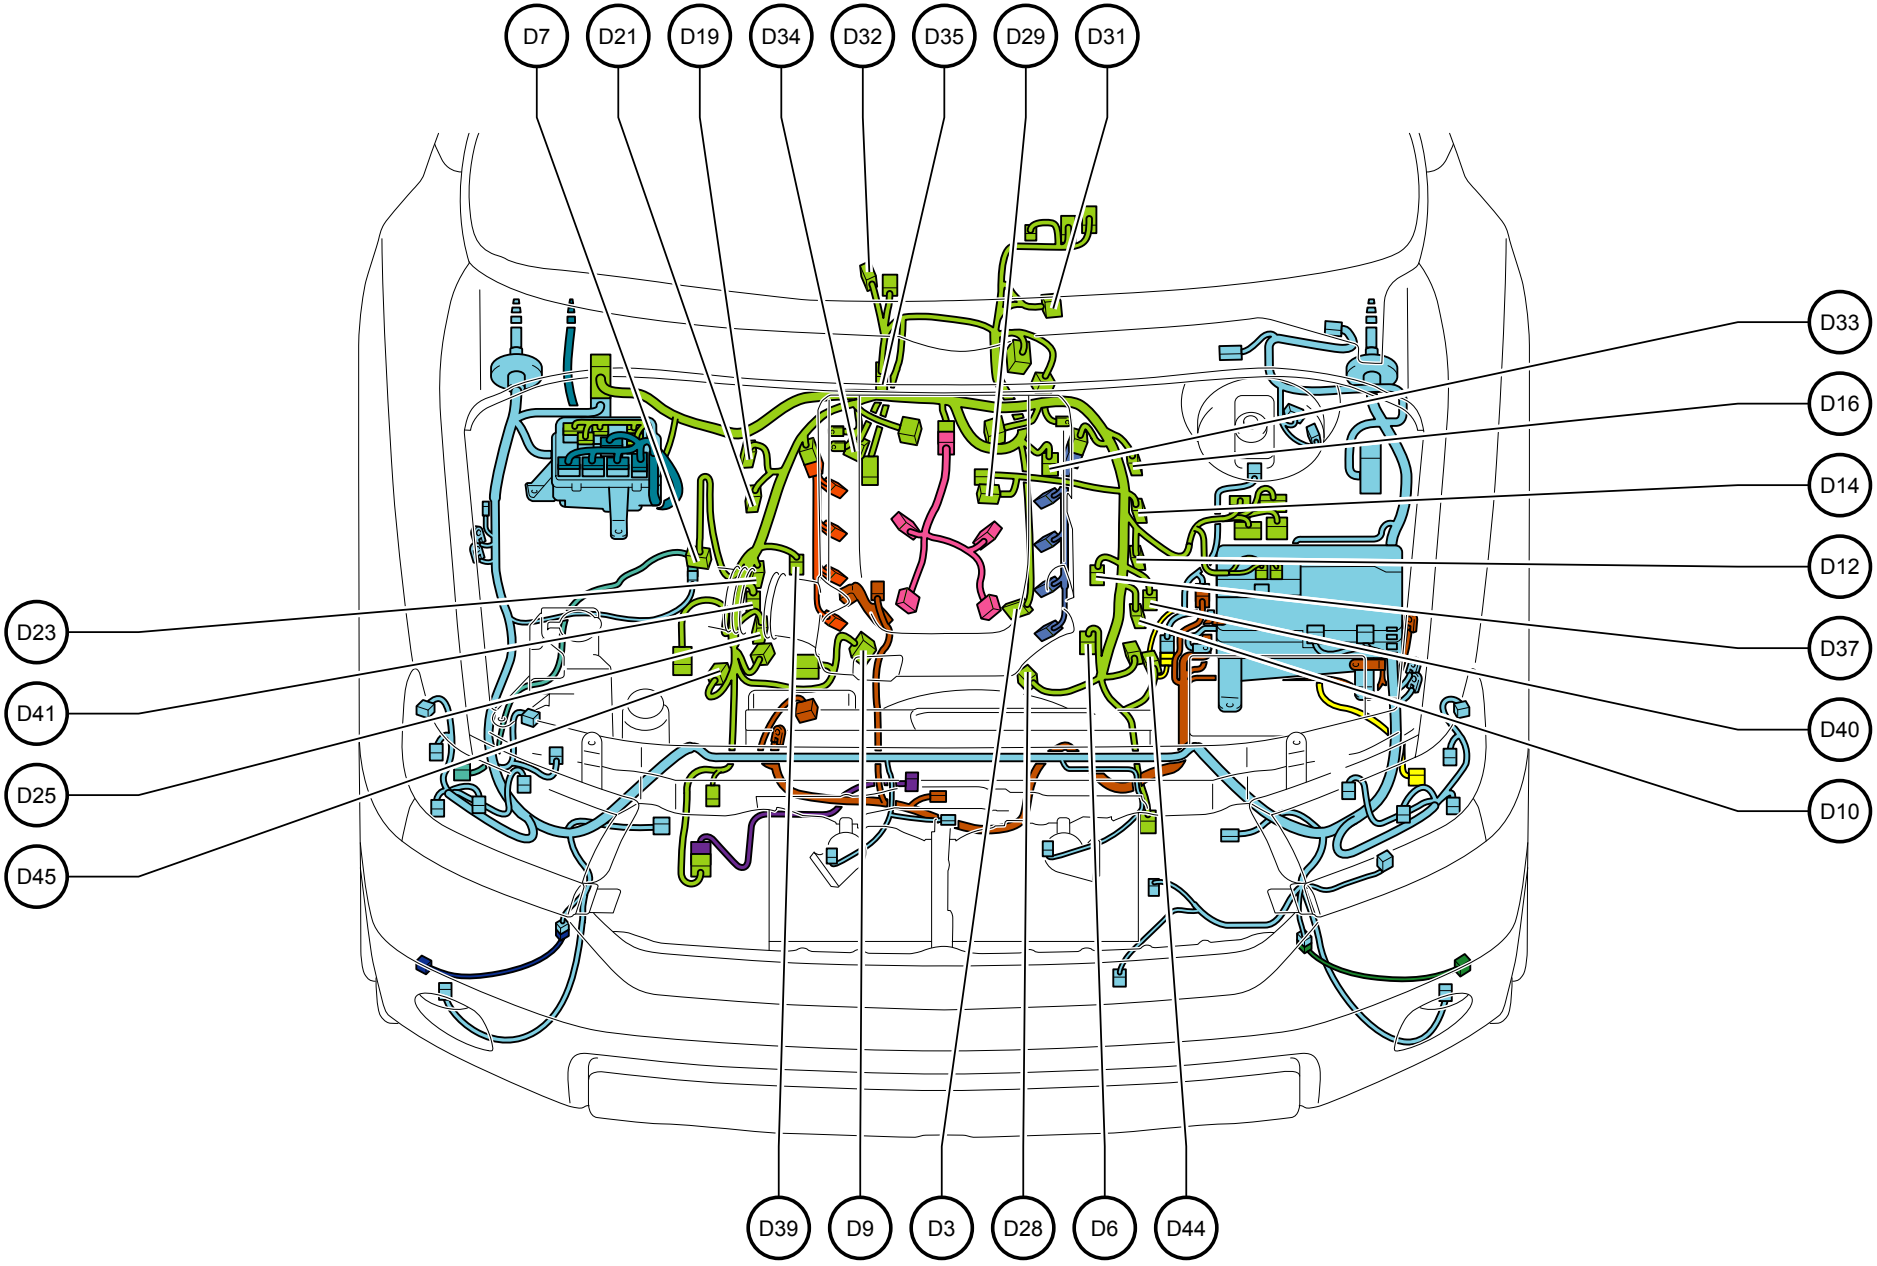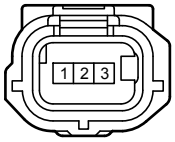


D 6
Black

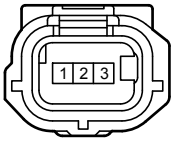


D 7
Black

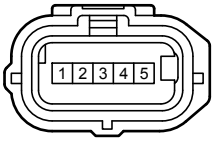


D 9
Black

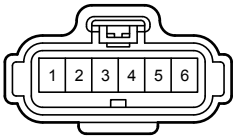


D 10
Black




D 12
Black




D 14
Black




D 16
Black




D 19
Black




D 21
Black



D 23
Black




D 25
Black



D 28
Dark Gray



D 29
Black

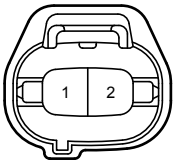

D 31
Dark Gray



D 32
Dark Gray




D 33
Dark Gray




D 34
Dark Gray




D 35
Gray

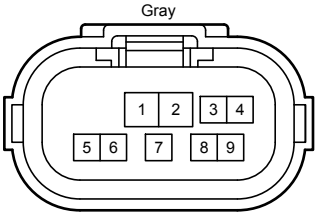


D 37
Black

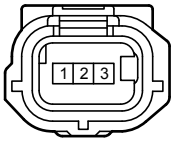


D 39
Black

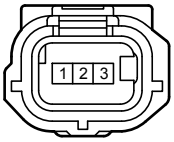

D 40
Black

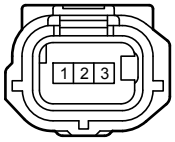

D 41
Black

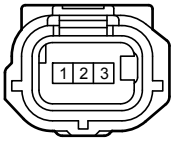

D 44
Black



D 45
Black

