



J10
J9
J21
J6
J26
J22
J23
J19
J32
J28
J8
J4
J3
J29
J2
J1
J17
J35
J31
J41
J20
J11
J45
J13
J43
J16
J12
J18
J27
J24
J42

J 1 Main Body ECU
J 2 Main Body ECU
J 3 Main Body ECU
J 4 Main Body ECU
J 6 Steering Angle Sensor
J 8 Power Window Regulator Switch (for Back Window)
J 9 Ignition Switch
J 10 Headlight Dimmer Switch Assembly
J 11 Spiral Cable
J 12 Windshield Wiper Switch
J 13 Windshield Wiper Switch
J 16 Room Temperature Sensor
J 17 DLC3
J 18 Unlock Warning Switch
J 19 A/C Amplifier
J 20 Transponder Key Amplifier
J 21 Key Interlock Solenoid
J 22 VSC OFF Switch
J 23 Tow/Haul Pattern Select Switch
J 24 Transmission Control Switch
J 26 Transponder Key ECU
J 27 Shift Lock Control ECU
J 28 Combination Meter
J 29 Flasher Relay
J 31 Tire Pressure Warning ECU
J 32 Blower Motor
J 35 Clearance Sonar ECU
J 41 No.1 Power Outlet Socket Assembly RH
J 42 No.1 Power Outlet Socket Assembly LH
J 43 Tire Pressure Warning Reset Switch
J 45 Spiral Cable


J 1
White

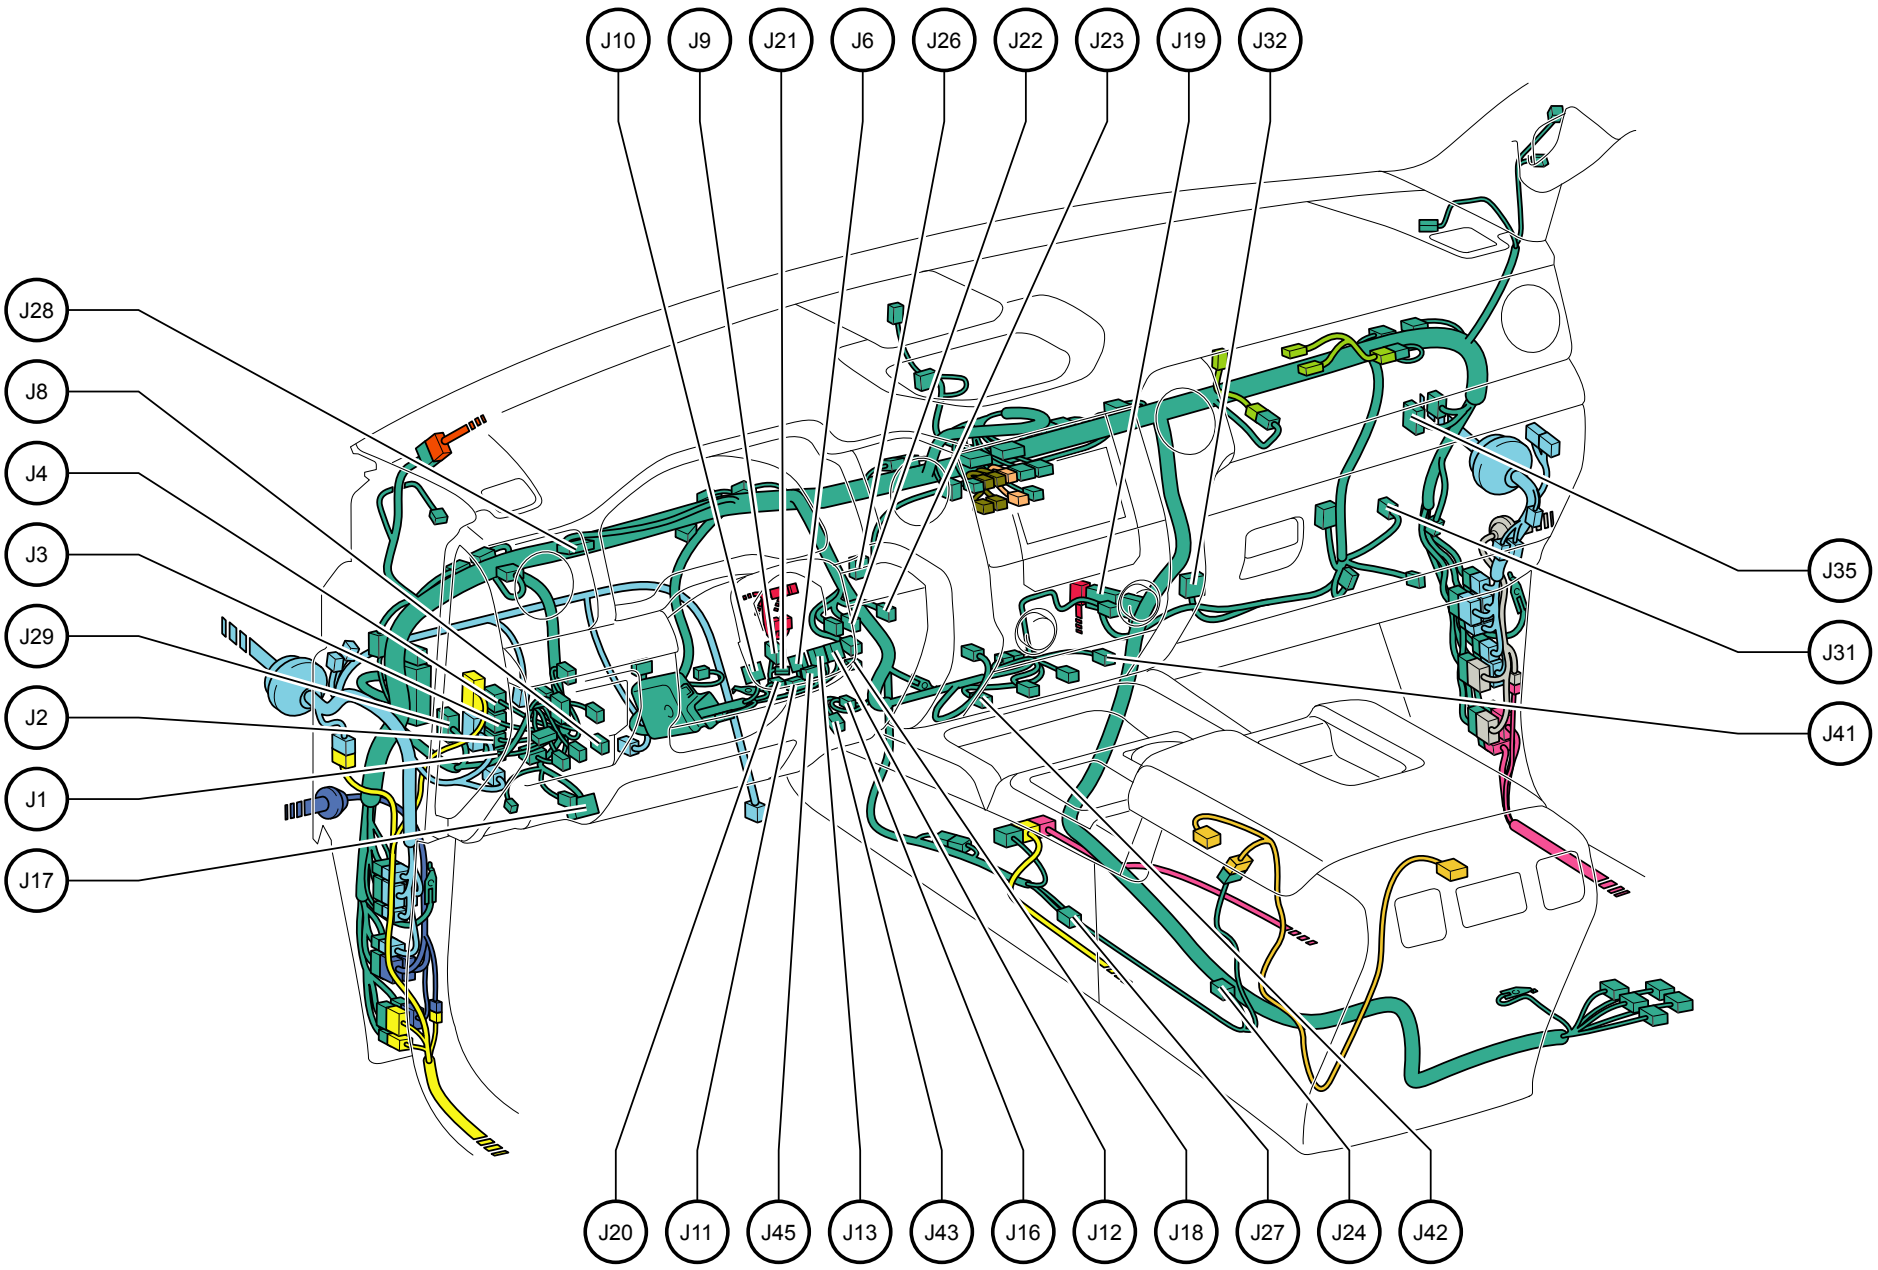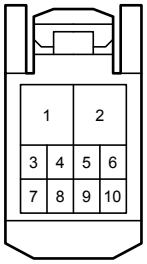


J 2
White

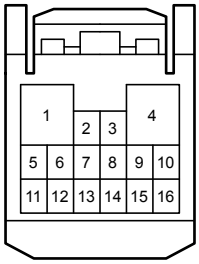


J 3
White

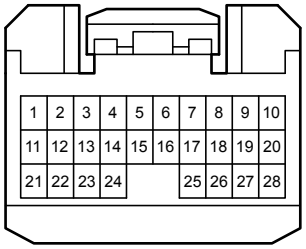


J 4
White

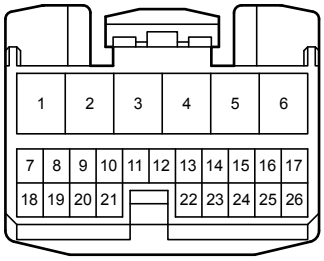


J 6
Gray

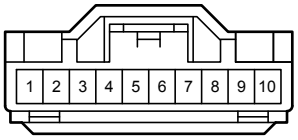


J 8
White

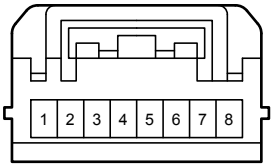


J 9
White

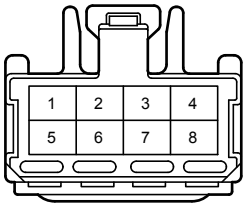


J 10
White

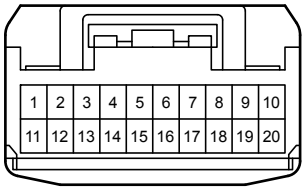


J 11
Yellow

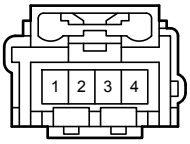


J 12
White

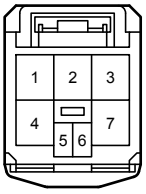


J 13
White

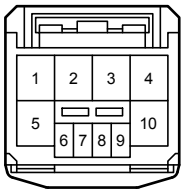


J 16
Black




J 17
White

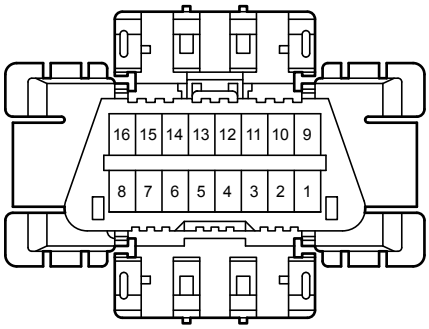


J 18
White




J 19
White

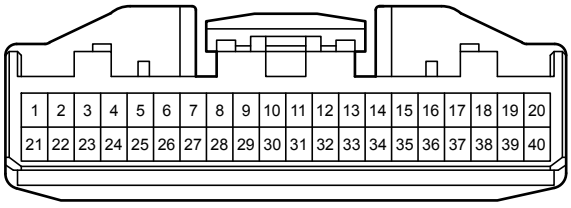


J 20
Black

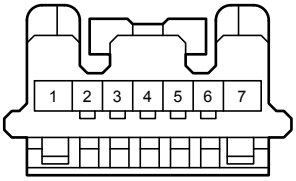


J 21
Black




J 22
Black

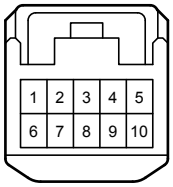


J 23
Black

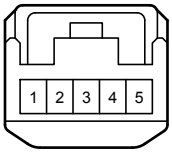


J 24
White

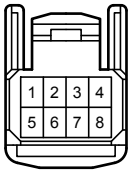


J 26
White

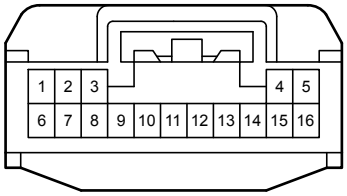


J 27
White

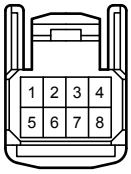


J 28
Black

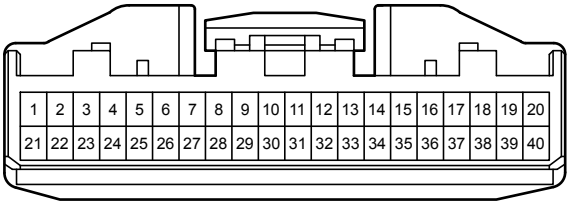


J 29
White

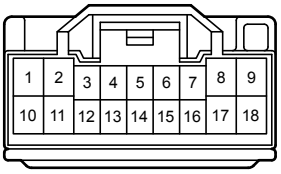


J 31
White

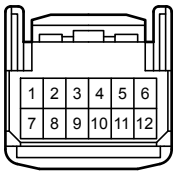

J 32
Black

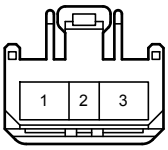

J 35
Black

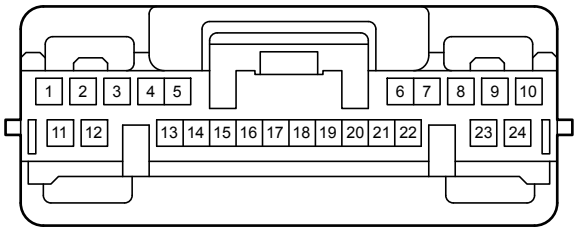


J 41
White



J 42
White



J 43
Black



J 45
Black

