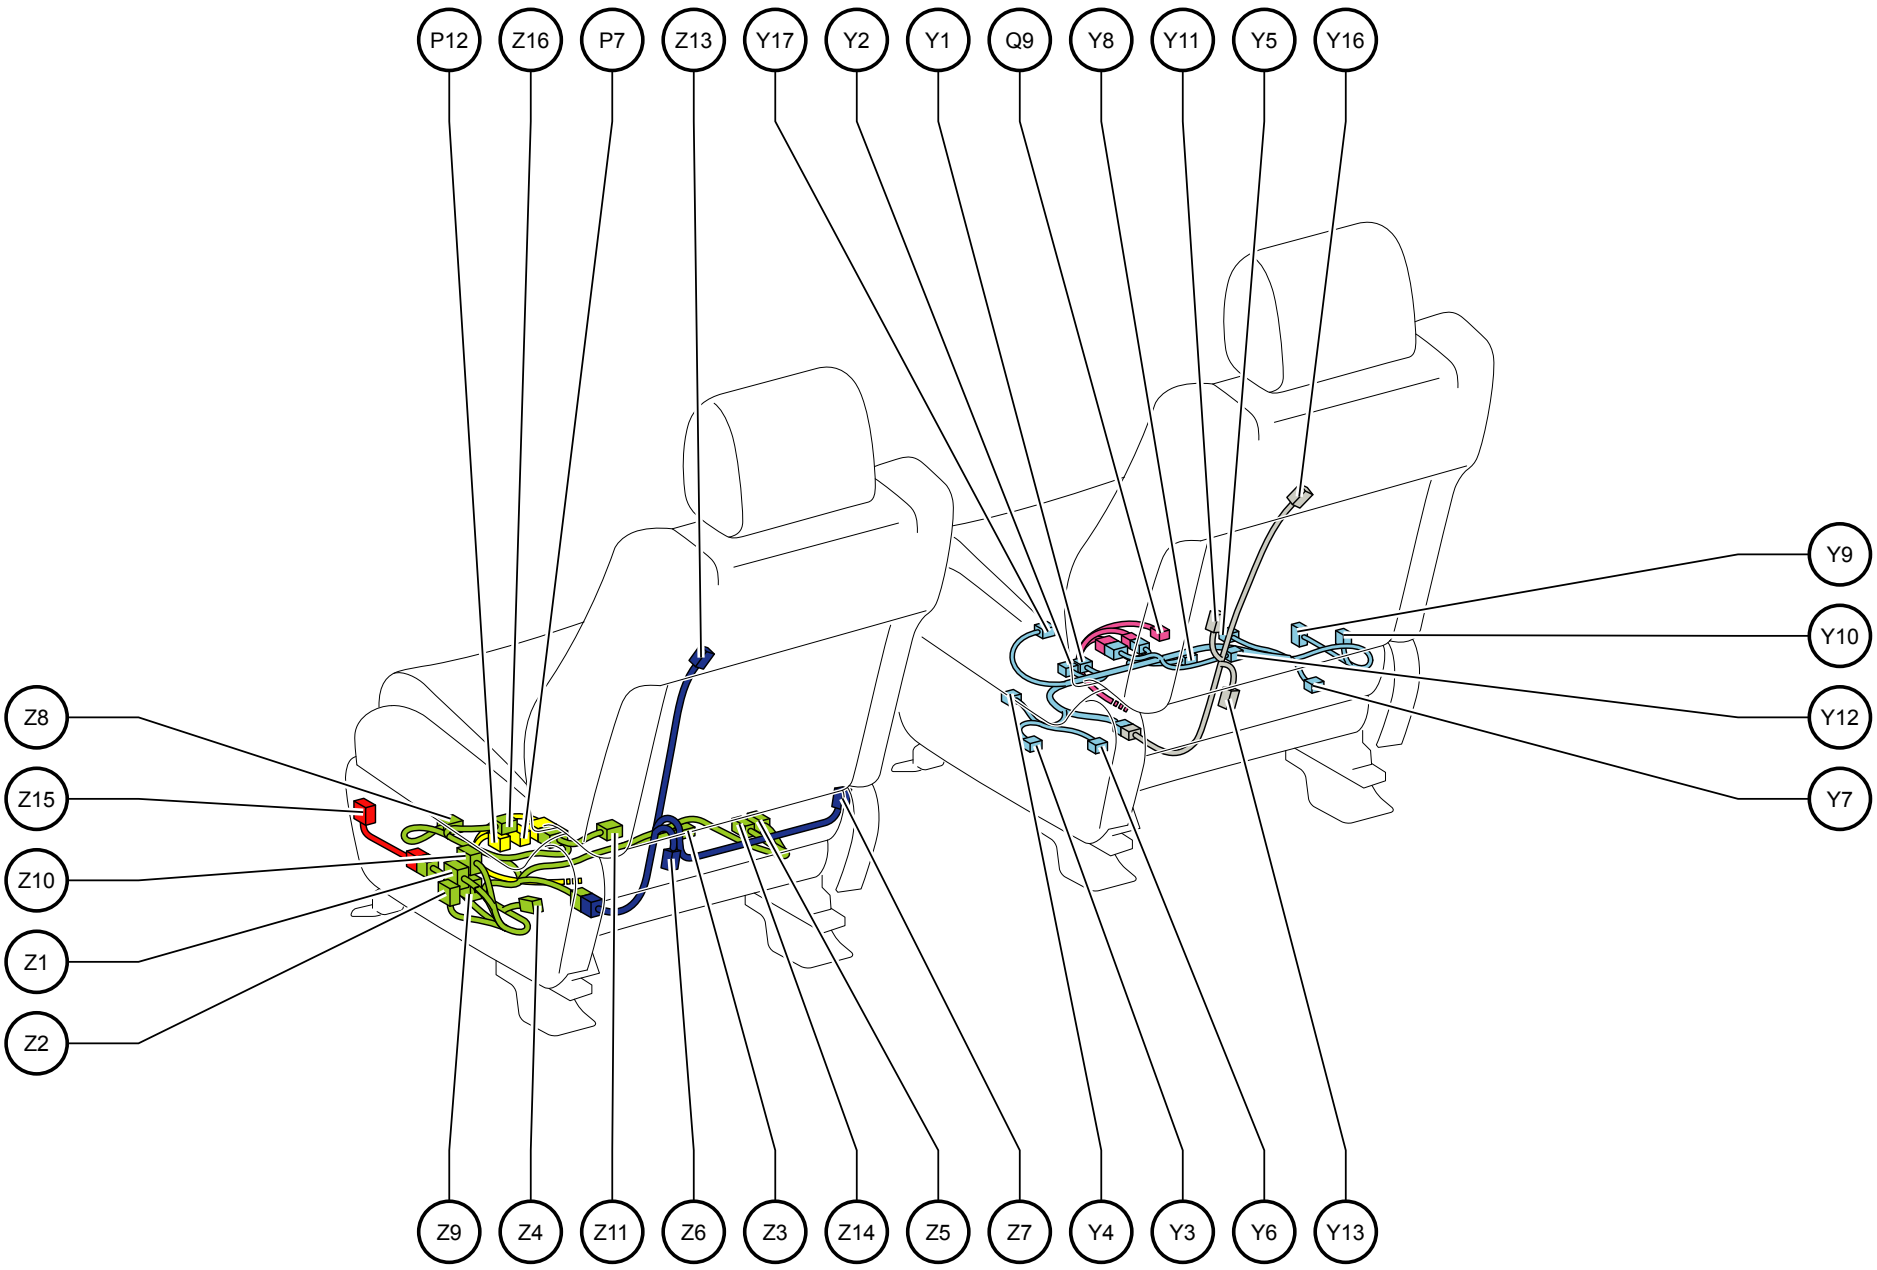

P12
Z16
P7
Z13
Y17
Y2
Y1
Q9
Y8
Y11
Y5
Y16
Y9
Y10
Y12
Y7
Z8
Z15
Z10
Z1
Z2
Z9
Z4
Z11
Z6
Z3
Z14
Z5
Z7
Y4
Y3
Y6
Y13


P 7 Front Seat Inner Belt Switch LH
P 12 Front Side Airbag Squib Circuit LH

Q 9 Front Side Airbag Squib Circuit RH


Y 1 Occupant Detection ECU
Y 2 Occupant Detection ECU
Y 3 Front Seat Inner Belt Switch RH
Y 4 Front Occupant Classification Sensor LH
Y 5 Front Occupant Classification Sensor RH
Y 6 Rear Occupant Classification Sensor LH
Y 7 Rear Occupant Classification Sensor RH
Y 8 Front Seat Heater RH
Y 9 Front Power Seat Switch RH
Y 10 Front Power Seat Switch RH (Lumbar Support Control)
Y 11 Front Lumbar Support Motor RH
Y 12 Front Power Seat Position Motor RH (Slide Position)
Y 13 Front Power Seat Position Motor RH (Reclining Position)
Y 16 Seat Back Climate Control Blower RH
Y 17 Seat Cushion Climate Control Blower RH

Z 1 Front Power Seat Switch LH
Z 2 Front Power Seat Switch LH (Lumbar Support Control)
Z 3 Front Power Seat Position Motor LH (Slide Position)
Z 4 Front Power Seat Position Motor LH (Lift Position)
Z 5 Front Power Seat Position Motor LH (Vertical Position)
Z 6 Front Power Seat Position Motor LH (Reclining Position)
Z 7 Front Lumbar Support Motor LH
Z 8 Front Power Seat Cushion Control Motor LH
Z 9 Front Power Seat Control ECU and Switch LH
Z 10 Front Power Seat Control ECU and Switch LH
Z 11 Front Seat Heater LH
Z 13 Seat Back Climate Control Blower LH
Z 14 Front Power Seat Position Motor LH (Vertical Position)
Z 15 Front Power Seat Switch LH (Seat Cushion Control)
Z 16 Seat Cushion Climate Control Blower LH


P 7
White

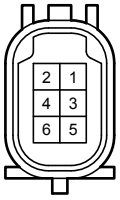


P 12
Yellow

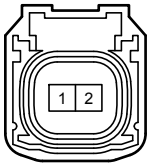


Q 9
Yellow

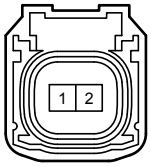


Y 1
Gray

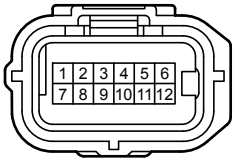


Y 2
Black

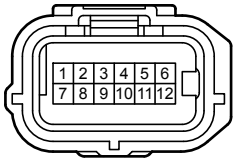


Y 3
Gray

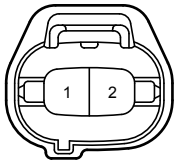


Y 4
Black

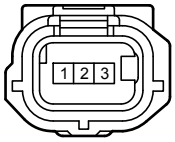


Y 5
Gray

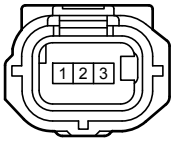


Y 6
Gray

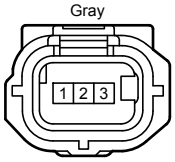


Y 7
Black

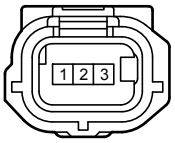


Y 8
White

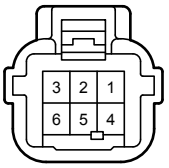


Y 9
Black




Y 10
White




Y 11
Black




Y 12
Black

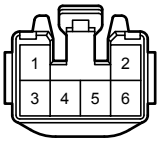


Y 13
Gray

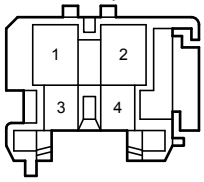


Y 16
White

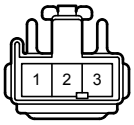


Y 17
White

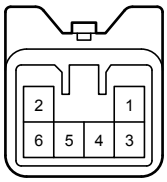


Z 1
Black




Z 2
White




Z 3
Black

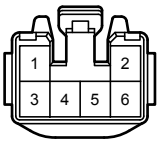


Z 4
Gray

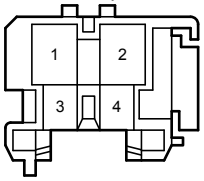


Z 5
Black




Z 6
Gray

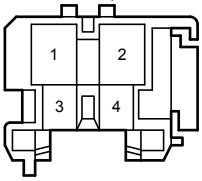


Z 7
Black




Z 8
White




Z 9
White




Z 10
Black

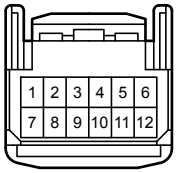

Z 11
White

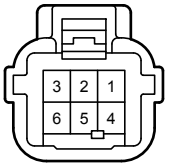


Z 13
White

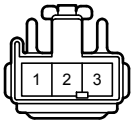

Z 14
White



Z 15
White

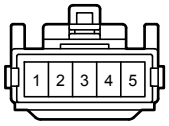

Z 16
White

