



∗ 1 : w/ Parking Assist (Intuitive Parking Assist)
∗ 2 : Separate Type Amplifier JBL Type
∗11 : 3UR–FBE
∗12 : Except 3UR–FBE

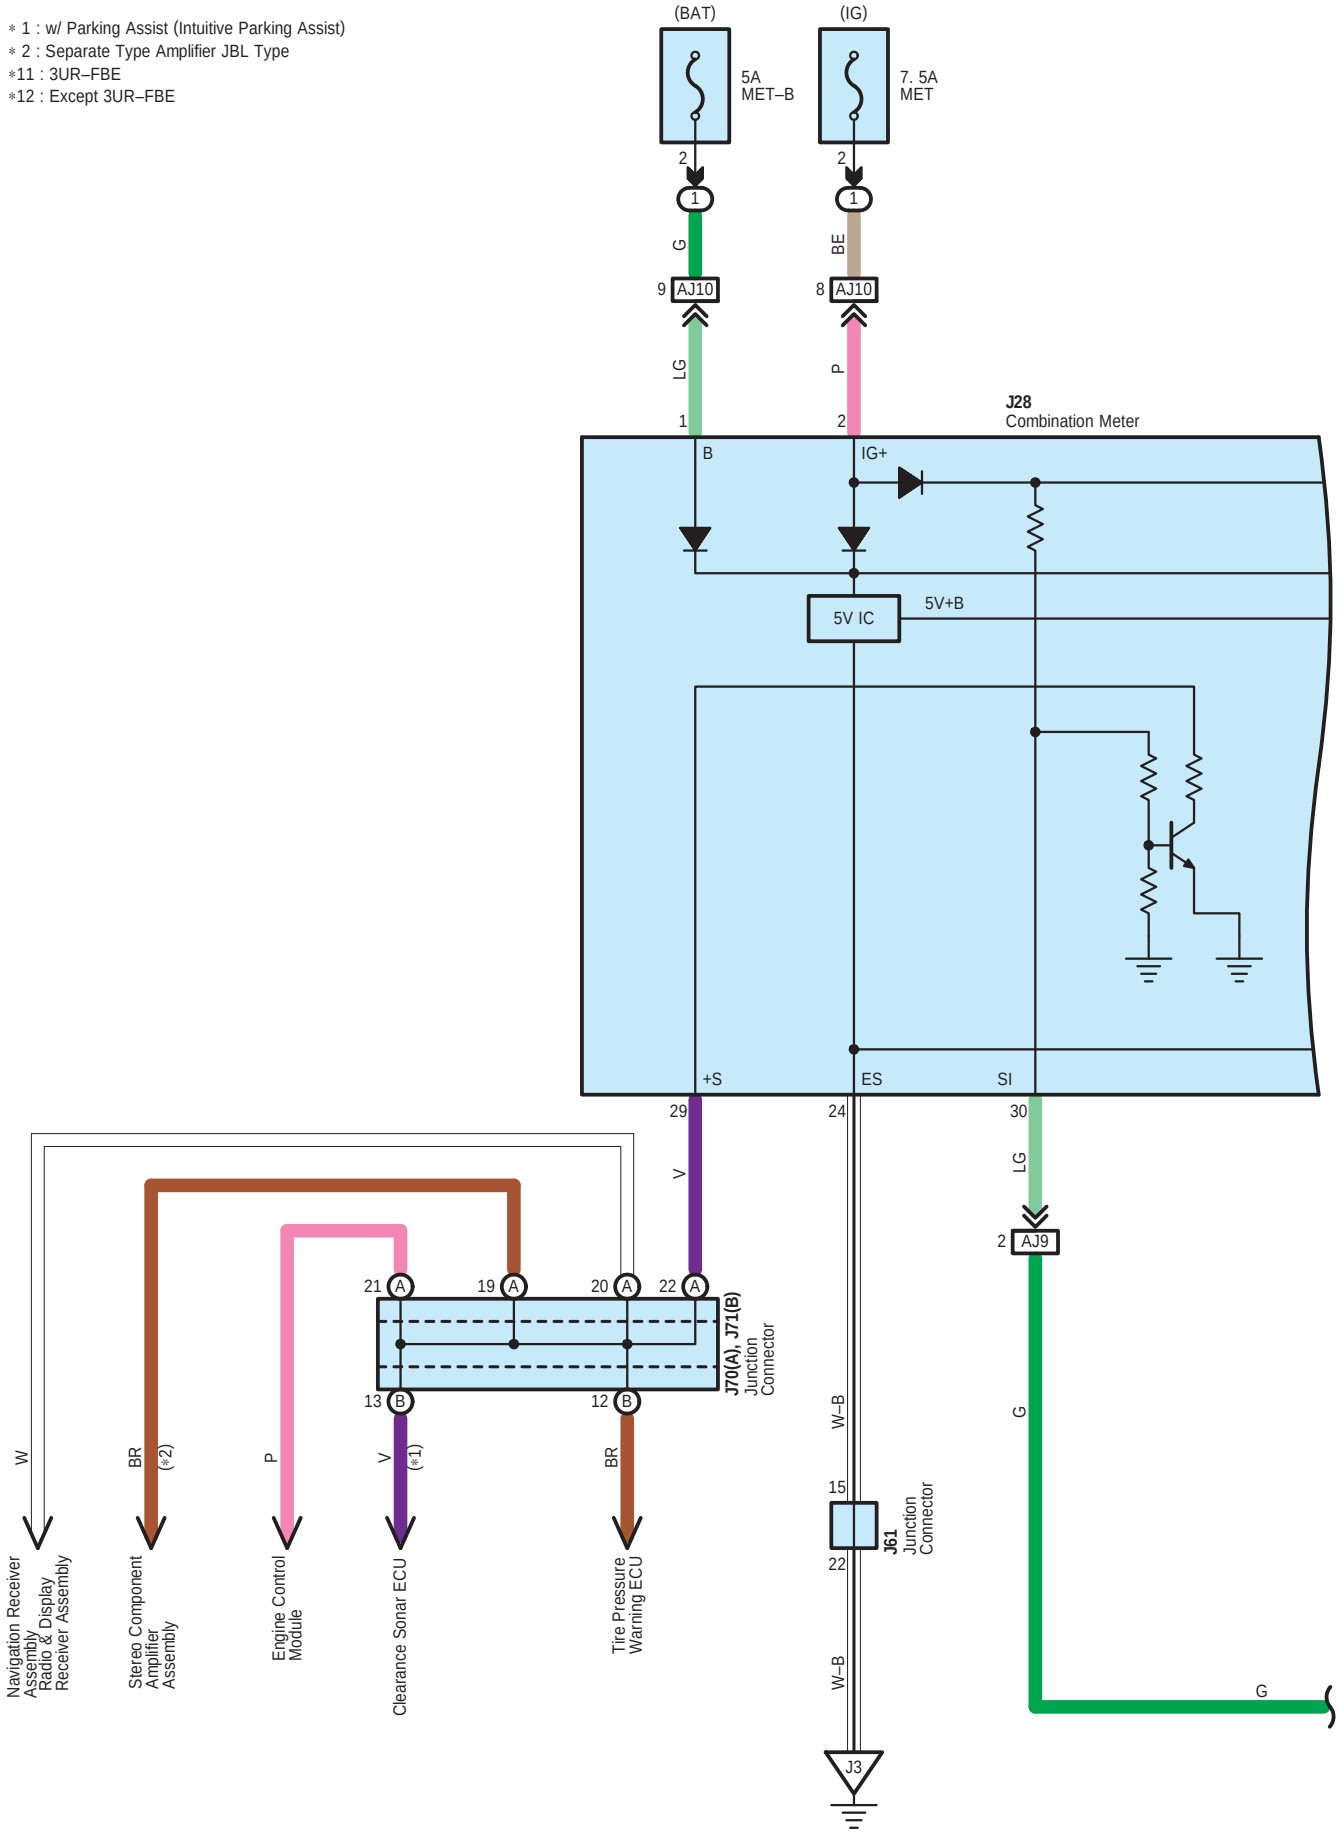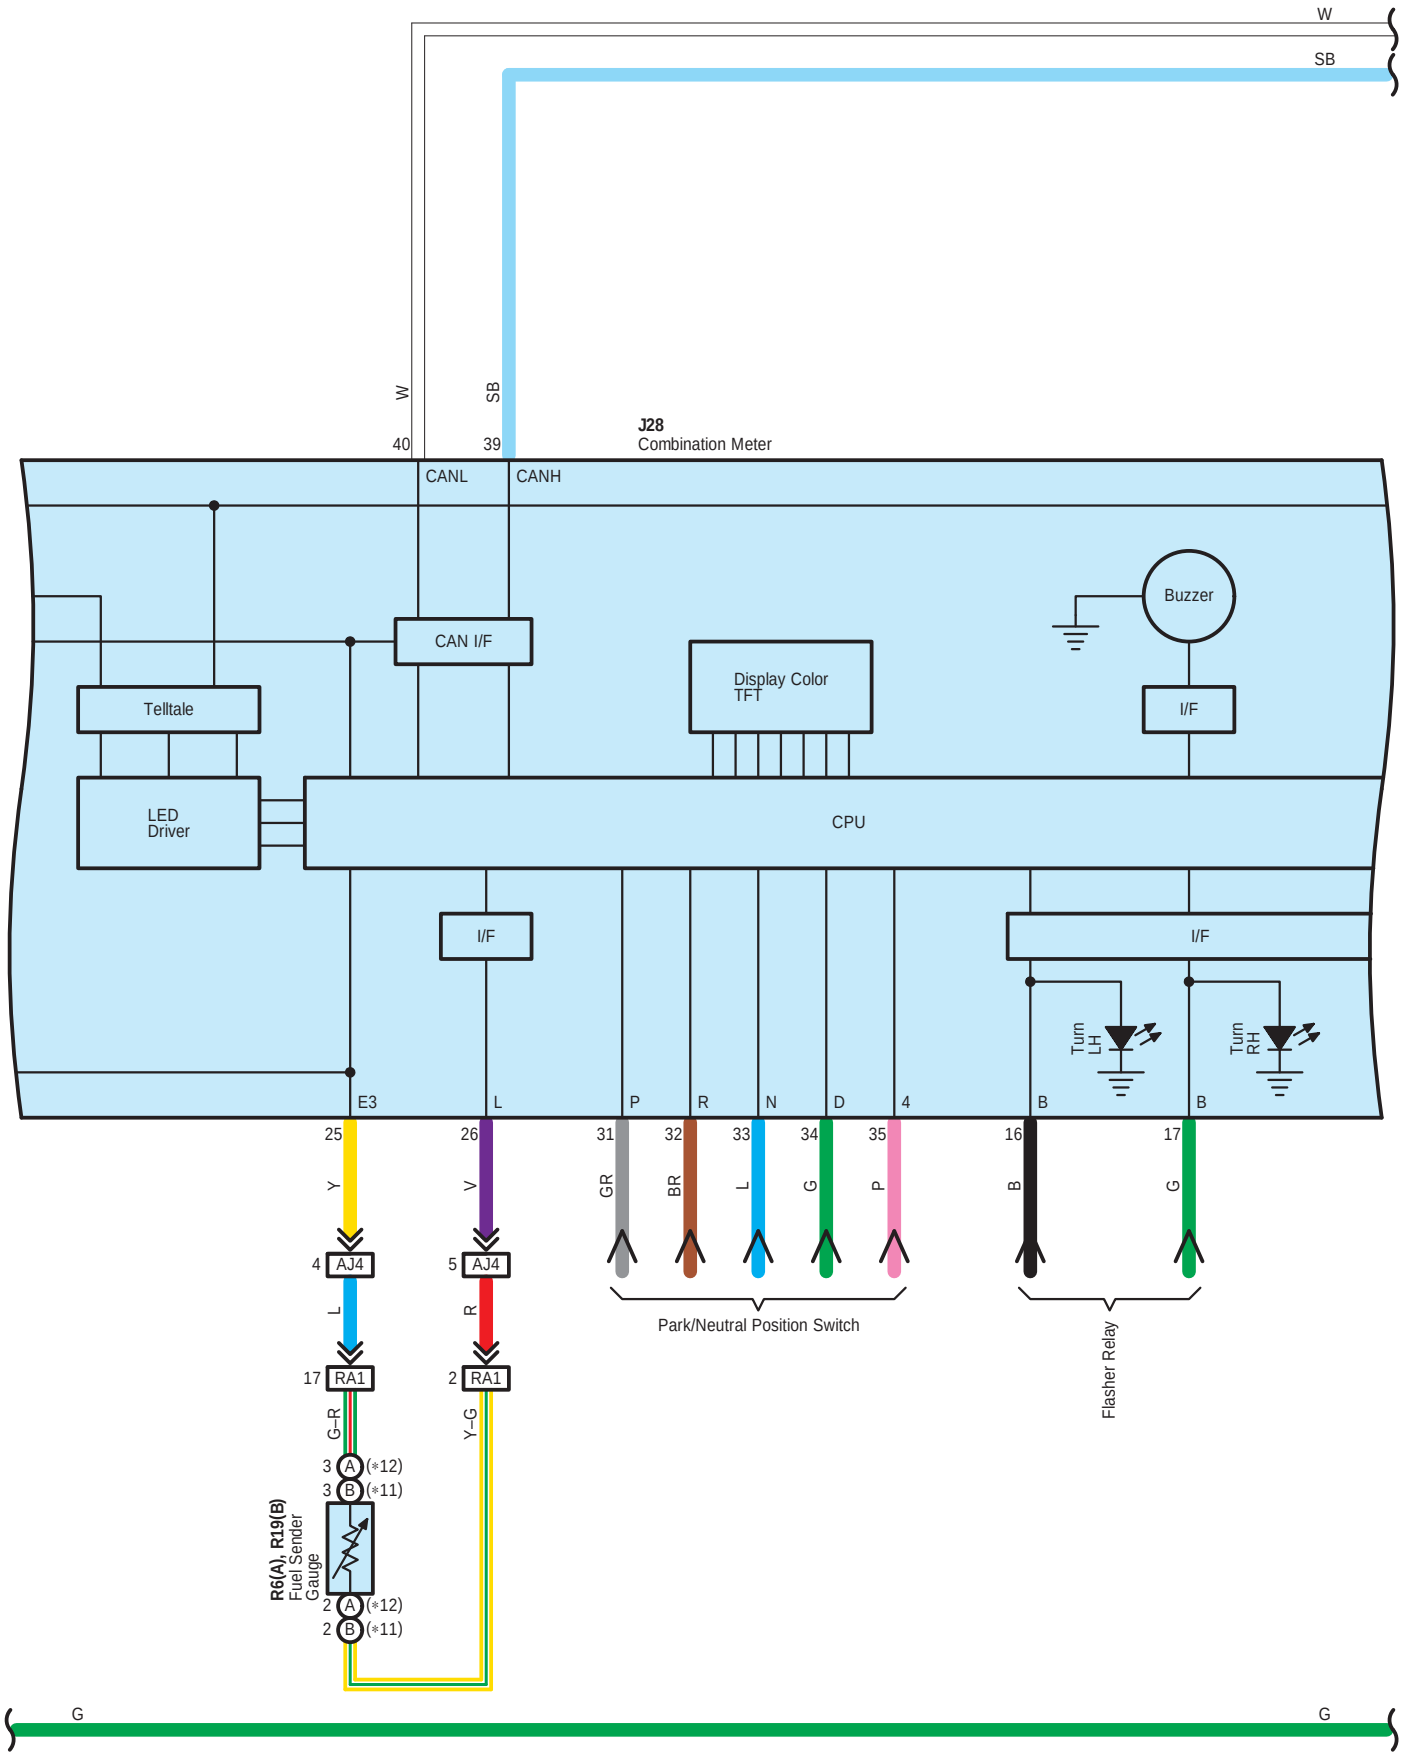




W
SB
W
SB
40
39
J28
Combination Meter
CANL
CANH
CAN I/F
Telltale
LED
Driver
Display Color
TFT
Buzzer
I/F
CPU
I/F
I/F
Turn
LH
Turn
RH
E3
L
P
R
N
D
4
B
B
25
Y
4
AJ4
L
17
RA1
G–R
3
A
(*12)
3
B
(*11)
R6(A), R19(B)
Fuel Sender
Gauge
2
A
(*12)
2
B
(*11)
26
V
5
AJ4
R
2
RA1
Y–G
31
GR
32
BR
33
L
34
G
35
P
Park/Neutral Position Switch
16
B
17
G
Flasher Relay
G
G





∗ 1 : w/ Parking Assist (Intuitive Parking Assist)

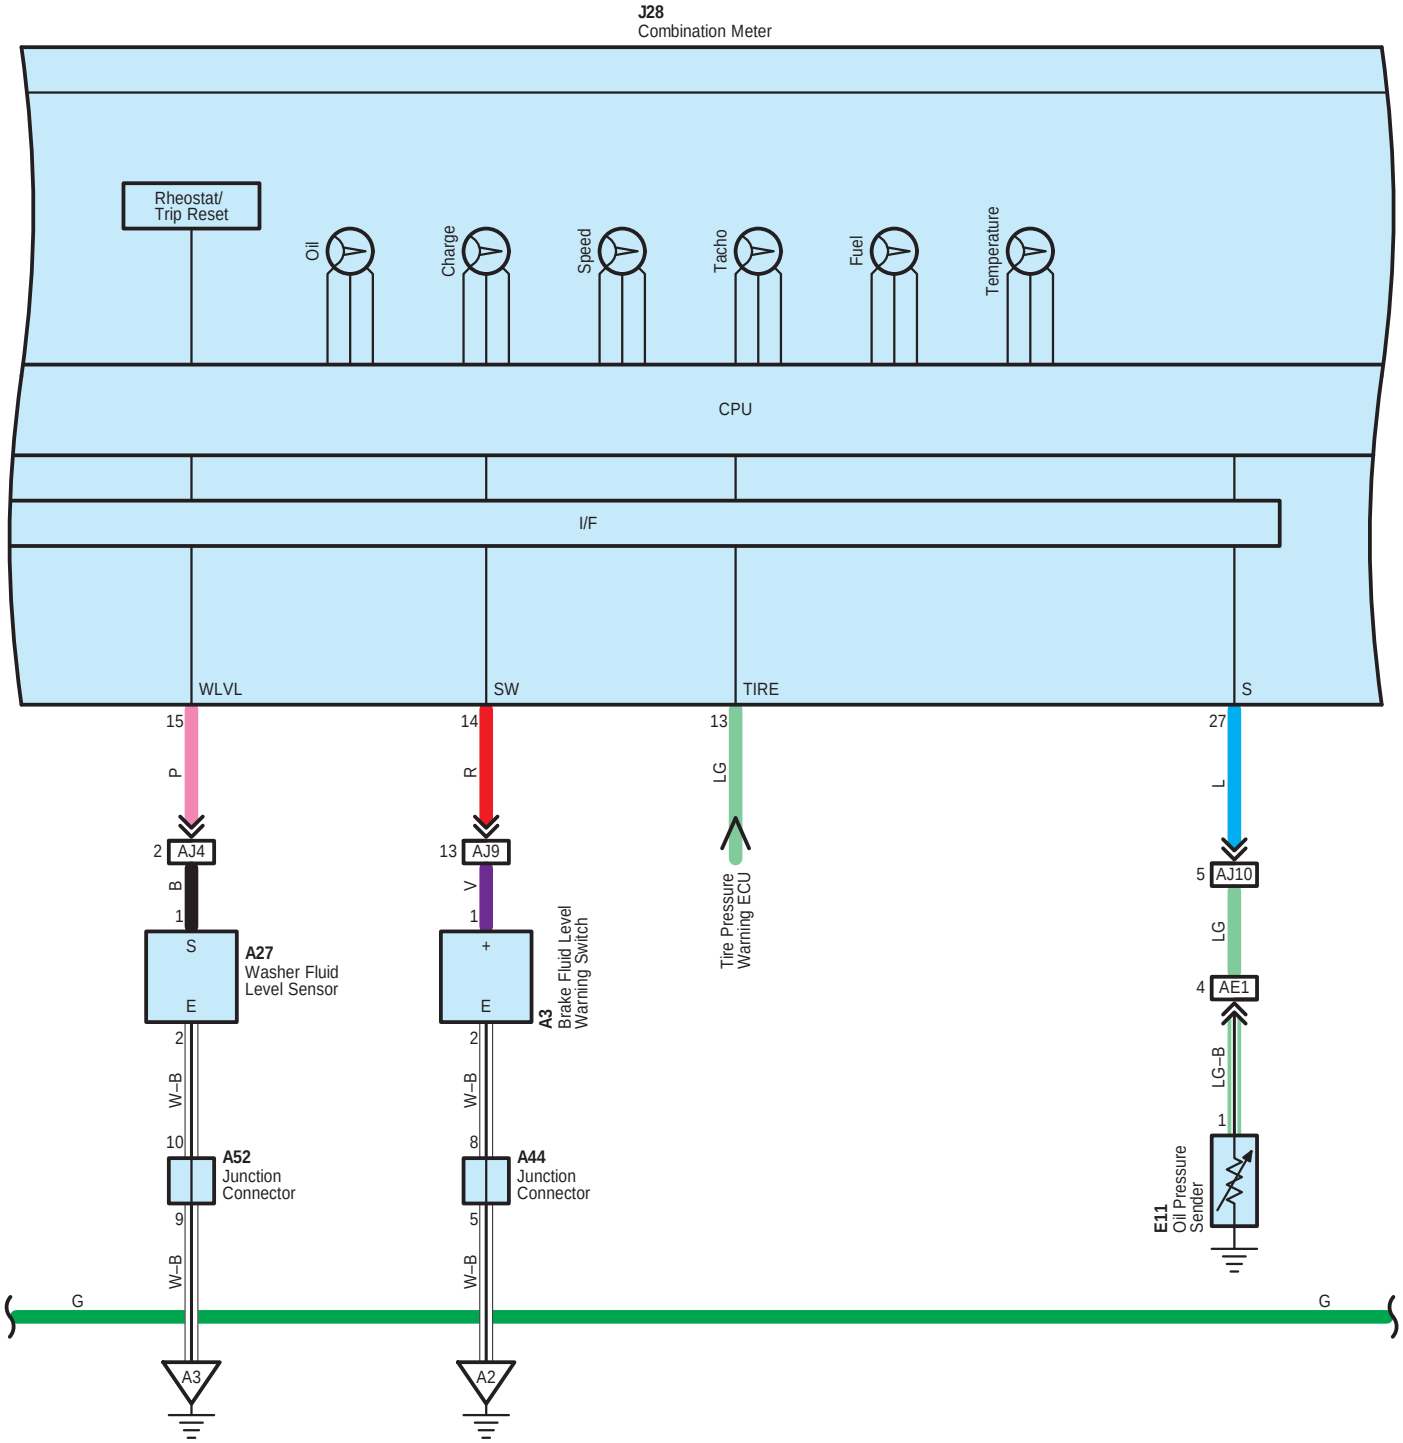


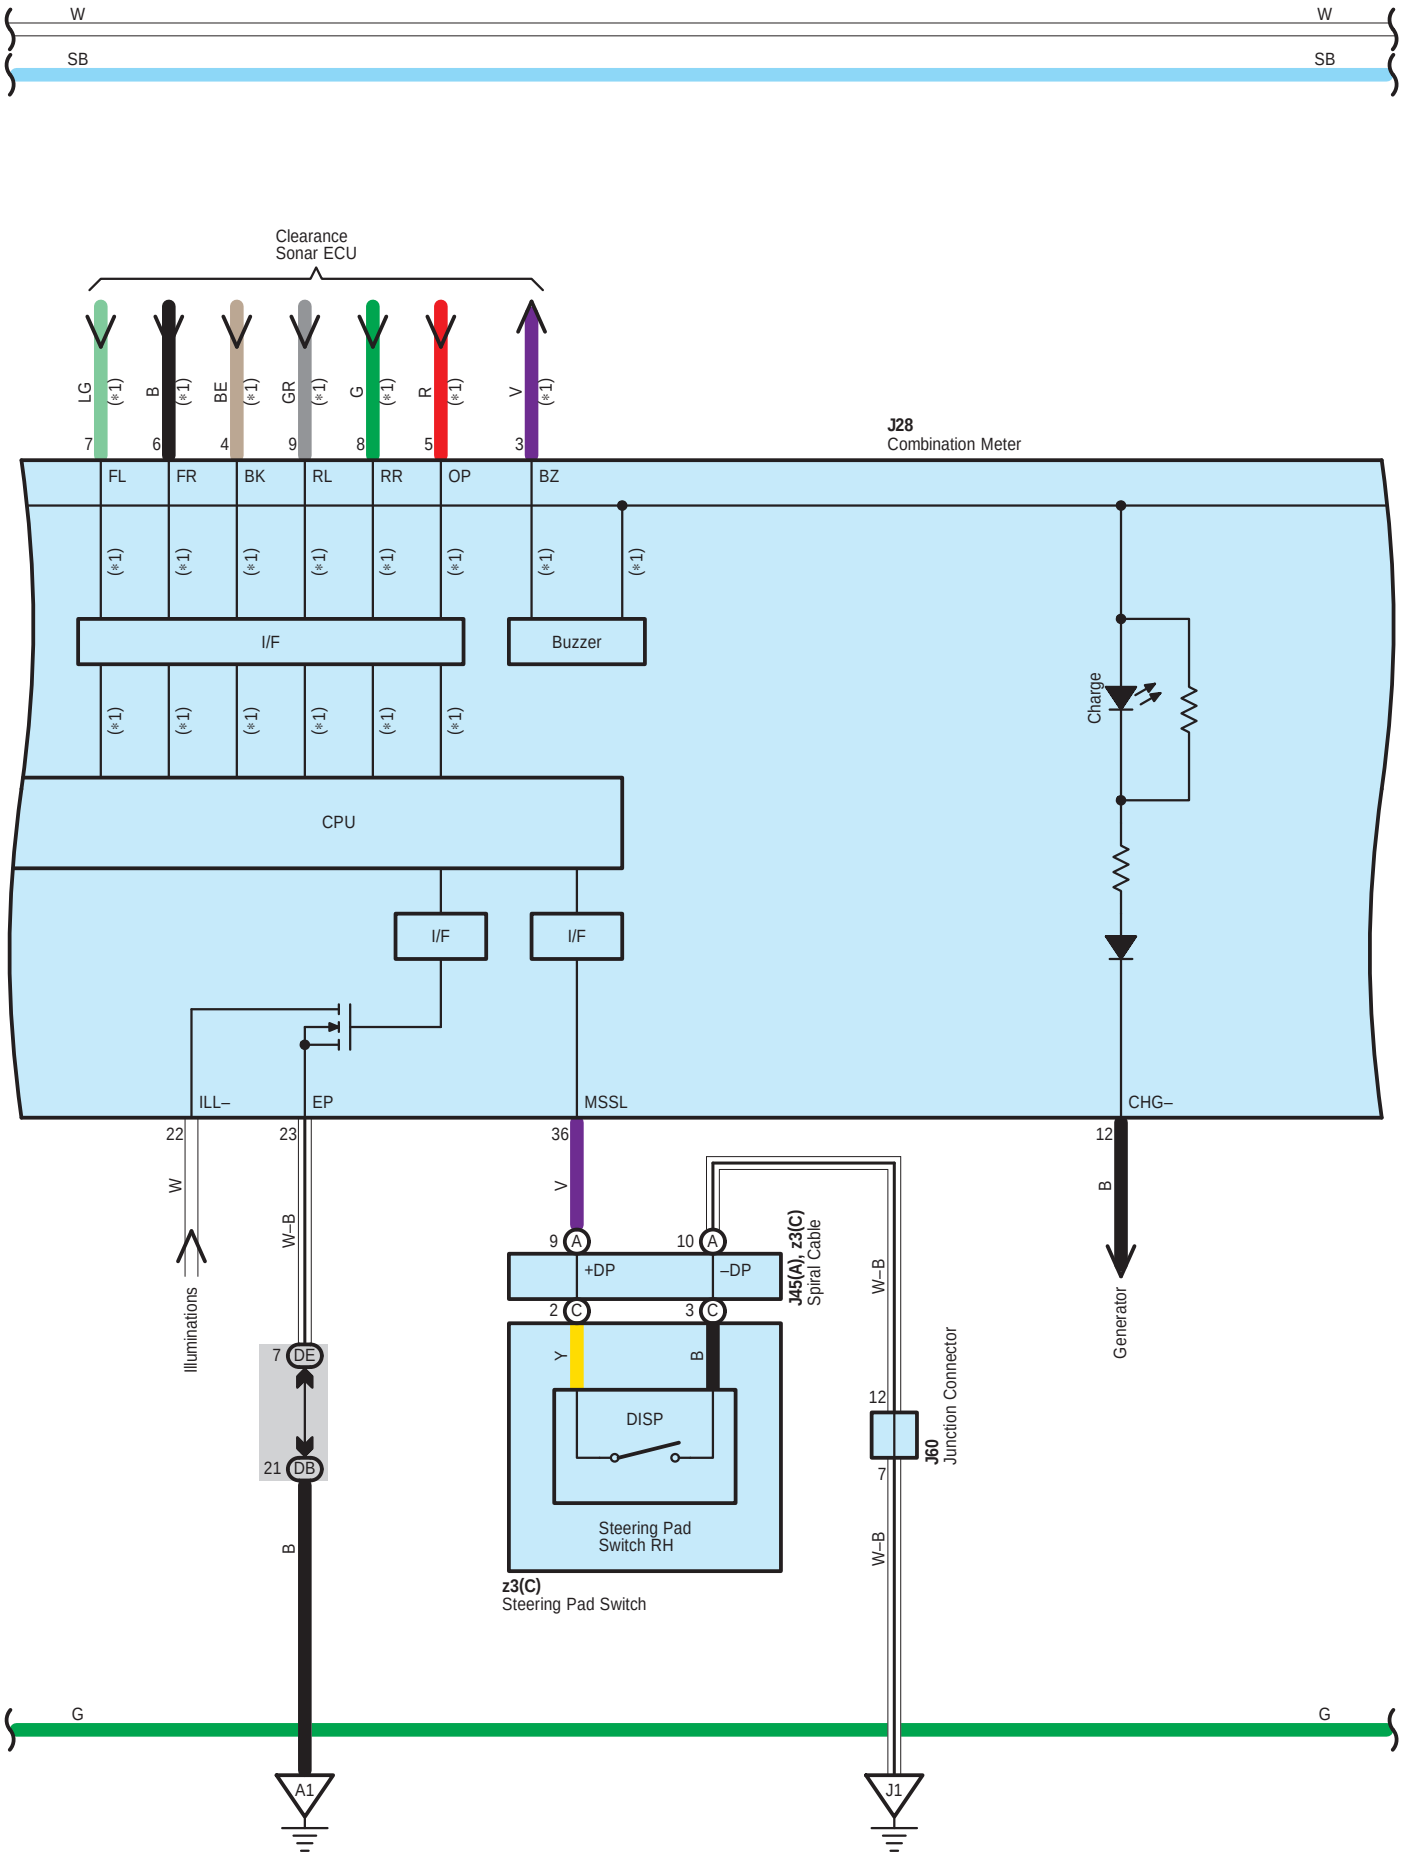

W
SB
W
SB
Clearance
Sonar ECU
LG
B
BE
GR
G
R
V
(*1)
7
6
4
9
8
5
3
J28
Combination Meter
FL
FR
BK
RL
RR
OP
BZ
I/F
Buzzer
CPU
I/F
I/F
Charge
ILL–
EP
MSSL
CHG–
22
23
36
12
W
W–B
V
B
Illuminations
9 A
10 A
+DP
–DP
2 C
3 C
J45(A), z3(C)
Spiral Cable
Y
B
DISP
Steering Pad
Switch RH
z3(C)
Steering Pad Switch
7 DE
21 DB
B
12
7
J60
Junction Connector
W–B
W–B
Generator
G
G
A1
J1

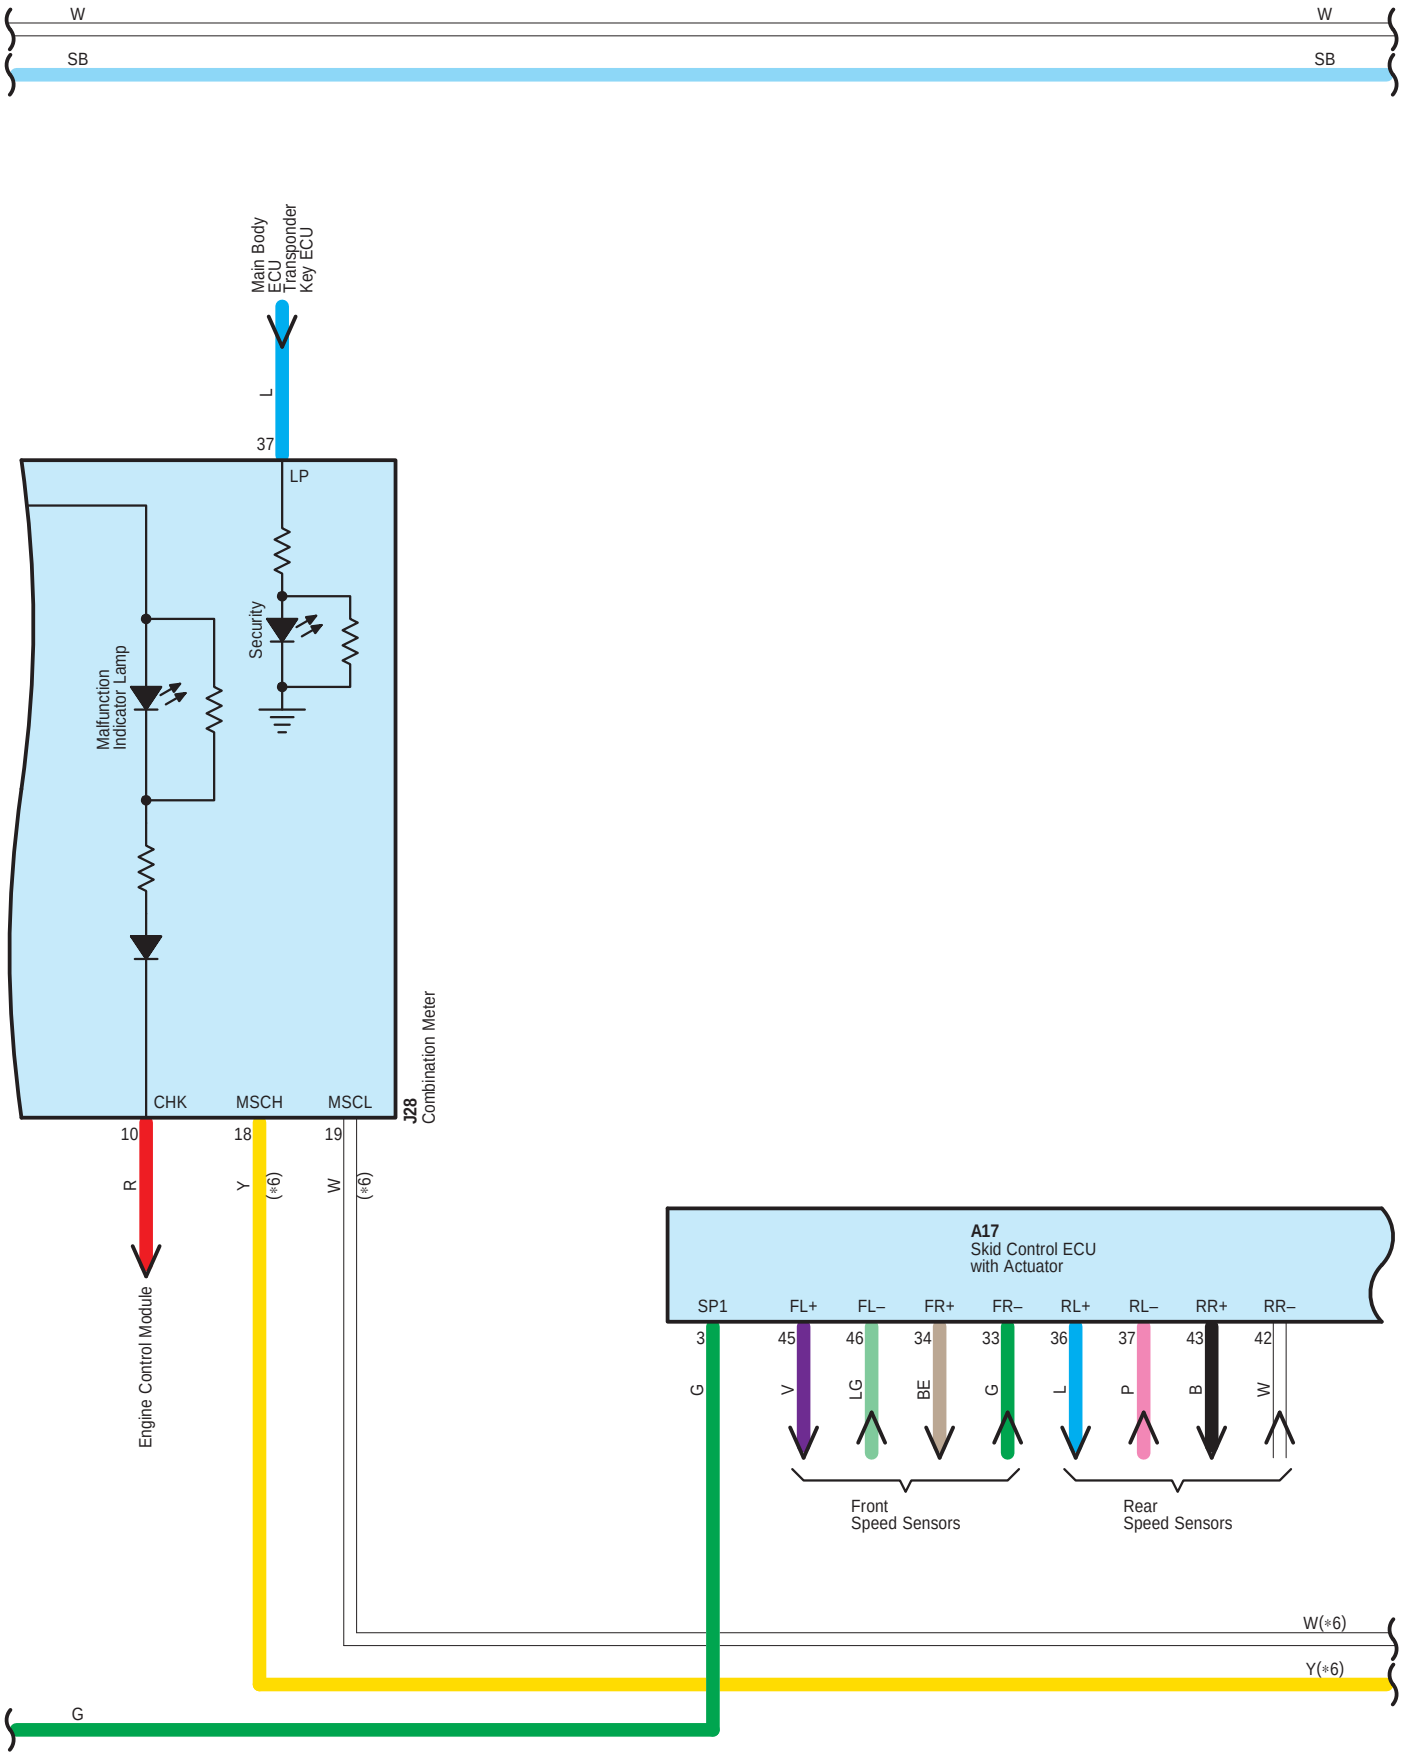
W
SB
W
SB
Main Body ECU Transponder Key ECU
L
37
LP
Security
Malfunction Indicator Lamp
CHK
MSCH
MSCL
J28 Combination Meter
10
18
19
R
Y
(*6)
W
(*6)
Engine Control Module
A17
Skid Control ECU with Actuator
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
3
45
46
34
33
36
37
43
42
G
V
LG
BE
G
L
P
B
W
Front Speed Sensors
Rear Speed Sensors
W(*6)
Y(*6)
G

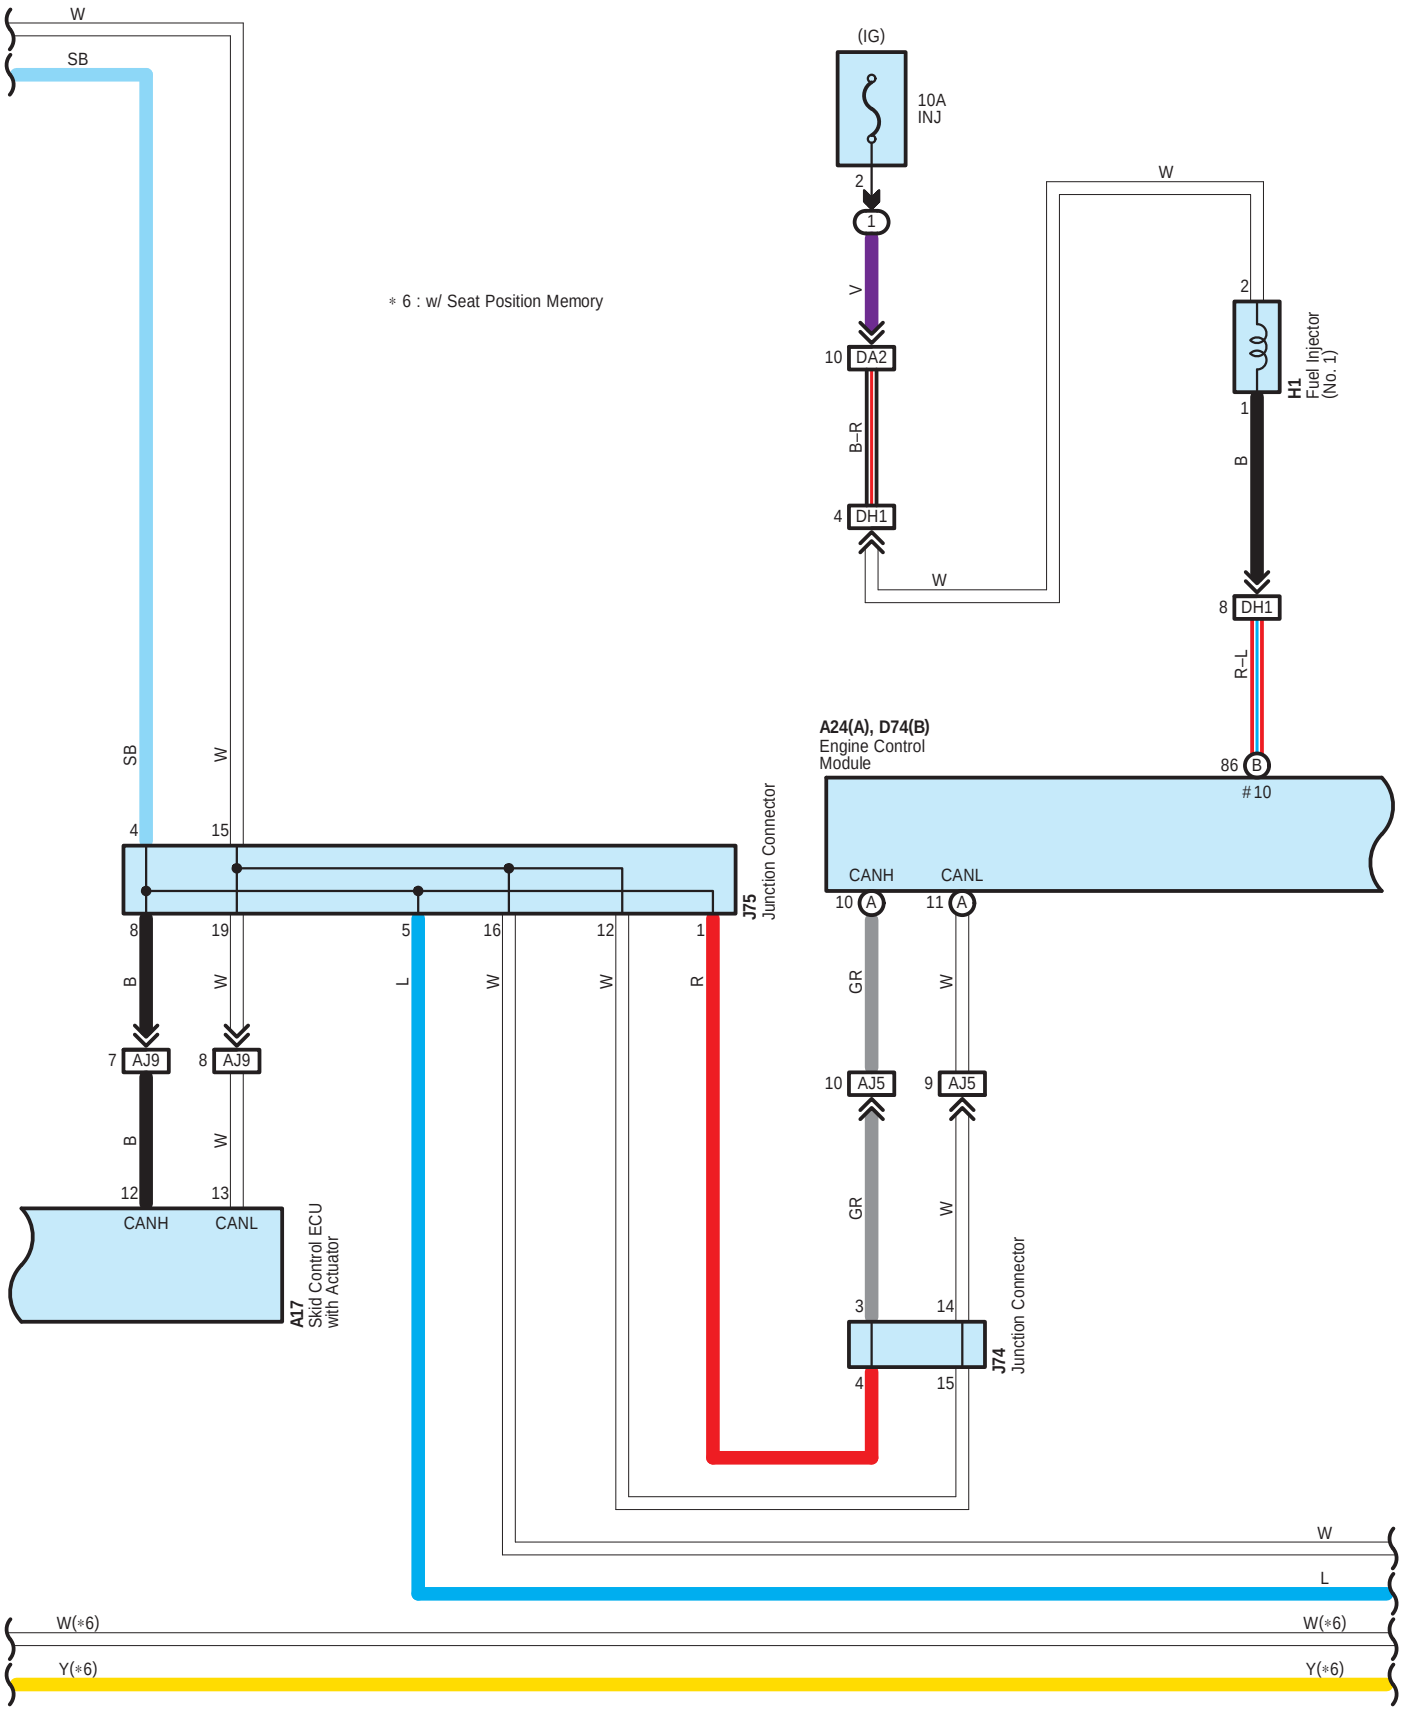
W
SB
(IG)
10A
INJ
2
1
V
10 DA2
B–R
4 DH1
W
W
2
H1
Fuel Injector
(No. 1)
1
B
8 DH1
R–L
86 B
#10
∗ 6 : w/ Seat Position Memory
A24(A), D74(B)
Engine Control
Module
CANH
CANL
10 A
11 A
GR
W
10 AJ5
9 AJ5
GR
W
3
14
4
15
J74
Junction Connector
SB
W
4
15
8
19
5
16
12
1
J75
Junction Connector
B
W
L
W
W
R
7 AJ9
8 AJ9
B
W
12
13
CANH
CANL
A17
Skid Control ECU
with Actuator
W
L
W(∗6)
W(∗6)
Y(∗6)
Y(∗6)

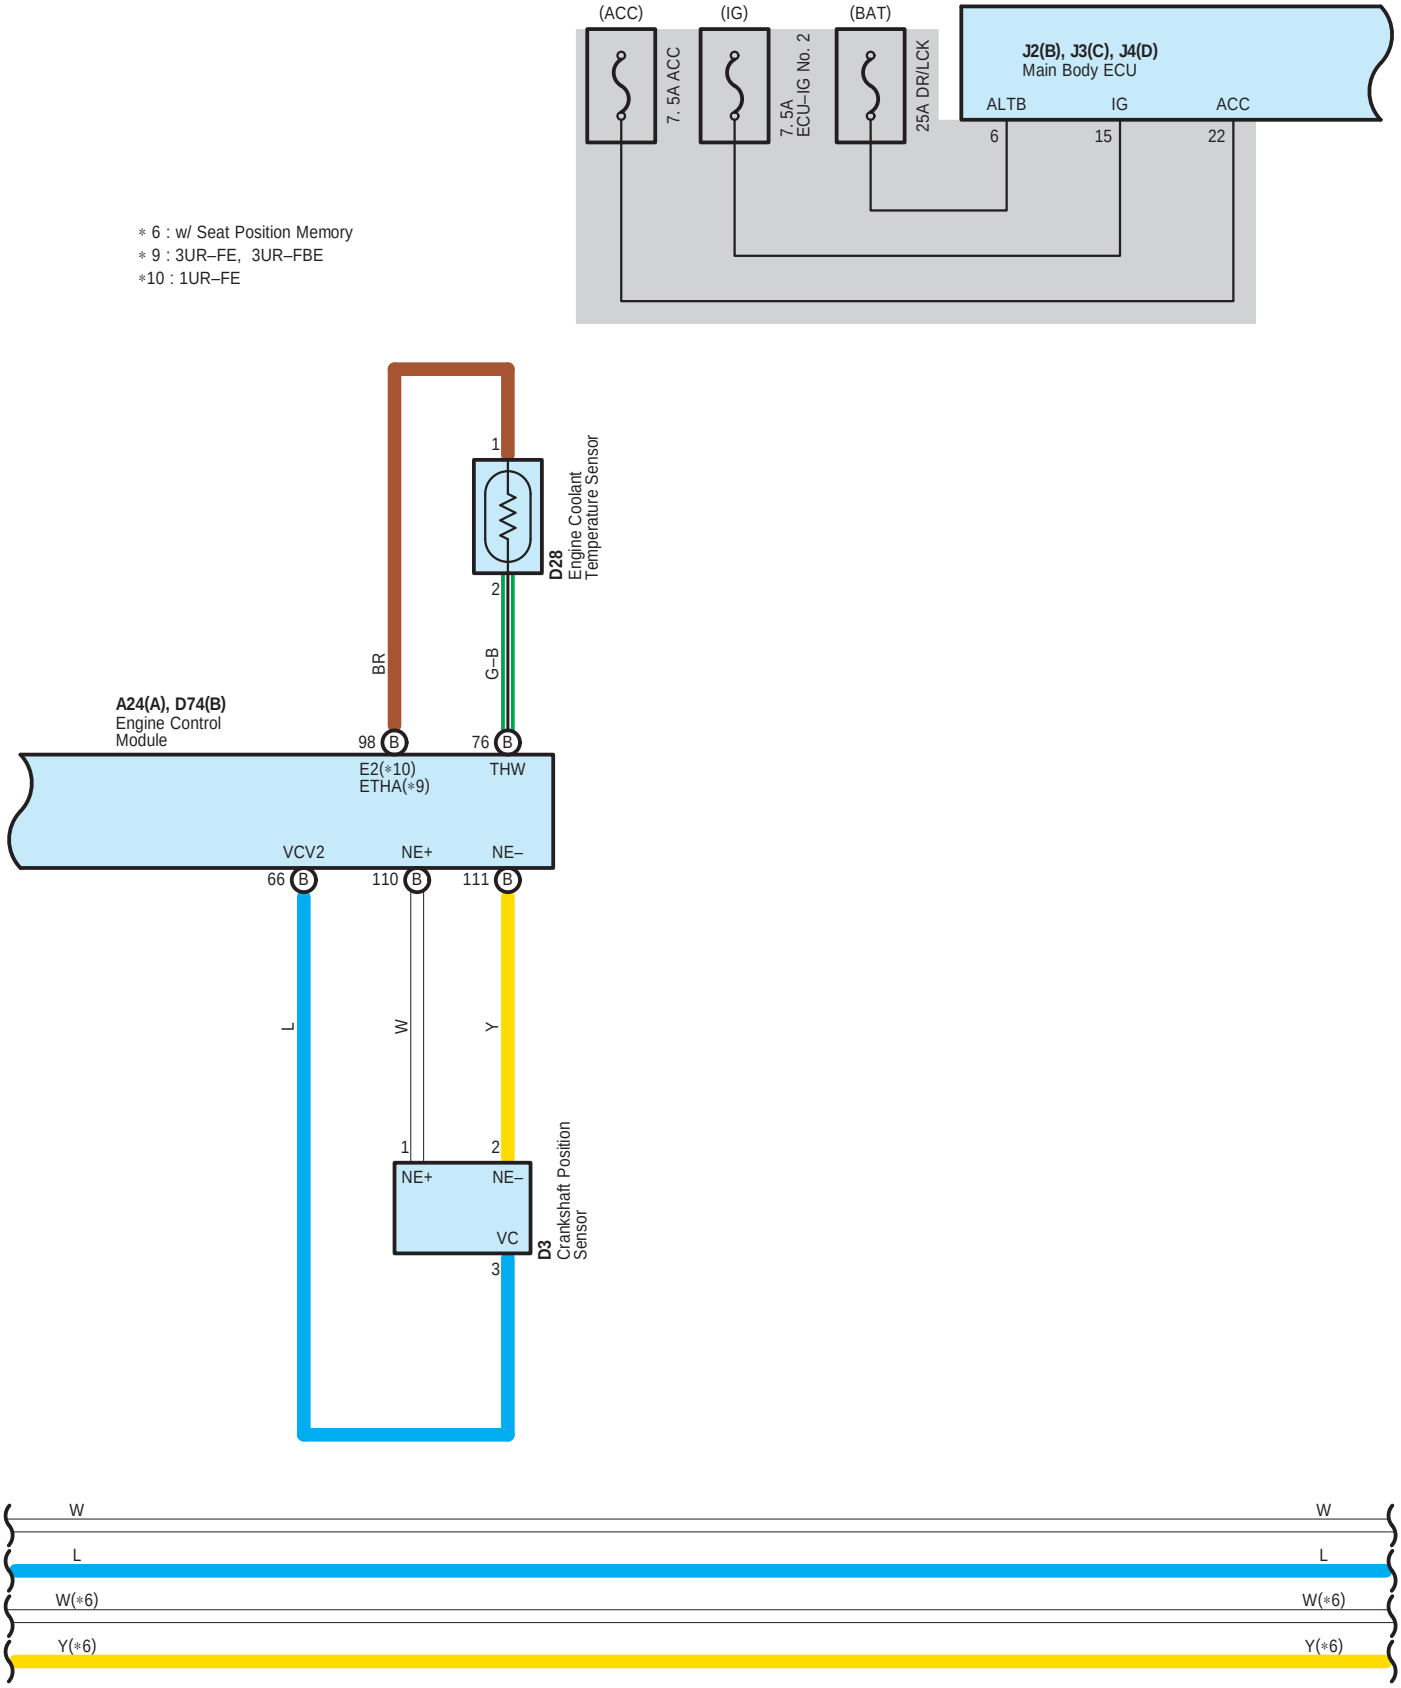
(ACC)
(IG)
(BAT)
7. 5A ACC
7. 5A ECU–IG No. 2
25A DR/LCK
J2(B), J3(C), J4(D)
Main Body ECU
ALTB
IG
ACC
6
15
22
∗ 6 : w/ Seat Position Memory
∗ 9 : 3UR–FE, 3UR–FBE
∗10 : 1UR–FE
1
2
D28
Engine Coolant Temperature Sensor
BR
G–B
A24(A), D74(B)
Engine Control Module
98 B
76 B
E2(∗10)
ETHA(∗9)
THW
VCV2
NE+
NE–
66 B
110 B
111 B
L
W
Y
1
2
NE+
NE–
VC
3
D3
Crankshaft Position Sensor
W
L
W(∗6)
Y(∗6)
W
L
W(∗6)
Y(∗6)

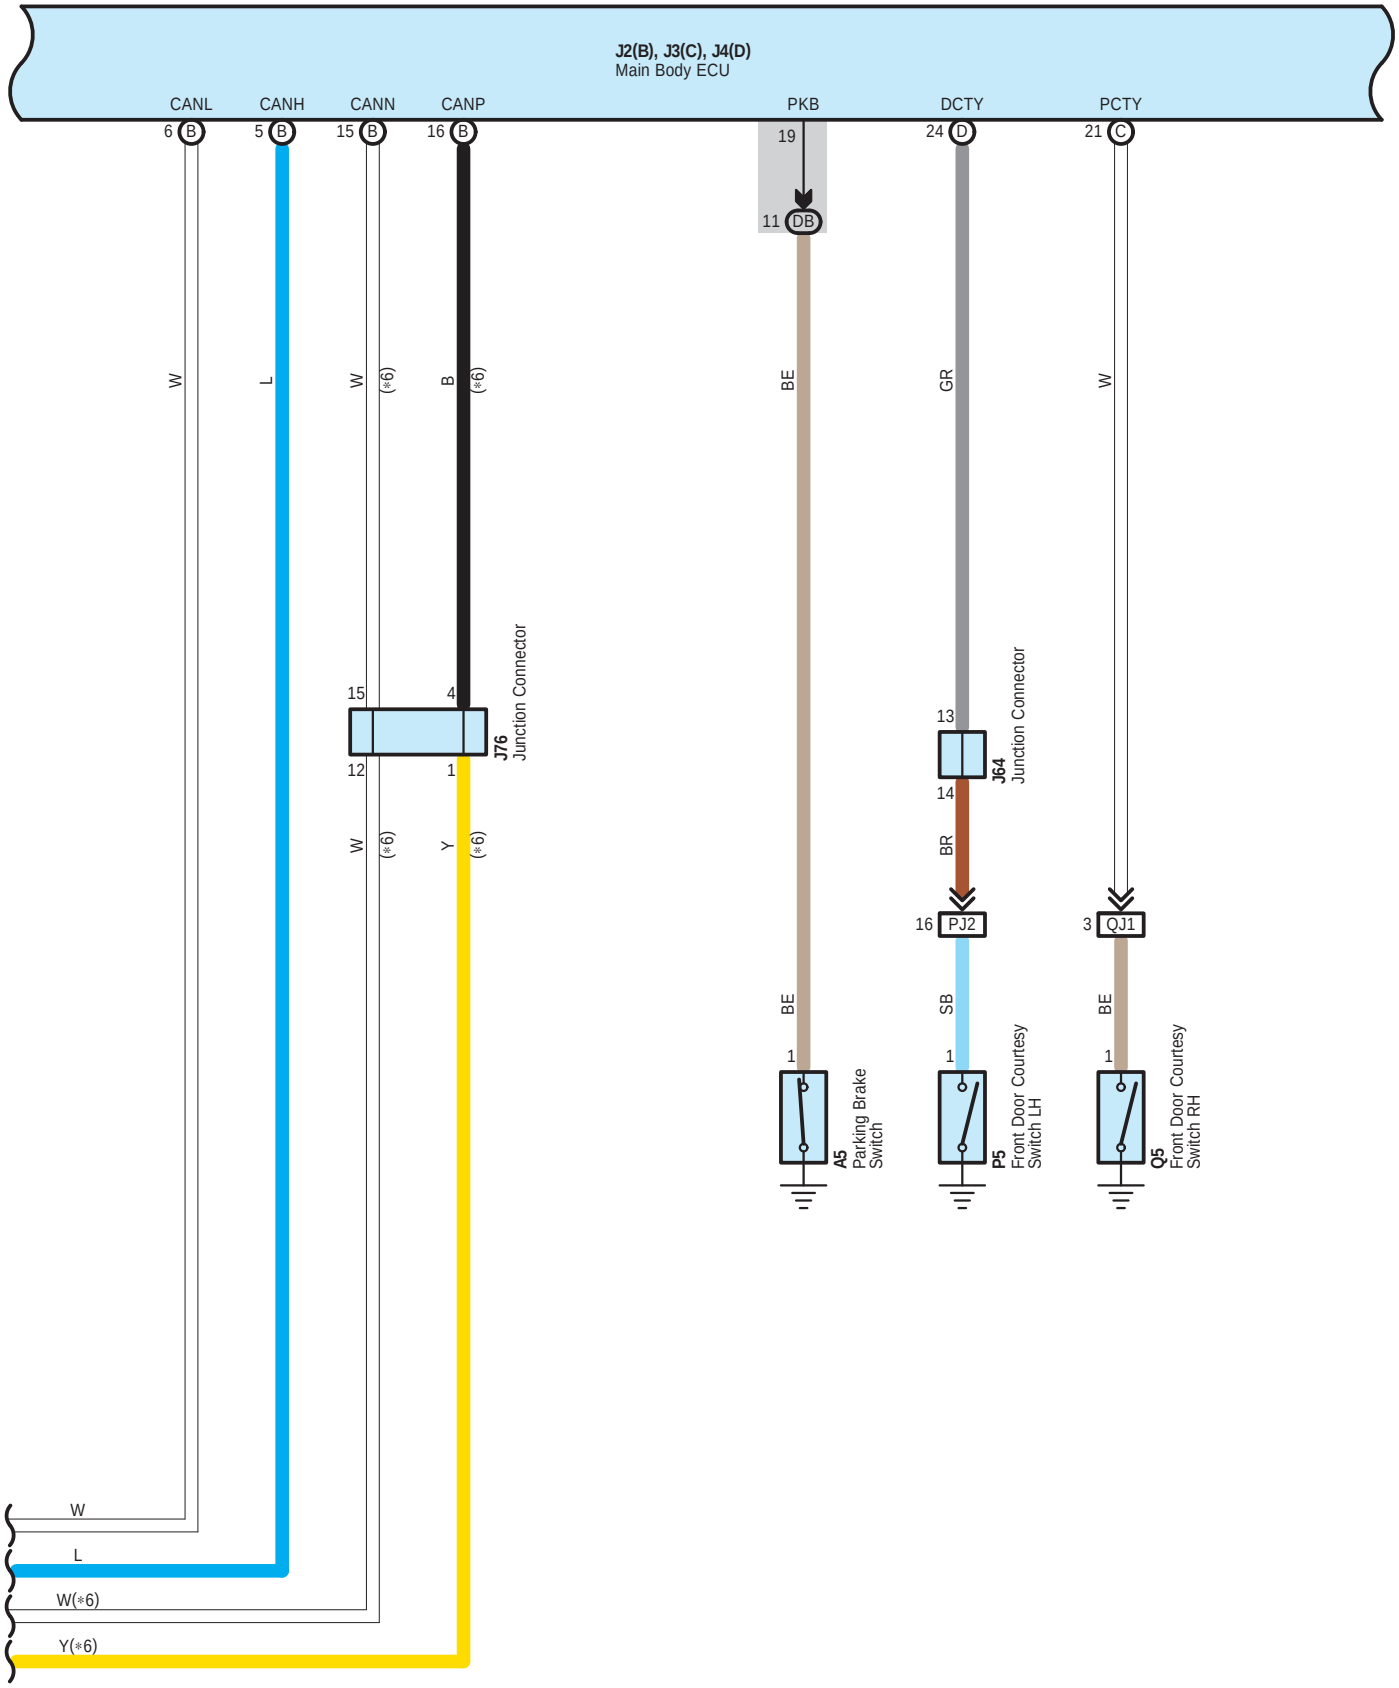
J2(B), J3(C), J4(D)
Main Body ECU
CANL
CANH
CANN
CANP
PKB
DCTY
PCTY
6 B
5 B
15 B
16 B
19
11 DB
24 D
21 C
W
L
W
(*6)
B
(*6)
BE
GR
W
15
4
12
1
J76
Junction Connector
W
(*6)
Y
(*6)
13
14
J64
Junction Connector
BR
16 PJ2
3 QJ1
BE
SB
BE
1
1
1
A5
Parking Brake
Switch
P5
Front Door Courtesy
Switch LH
Q5
Front Door Courtesy
Switch RH
W
L
W(*6)
Y(*6)

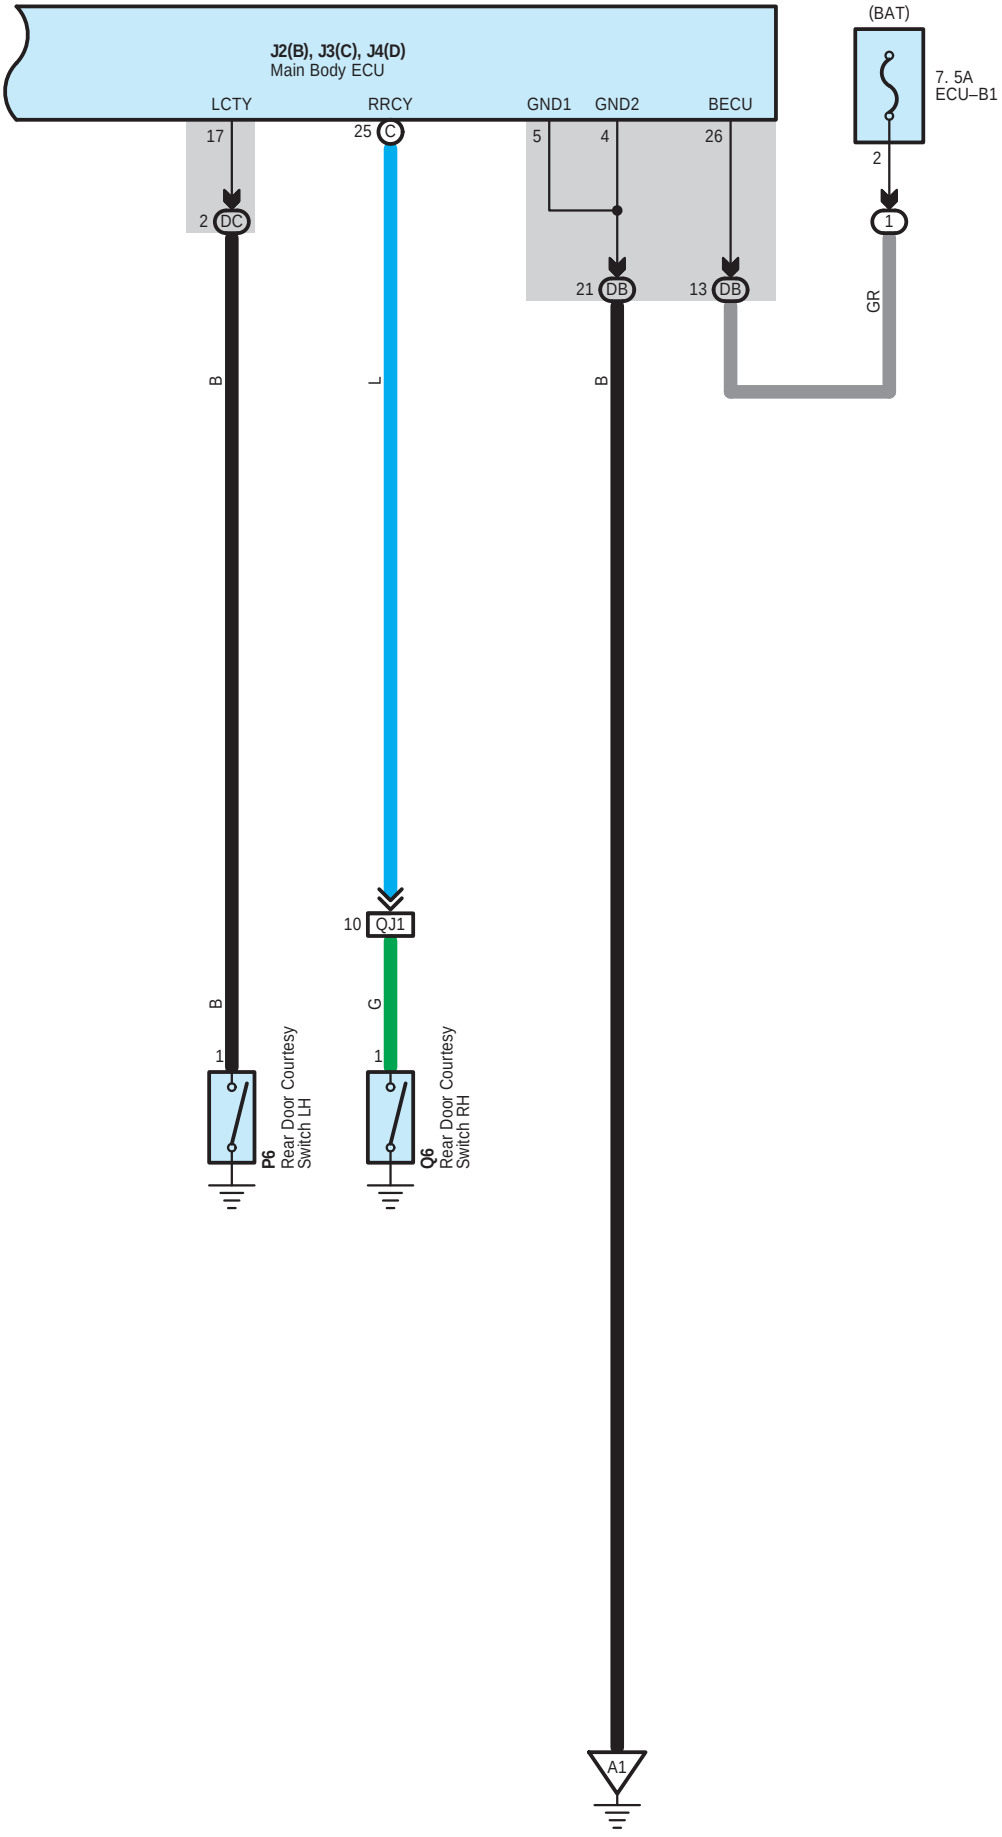
J2(B), J3(C), J4(D)
Main Body ECU
LCTY
RRCY
GND1
GND2
BECU
17
25
C
5
4
26
2
DC
21
DB
13
DB
(BAT)
7. 5A
ECU–B1
2
1
GR
B
L
B
10
QJ1
B
G
1
1
P6
Rear Door Courtesy
Switch LH
Q6
Rear Door Courtesy
Switch RH
A1


A 3
Gray




A 5
White




A 17
Black

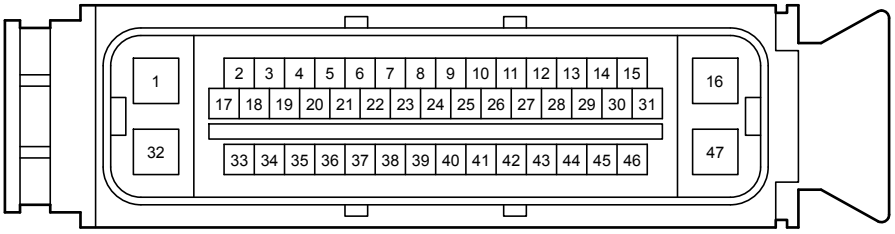


A 24
Black

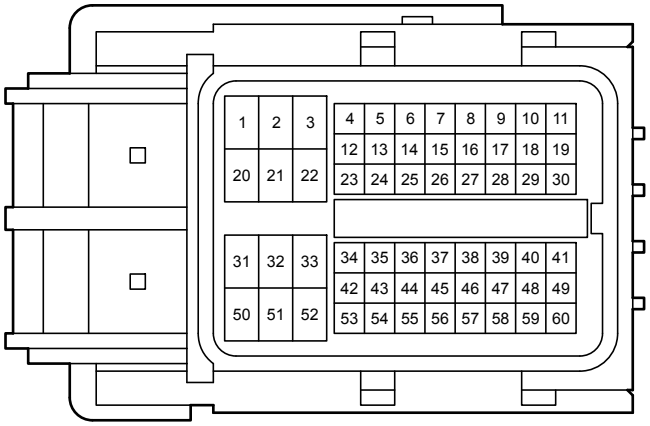


A 27
Black

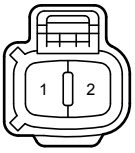


A 44
White

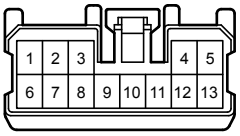

A 52
White

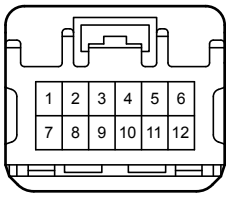


D 3
Black

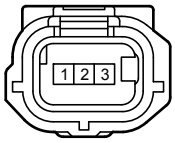

D 28
Dark Gray




D 74
Black

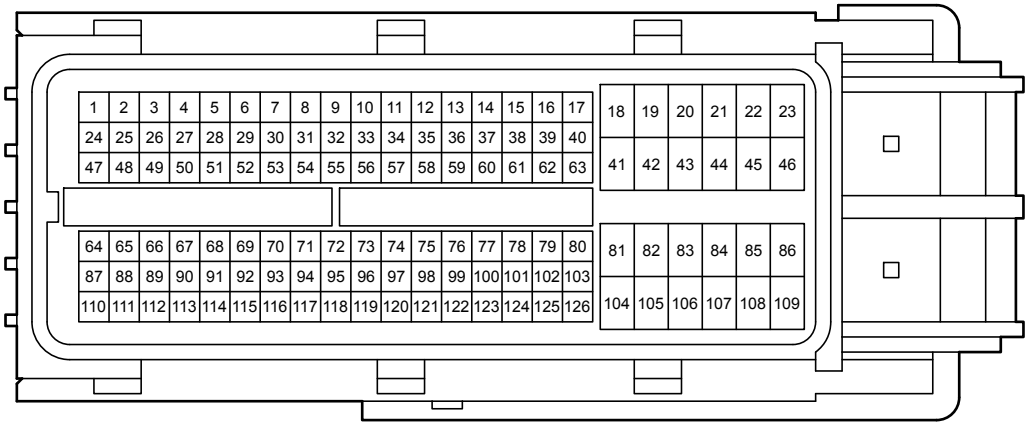


E 11
Black




H 1
Black

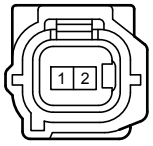


J 2
White

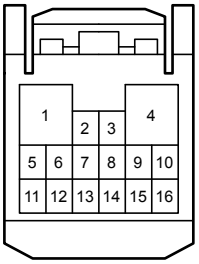


J 3
White

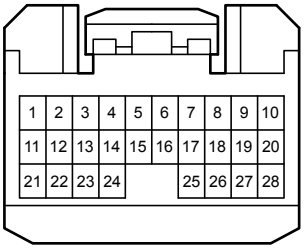


J 4
White

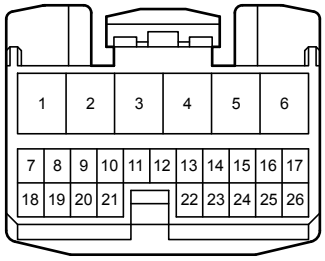


J 28
Black

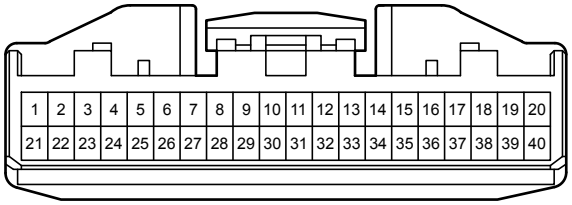


J 45
Black

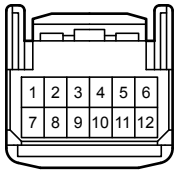


J 60
White

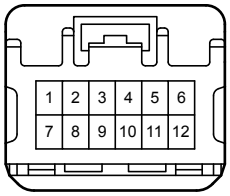


J 61
Gray

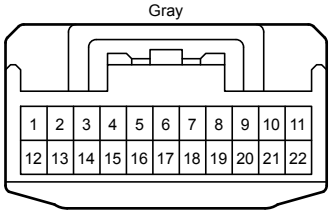


J 64
White

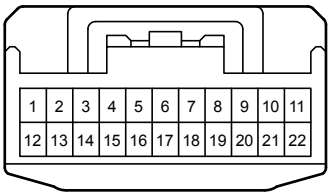


J 70
Blue

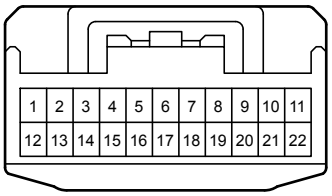


J 71
White

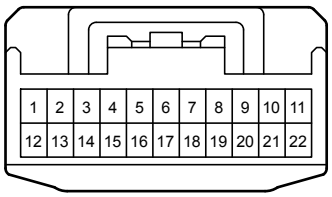


J 74
Gray

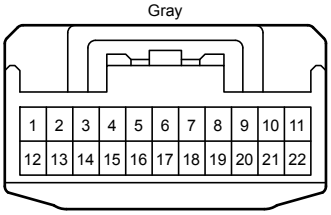

J 75
Gray

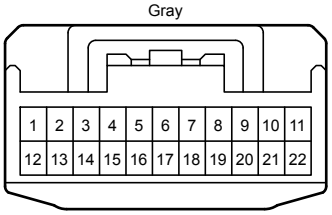

J 76
Gray

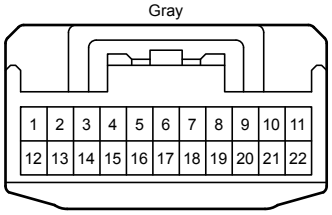

P 5
White



P 6
White



Q 5
White



Q 6
White




R 6
White




R 19
White




z 3
White

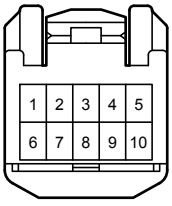


DB
White

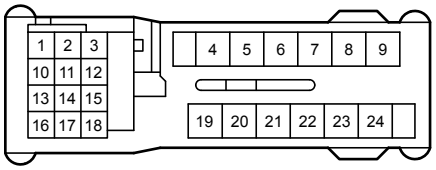


DC
White

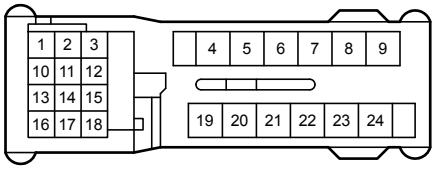


DE
White

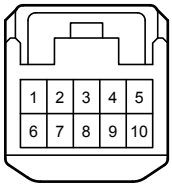


AE1
Gray

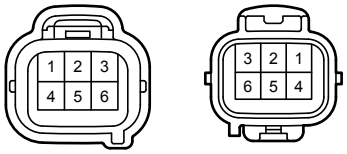


AJ4
White

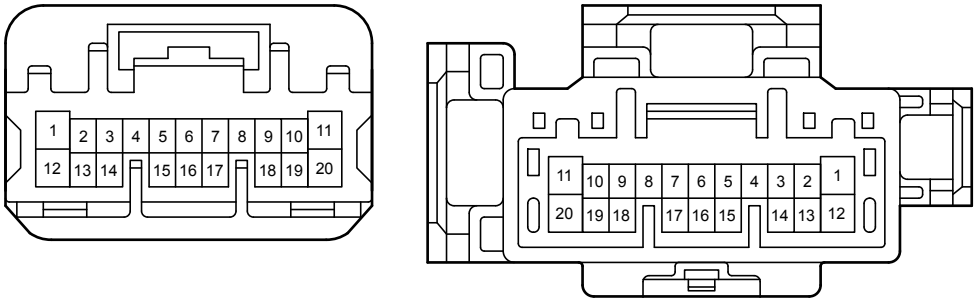


AJ5
Gray

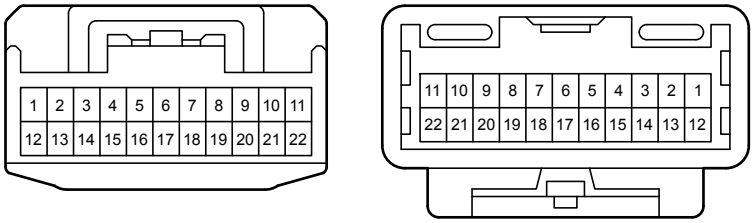


AJ9
White

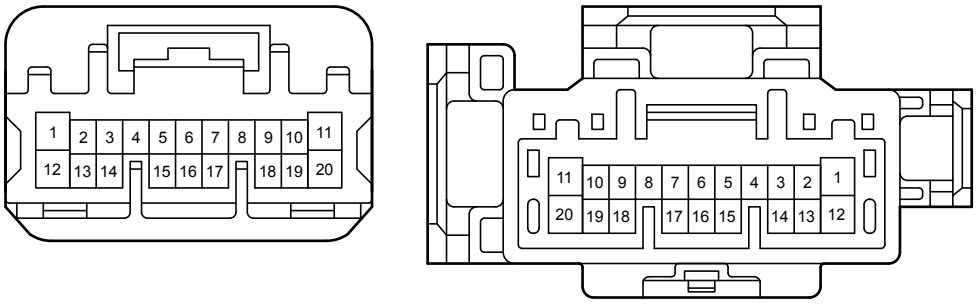


AJ10
Gray

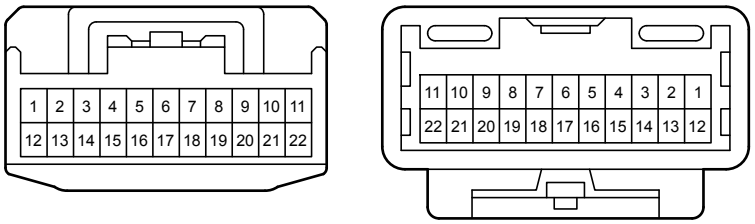


DA2
White

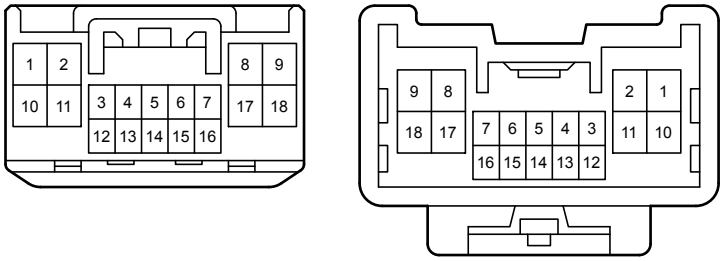


DH1
Gray

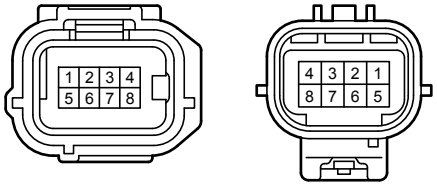

PJ2
White

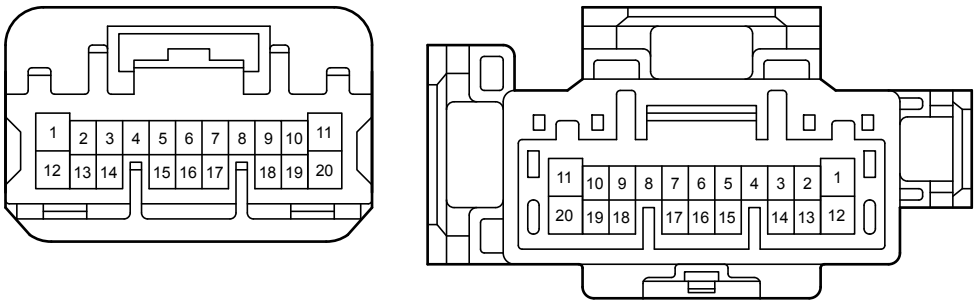

QJ1
White

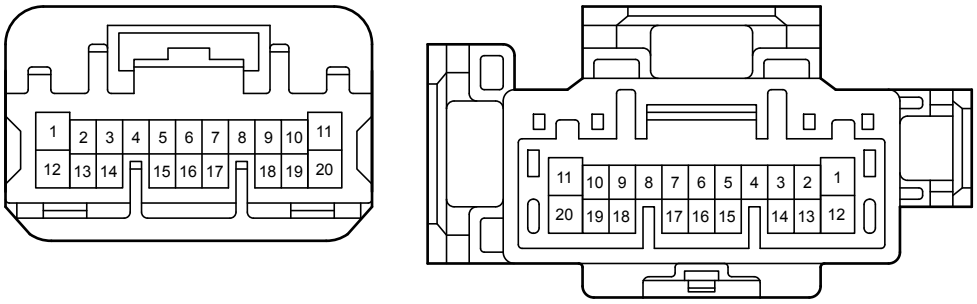

RA1
Black

