




(BAT)
7. 5A
OBD
18 DD
P
16
BAT
J17
DLC3
SG
CG
TAC
TC
5
GR
12
J65
Junction Connector
13
BR
9 AJ3
BR
22 A
13 B
A45(A), D73(B)
Junction Connector
BR
D1
4
W–B
4
J61
Junction Connector
7
W–B
(*1)
11
W–B
6
J60
Junction
Connector
7
W–B
(*1)
J4
W–B
J1
9
BR
15 AJ3
GR
15 A
TACH
16 A
TC
A24(A)
Engine Control Module
13
SB
1
J65
Junction Connector
2
B
9 AJ4
V
16 A
3
W
3
TC
SIL
J31
Tire Pressure
Warning ECU
10
SB
SB
* 1 : w/ Seat Position Memory


Junction Connector
V
W
J17
DLC3
6
14
CANH
CANL
TS
SIL
12
7
G
BR
5 A
6 A
7 A
5 B
7 B
6 B
J72(A), J73(B)
Junction Connector
R
W
SB
BE
9 QJ1
BR
2 QY1
GR
4 AJ10
15 AJ9
5 JJ1
9
D
J26
Transponder Key ECU
W
R
W
7
10
16 A
2 A
TS
D/G
SIL
DIA
A17
Skid Control ECU
with Actuator
J46(A)
Center Airbag
ECU
Y2(A)
Occupant
Detection ECU
SB


A 17
Black

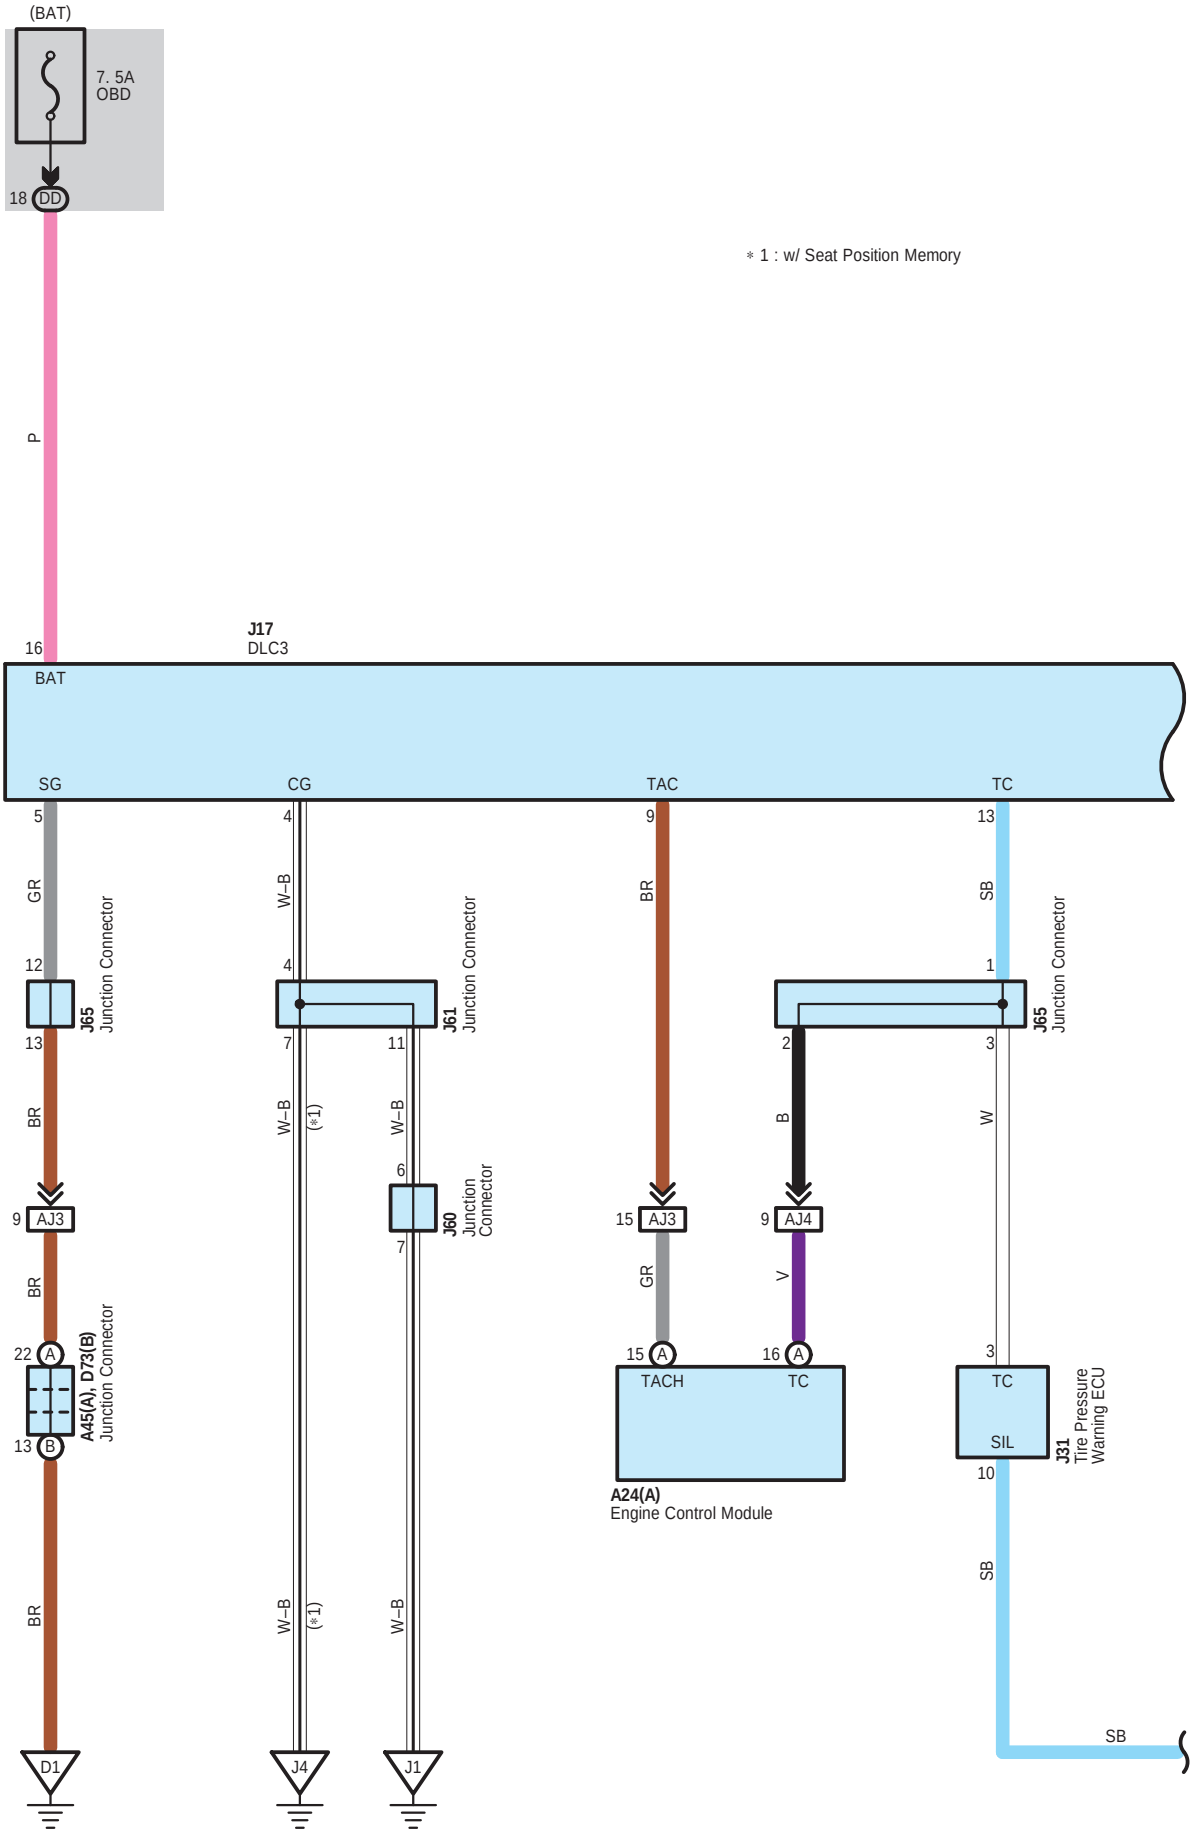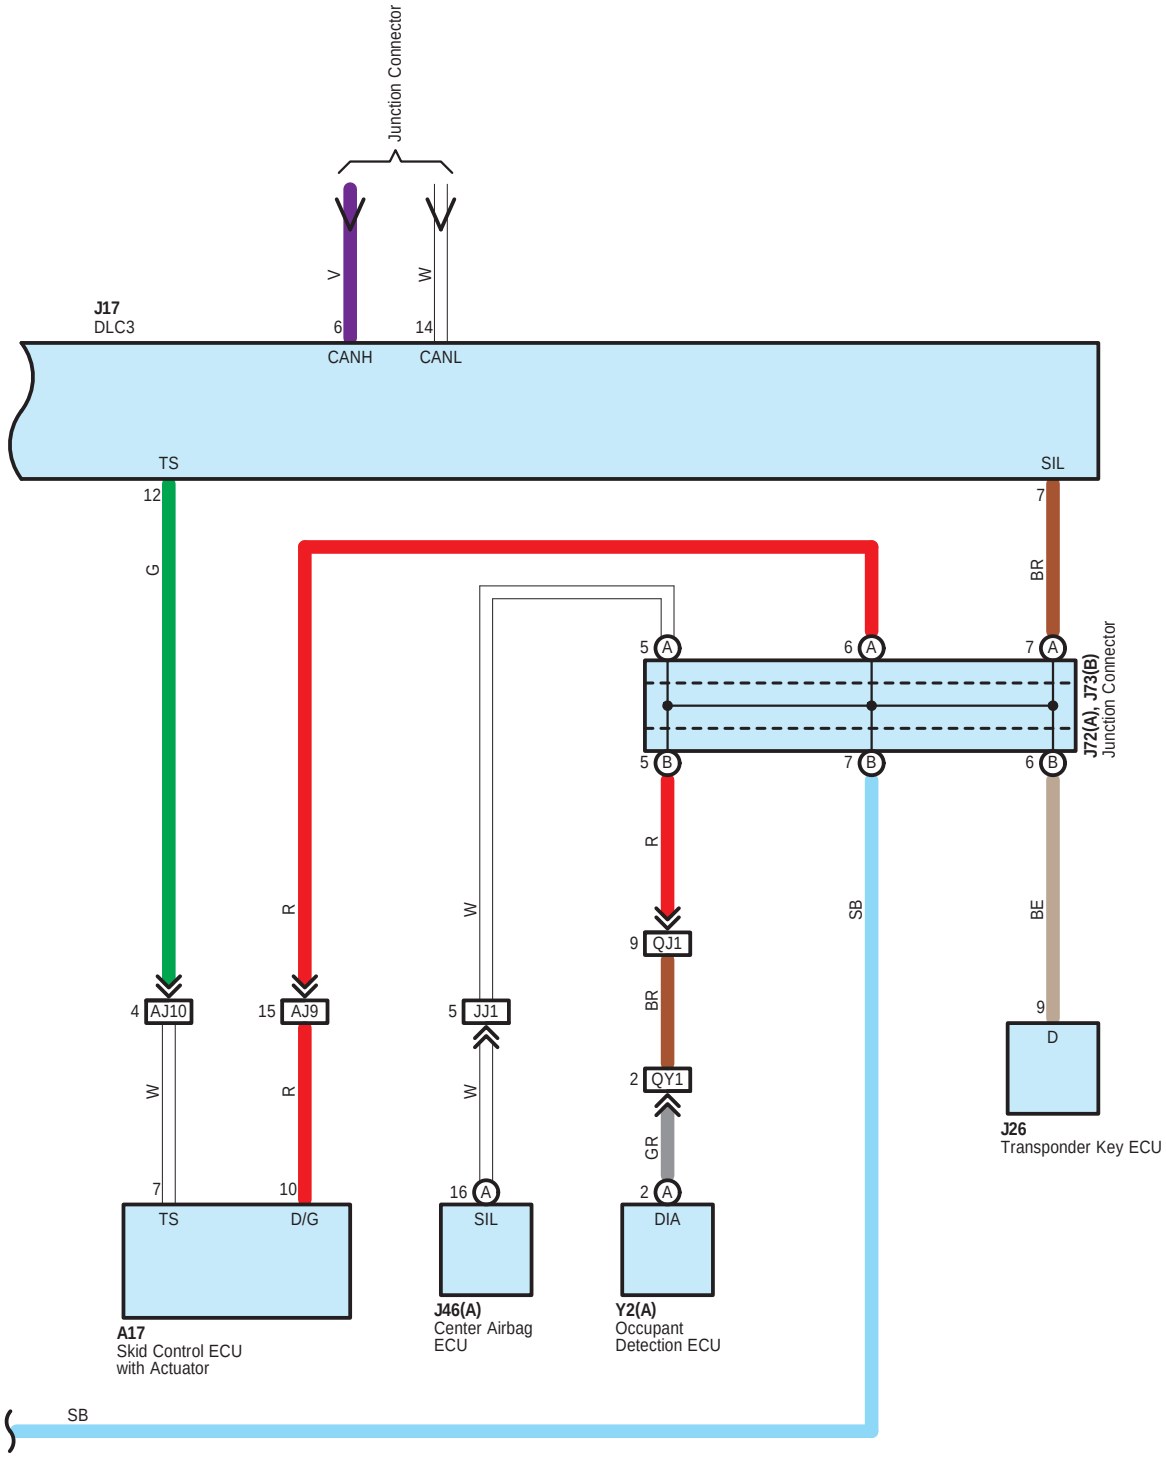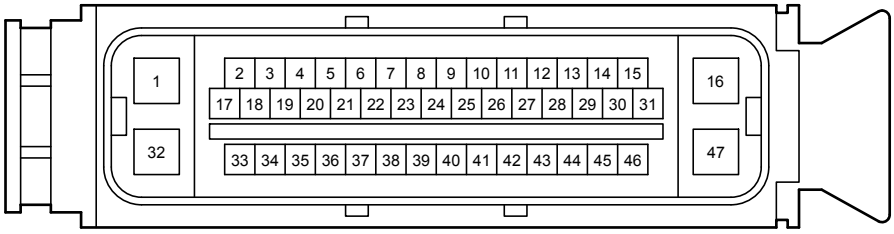


A 24
Black

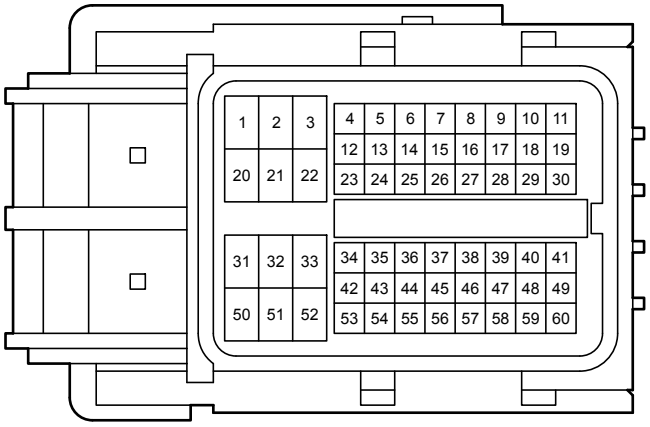


A 45
Blue

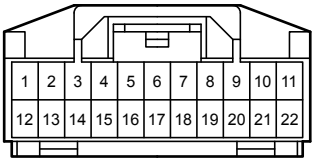


D 73
Blue

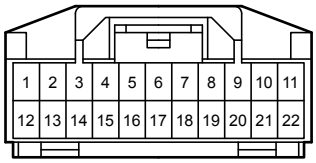


J 17
White

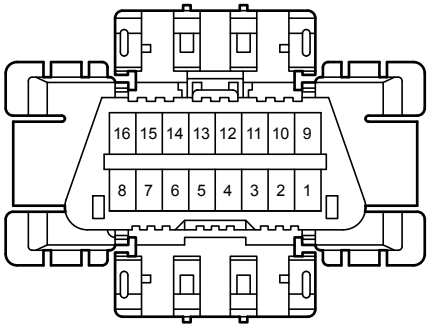


J 26
White

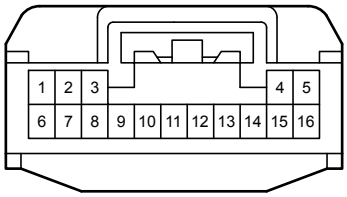


J 31
White

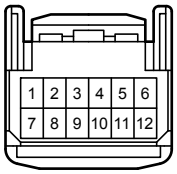


J 46
Yellow

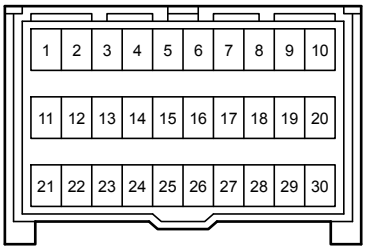


J 60
White

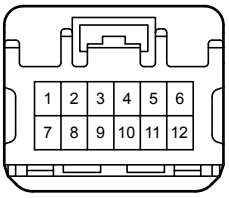


J 61
Gray

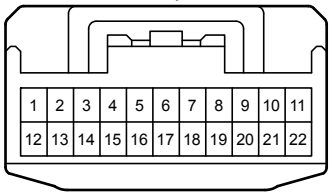


J 65
White

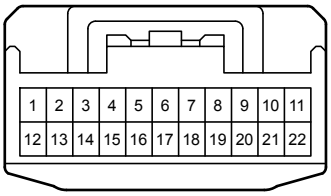


J 72
Black

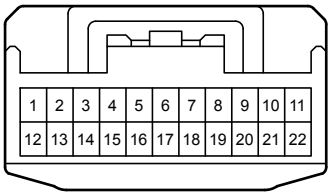


J 73
Black

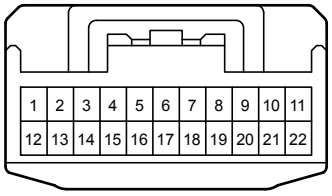


Y 2
Black

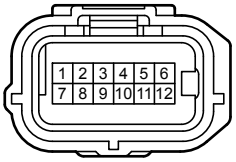


DD
White

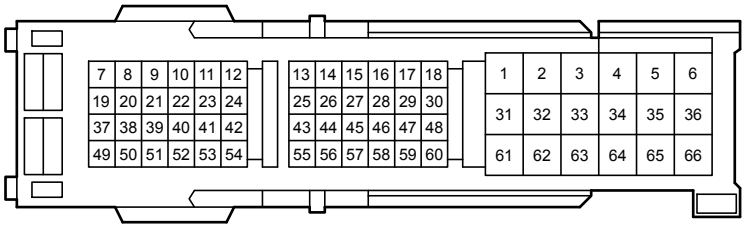


AJ3
White

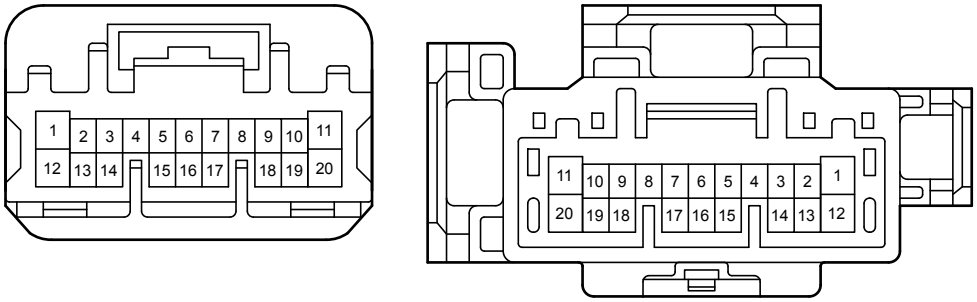


AJ4
White

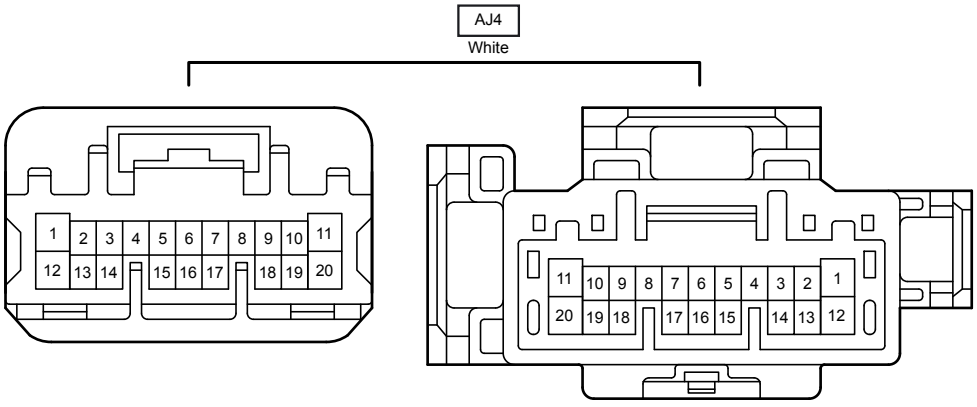

AJ9
White

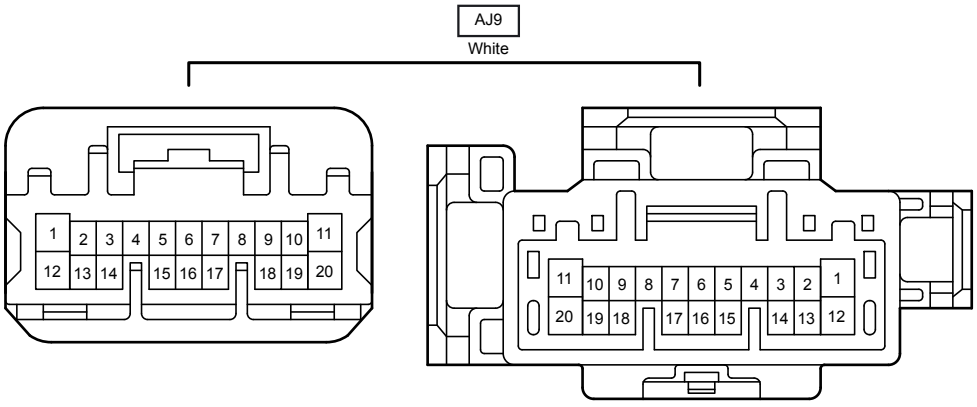

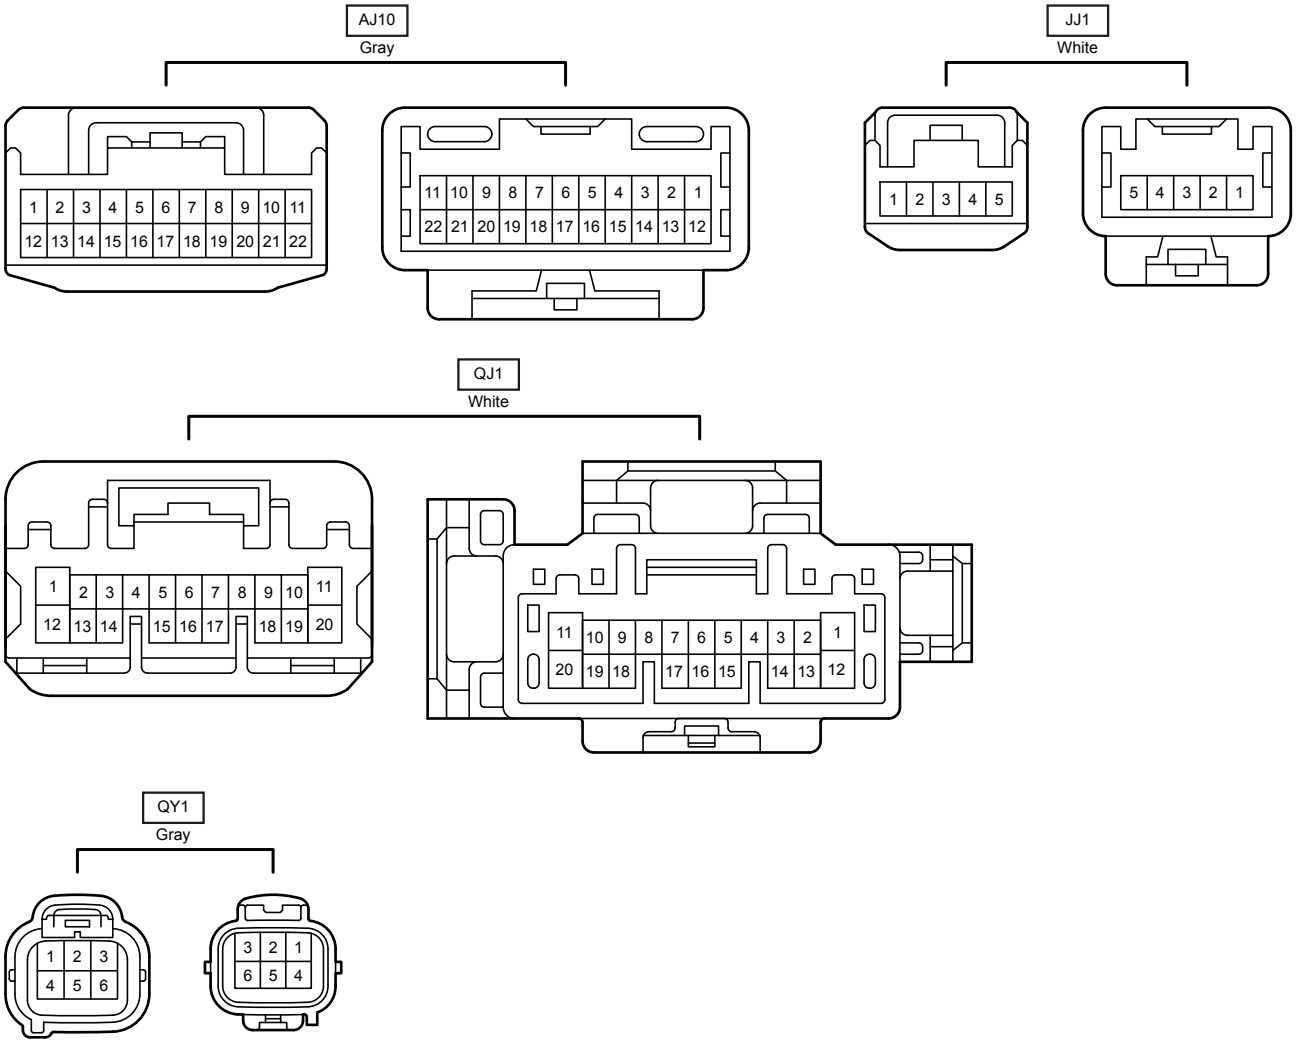
AJ10
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
JJ1
White
1 2 3 4 5
5 4 3 2 1
QJ1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12
QY1
Gray
1 2 3
4 5 6
3 2 1
6 5 4