




(IG)
10A
IGN
(BAT)
7. 5A
IMB
J20
Transponder Key Amplifier
Transponder Key Coil
VC5
CODE
TXCT
AGND
A49
Junction
Connector
AJ9
J72(A), J73(B)
Junction
Connector
J26
Transponder Key ECU
+B
IG
KSW
CTY
J72(A)
Junction
Connector
J18
Unlock Warning
Switch
J60
Junction
Connector
J1
J64
Junction Connector
PJ2
P5
Front Door Courtesy
Switch LH


A24(A)
Engine Control Module
IMO
IMI
29
40
A
P
B
2
1
AJ5
SB
Y
12
13
EFII
EFIO
J26
Transponder Key ECU
GND
IND
D
16
8
9
W–B
V
BE
5
6
J65
Junction
Connector
L
37
LP
Security
ES
J28
Combination Meter
6
B
7
J72(A), J73(B)
Junction
Connector
BR
7
SIL
J17
DLC3
24
W–B
15
W–B
19
J61
Junction
Connector
22
W–B
J3


A 24
Black

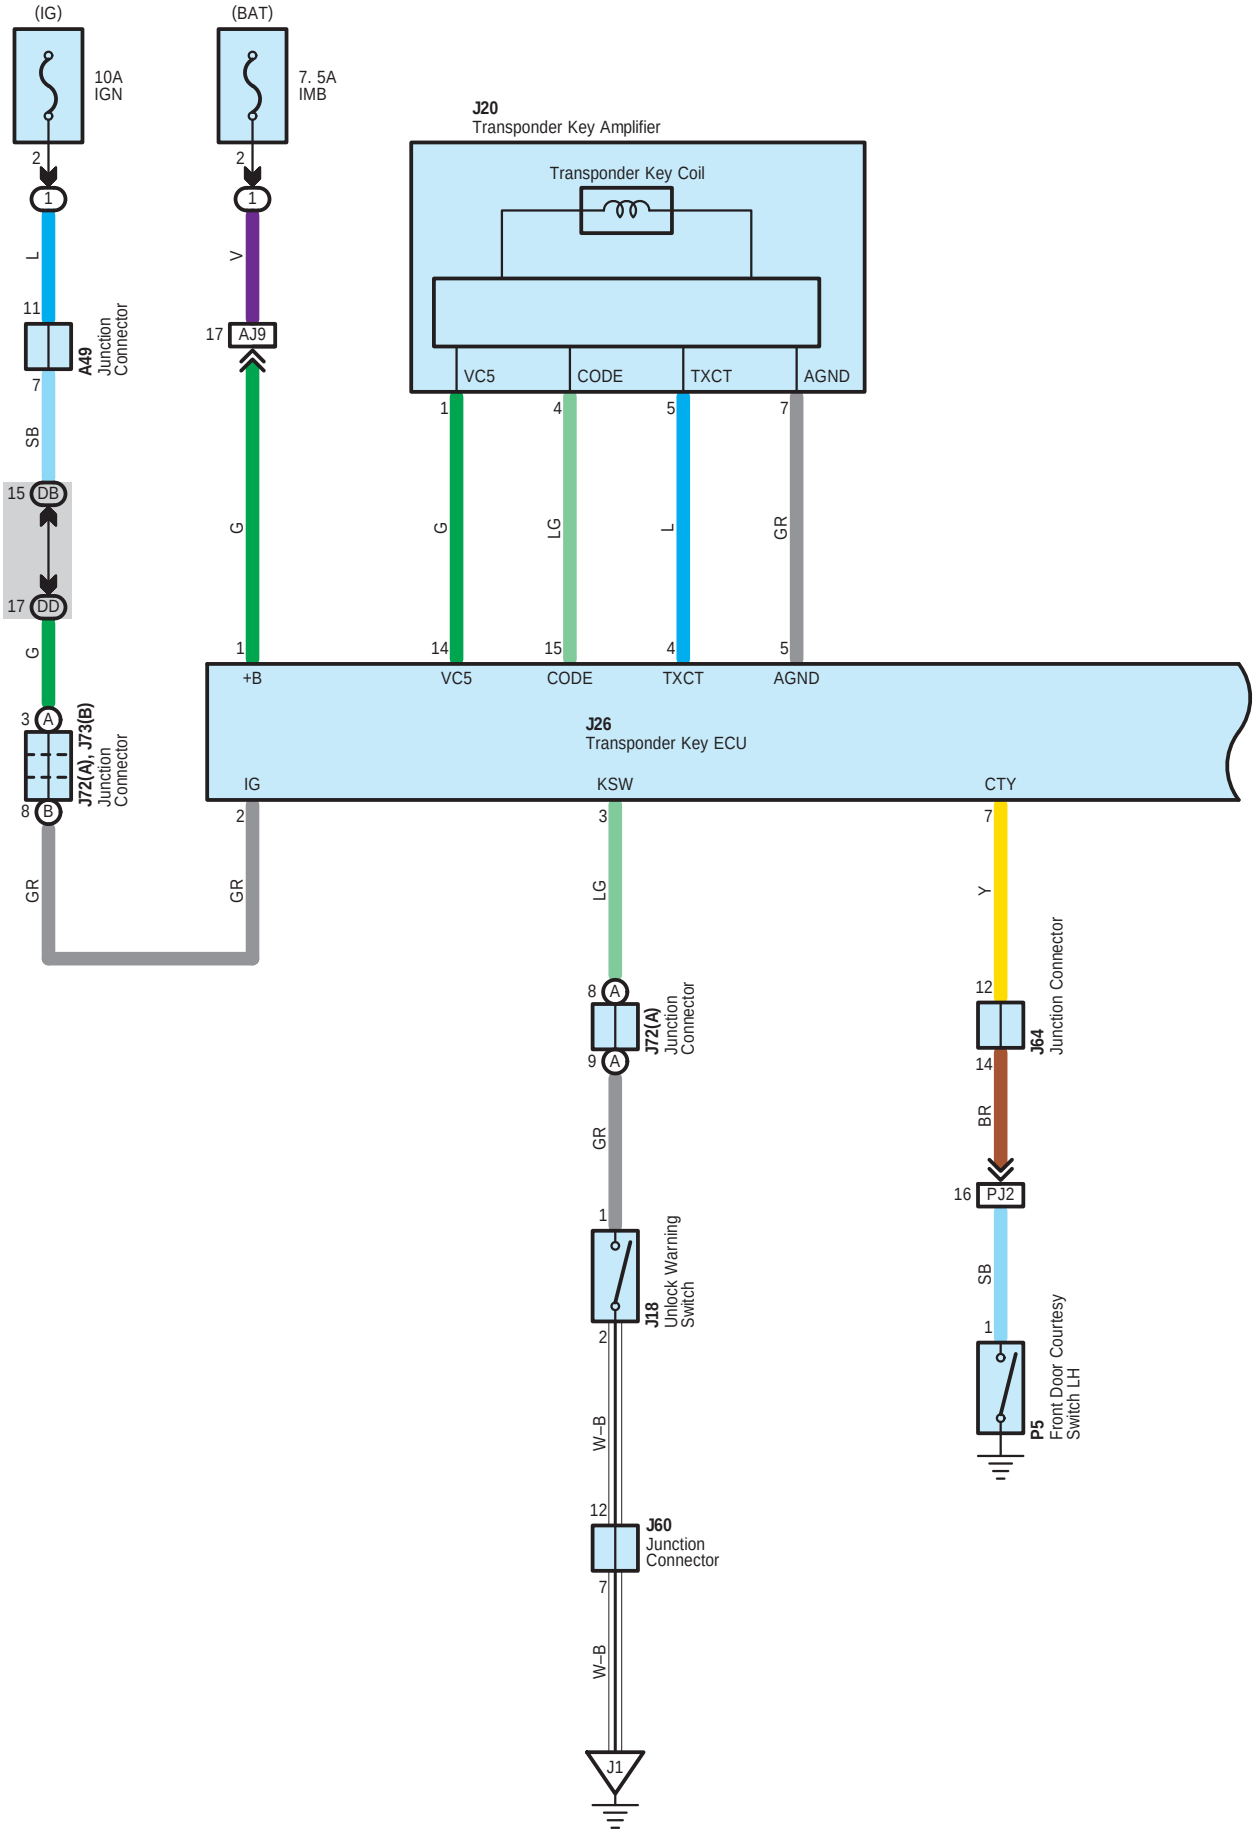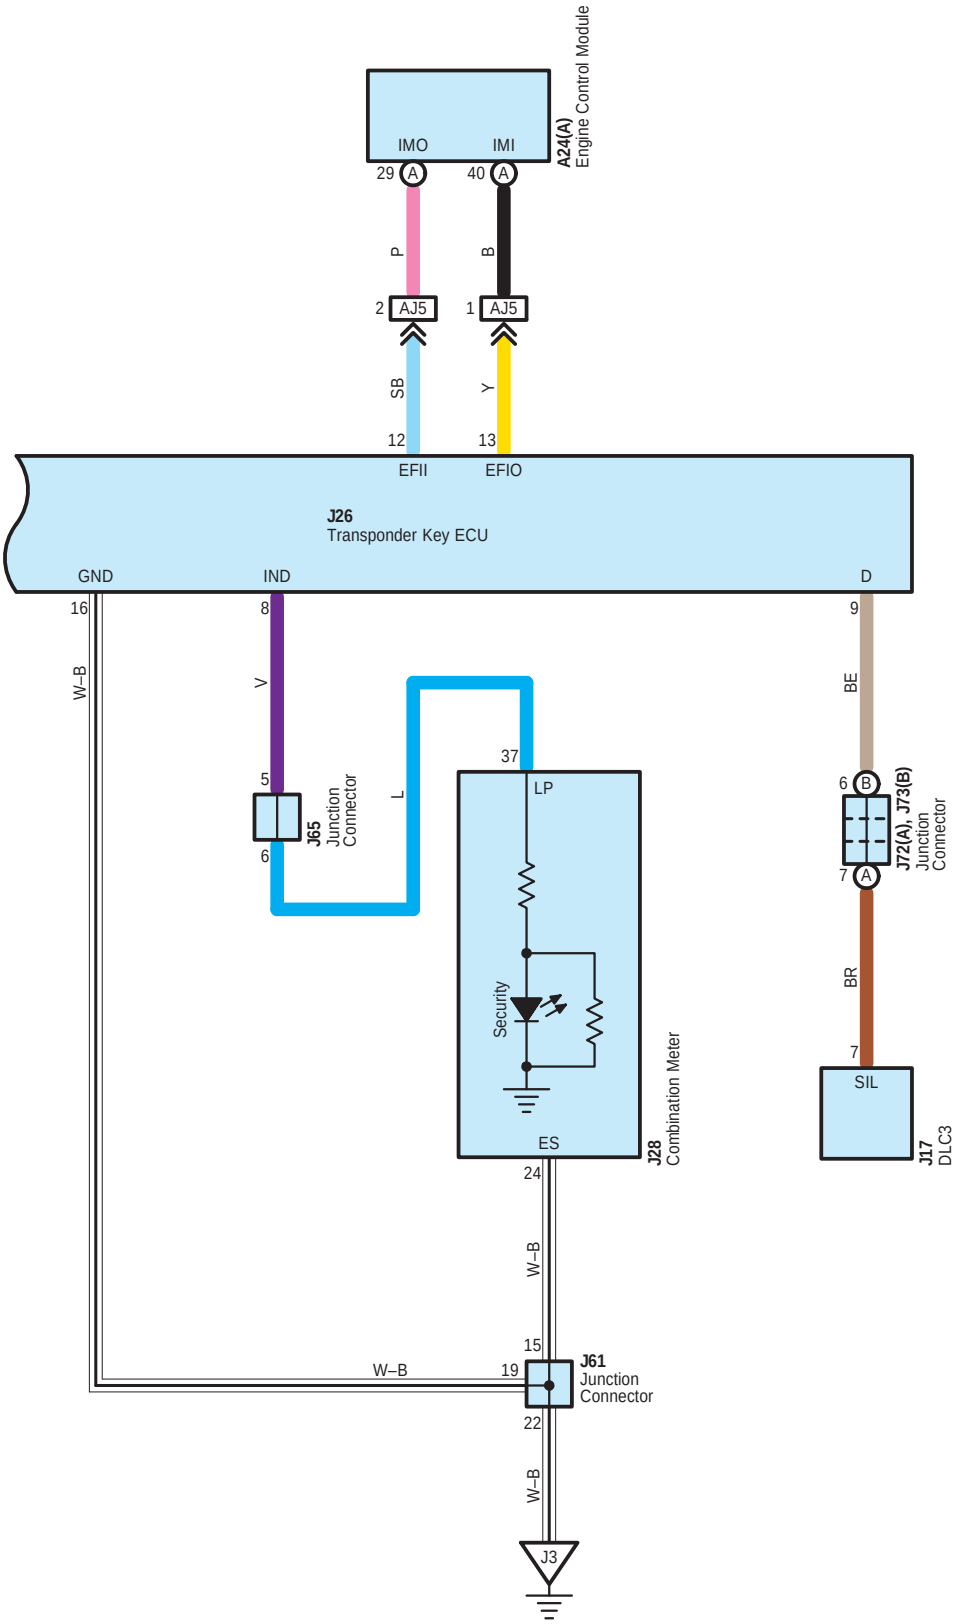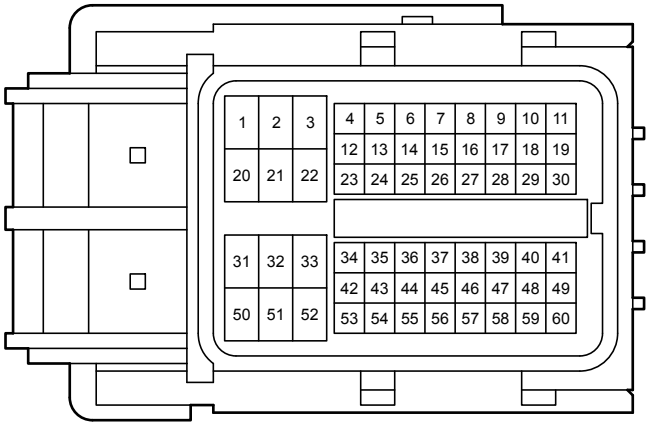


A 49
White

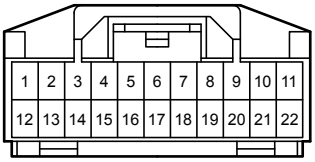


J 17
White

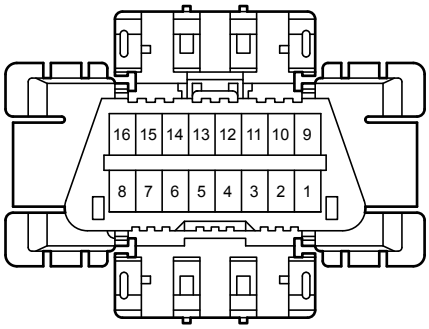


J 18
White




J 20
Black

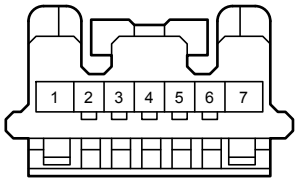


J 26
White

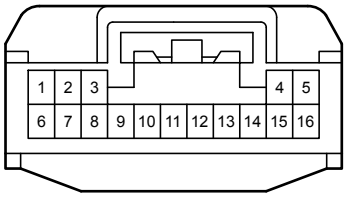


J 28
Black

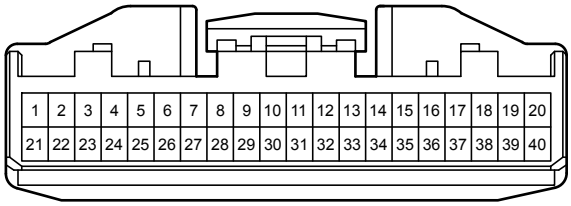


J 60
White

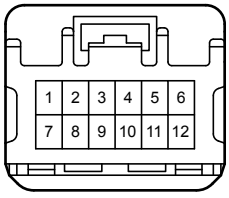


J 61
Gray

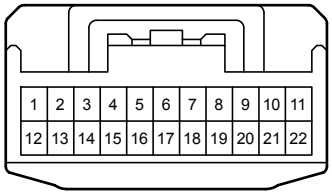


J 64
White

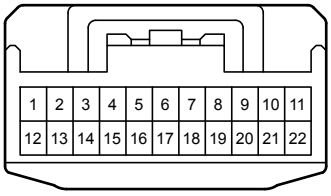


J 65
White

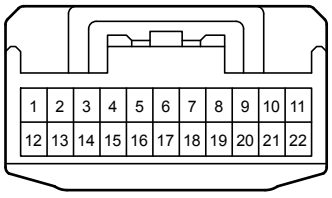

J 72
Black

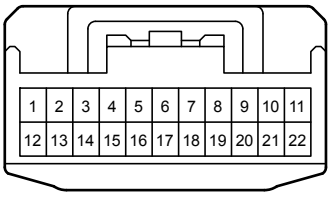


J 73
Black

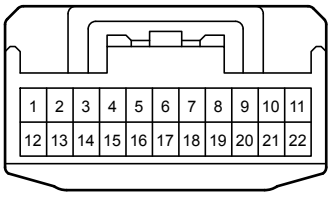


P 5
White




DB
White

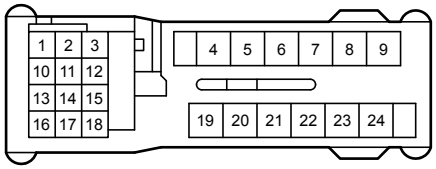


DD
White

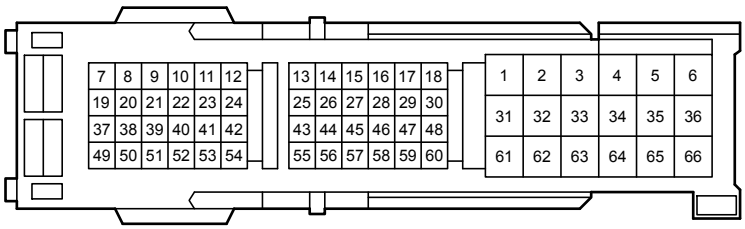

AJ5
Gray

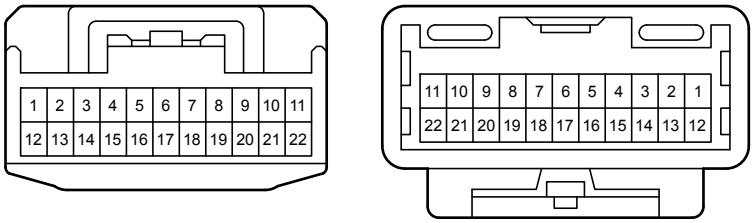

AJ9
White

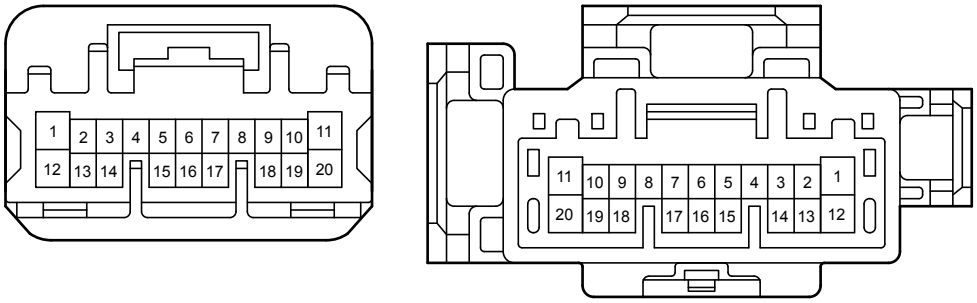

PJ2
White

