





(BAT)
7. 5A
ECU–B1
2
1
GR
(ACC)
7. 5A
ACC
(IG)
7. 5A
ECU–IG
No. 2
(BAT)
25A
DR/LCK
J1(A), J2(B), J3(C), J4(D)
Main Body ECU
ALTB
IG
ACC
BECU
GND1
GND2
6
15
22
26
5
4
13 DB
21 DB
GR
B
A1



J1(A), J2(B), J3(C), J4(D)
Main Body ECU
CANH
CANL
5
6
B
B
L
W
(BAT)
(IG)
5A
MET–B
7. 5A
MET
2
2
1
1
G
BE
9
AJ10
8
AJ10
LG
P
1
2
J28
Combination Meter
B
IG+
5V IC
5V+B
Telltale
LED
Driver
CPU
CAN I/F
ES
CANL
CANH
24
40
39
W–B
15
J61
Junction
Connector
22
W
SB
W–B
J3
5
16
J75
Junction Connector
4
15
SB
W



J1(A), J2(B), J3(C), J4(D)
Main Body ECU
CANN
CANP
15 B
16 B
(BAT)
15A
MIR
54 DD
(ACC)
7. 5A
ACC
8 DD
10 B
9 B
J71(B)
Junction
Connector
W (*1)
B (*1)
15
4
16
5
J76
Junction Connector
W (*1)
LG (*1)
6 NJ3
7 NJ3
BE (*1)
7 NJ2
R (*1)
3 A
B
BR (*1)
5 NJ2
Y (*1)
4 A
ACC
GR (*1)
GR (*1)
W (*1)
LG (*1)
21 B
CGND
1 B
CAN
N7(A), N8(B)
Outer Mirror Control ECU
GND
LP
LP
9 A
17 B
37 B
W–B (*1)
BR (*1)
SB (*1)
15 NJ2
B (*1)
6 MJ2
W–B (*1)
2 NJ1
W–B (*1)
5
BR (*1)
6
B (*1)
6
MLP–
MLP
MLP
Puddle
Light
Puddle
Light
N5
Outer Rear View Mirror LH
M6
Outer Rear View Mirror RH
MLP–
5
W–B (*1)
10 MJ2
W–B (*1)
J1
J3

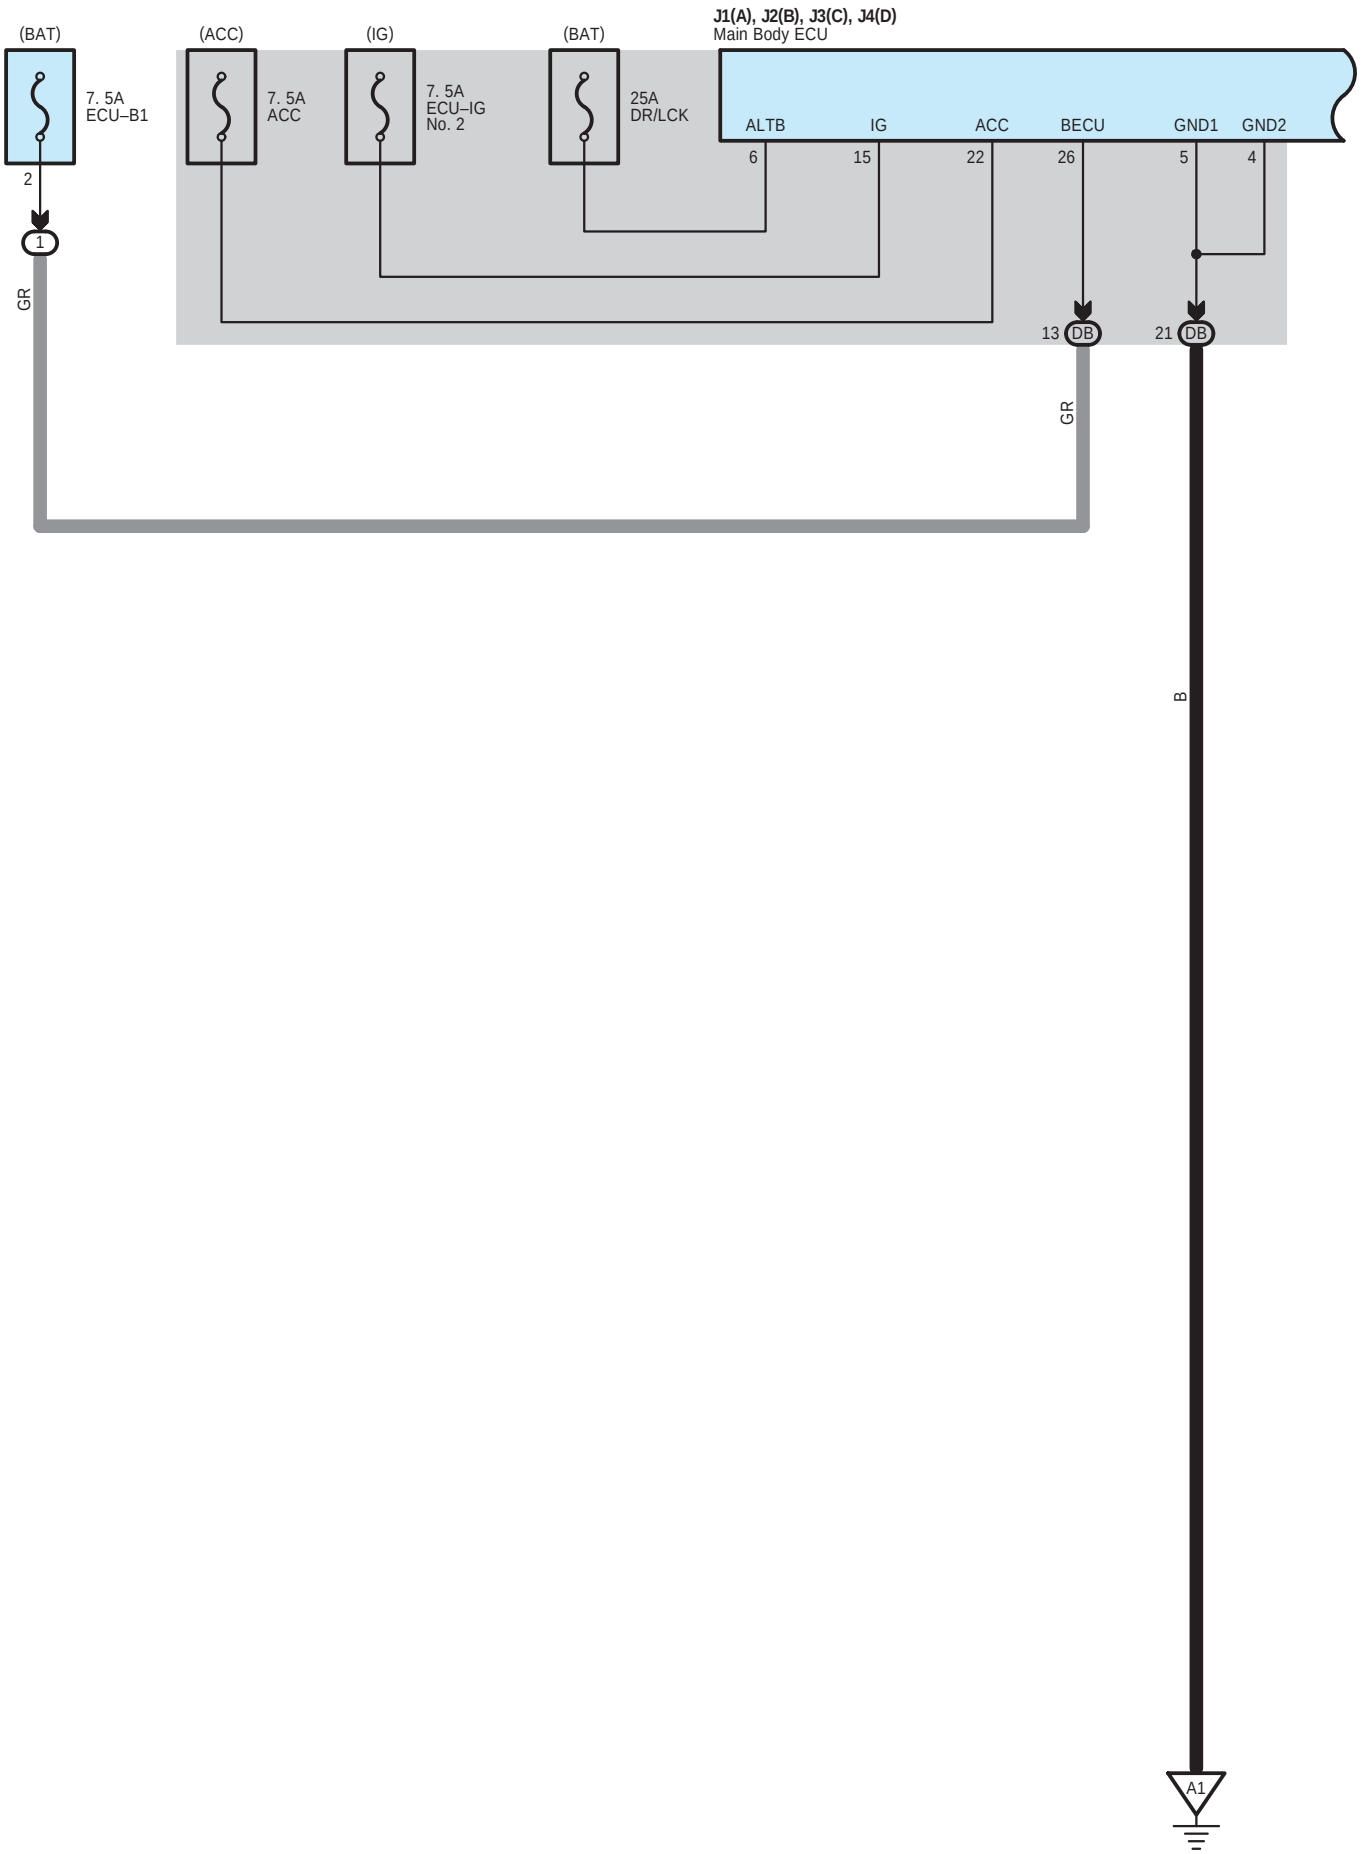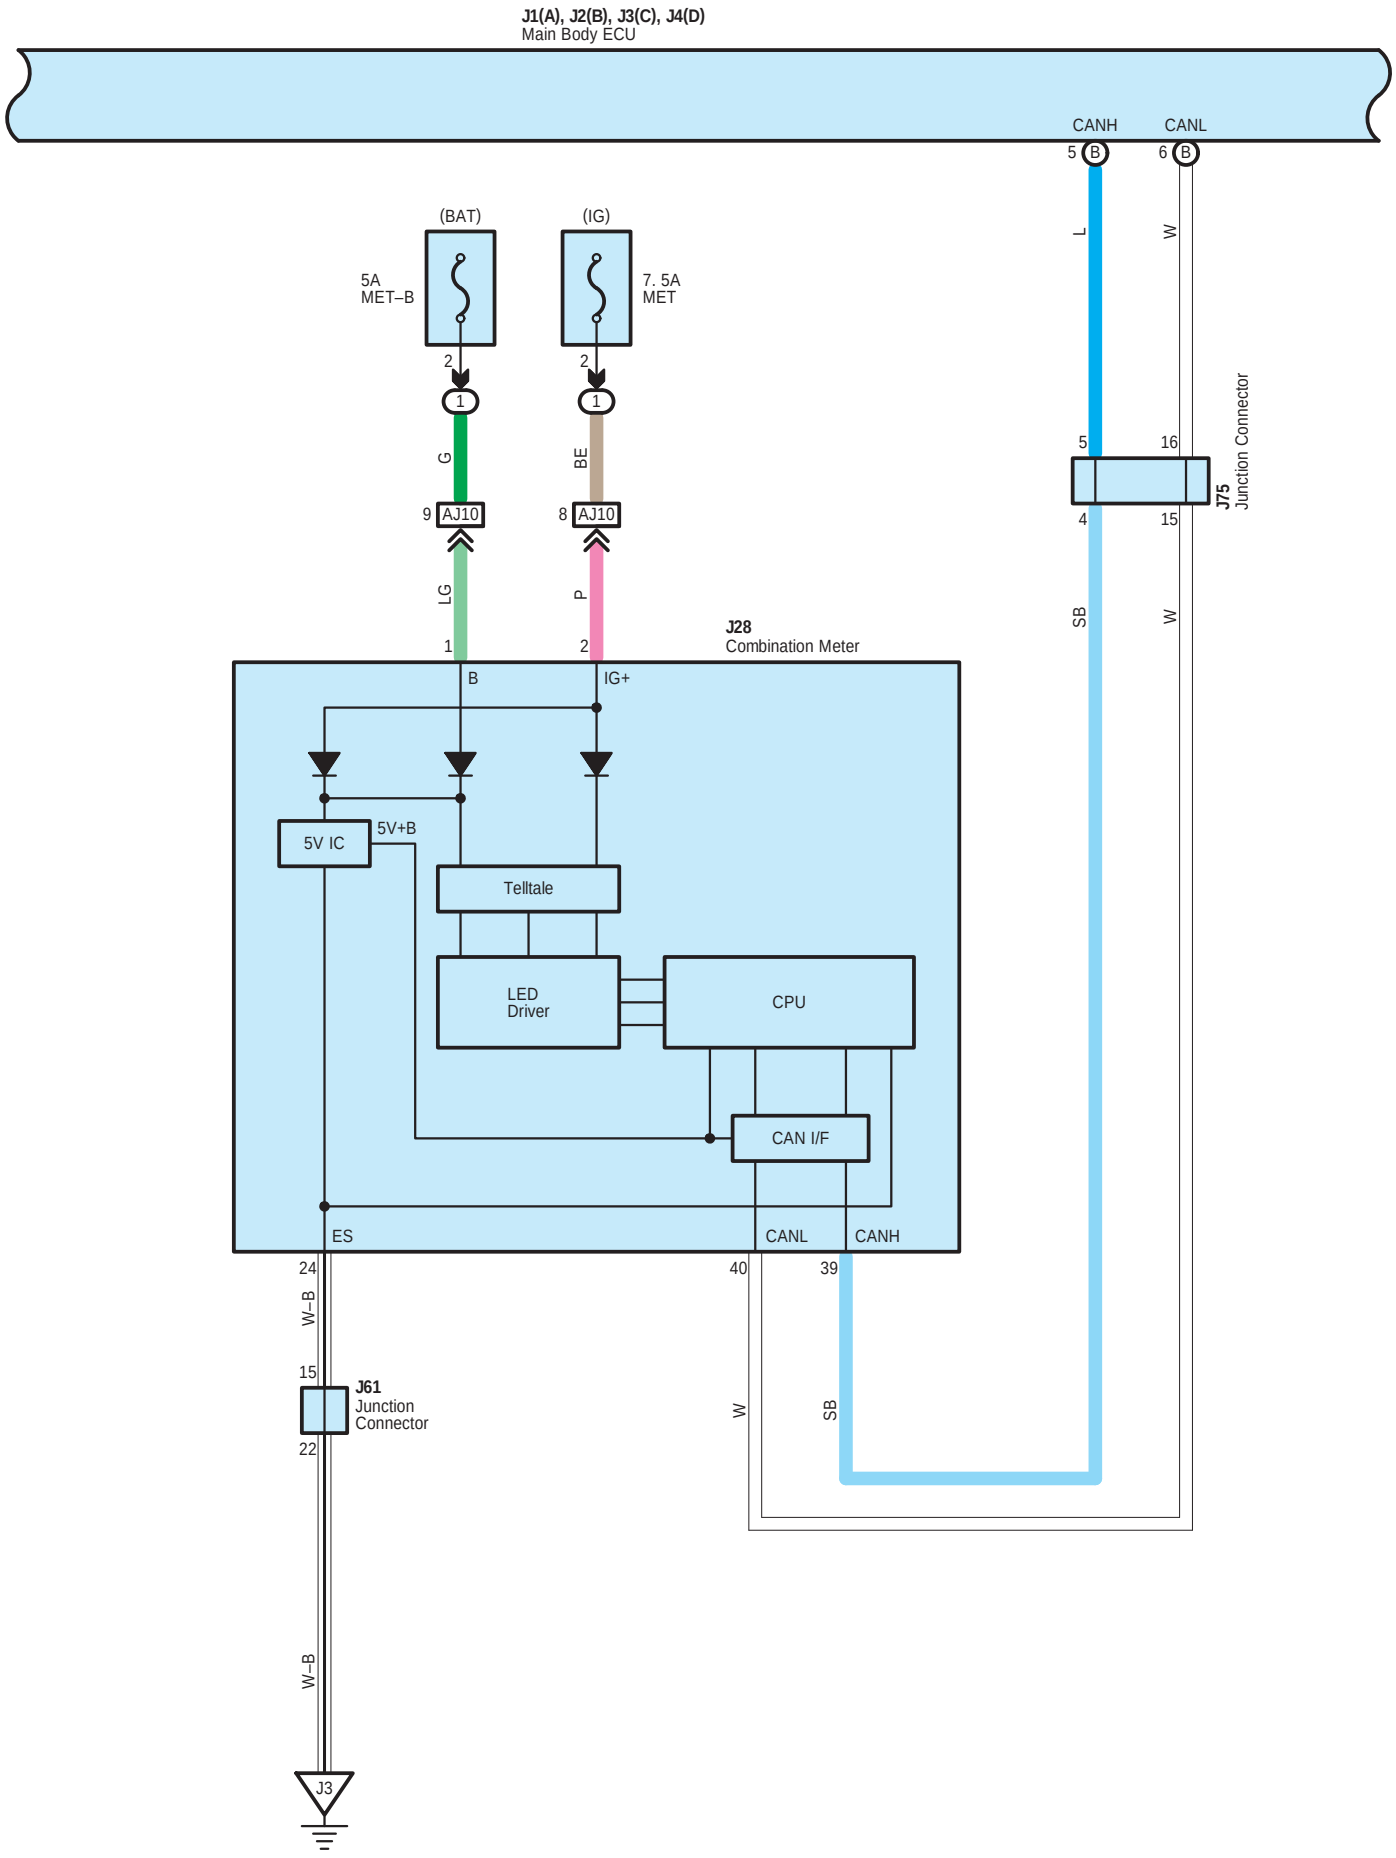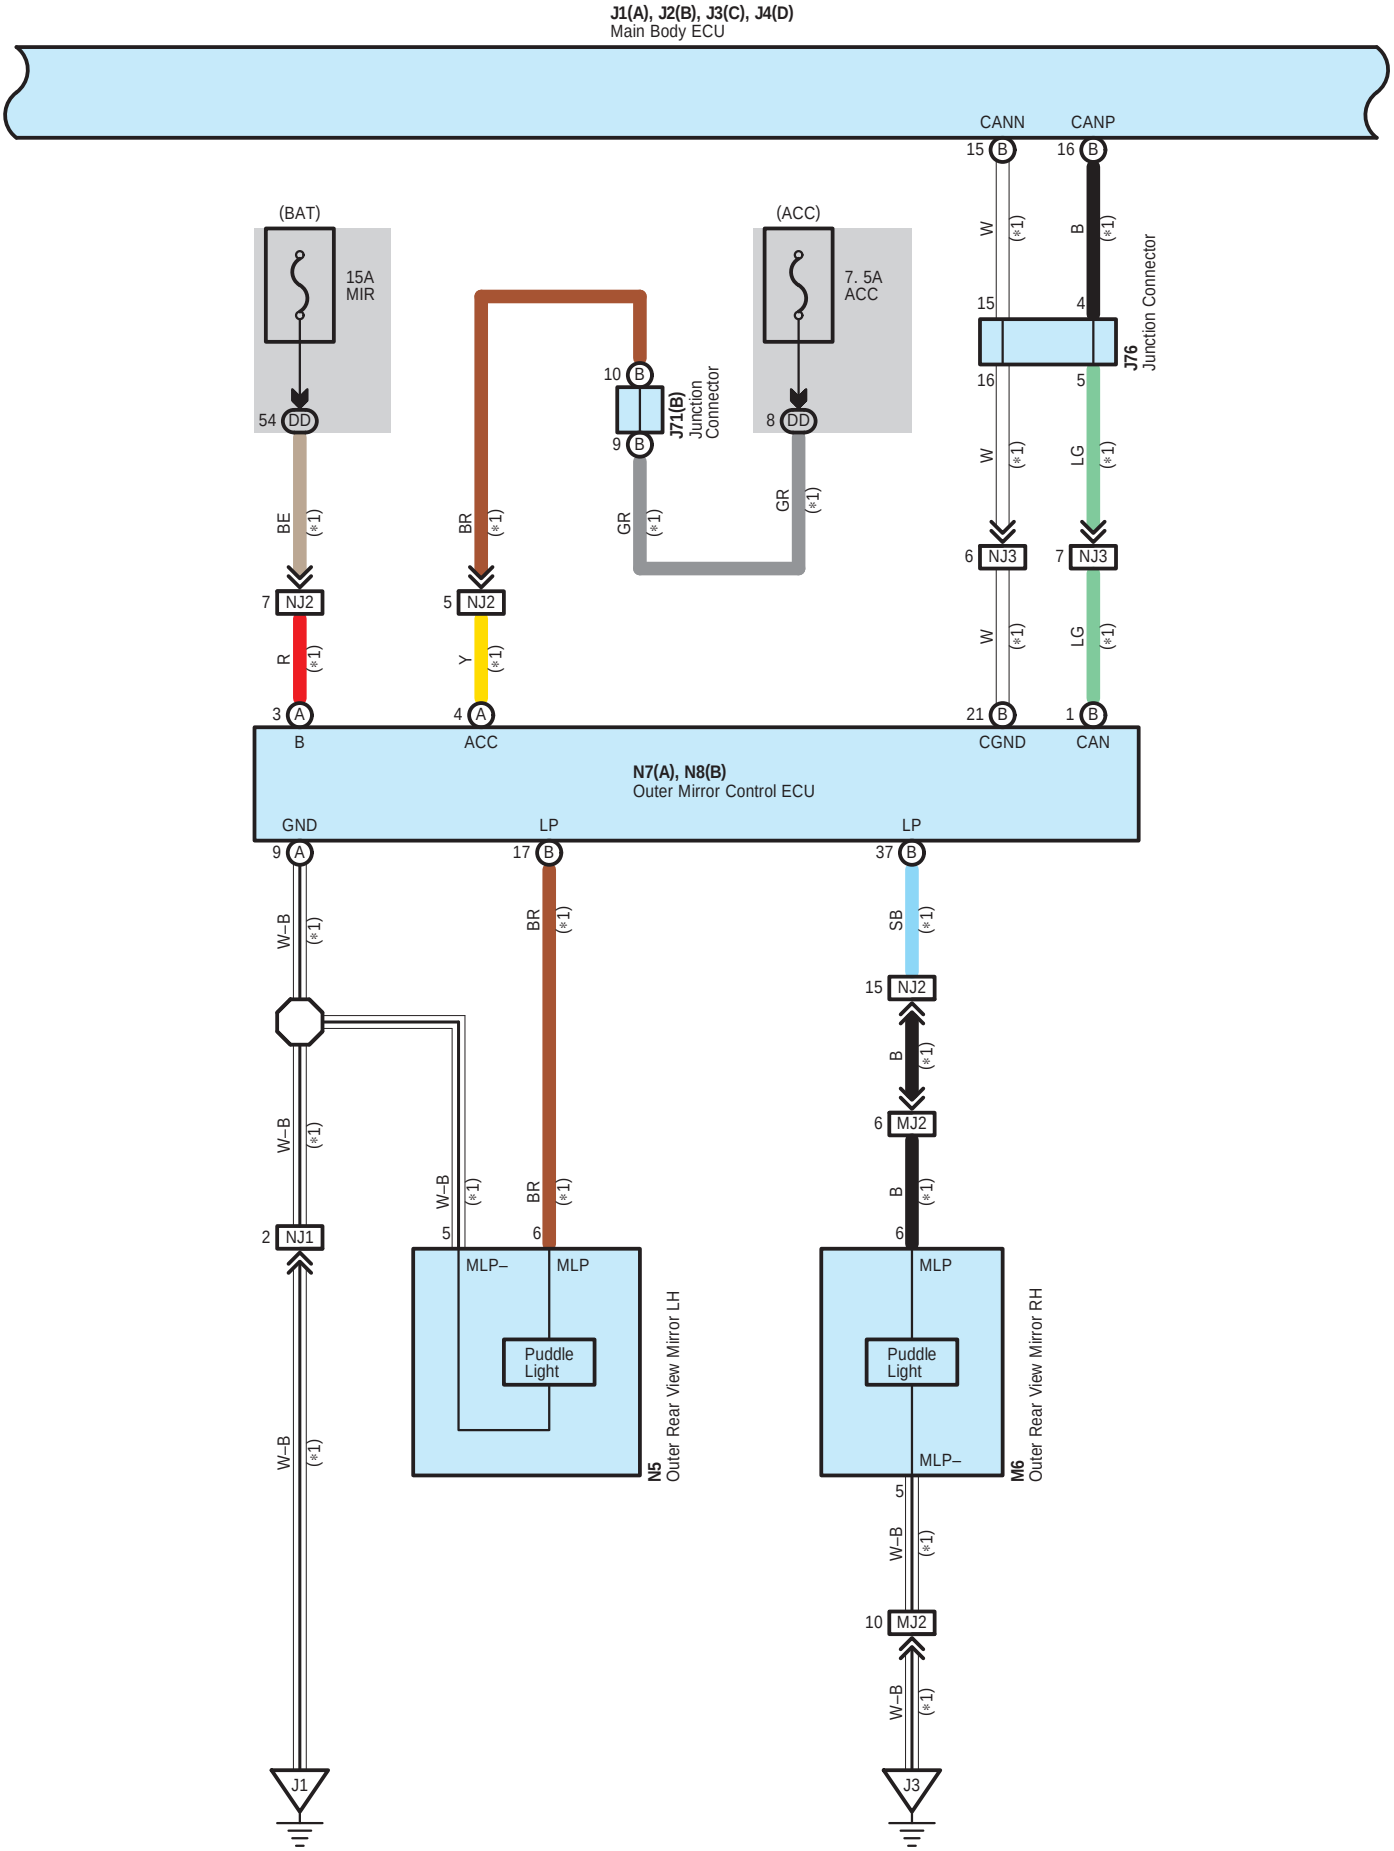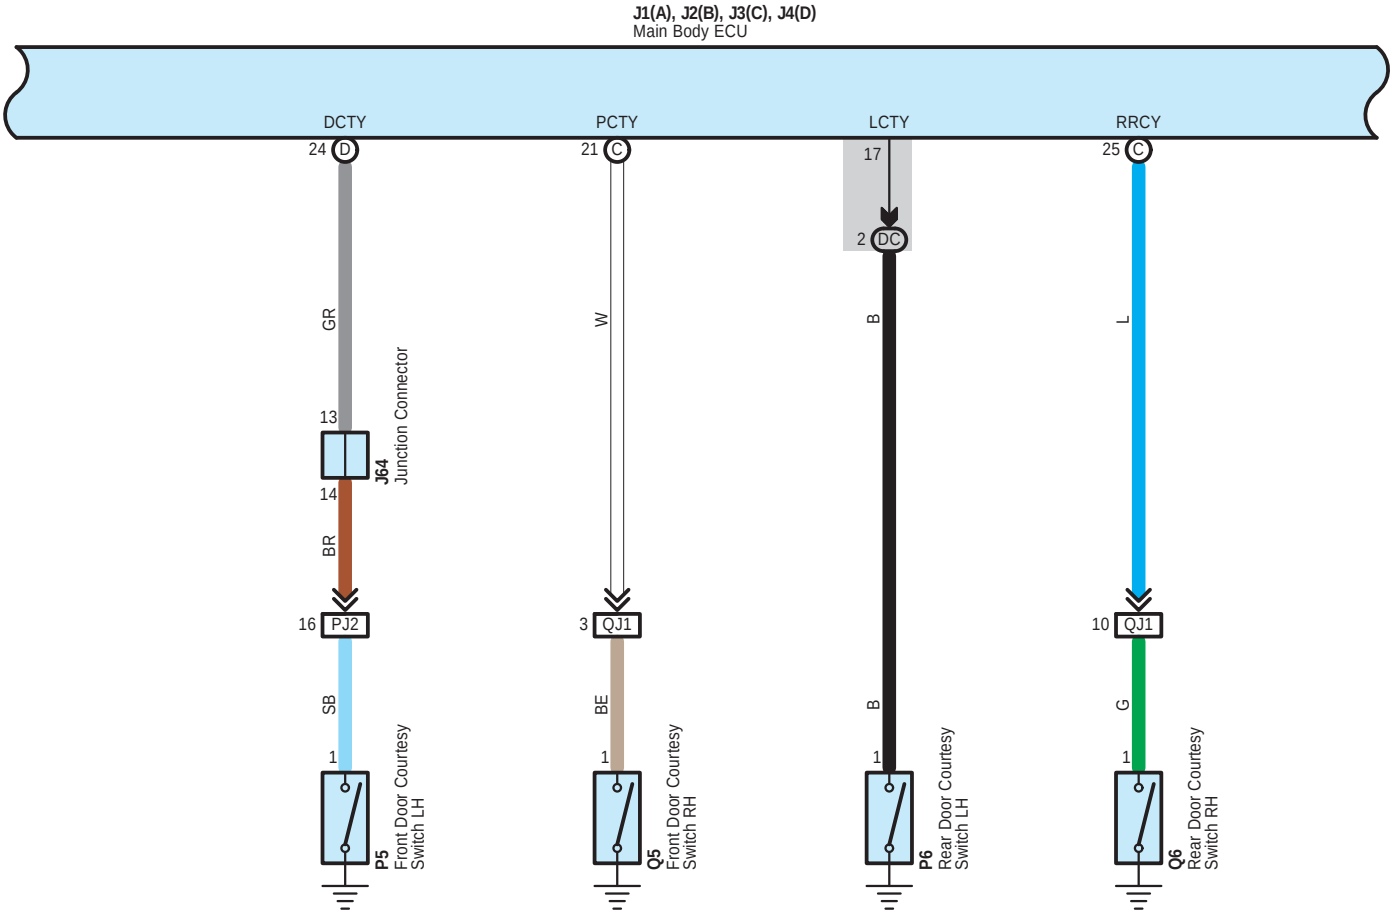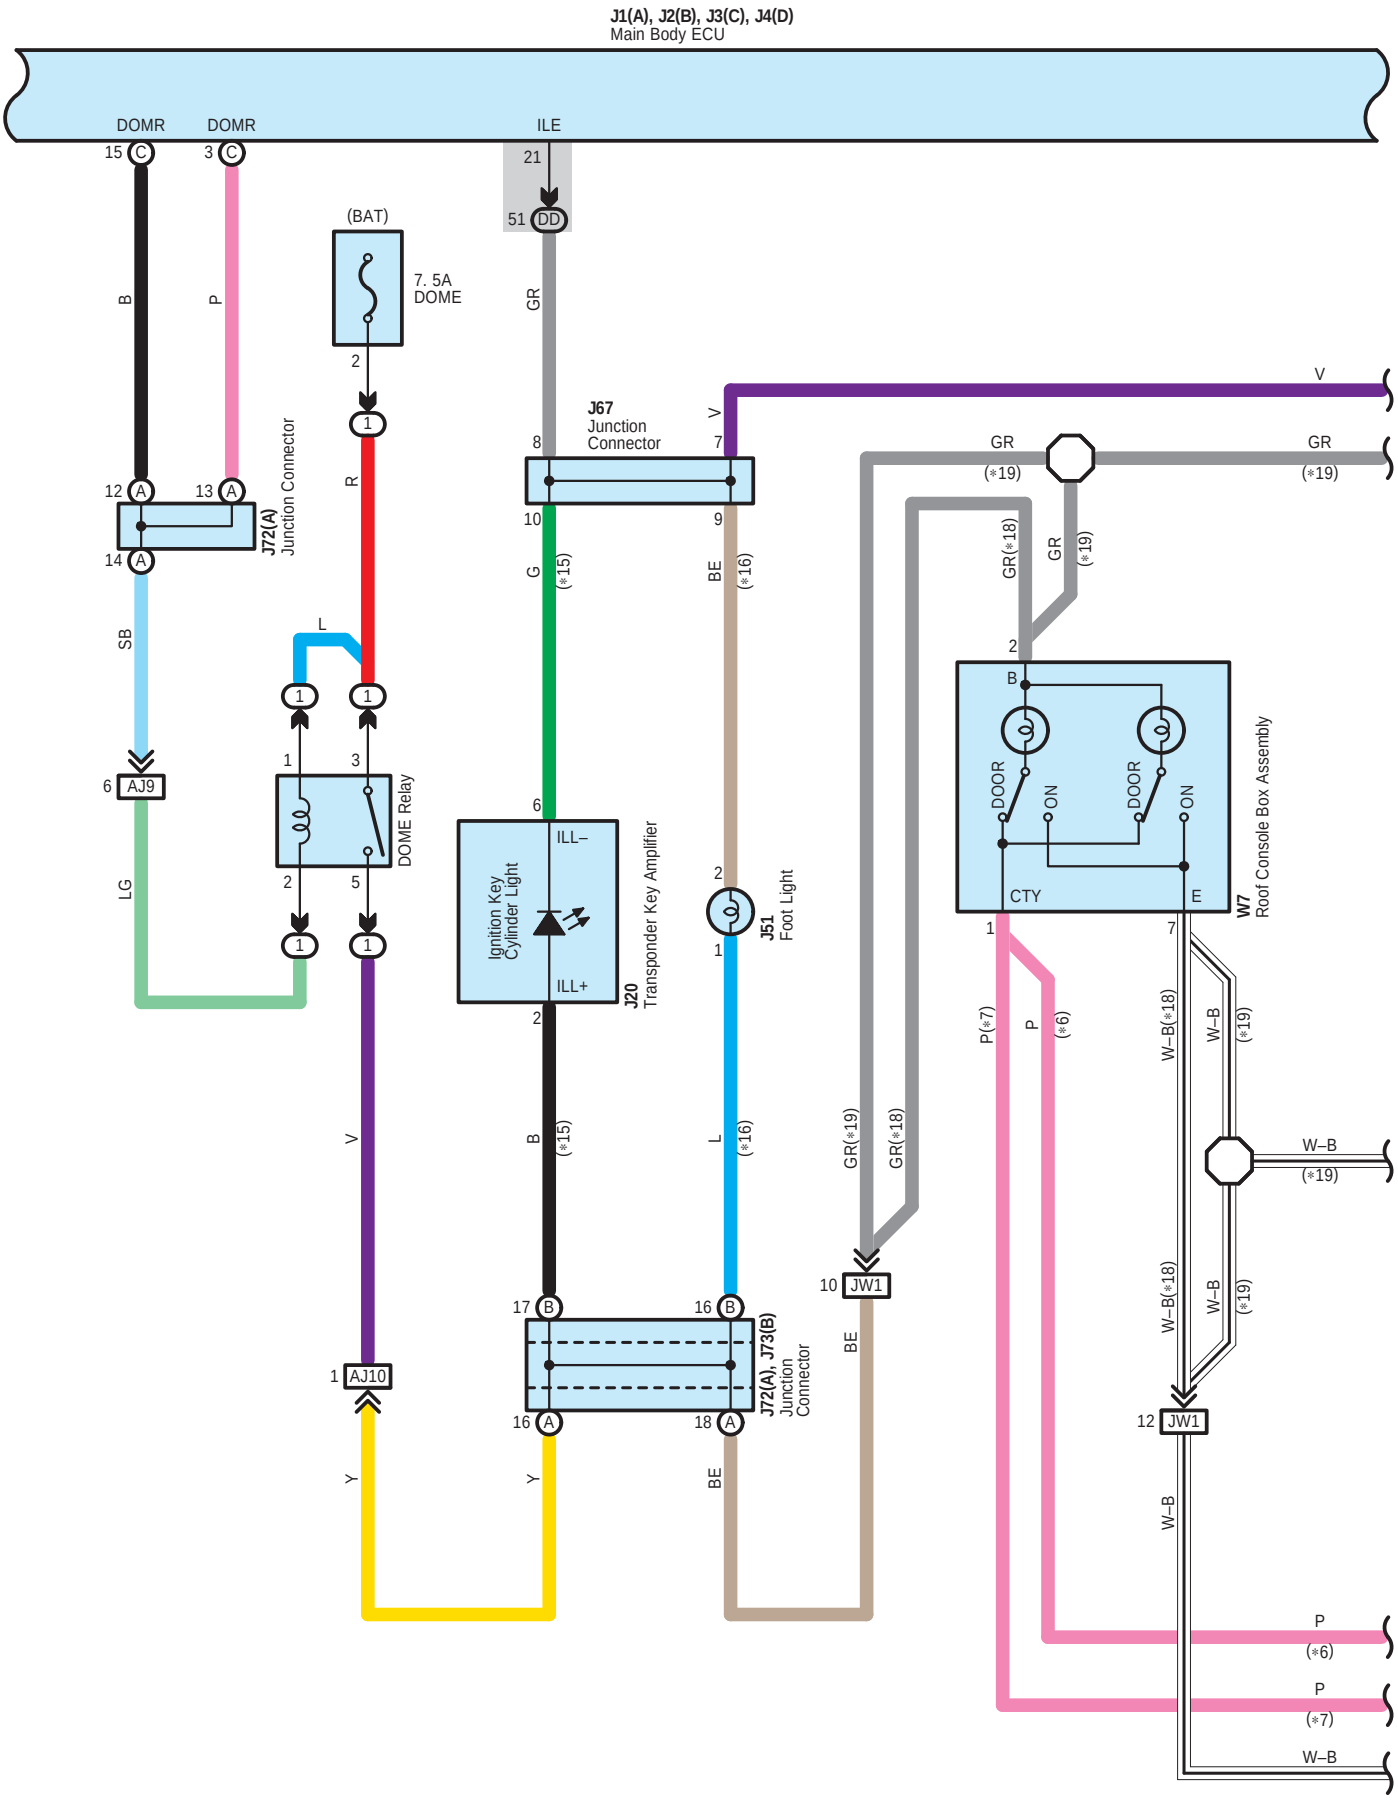


∗ 1 : w/ Seat Position Memory


J1(A), J2(B), J3(C), J4(D)
Main Body ECU
DOMR
DOMR
ILE
15 C
3 C
21
51 DD
(BAT)
7. 5A
DOME
2
1
B
P
GR
R
L
SB
LG
V
Y
12 A
13 A
14 A
J72(A)
Junction Connector
6 AJ9
1 3
2 5
DOME Relay
1 AJ10
J67
Junction
Connector
8 7
10 9
G (*15)
BE (*16)
6
ILL–
ILL+
Ignition Key
Cylinder Light
J20
Transponder Key Amplifier
2
B (*15)
L (*16)
17 B
16 B
16 A
18 A
J72(A), J73(B)
Junction
Connector
BE
J51
Foot Light
GR (*19)
GR(*18)
10 JW1
V
GR
(*19)
GR(*18)
GR
(*19)
2
B
DOOR
ON
DOOR
ON
CTY
E
W7
Roof Console Box Assembly
1
7
P(*7)
P
(*6)
W–B(*18)
W–B
(*19)
W–B
(*19)
W–B(*18)
W–B
(*19)
12 JW1
W–B
P
(*6)
P
(*7)
W–B

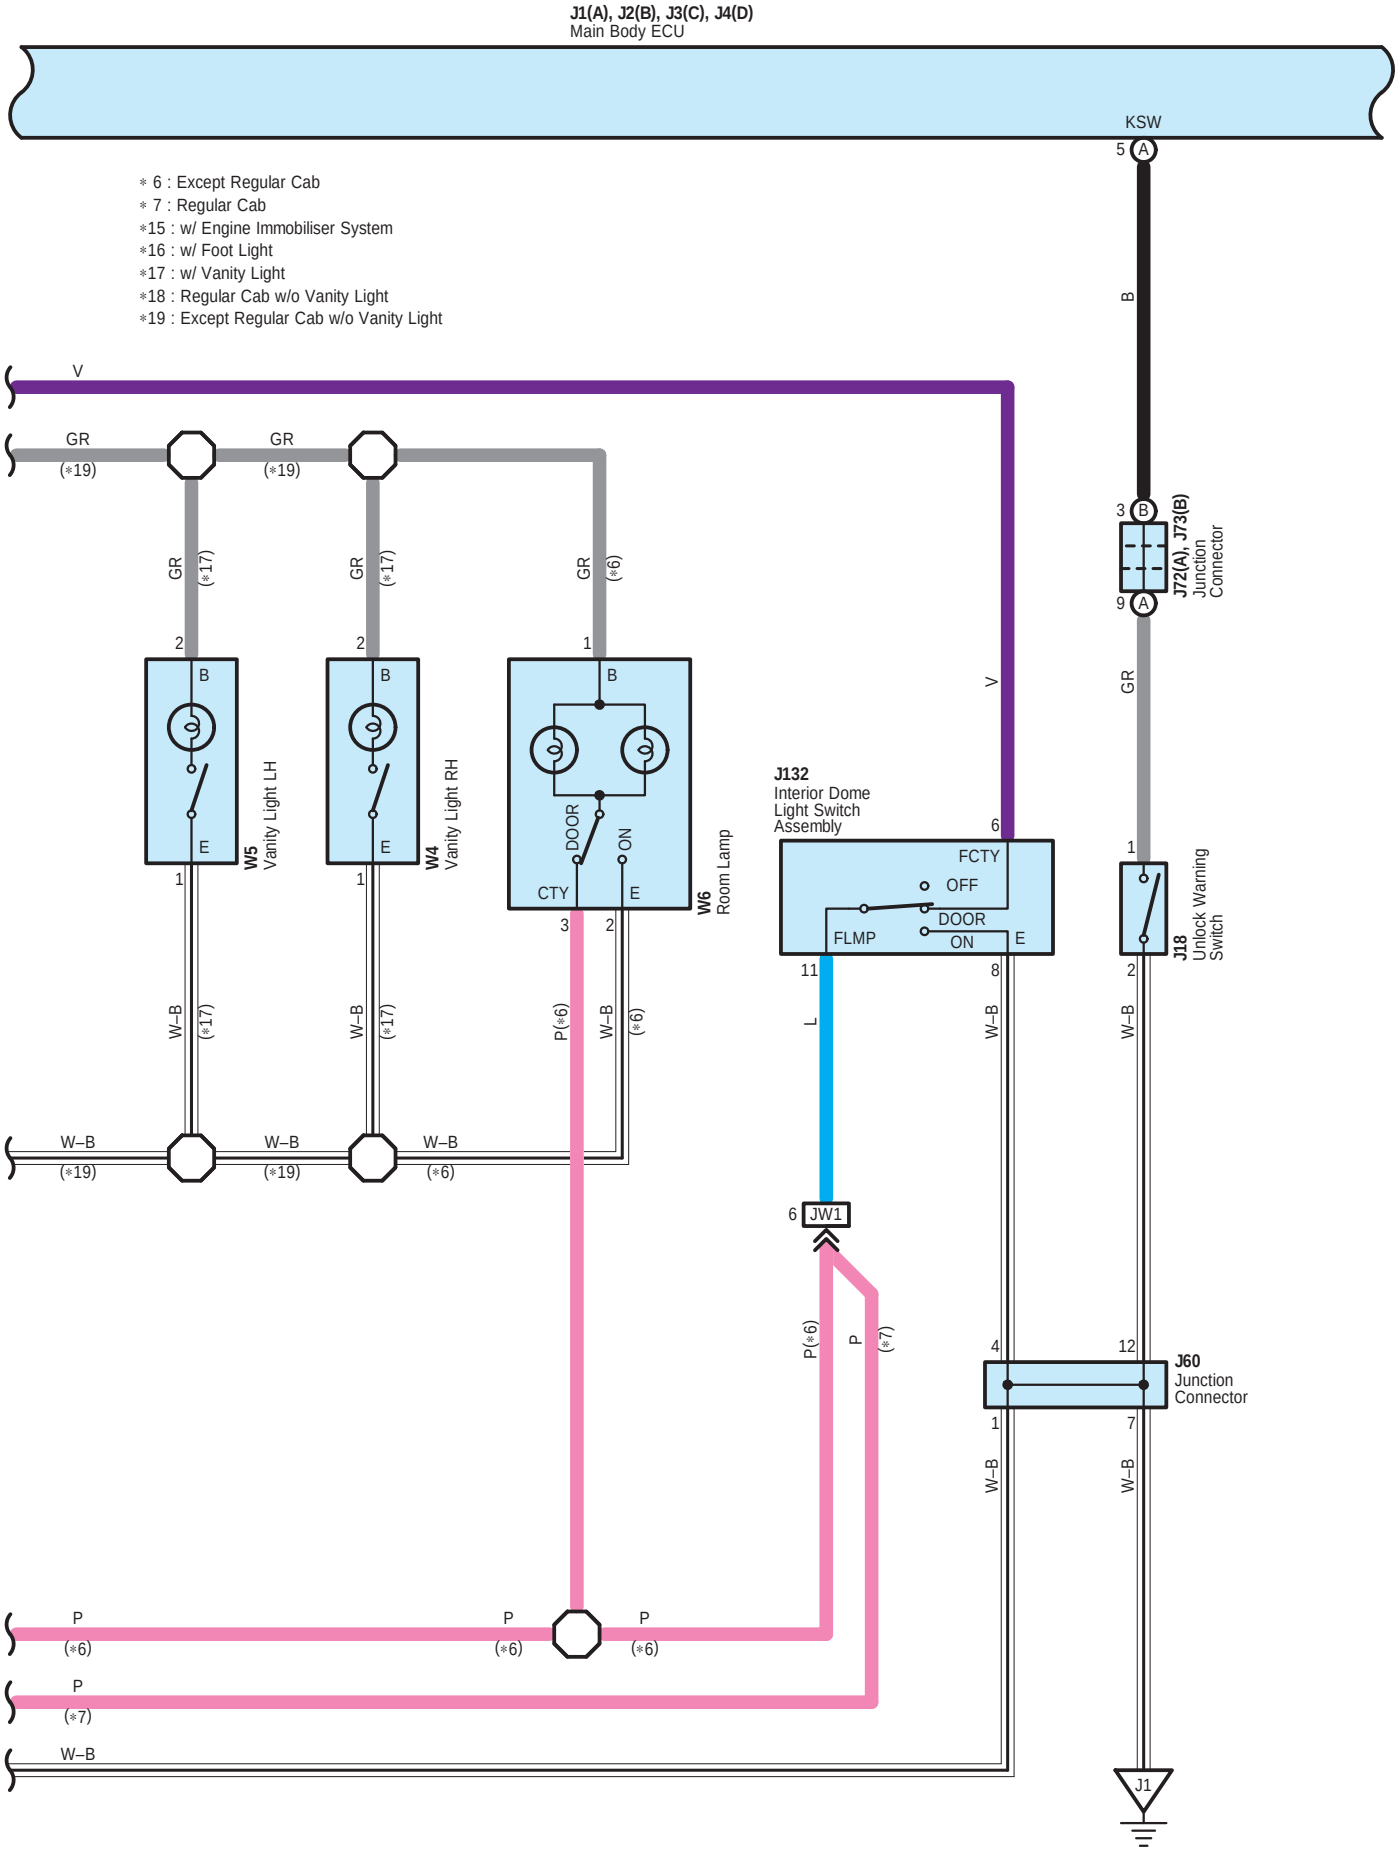

J1(A), J2(B), J3(C), J4(D)
Main Body ECU
KSW
5 A
B
3 B
J72(A), J73(B)
Junction Connector
9 A
GR
1
J18
Unlock Warning Switch
2
W–B
12
J60
Junction Connector
7
W–B
J1
∗ 6 : Except Regular Cab
∗ 7 : Regular Cab
∗15 : w/ Engine Immobiliser System
∗16 : w/ Foot Light
∗17 : w/ Vanity Light
∗18 : Regular Cab w/o Vanity Light
∗19 : Except Regular Cab w/o Vanity Light
V
GR
(∗19)
GR
(∗19)
GR
(∗17)
GR
(∗17)
GR
(∗6)
2
B
E
1
W5
Vanity Light LH
2
B
E
1
W4
Vanity Light RH
1
B
DOOR
ON
CTY
E
3
2
W6
Room Lamp
W–B
(∗17)
W–B
(∗17)
P(∗6)
W–B
(∗6)
W–B
(∗19)
W–B
(∗19)
W–B
(∗6)
J132
Interior Dome
Light Switch
Assembly
6
FCTY
OFF
DOOR
ON
FLMP
E
11
8
L
W–B
6 JW1
P(∗6)
P
(∗7)
4
1
W–B
P
(∗6)
P
(∗6)
P
(∗6)
P
(∗7)
W–B

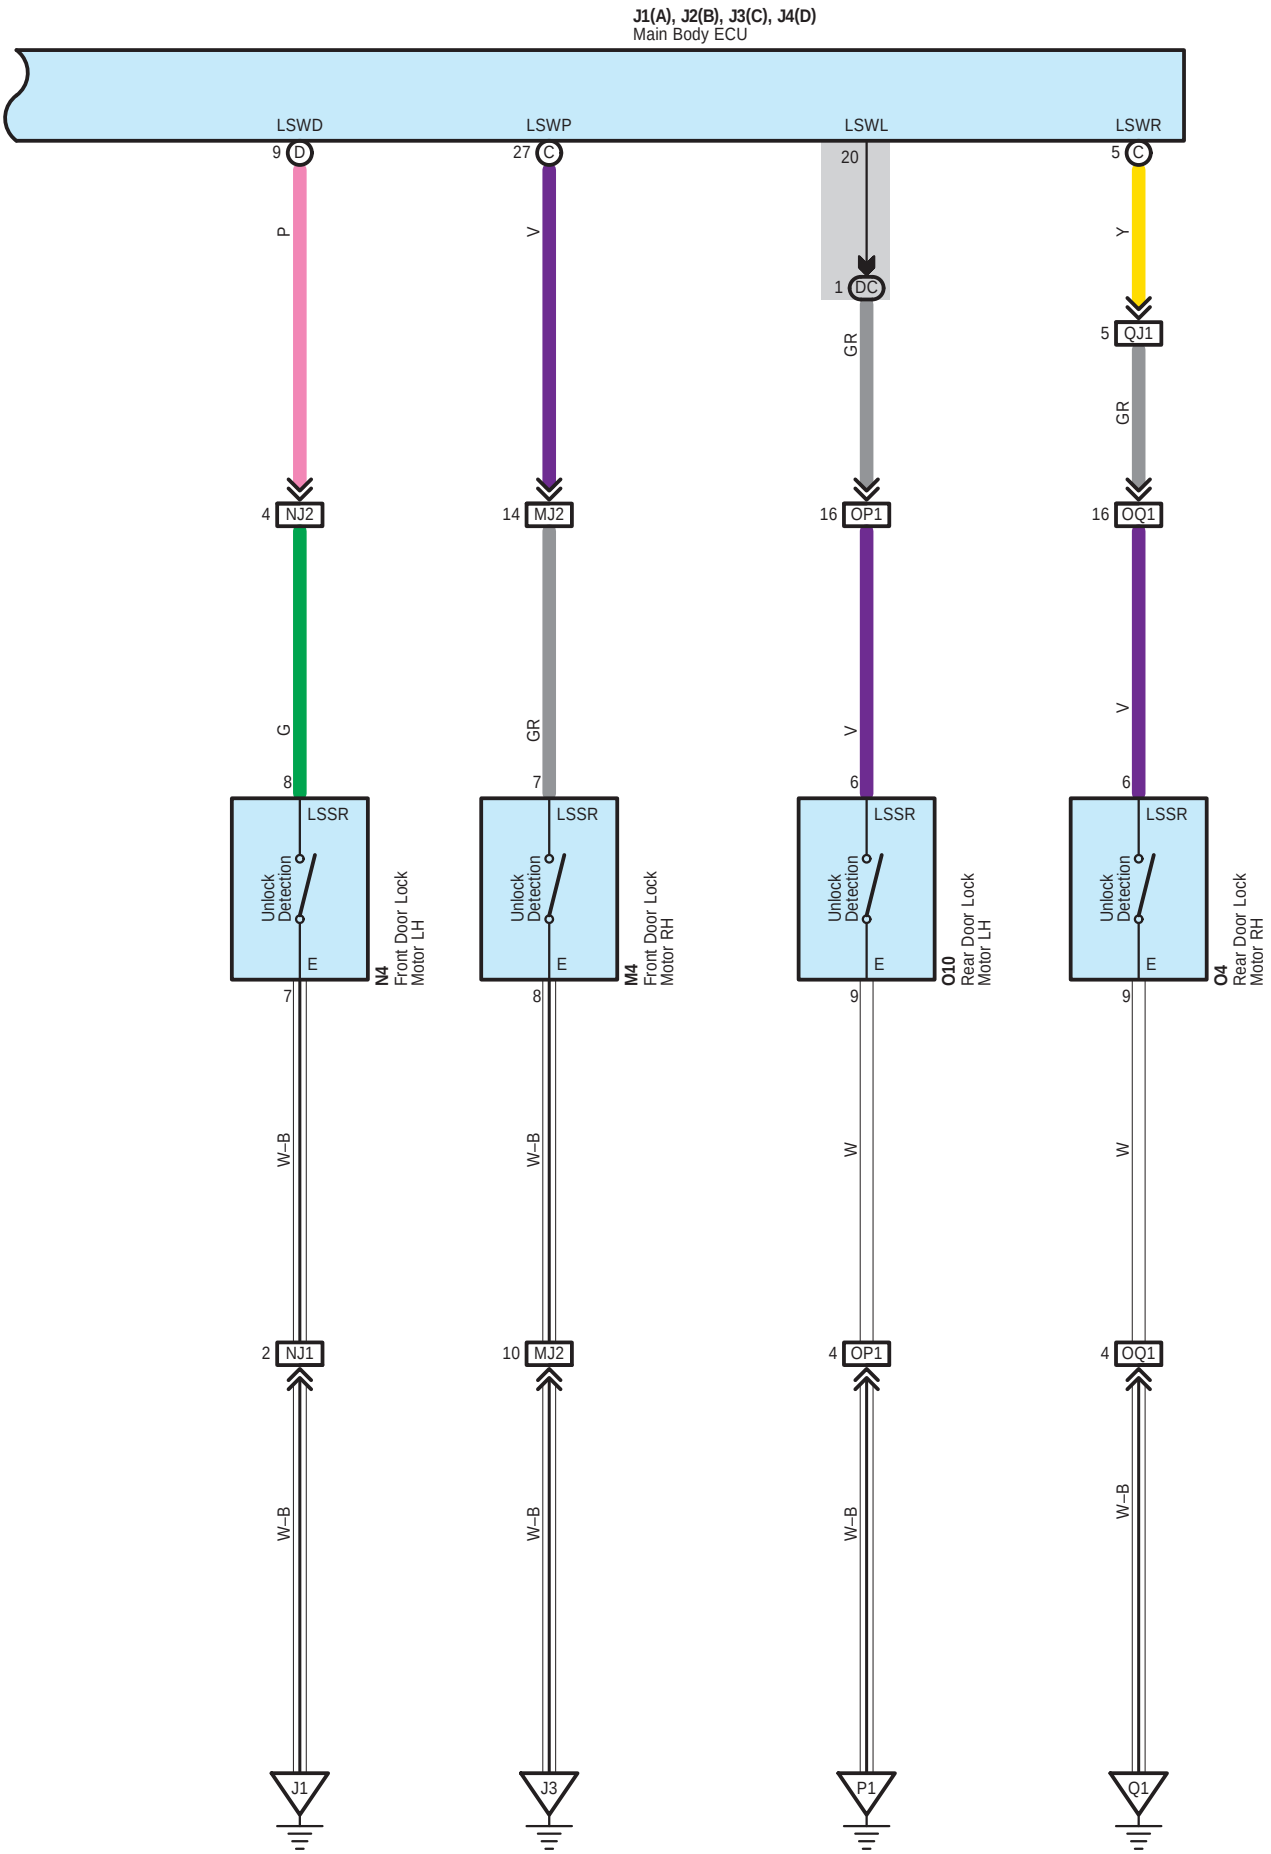
J1(A), J2(B), J3(C), J4(D)
Main Body ECU
LSWD
LSWP
LSWL
LSWR
9 D
27 C
20
1 DC
5 C
P
V
GR
Y
5 QJ1
GR
4 NJ2
14 MJ2
16 OP1
16 OQ1
G
GR
V
V
8
7
6
6
LSSR
Unlock Detection
E
N4 Front Door Lock Motor LH
M4 Front Door Lock Motor RH
O10 Rear Door Lock Motor LH
O4 Rear Door Lock Motor RH
7
8
9
9
W-B
W-B
W
W
2 NJ1
10 MJ2
4 OP1
4 OQ1
W-B
W-B
W-B
W-B
J1
J3
P1
Q1


J 1
White

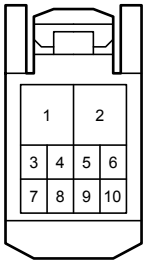


J 2
White

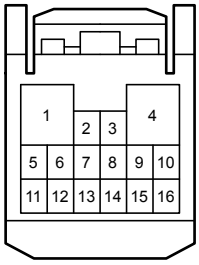

J 3
White

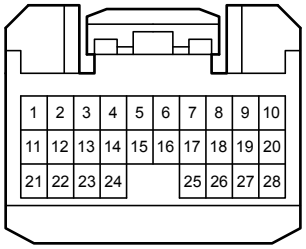


J 4
White

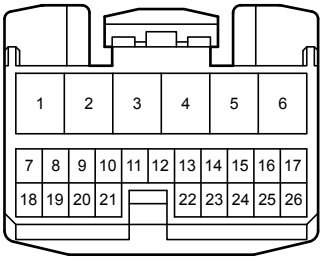


J 18
White




J 20
Black

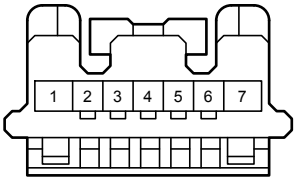


J 28
Black

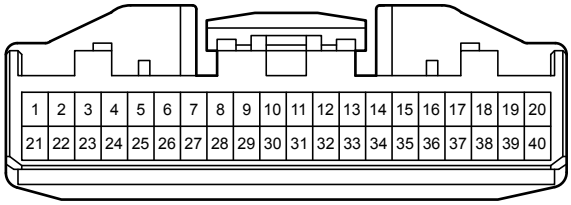


J 51
Black

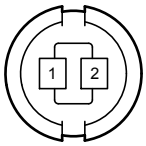


J 60
White

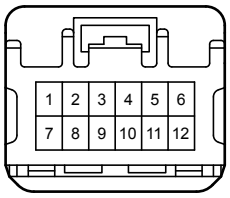


J 61
Gray

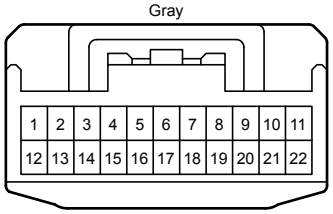


J 64
White

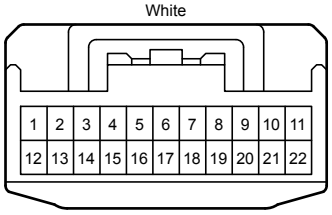


J 67
Blue

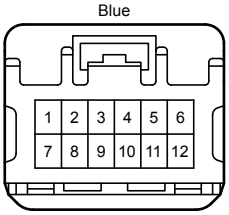


J 71
White

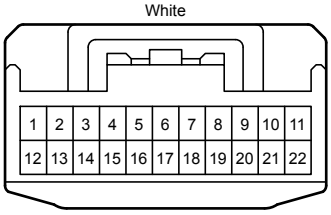


J 72
Black

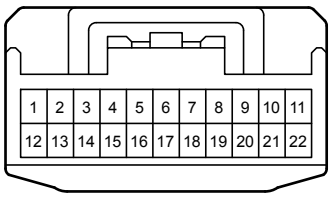


J 73
Black

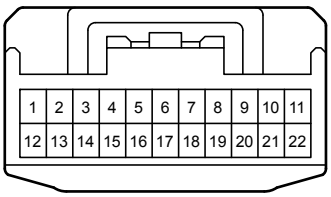


J 75
Gray

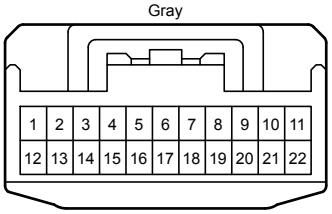


J 76
Gray

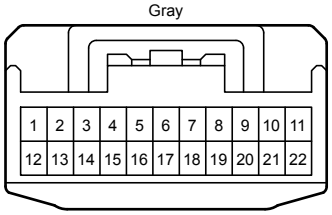


J132
Black




M 4
White

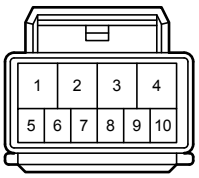


M 6
White

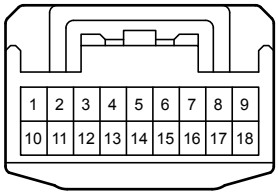


N 4
White

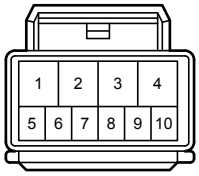


N 5
White

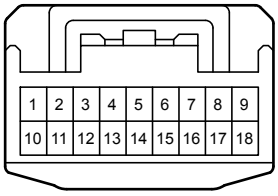


N 7
White

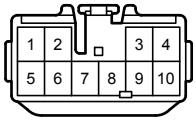


N 8
White

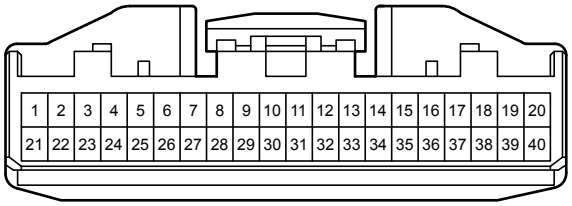

O 4
White

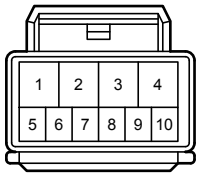

O 10
White

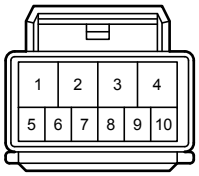

P 5
White



P 6
White



Q 5
White



Q 6
White




W 4
White




W 5
White




W 6
White

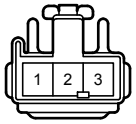


W 7
White

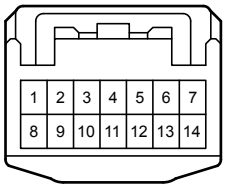


DB
White

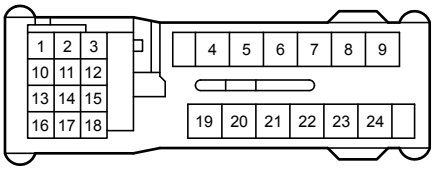


DC
White

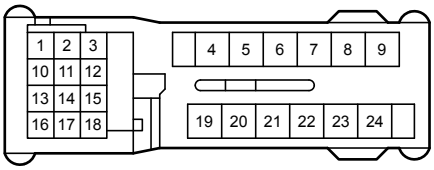


DD
White

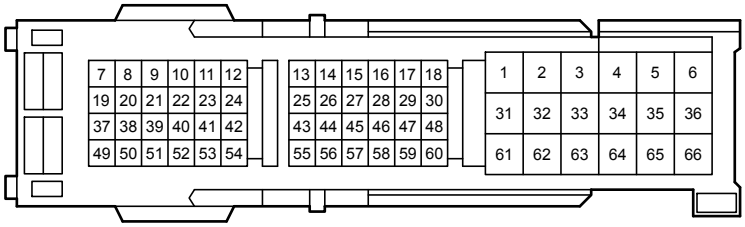


AJ9
White

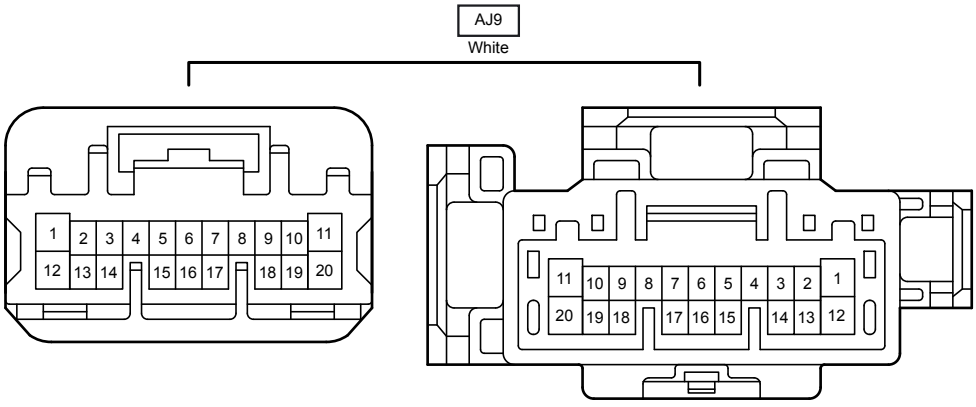


AJ10
Gray

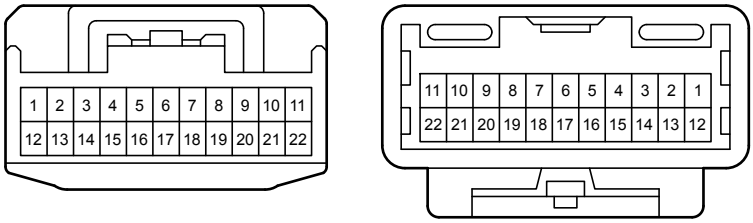


JW1
White

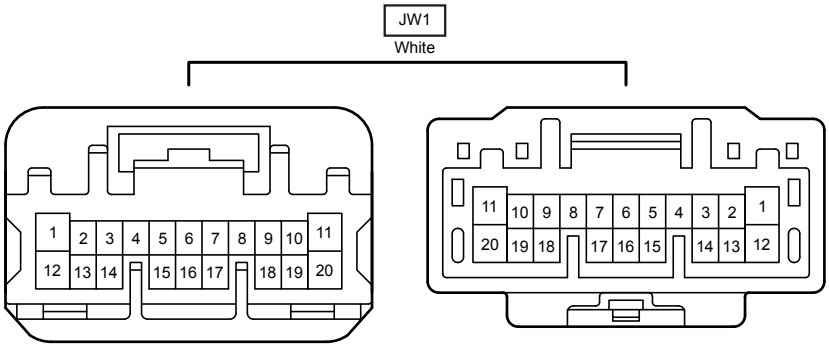


MJ2
Blue

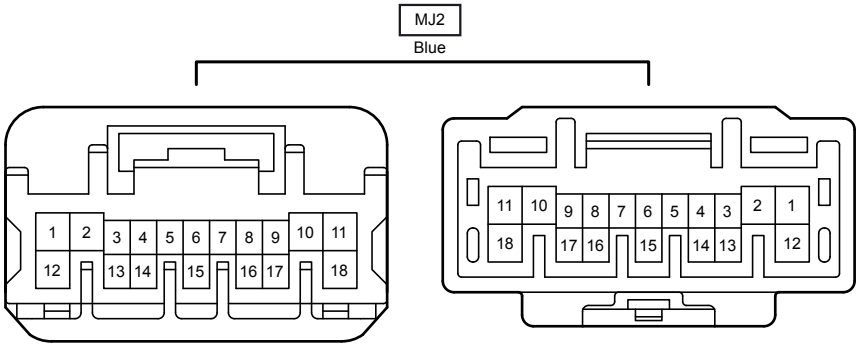


NJ1
Blue

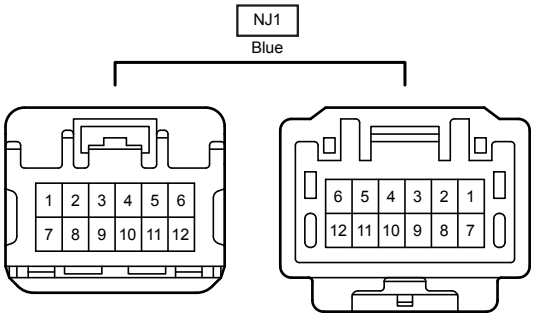


NJ2
White

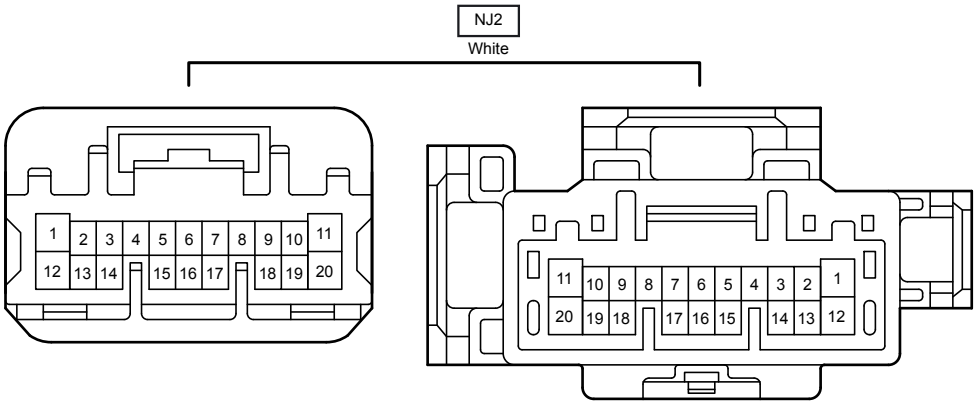


NJ3
Blue

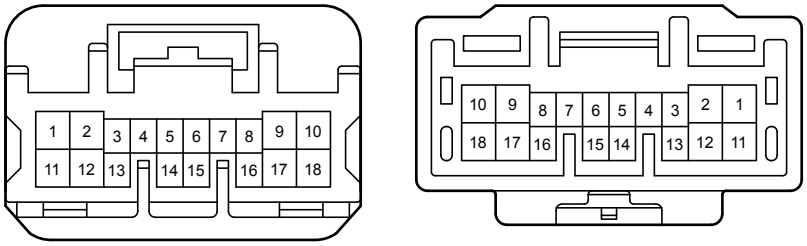


OP1
White

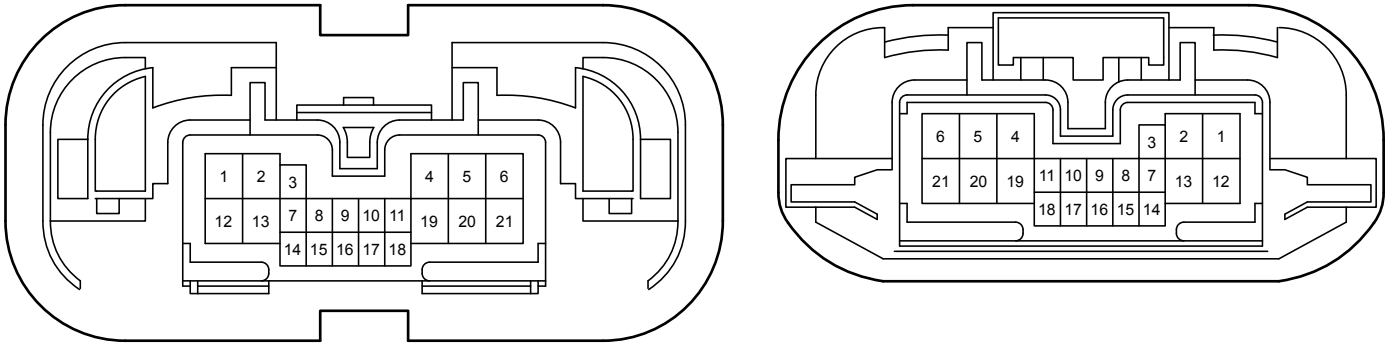


OQ1
White

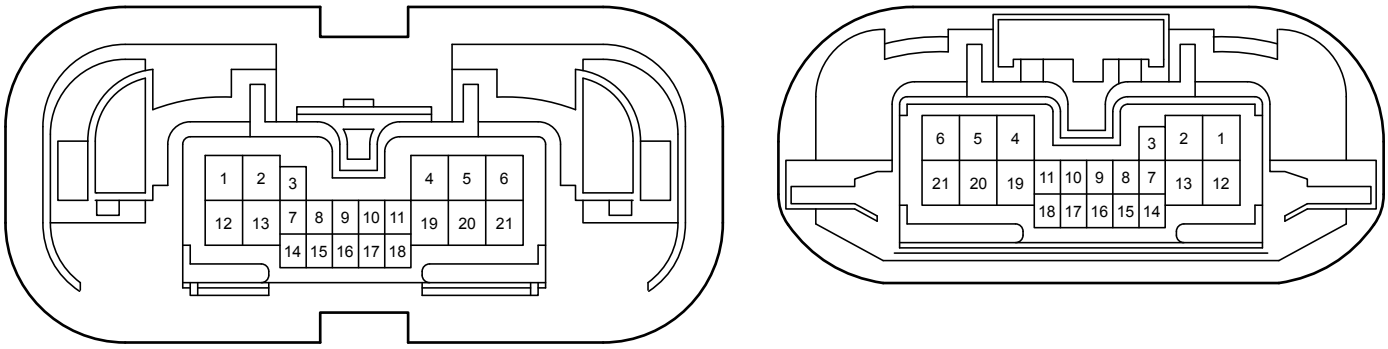

PJ2
White

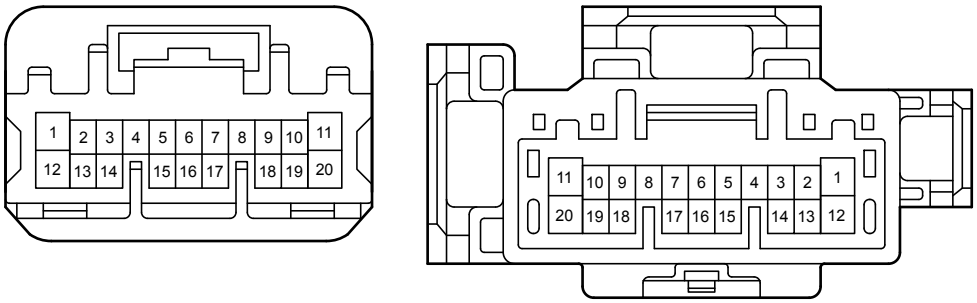

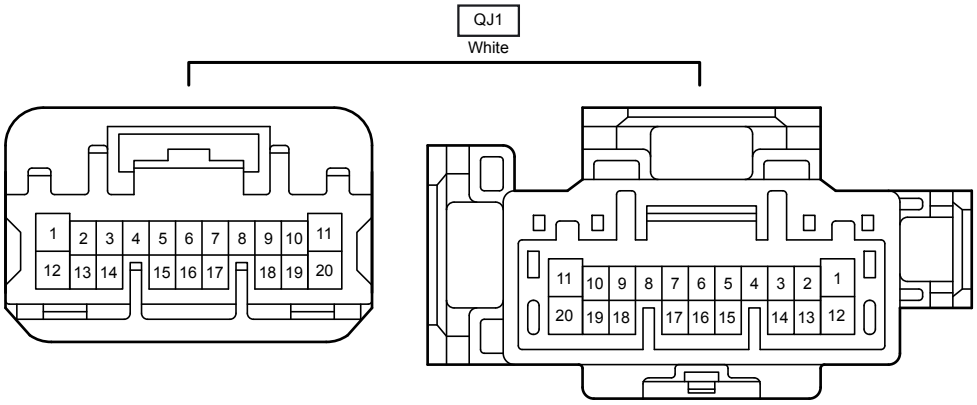
QJ1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12