





(BAT)
30A
FR P/SEAT
LH
4 DC
LG
1 PZ1
W
W
3 ZZ2
R
2
(BAT)
7. 5A
ECU–B1
2
1
GR
13 DB
11 DC
W
15 PZ1
LG
12 B
SYSB
Z9(A), Z10(B)
Front Power Seat Control
ECU and Switch LH
7 A
+B1
GND1
SGND
DBCL
2 A
1 B
10 B
W–B
BR
P
Z15
Front Power Seat Switch LH
(Seat Cushion Control)
Front
Rear
5
3
4
1
G
W
W–B
B
1 ZZ2
4 ZZ2
2 ZZ2
5 ZZ2
G
O
W–B
W–B
2
M
1
Z8
Front Power
Seat Cushion
Control Motor LH
BR
W–B
4 PZ1
W
6
2 PZ1
B
5
E
RDC
Buckle
Switch
P7
Front Seat Inner
Belt Switch LH
W–B
5 PZ1
W–B
P1
BR


Z9(A), Z10(B)
Front Power Seat Control ECU and Switch LH

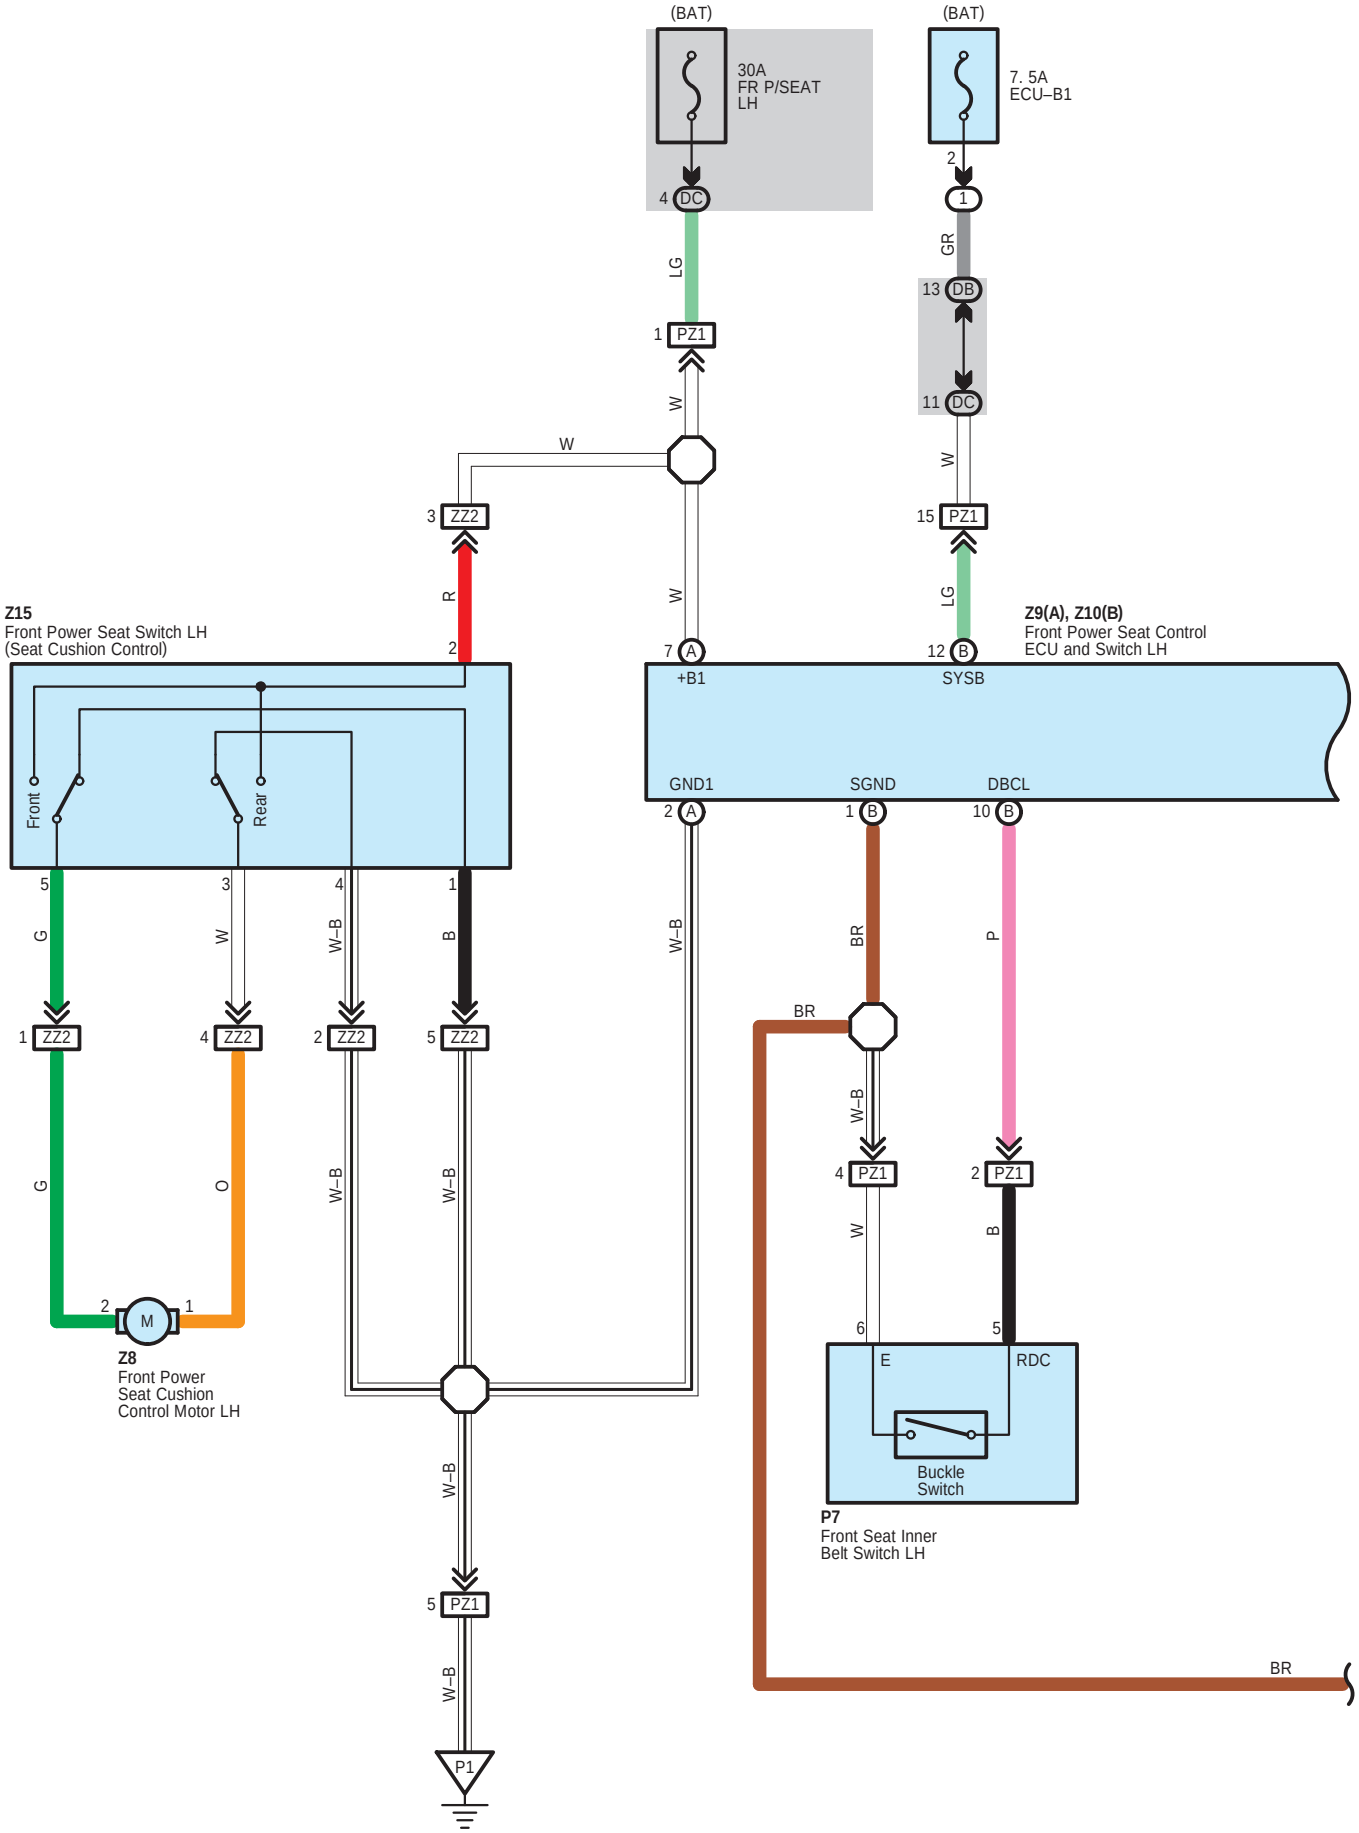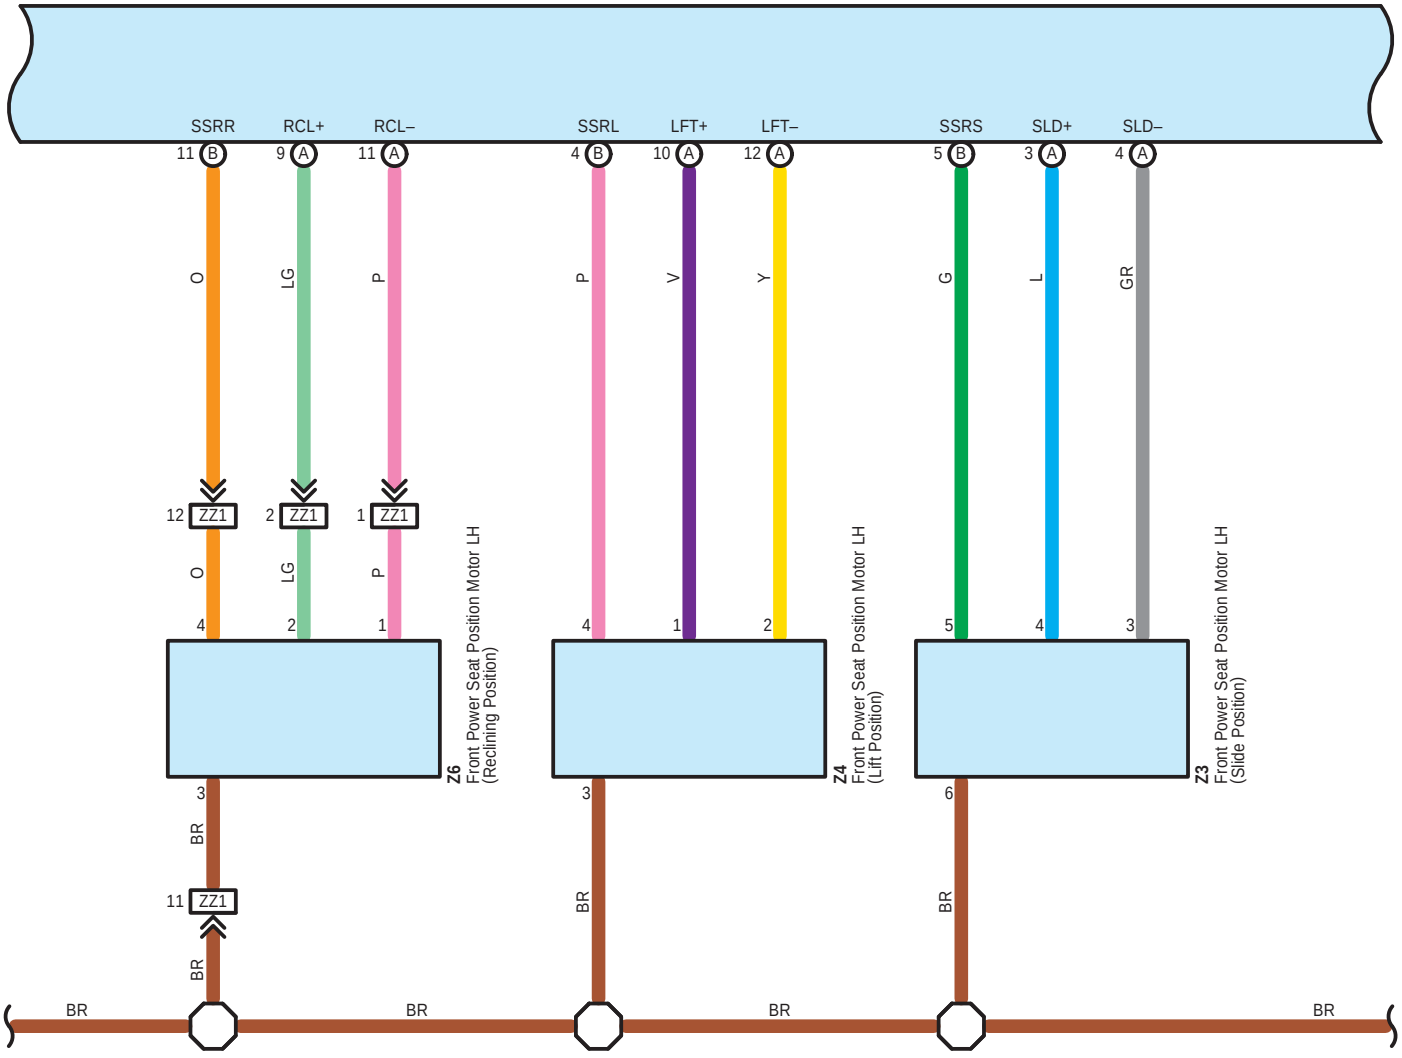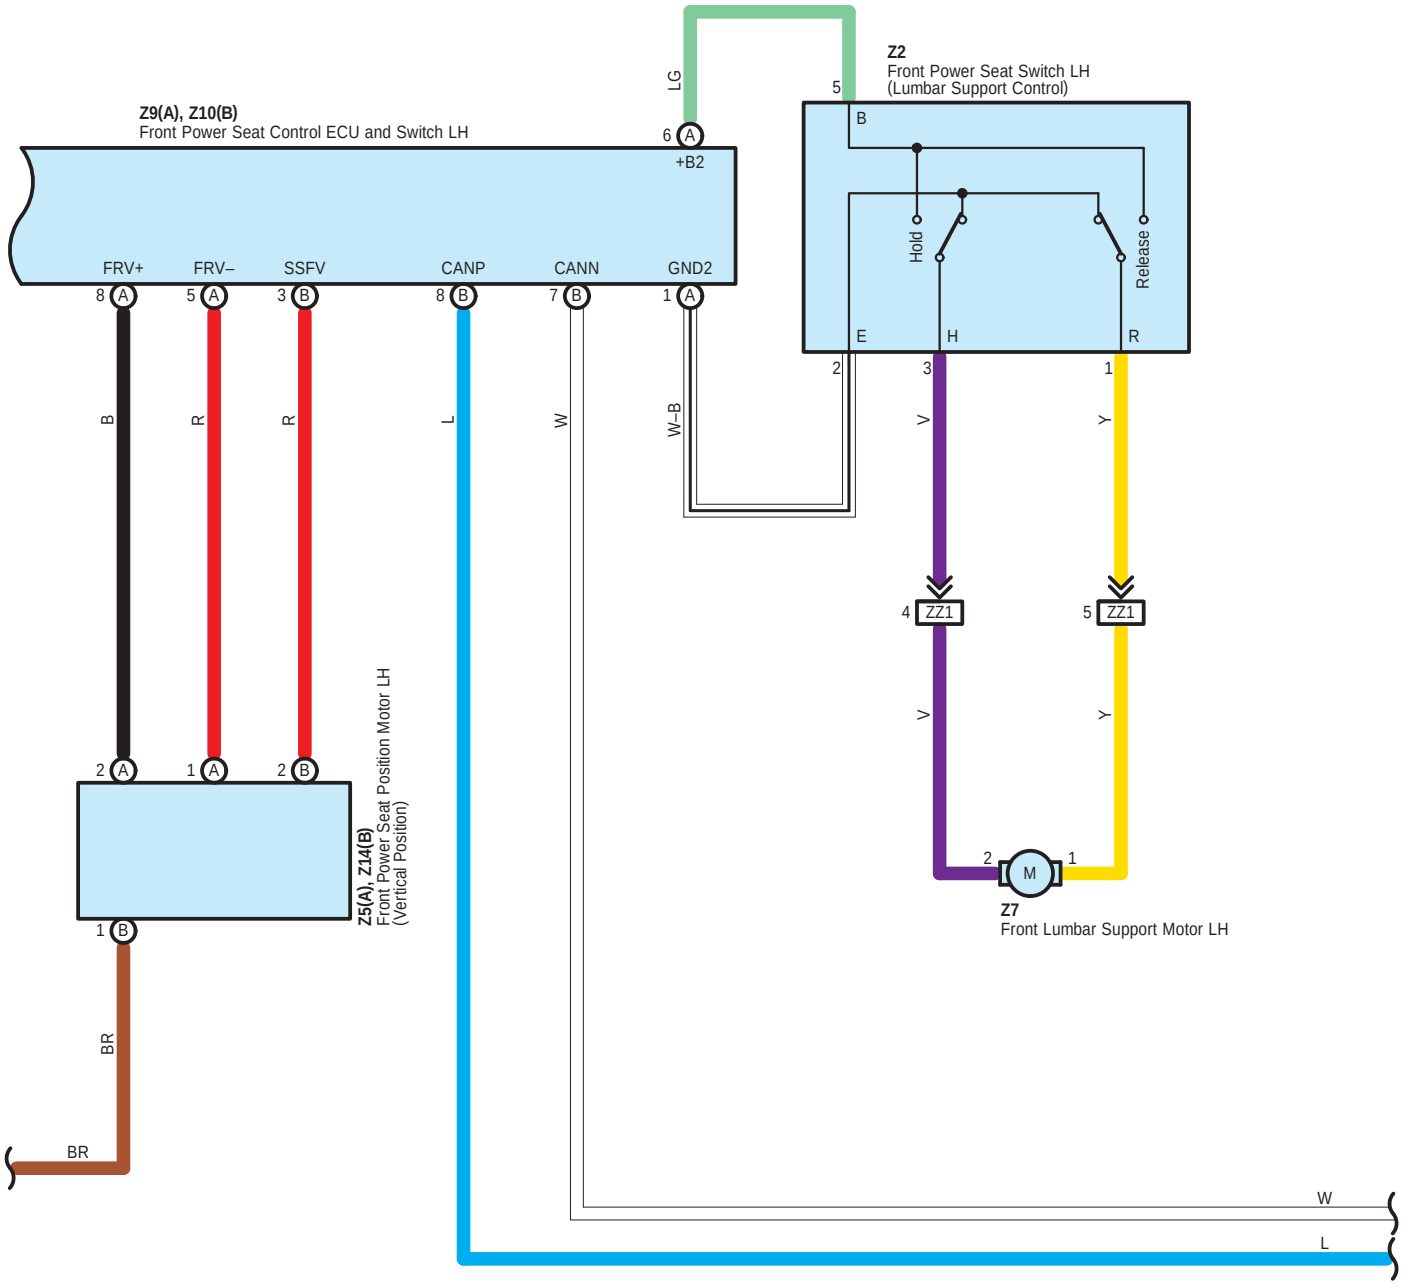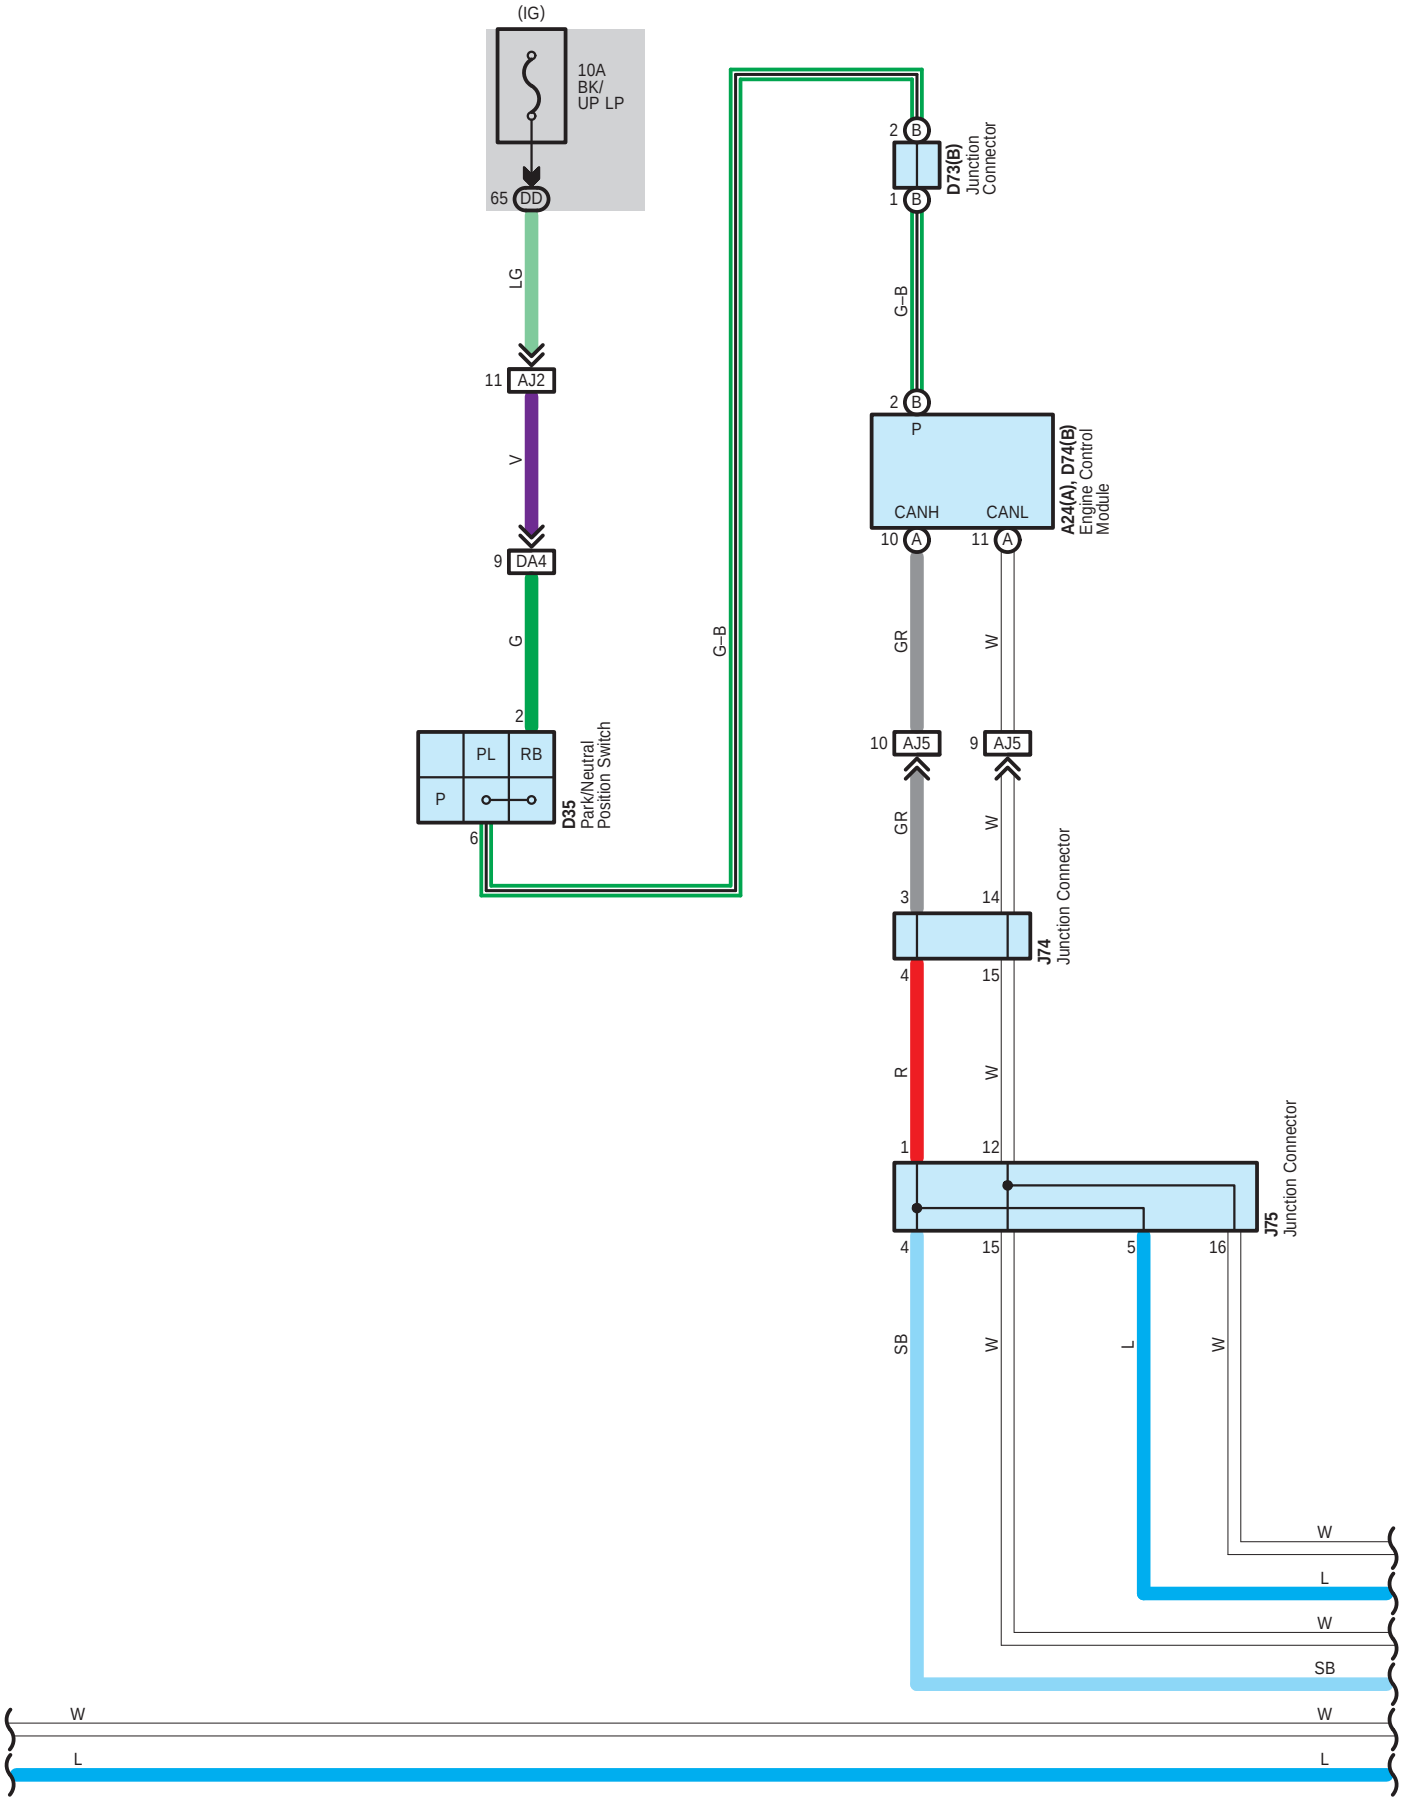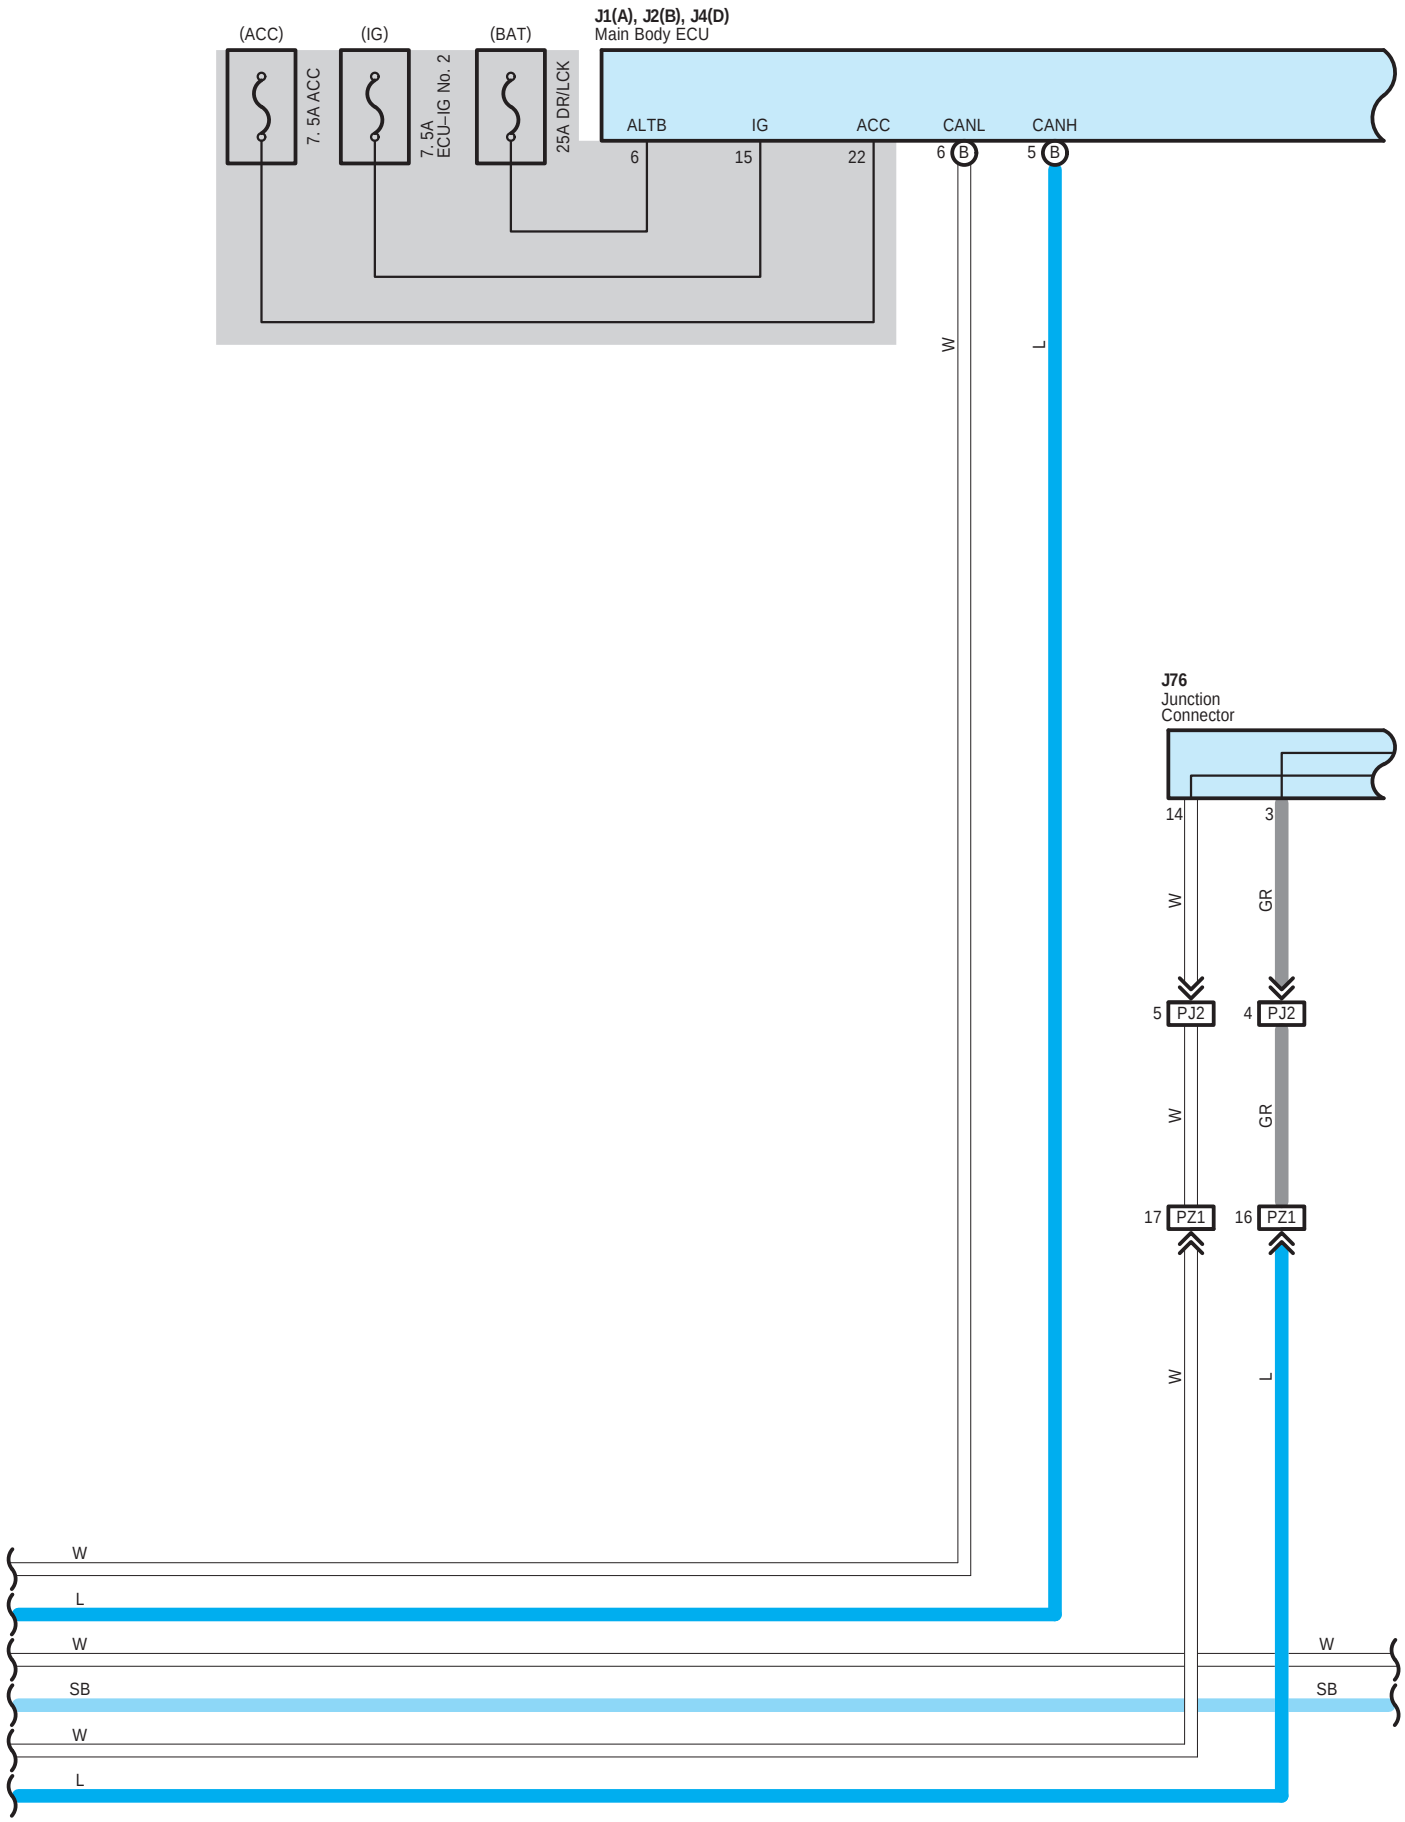




Z9(A), Z10(B)
Front Power Seat Control ECU and Switch LH
FRV+
FRV–
SSFV
CANP
CANN
GND2
+B2
LG
W–B
B
R
R
L
W
Z2
Front Power Seat Switch LH
(Lumbar Support Control)
Hold
Release
E
H
R
Y
Y
V
V
ZZ1
ZZ1
M
Z7
Front Lumbar Support Motor LH
Z5(A), Z14(B)
Front Power Seat Position Motor LH
(Vertical Position)
BR
BR
W
L


(IG)
10A
BK/
UP LP
65 DD
LG
11 AJ2
V
9 DA4
G
2
PL
RB
P
D35
Park/Neutral
Position Switch
6
G–B
2 B
1 B
D73(B)
Junction
Connector
G–B
2 B
P
CANH
CANL
10 A
11 A
A24(A), D74(B)
Engine Control
Module
GR
W
10 AJ5
9 AJ5
GR
W
3
14
J74
Junction Connector
4
15
R
W
1
12
J75
Junction Connector
4
15
5
16
SB
W
L
W
W
L
SB
W
L
W
L



(ACC)
(IG)
(BAT)
7. 5A ACC
7. 5A ECU–IG No. 2
25A DR/LCK
J1(A), J2(B), J4(D)
Main Body ECU
ALTB
IG
ACC
CANL
CANH
6
15
22
6 B
5 B
W
L
J76
Junction Connector
14
3
W
GR
5 PJ2
4 PJ2
W
GR
17 PZ1
16 PZ1
W
L
W
L
W
SB
W
L
W
SB

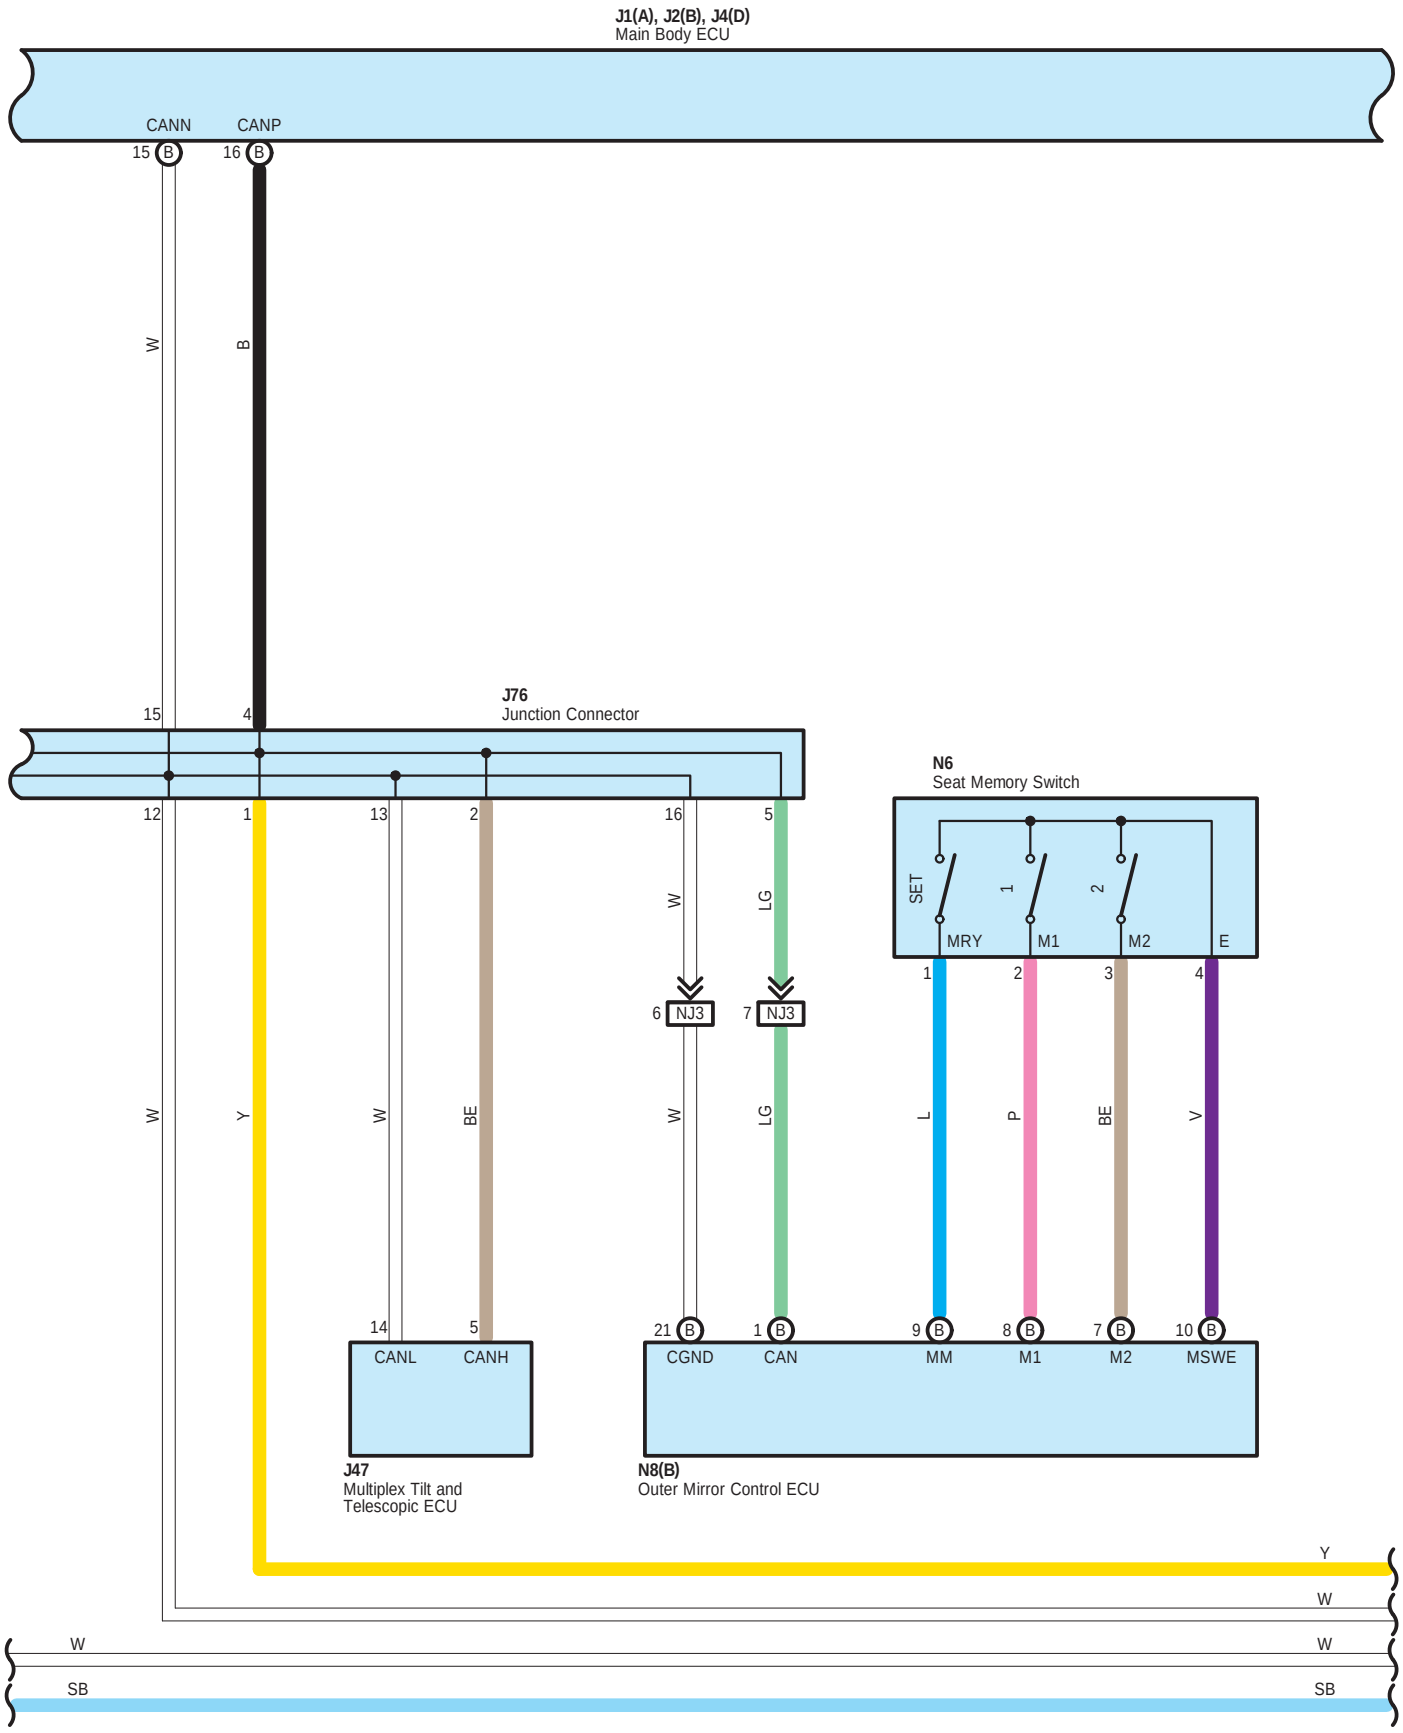
J1(A), J2(B), J4(D)
Main Body ECU
CANN
CANP
15 B
16 B
W
B
15
4
J76
Junction Connector
12
1
13
2
16
5
W
LG
6 NJ3
7 NJ3
W
LG
W
Y
W
BE
N6
Seat Memory Switch
SET
1
2
MRY
M1
M2
E
1
2
3
4
L
P
BE
V
14
5
21 B
1 B
9 B
8 B
7 B
10 B
CANL
CANH
CGND
CAN
MM
M1
M2
MSWE
J47
Multiplex Tilt and
Telescopic ECU
N8(B)
Outer Mirror Control ECU
Y
W
W
W
SB
SB

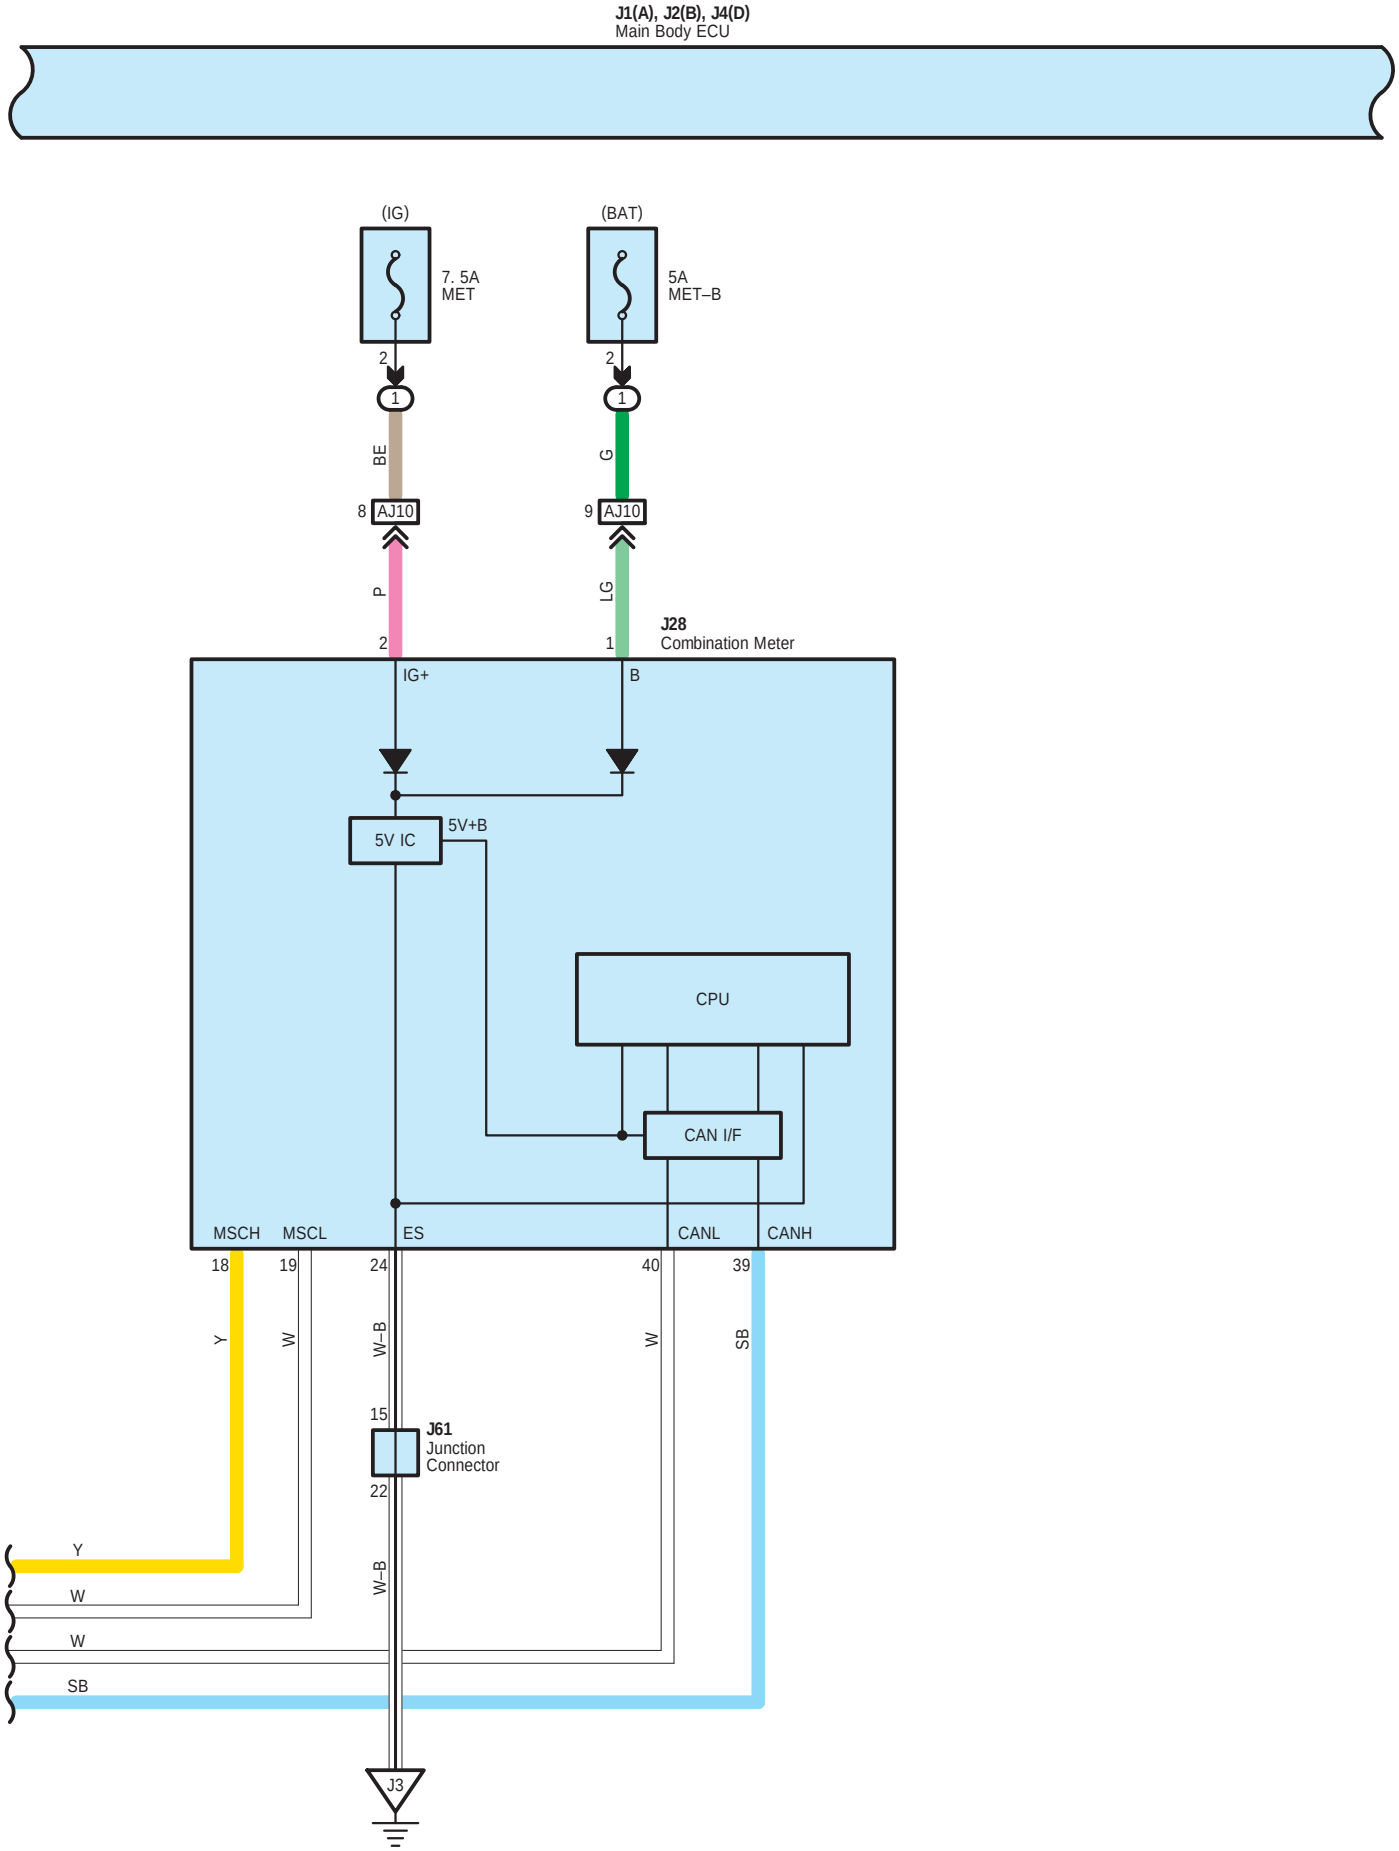

J1(A), J2(B), J4(D)
Main Body ECU
(IG)
(BAT)
7. 5A
MET
5A
MET–B
2
1
BE
G
8 AJ10
9 AJ10
P
LG
2
1
J28
Combination Meter
IG+
B
5V IC
5V+B
CPU
CAN I/F
MSCH
MSCL
ES
CANL
CANH
18
19
24
40
39
Y
W
W–B
W
SB
15
J61
Junction
Connector
22
W–B
Y
W
W
SB
J3

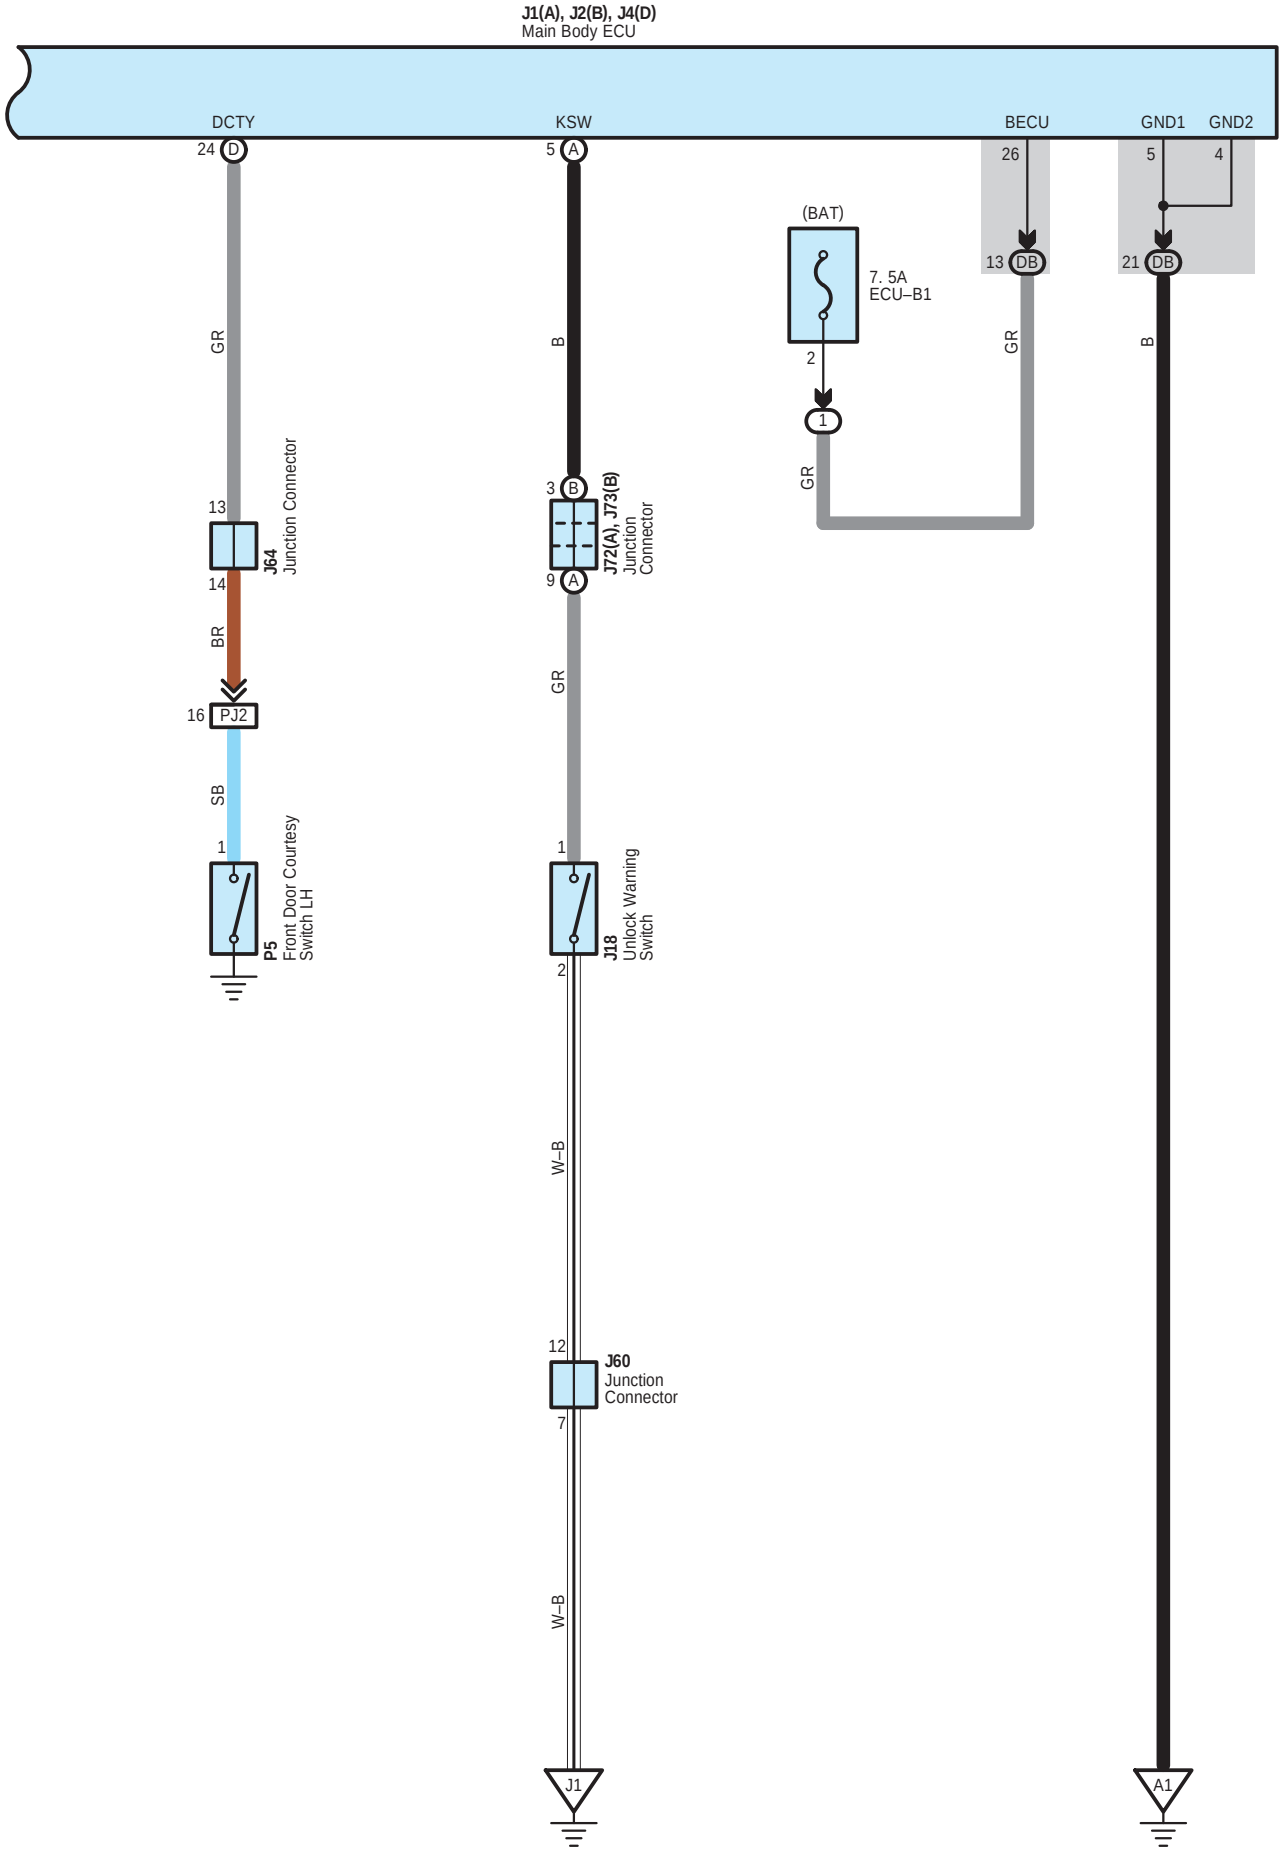
J1(A), J2(B), J4(D)
Main Body ECU
DCTY
KSW
BECU
GND1
GND2
24 D
5 A
26
5
4
13 DB
21 DB
(BAT)
7. 5A
ECU–B1
2
1
GR
B
GR
B
3 B
9 A
J72(A), J73(B)
Junction
Connector
13
14
J64
Junction Connector
BR
16 PJ2
SB
1
P5
Front Door Courtesy
Switch LH
1
2
J18
Unlock Warning
Switch
W–B
12
J60
Junction
Connector
7
W–B
J1
A1


A 24
Black

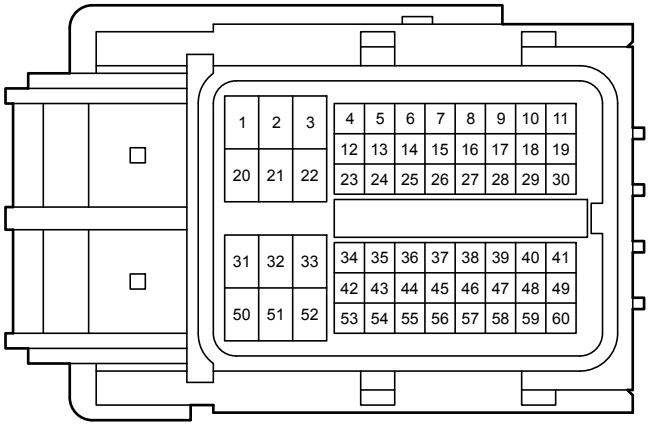


D 35
Gray

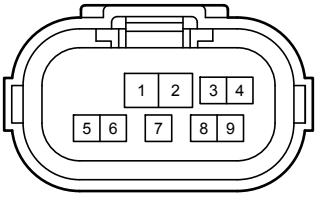


D 73
Blue

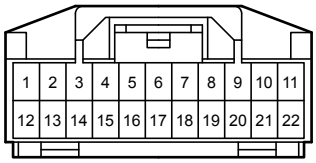


D 74
Black

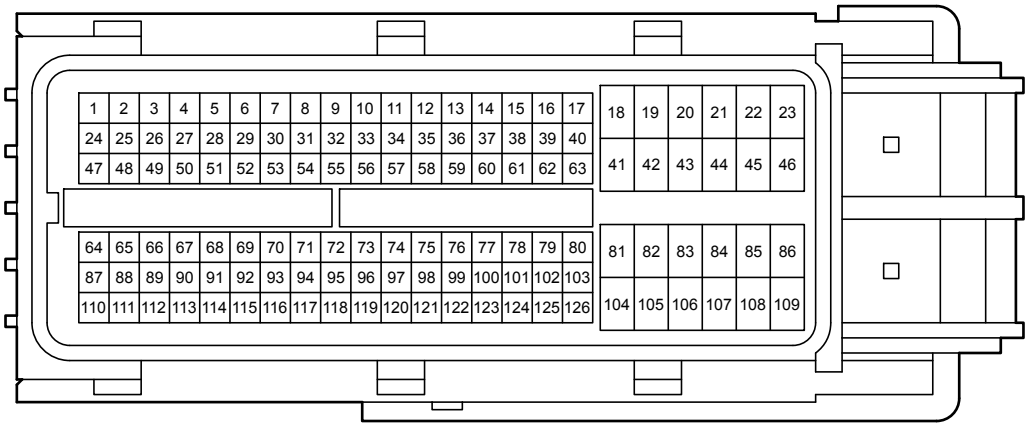


J 1
White

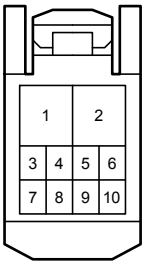


J 2
White

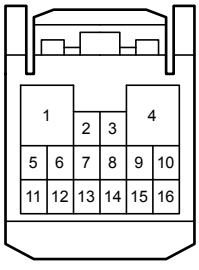


J 4
White

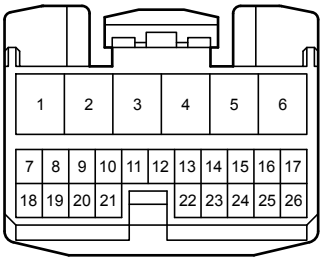


J 18
White




J 28
Black

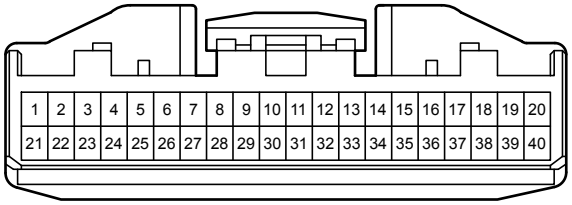


J 47
White

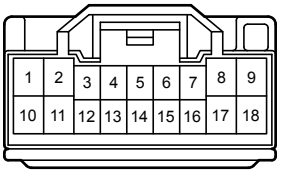


J 60
White

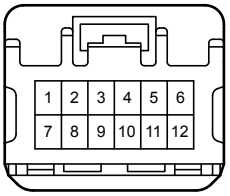


J 61
Gray

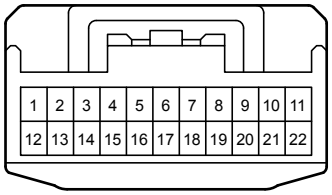


J 64
White

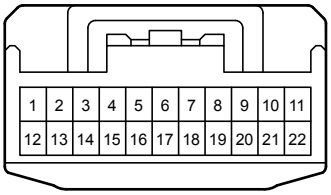


J 72
Black

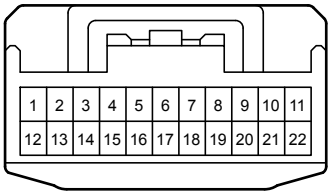


J 73
Black

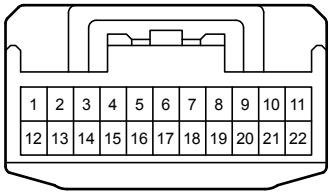


J 74
Gray

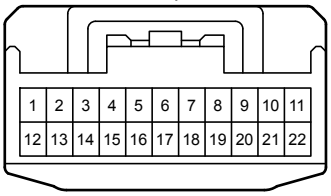


J 75
Gray

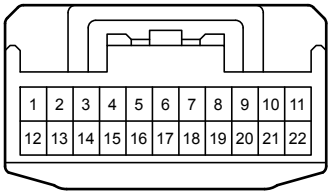


J 76
Gray

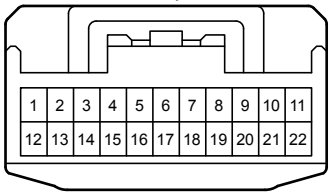

N 6
White




N 8
White

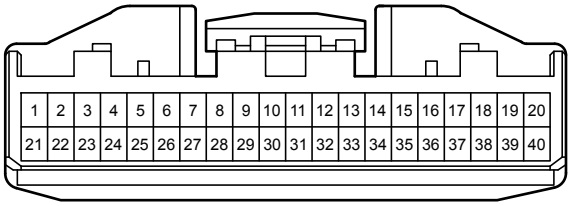


P 5
White



P 7
White

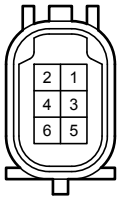


Z 2
White




Z 3
Black




Z 4
Gray

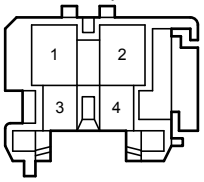


Z 5
Black




Z 6
Gray

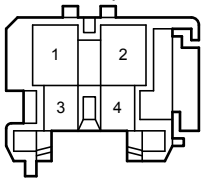


Z 7
Black




Z 8
White



Z 9
White




Z 10
Black

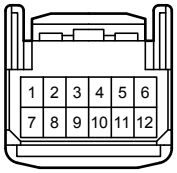


Z 14
White




Z 15
White

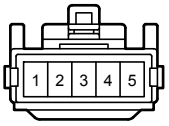


DB
White

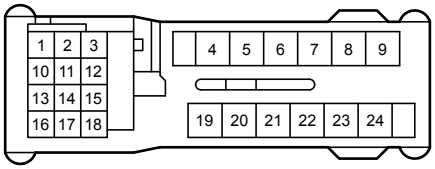


DC
White

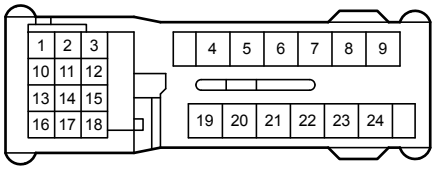


DD
White

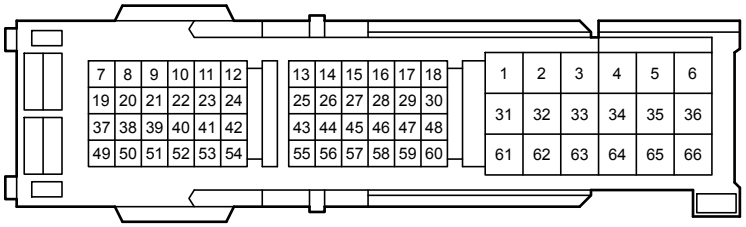


AJ2
Gray

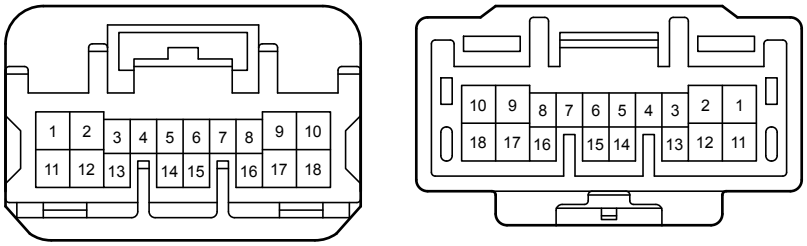


AJ5
Gray

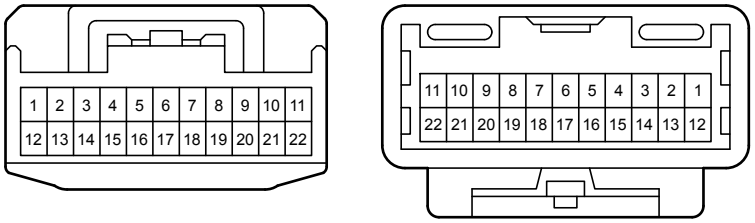


AJ10
Gray

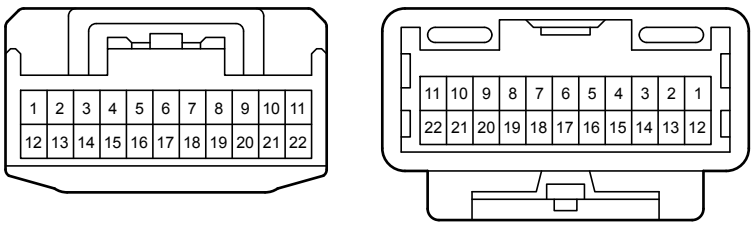


DA4
Gray

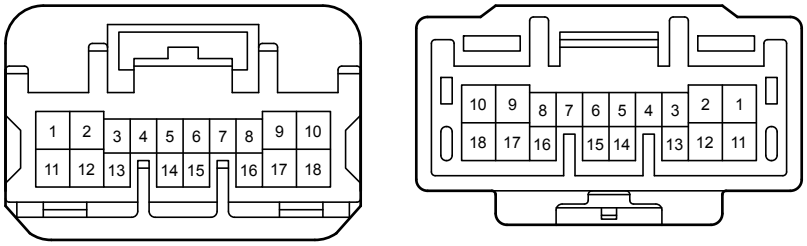


NJ3
Blue

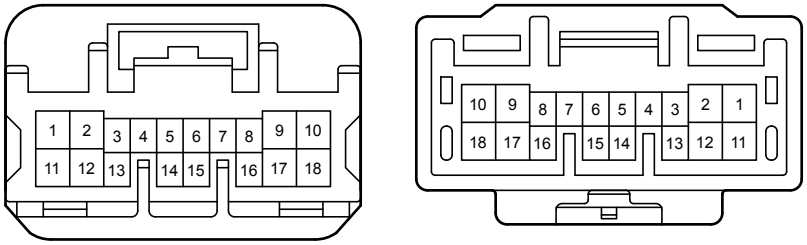


PJ2
White

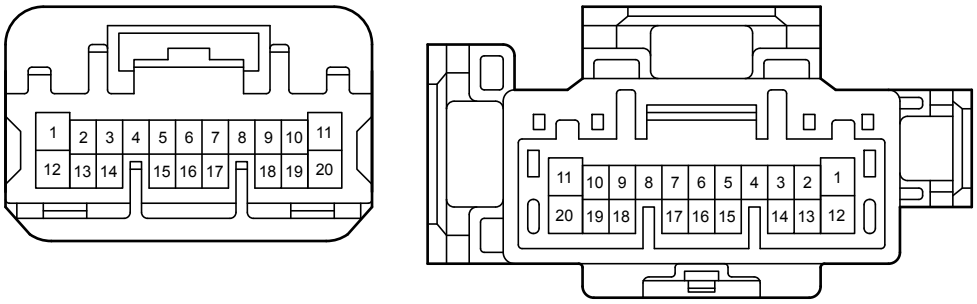


PZ1
White

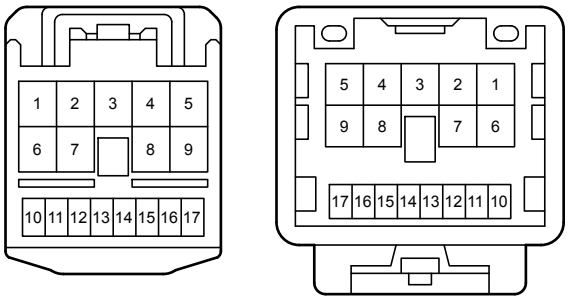

ZZ1
White

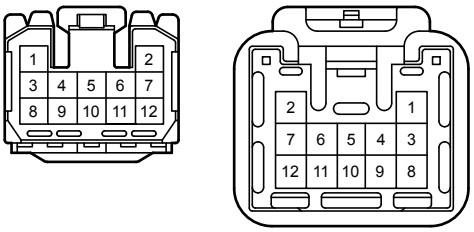

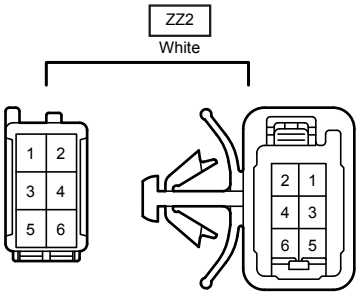
ZZ2
White
1
2
3
4
5
6
2
1
4
3
6
5