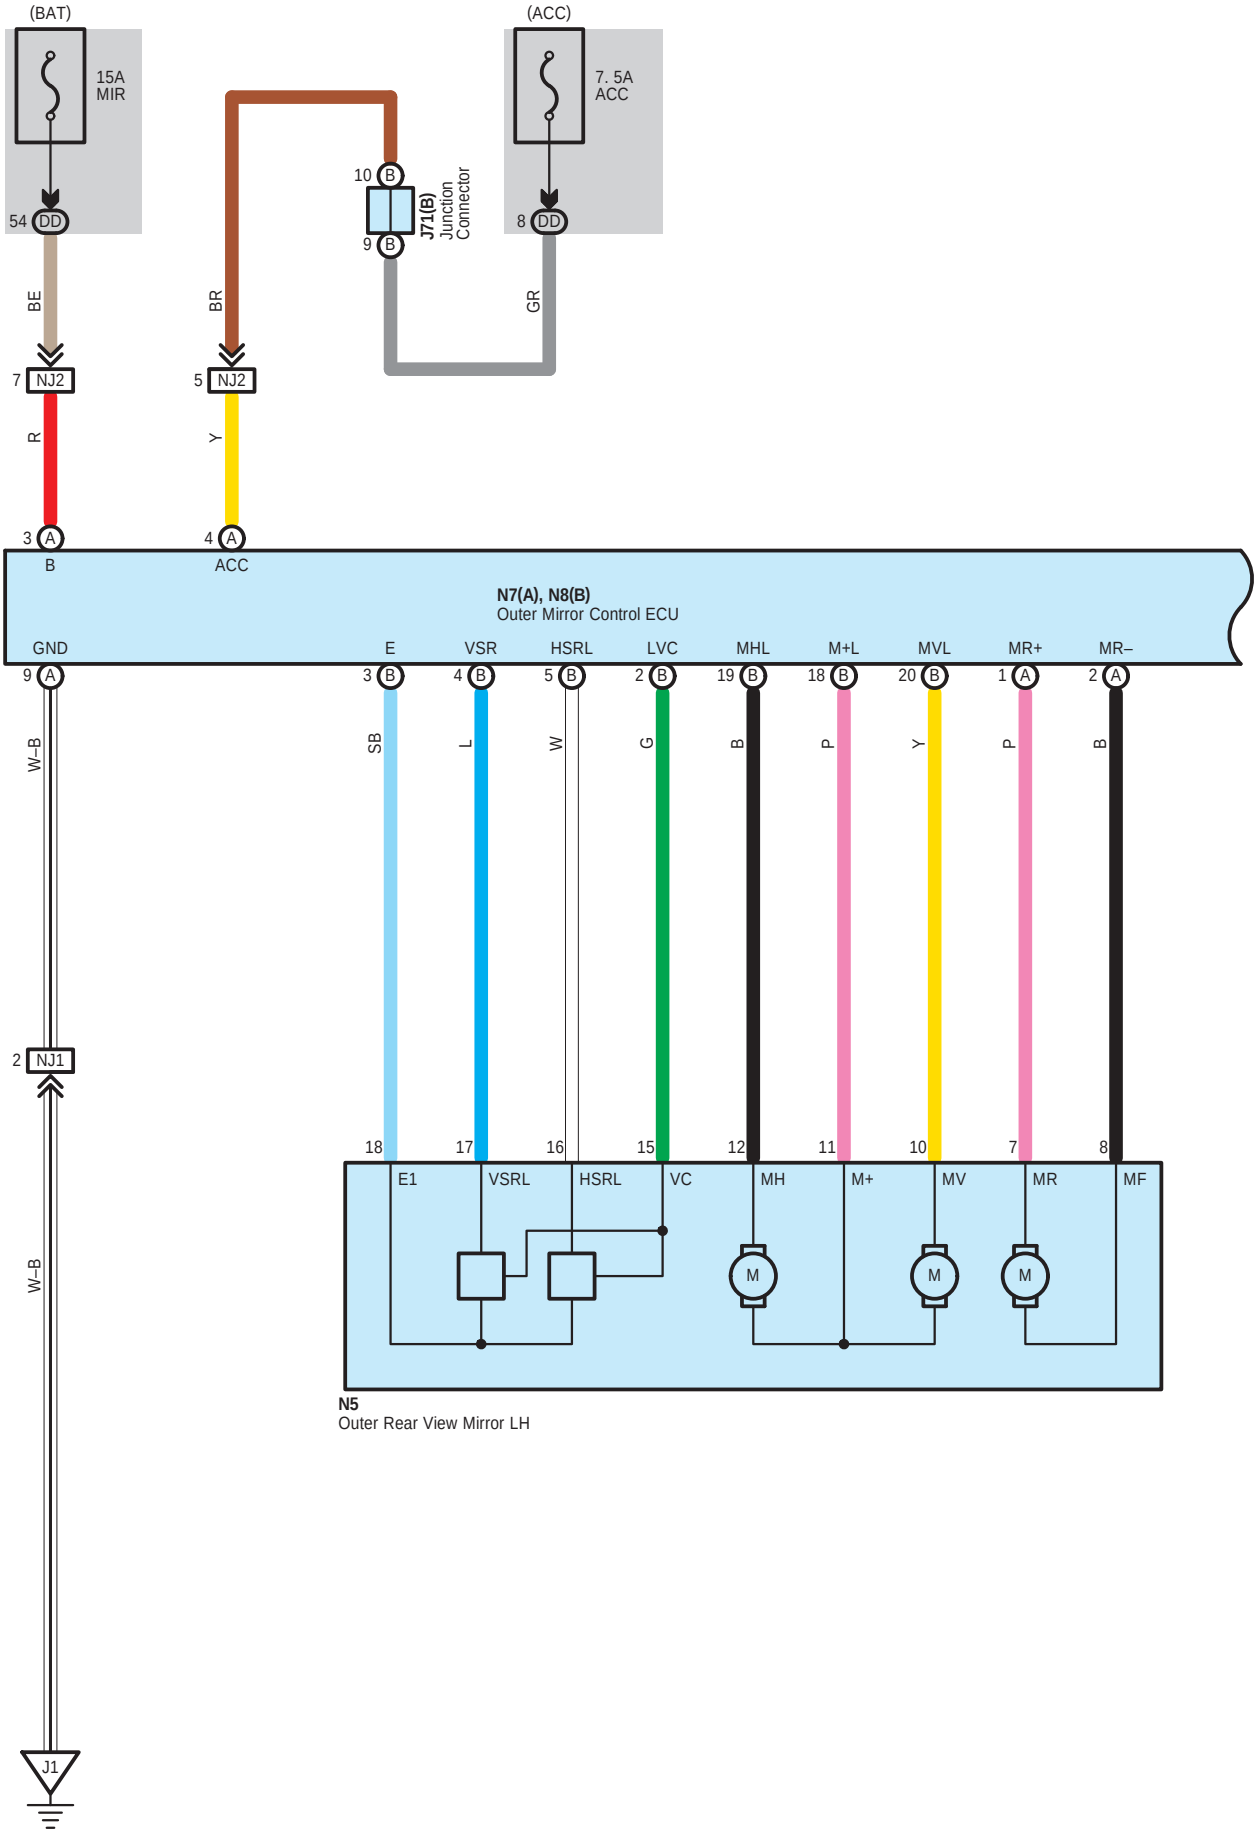
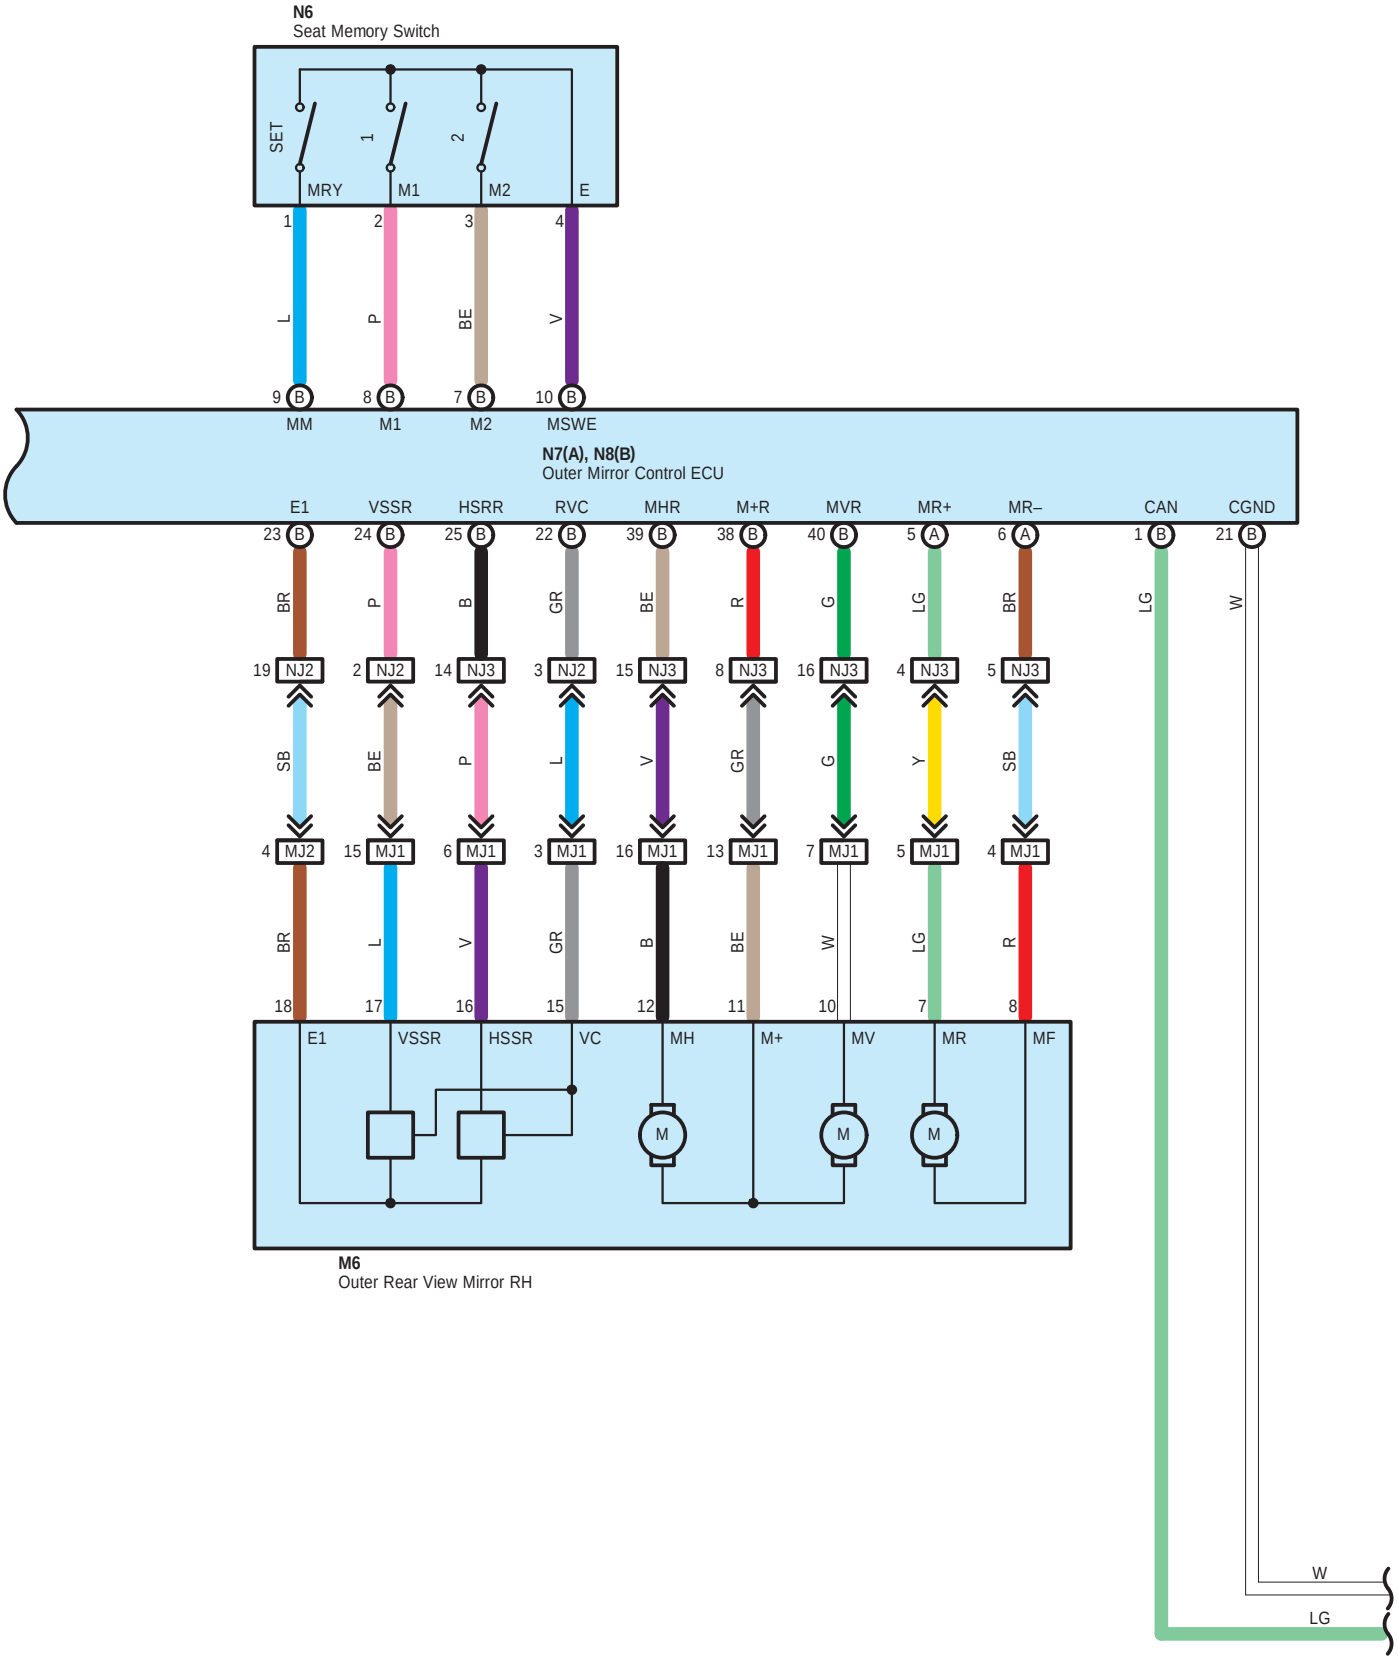
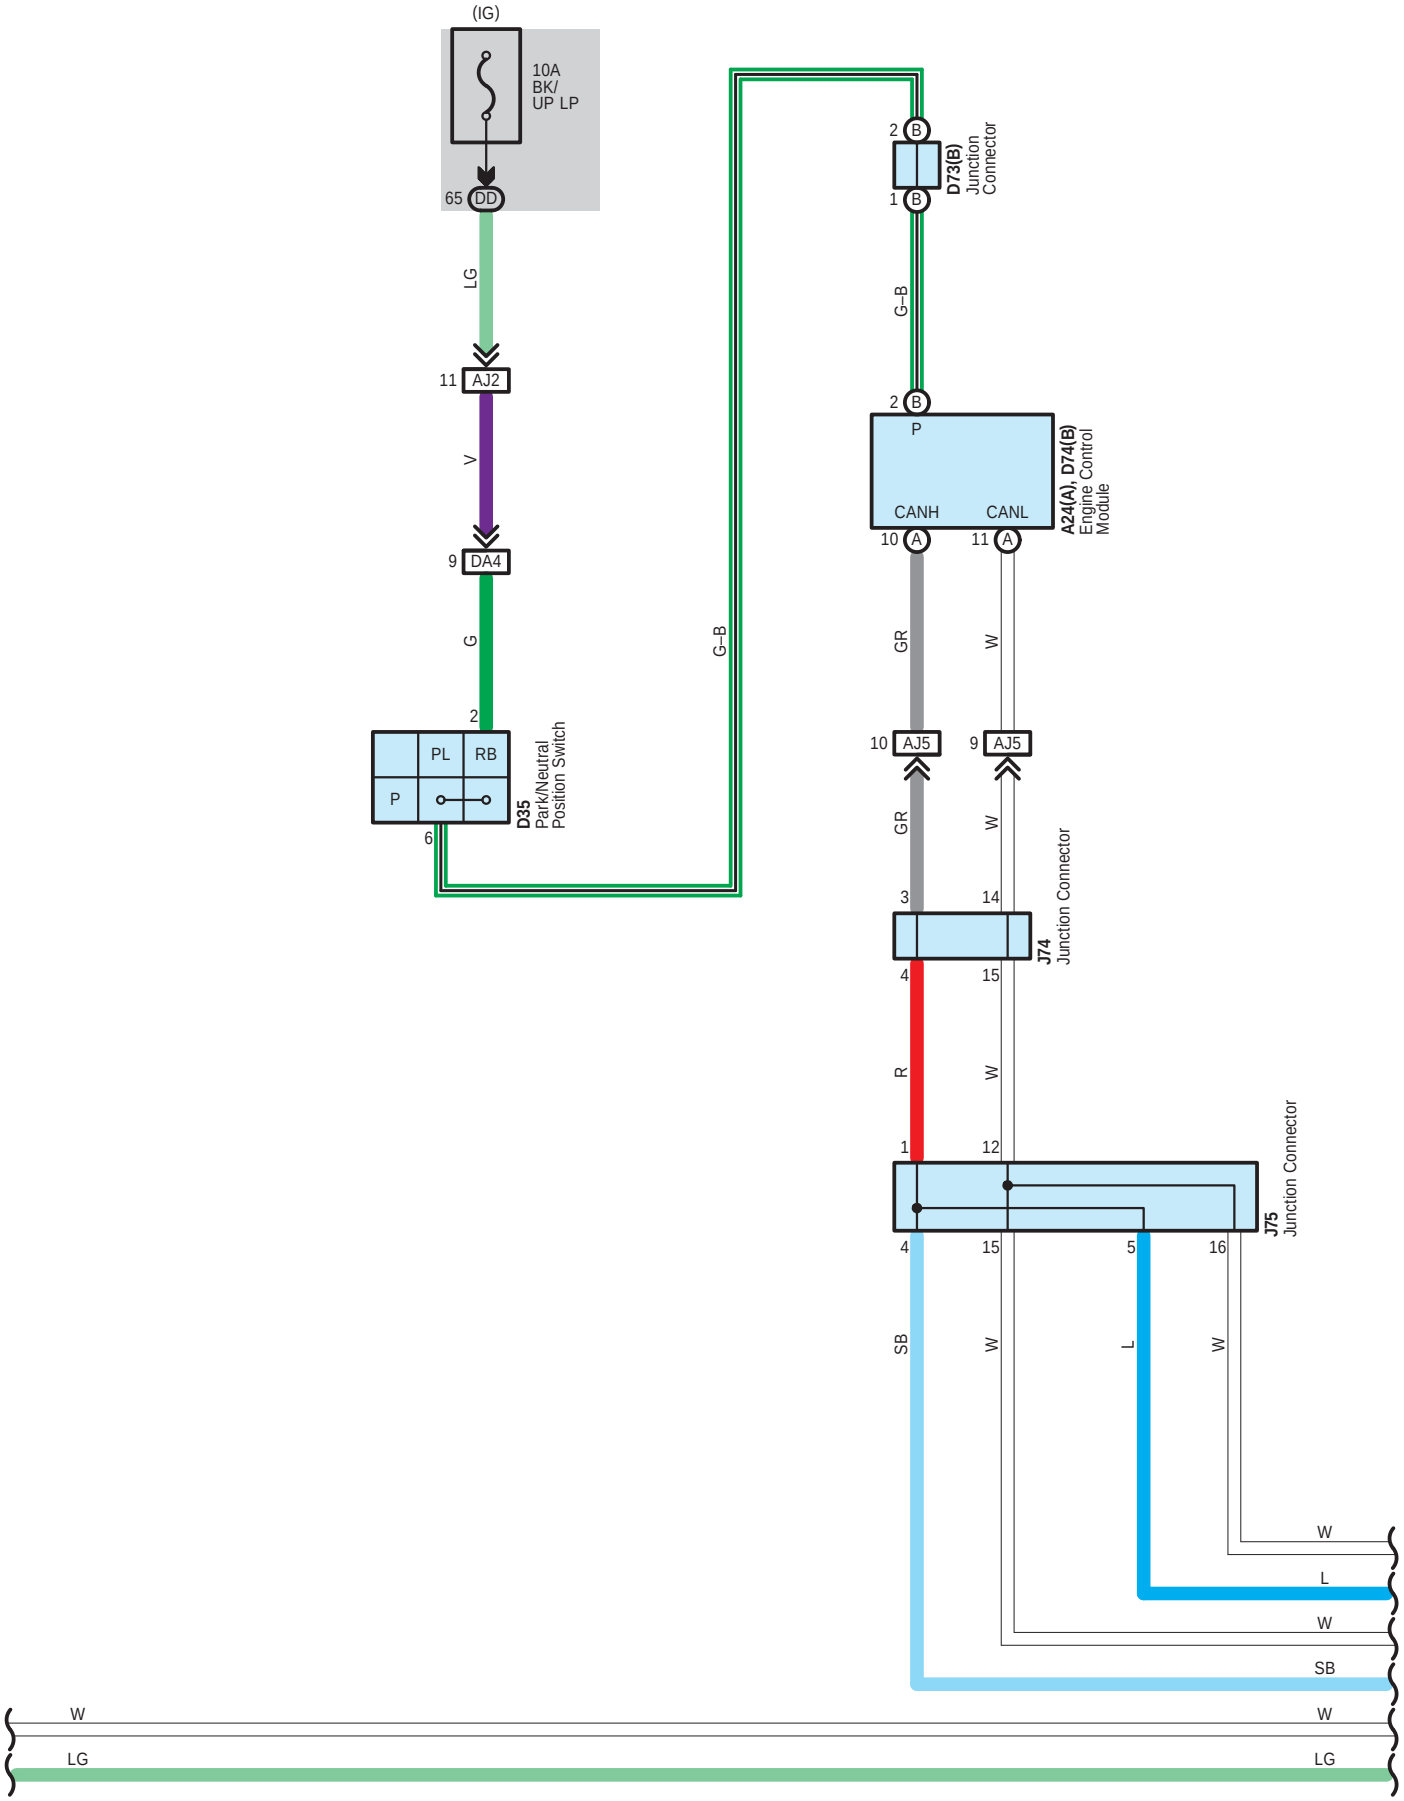
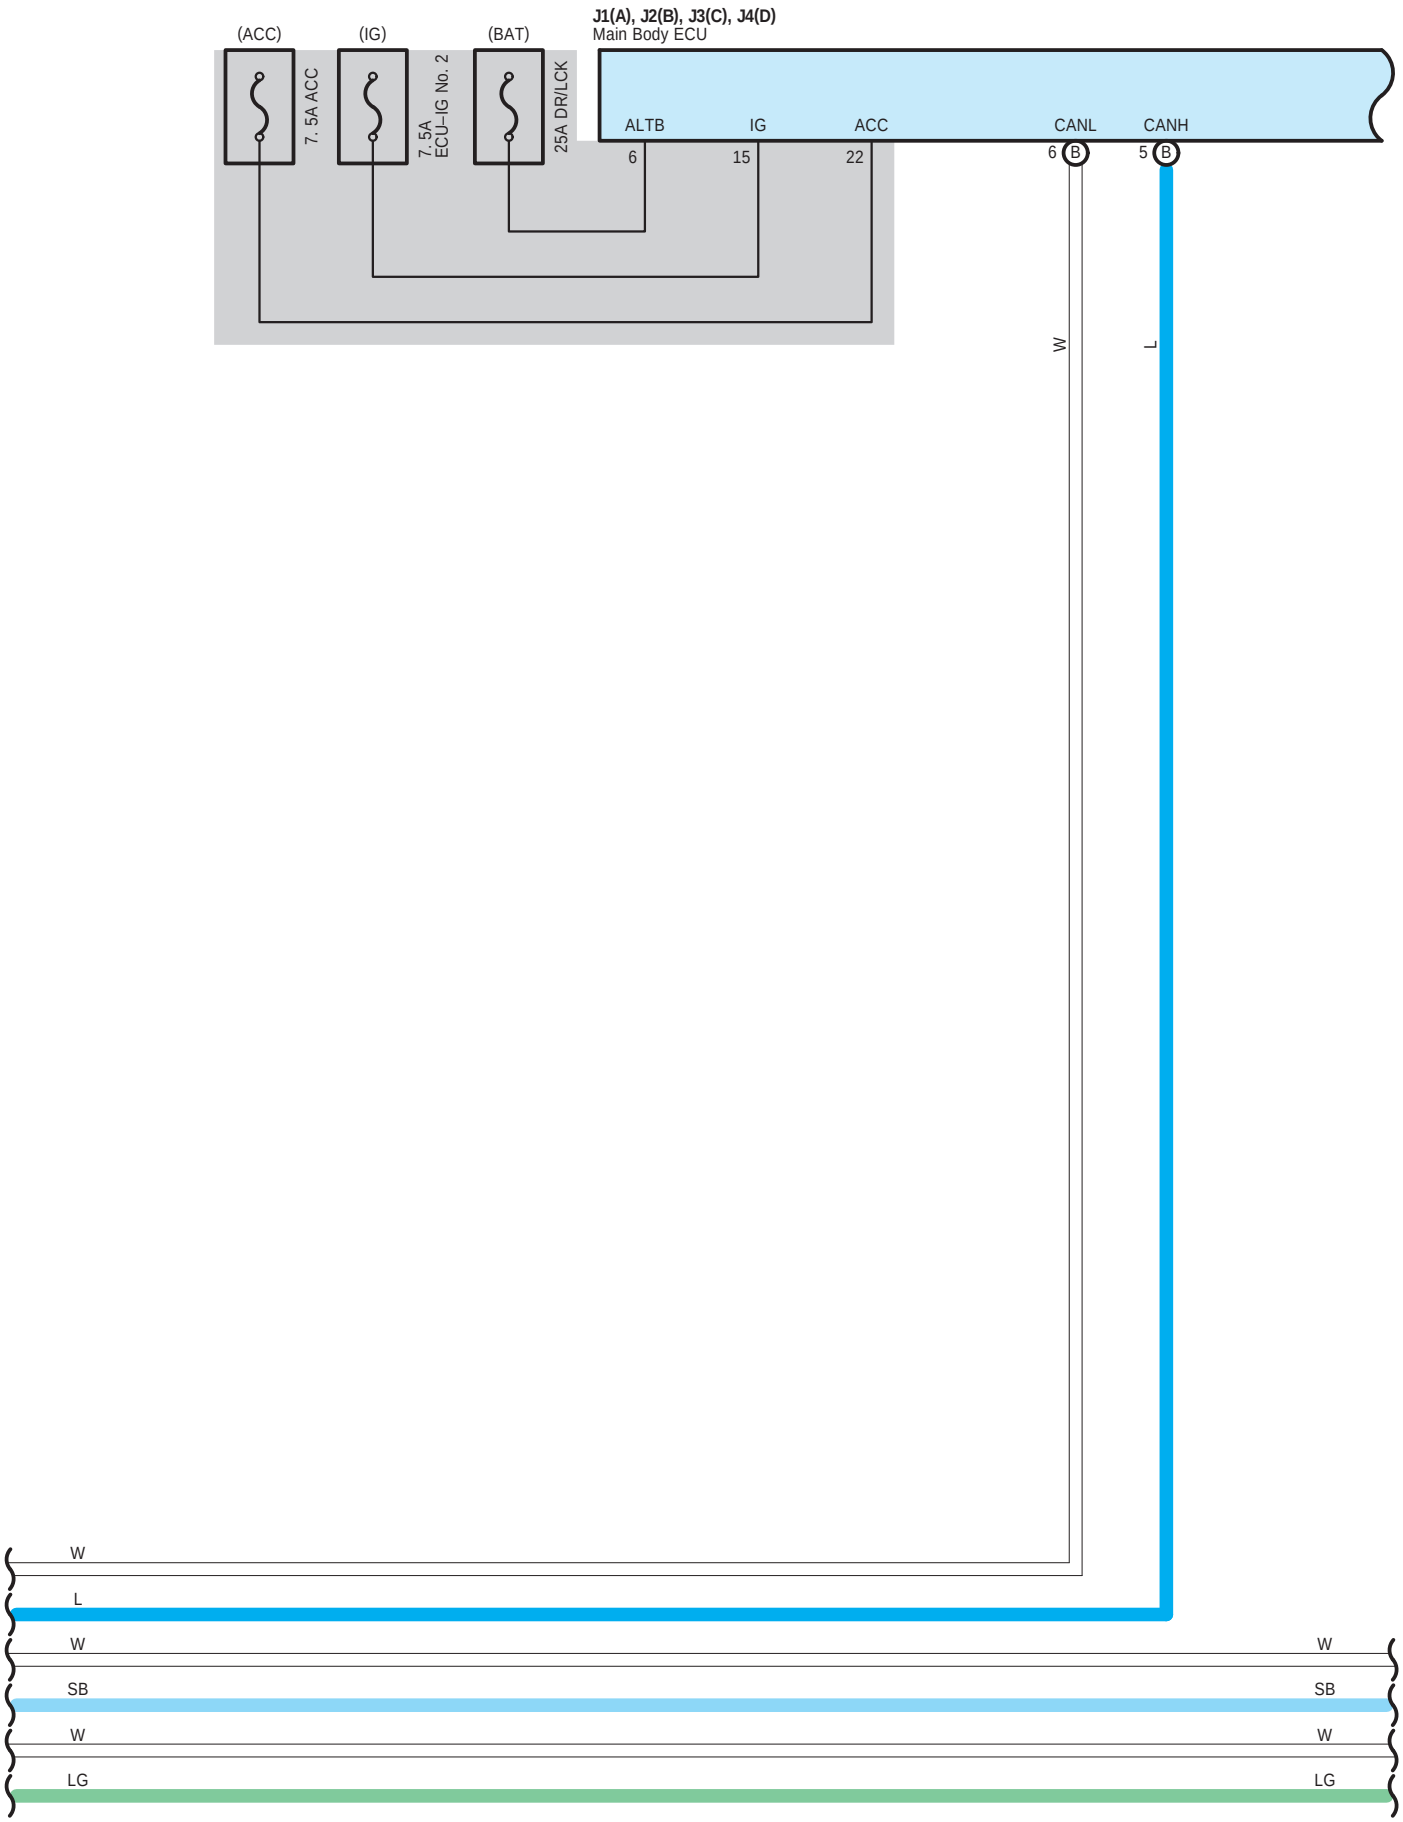
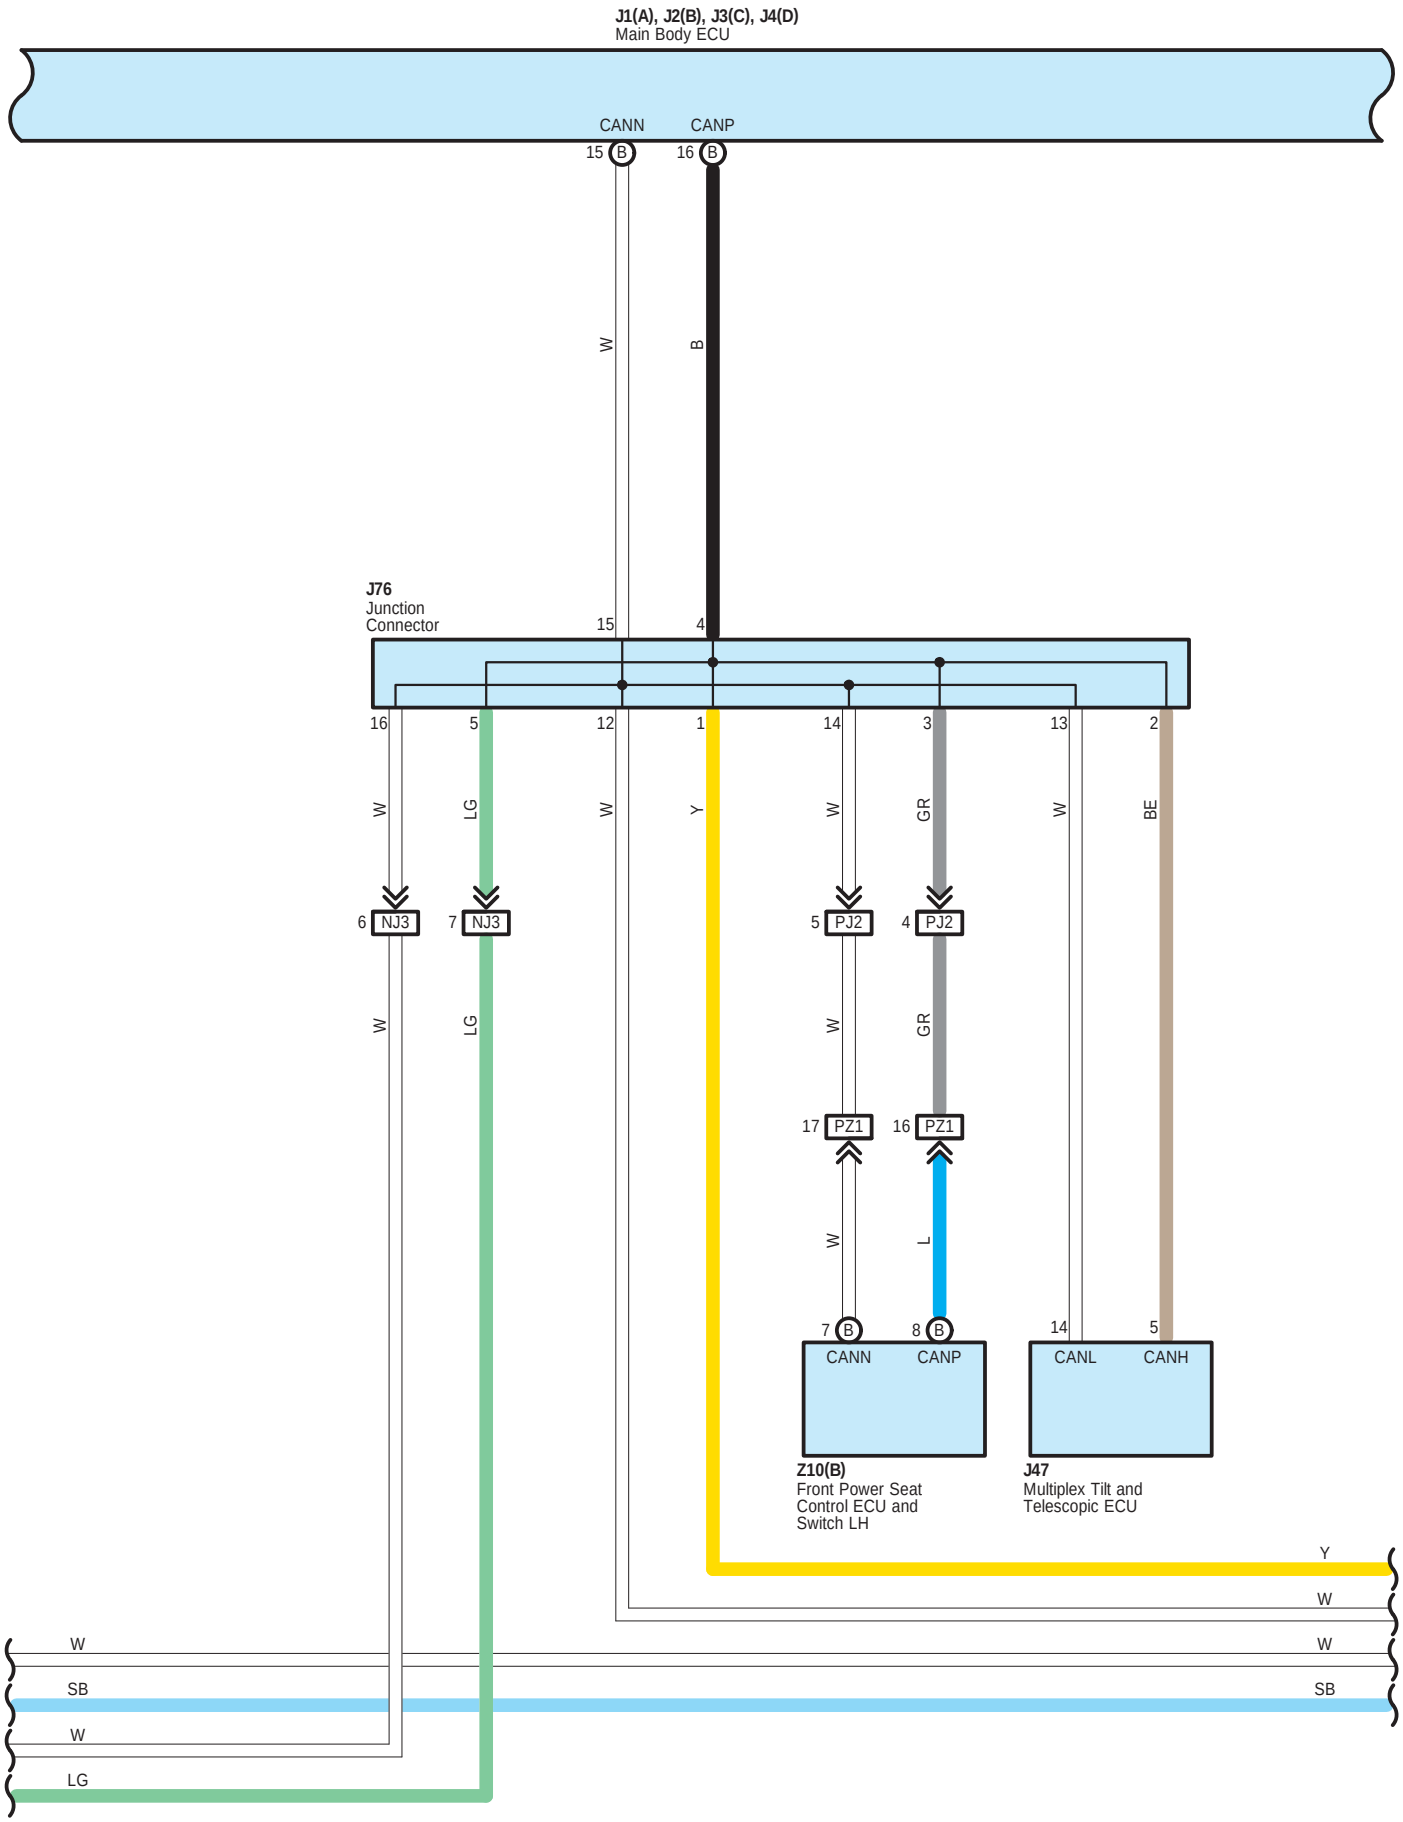
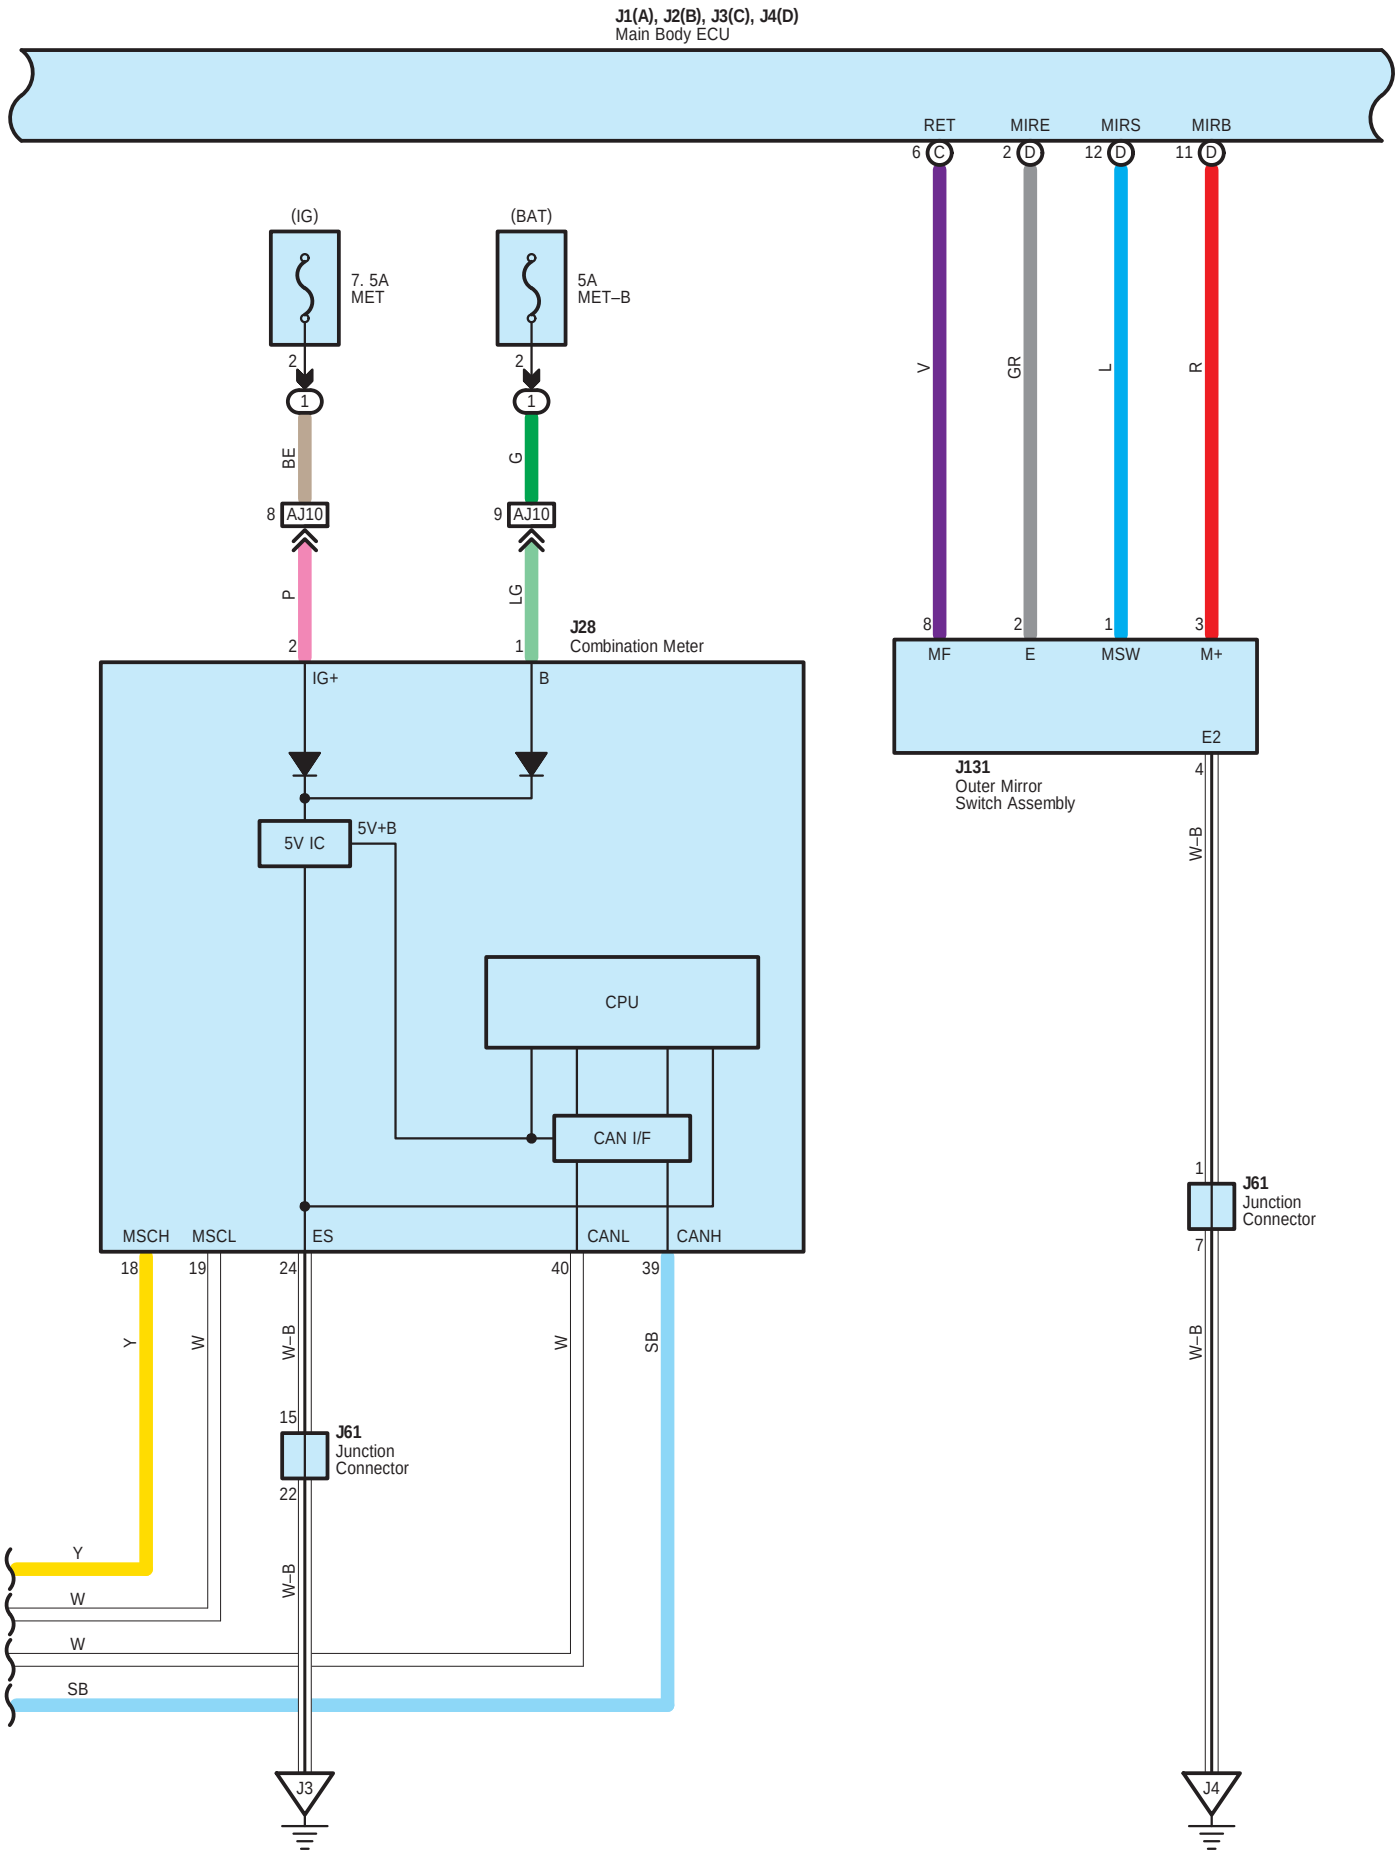

(BAT)
15A
MIR
54 DD
BE
7 NJ2
R
3 A
B
(ACC)
7. 5A
ACC
8 DD
GR
10 B
9 B
J71(B)
Junction
Connector
BR
5 NJ2
Y
4 A
ACC
N7(A), N8(B)
Outer Mirror Control ECU
GND
E
VSR
HSRL
LVC
MHL
M+L
MVL
MR+
MR–
9 A
3 B
4 B
5 B
2 B
19 B
18 B
20 B
1 A
2 A
W–B
SB
L
W
G
B
P
Y
P
B
2 NJ1
W–B
J1
18
17
16
15
12
11
10
7
8
E1
VSRL
HSRL
VC
MH
M+
MV
MR
MF
M
M
M
N5
Outer Rear View Mirror LH



N6
Seat Memory Switch
SET
1
2
MRY
M1
M2
E
1
2
3
4
L
P
BE
V
9 B
8 B
7 B
10 B
MM
M1
M2
MSWE
N7(A), N8(B)
Outer Mirror Control ECU
E1
VSSR
HSRR
RVC
MHR
M+R
MVR
MR+
MR–
CAN
CGND
23 B
24 B
25 B
22 B
39 B
38 B
40 B
5 A
6 A
1 B
21 B
BR
P
B
GR
BE
R
G
LG
BR
LG
W
19 NJ2
2 NJ2
14 NJ3
3 NJ2
15 NJ3
8 NJ3
16 NJ3
4 NJ3
5 NJ3
SB
BE
P
L
V
GR
G
Y
SB
4 MJ2
15 MJ1
6 MJ1
3 MJ1
16 MJ1
13 MJ1
7 MJ1
5 MJ1
4 MJ1
BR
L
V
GR
B
BE
W
LG
R
18
17
16
15
12
11
10
7
8
E1
VSSR
HSSR
VC
MH
M+
MV
MR
MF
M
M
M
M6
Outer Rear View Mirror RH
W
LG


(IG)
10A
BK/
UP LP
65 DD
LG
11 AJ2
V
9 DA4
G
2
PL
RB
P
6
D35
Park/Neutral
Position Switch
G–B
2 B
1 B
D73(B)
Junction
Connector
G–B
2 B
P
CANH
CANL
10 A
11 A
A24(A), D74(B)
Engine Control
Module
GR
W
10 AJ5
9 AJ5
GR
W
3
14
J74
Junction Connector
4
15
R
W
1
12
4
15
5
16
J75
Junction Connector
SB
W
L
W
W
L
W
SB
W
W
LG
LG



(ACC)
(IG)
(BAT)
7. 5A ACC
7. 5A ECU–IG No. 2
25A DR/LCK
J1(A), J2(B), J3(C), J4(D)
Main Body ECU
ALTB
IG
ACC
CANL
CANH
6
15
22
6 B
5 B
W
L
W
L
W
W
SB
SB
W
W
LG
LG


J1(A), J2(B), J3(C), J4(D)
Main Body ECU
CANN
CANP
15 B
16 B
W
B
J76
Junction
Connector
15
4
16
5
12
1
14
3
13
2
W
LG
W
Y
W
GR
W
BE
6 NJ3
7 NJ3
5 PJ2
4 PJ2
W
LG
W
GR
17 PZ1
16 PZ1
W
L
7 B
8 B
CANN
CANP
14
5
CANL
CANH
Z10(B)
Front Power Seat
Control ECU and
Switch LH
J47
Multiplex Tilt and
Telescopic ECU
Y
W
W
SB
SB
W
LG



J1(A), J2(B), J3(C), J4(D)
Main Body ECU
RET
MIRE
MIRS
MIRB
6 C
2 D
12 D
11 D
(IG)
(BAT)
7. 5A
MET
5A
MET–B
2
1
BE
G
8 AJ10
9 AJ10
P
LG
2
1
J28
Combination Meter
IG+
B
5V IC
5V+B
CPU
CAN I/F
MSCH
MSCL
ES
CANL
CANH
18
19
24
40
39
Y
W
W–B
W
SB
15
J61
Junction
Connector
22
Y
W
W
SB
W–B
J3
V
GR
L
R
8
2
1
3
MF
E
MSW
M+
E2
J131
Outer Mirror
Switch Assembly
4
W–B
1
J61
Junction
Connector
7
W–B
J4

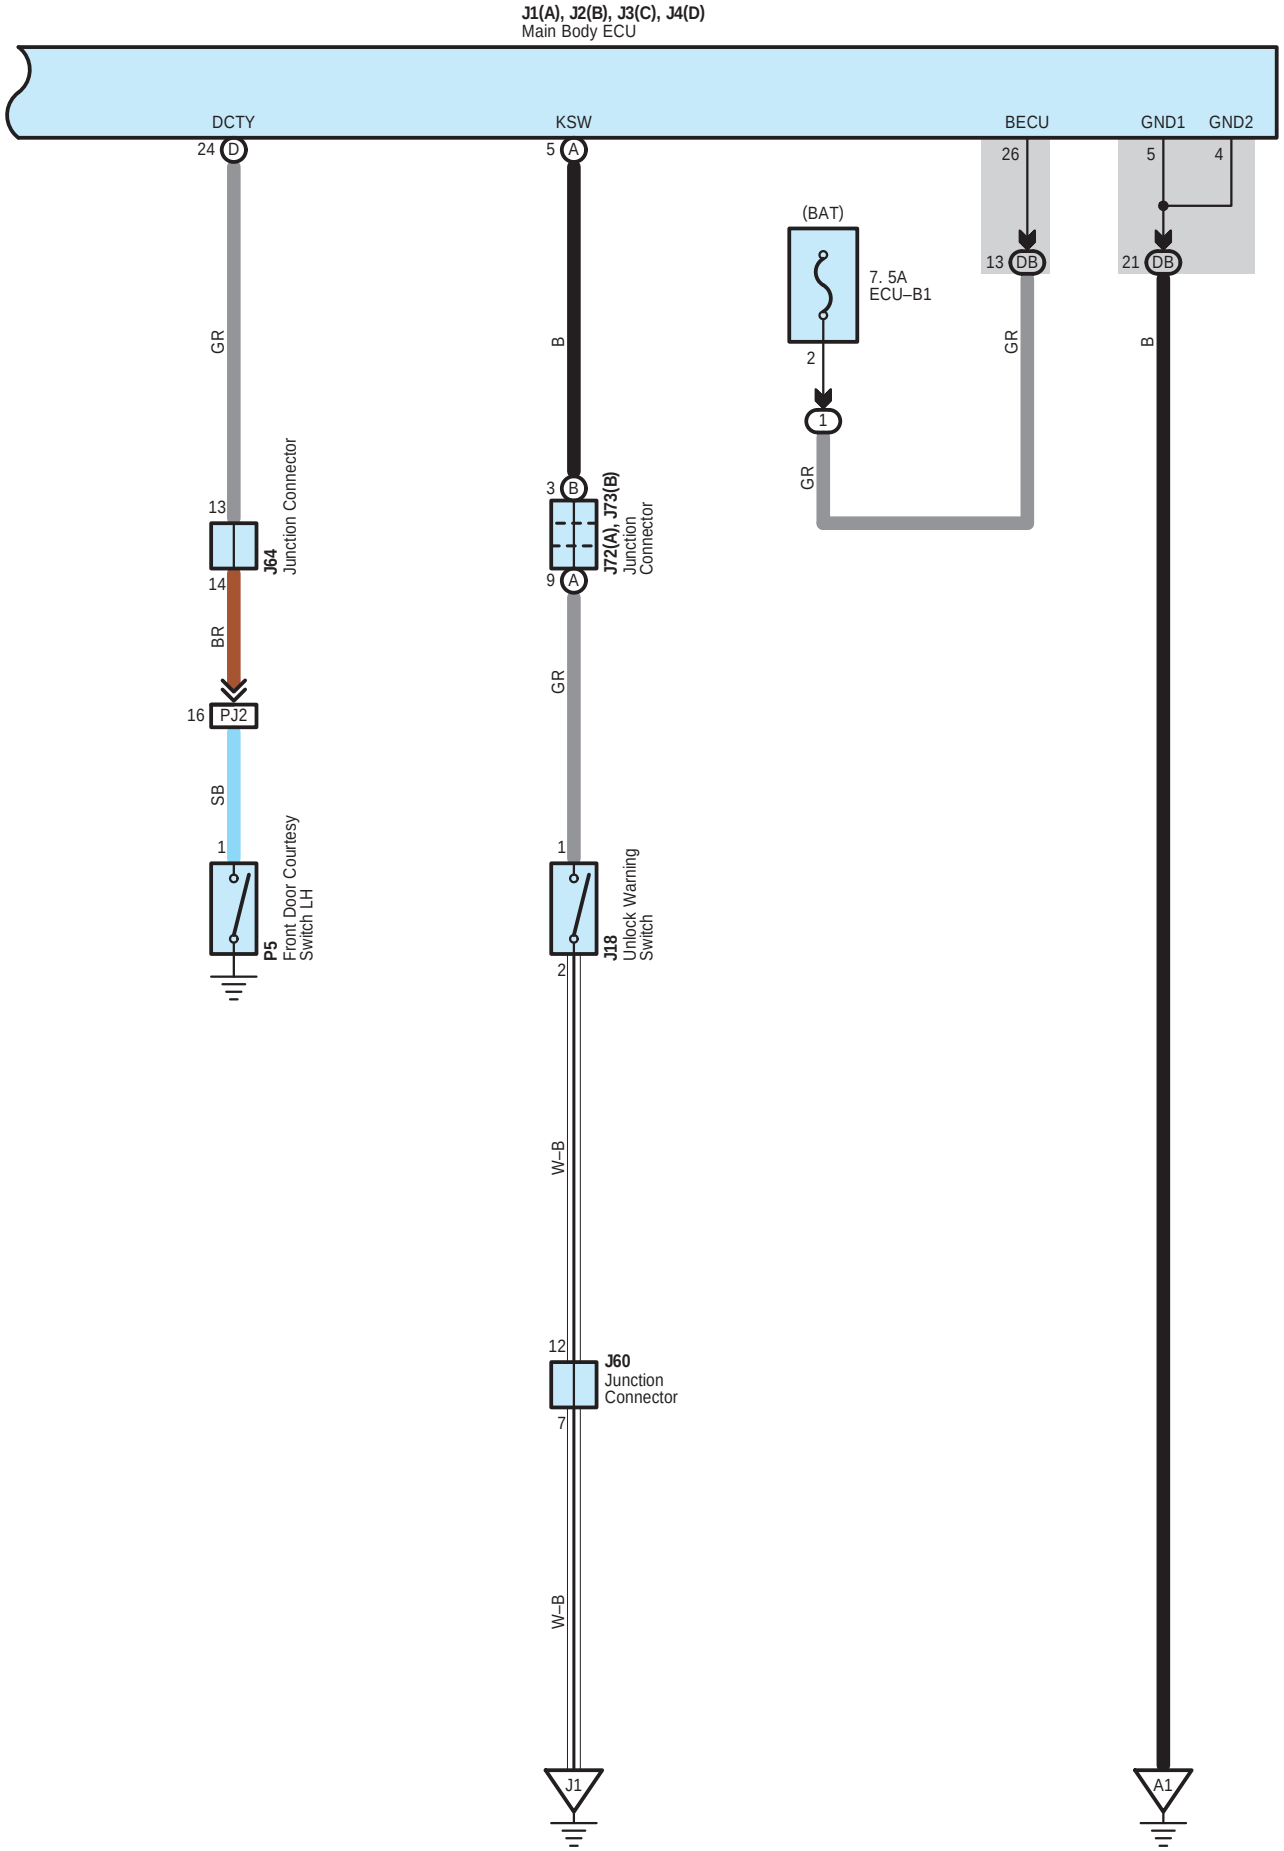
J1(A), J2(B), J3(C), J4(D)
Main Body ECU
DCTY
KSW
BECU
GND1
GND2
24 D
5 A
26
5
4
(BAT)
7. 5A
ECU–B1
13 DB
21 DB
2
1
GR
B
GR
B
3 B
9 A
J72(A), J73(B)
Junction
Connector
13
14
J64
Junction Connector
BR
16 PJ2
SB
1
P5
Front Door Courtesy
Switch LH
1
2
J18
Unlock Warning
Switch
W–B
12
J60
Junction
Connector
7
W–B
J1
A1


A 24
Black

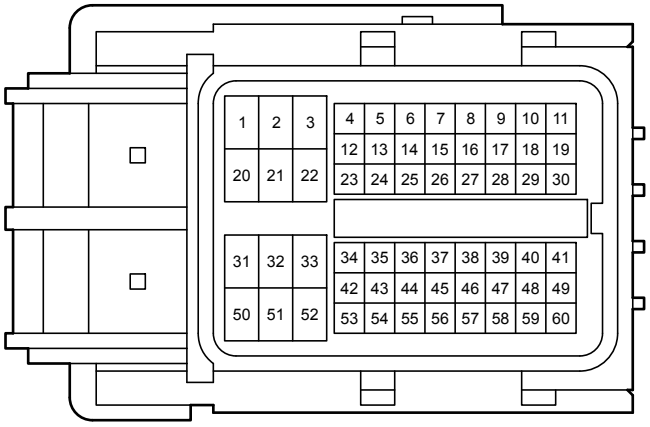


D 35
Gray

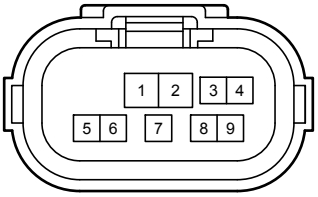


D 73
Blue

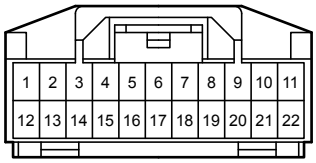


D 74
Black

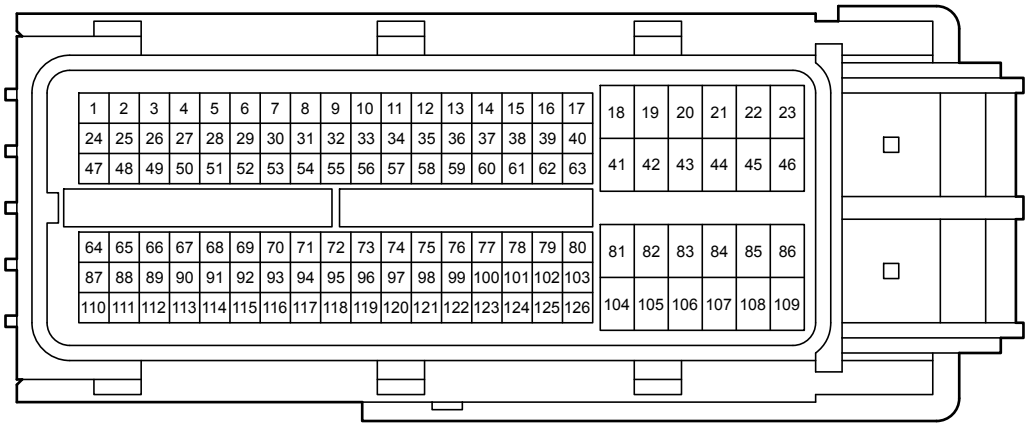


J 1
White

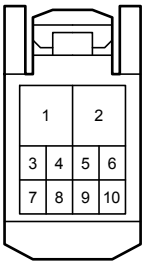


J 2
White

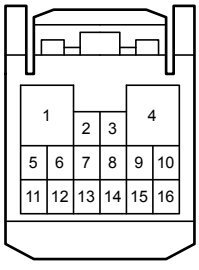


J 3
White

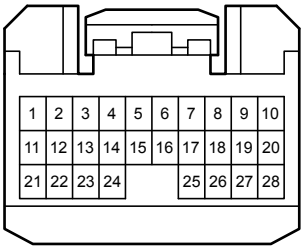


J 4
White

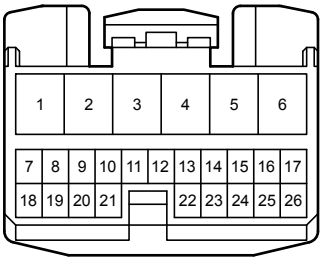


J 18
White




J 28
Black

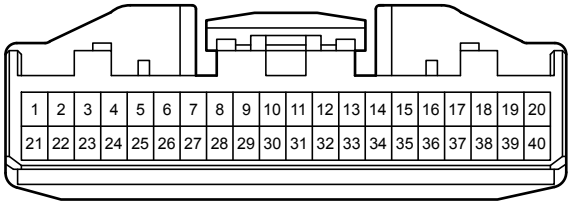


J 47
White

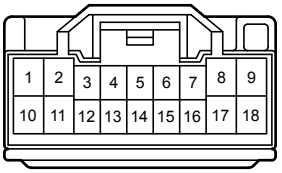


J 60
White

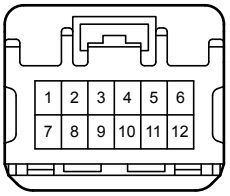


J 61
Gray

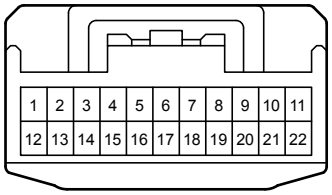


J 64
White

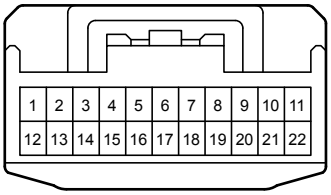


J 71
White

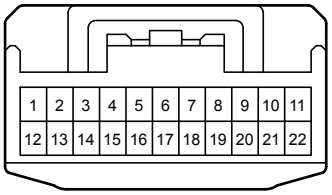


J 72
Black

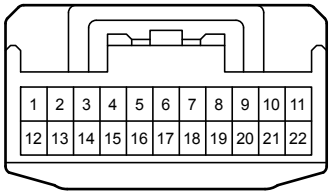


J 73
Black

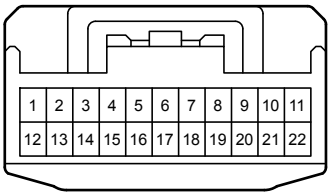


J 74
Gray

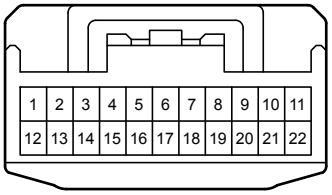


J 75
Gray

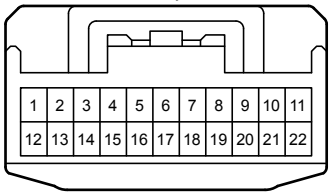


J 76
Gray

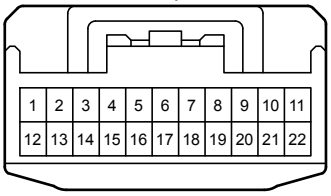


J131
White

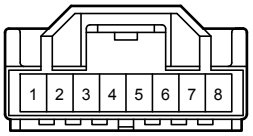


M 6
White

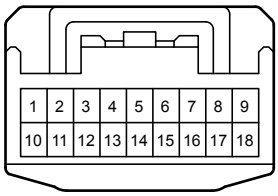


N 5
White

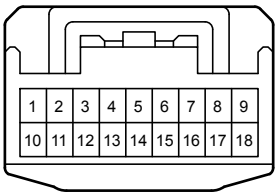


N 6
White



N 7
White

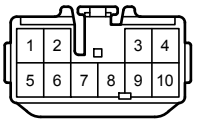


N 8
White

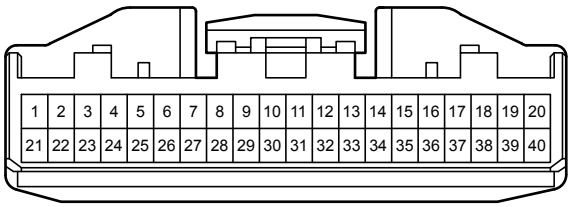


P 5
White




Z 10
Black

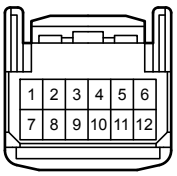


DB
White

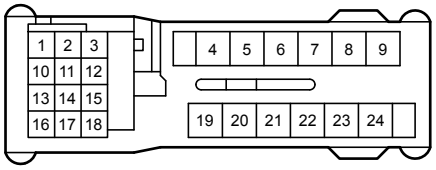


DD
White

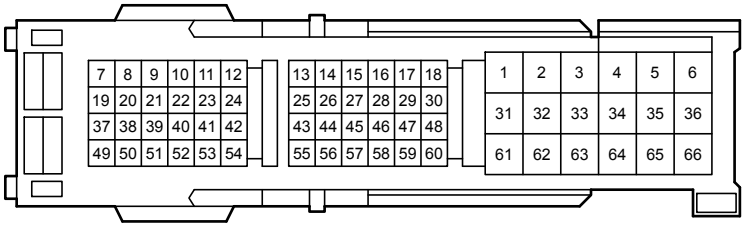


AJ2
Gray

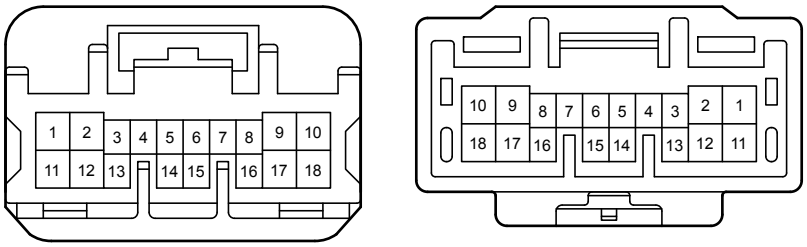


AJ5
Gray

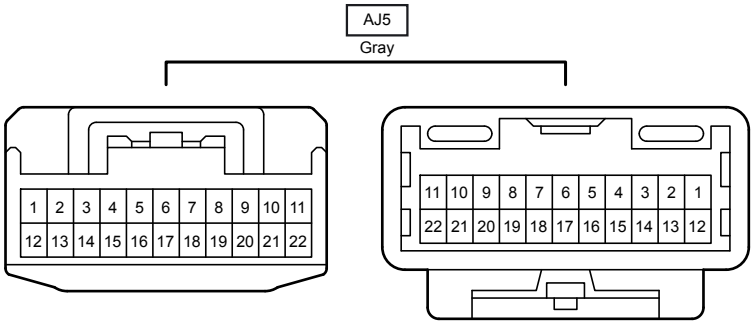


AJ10
Gray

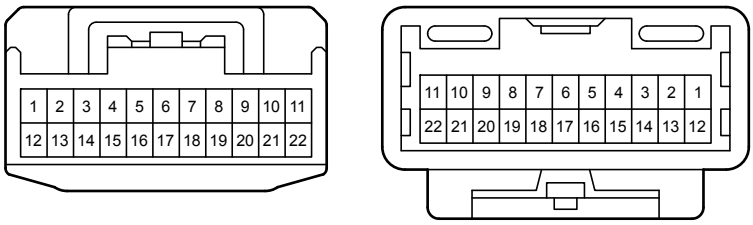


DA4
Gray

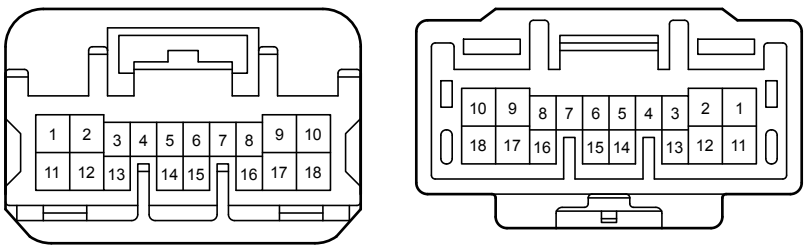


MJ1
Blue

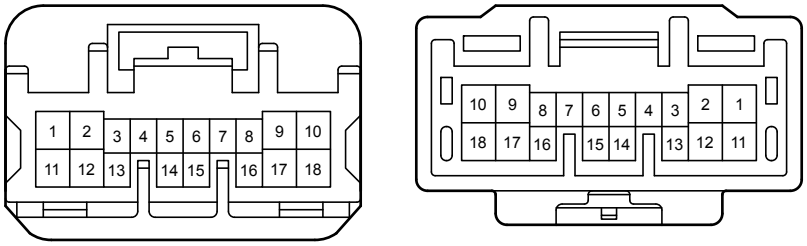


MJ2
Blue

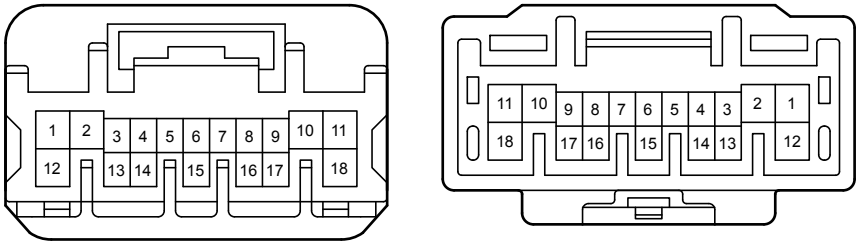



NJ1
Blue

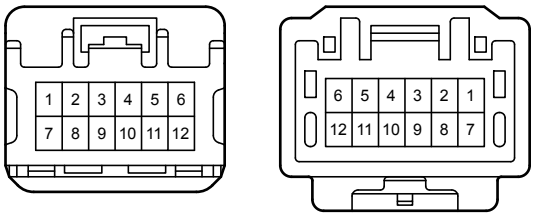


NJ2
White

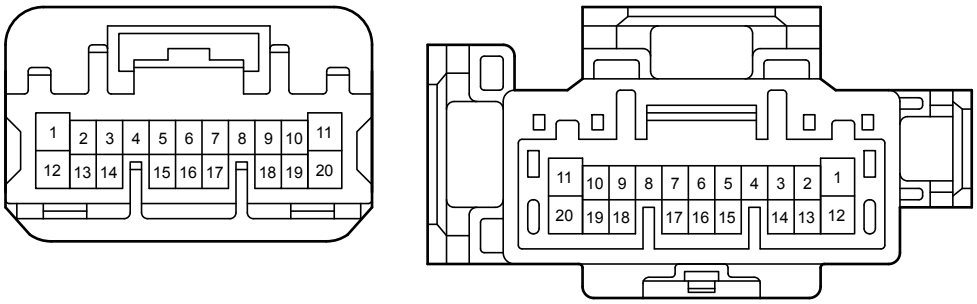

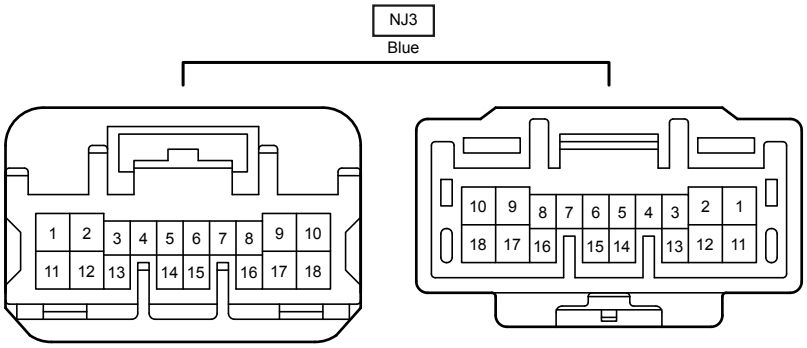
NJ3
Blue
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11

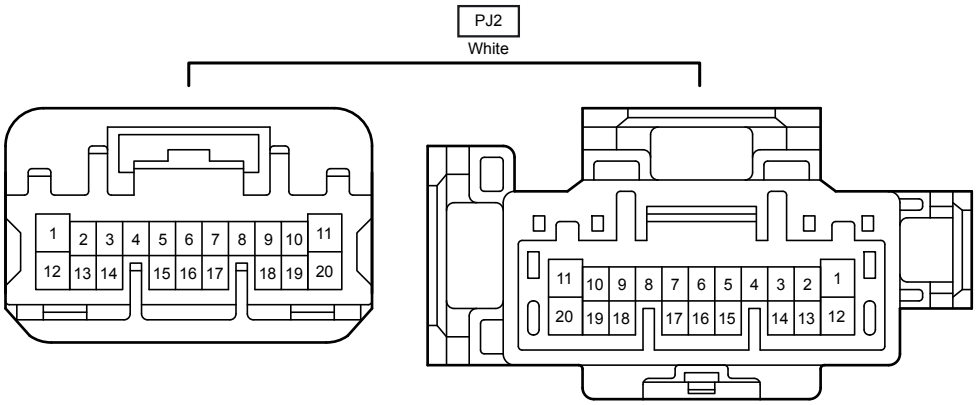
PJ2
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

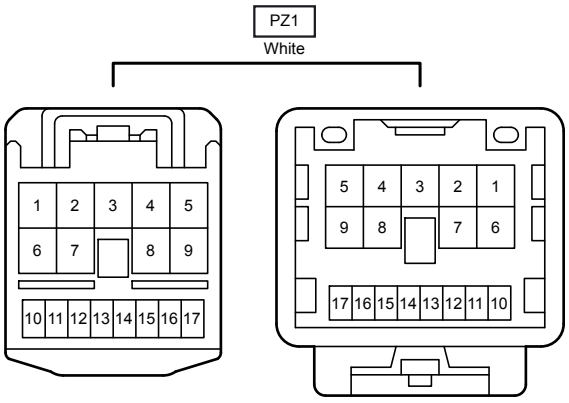
PZ1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10