



(BAT)
15A
STOP
(IG)
7. 5A
ECU–IG
No. 1
17 DB
W
18
A49
Junction
Connector
20
22
L
L
R
G
W
2
A4
Stop Light
Switch
1
5
1
4
BRK NO. 1 Relay
1
4
BRK NO. 2 Relay
3
2
2
3
W
BR
L
Y
BE
LG
10
A51
Junction Connector
8
12
9
7
15
44
A50
Junction
Connector
STPO
BSW
A17
Skid Control ECU
with Actuator
BE
SB
3 RA5
6 PA1
R
R
R
R
3
3
2
STP
Stop
Tail/Side Marker
E
R5
Rear Combination
Light Assembly LH
STP
Stop
Tail/Side Marker
E
R4
Rear Combination
Light Assembly RH
B
High Mounted
Stop Light
E
P8
Cargo Light
High Mounted Stop Light
2
2
1
W–B
W–B
W–B
R1
P2


A 4
White

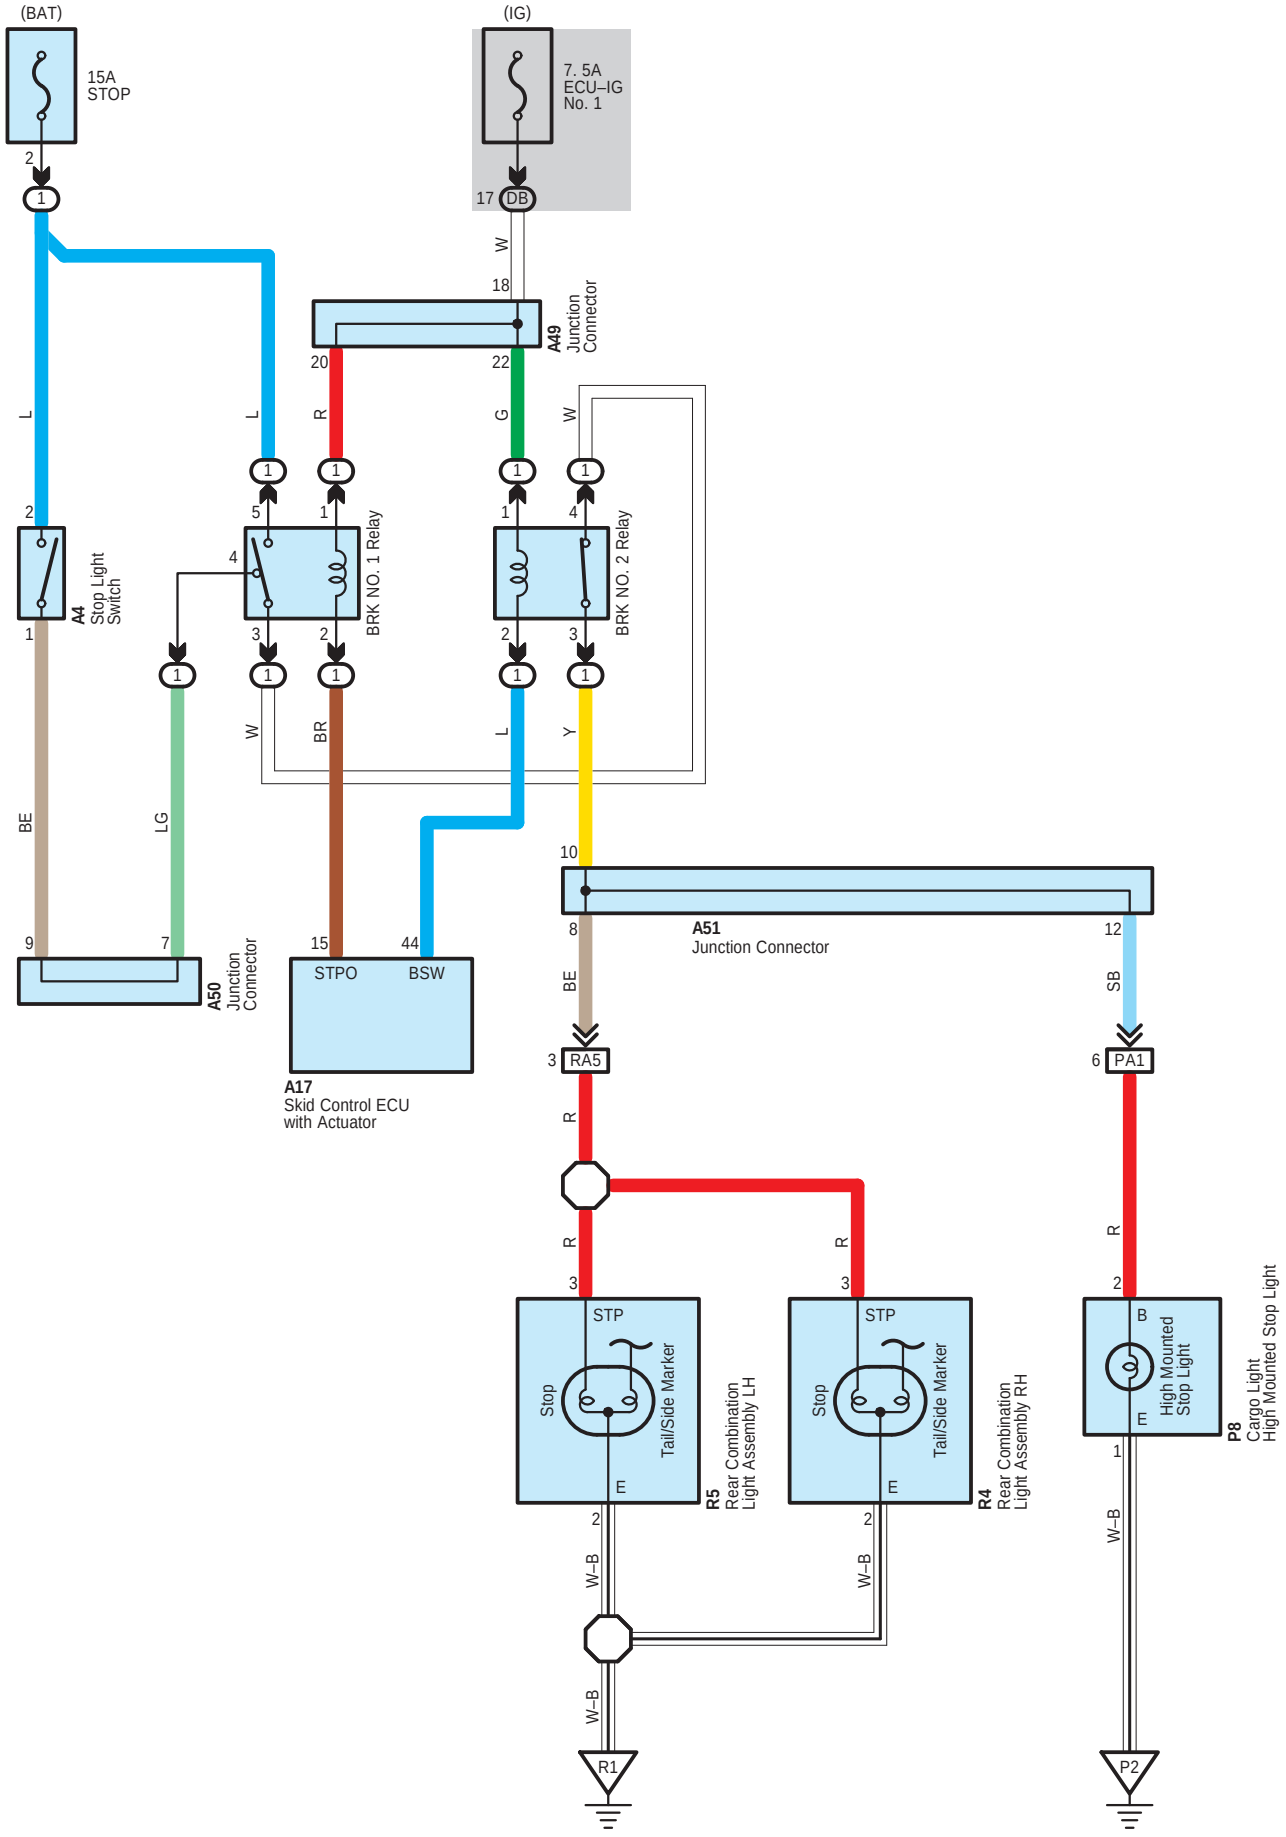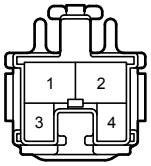


A 17
Black

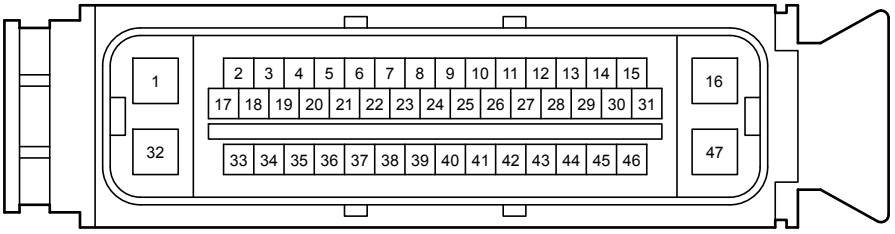


A 49
White

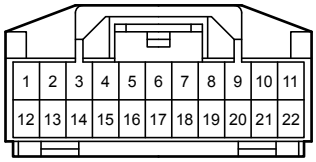


A 50
White

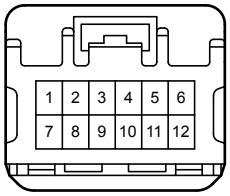

A 51
Black

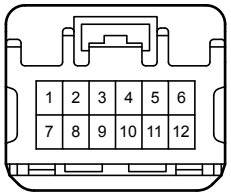

P 8
White

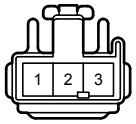


R 4
Gray




R 5
Gray



DB
White

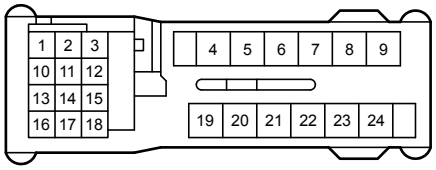

PA1
White

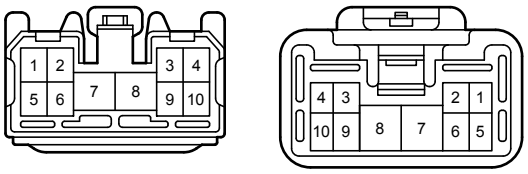

RA5
Gray

