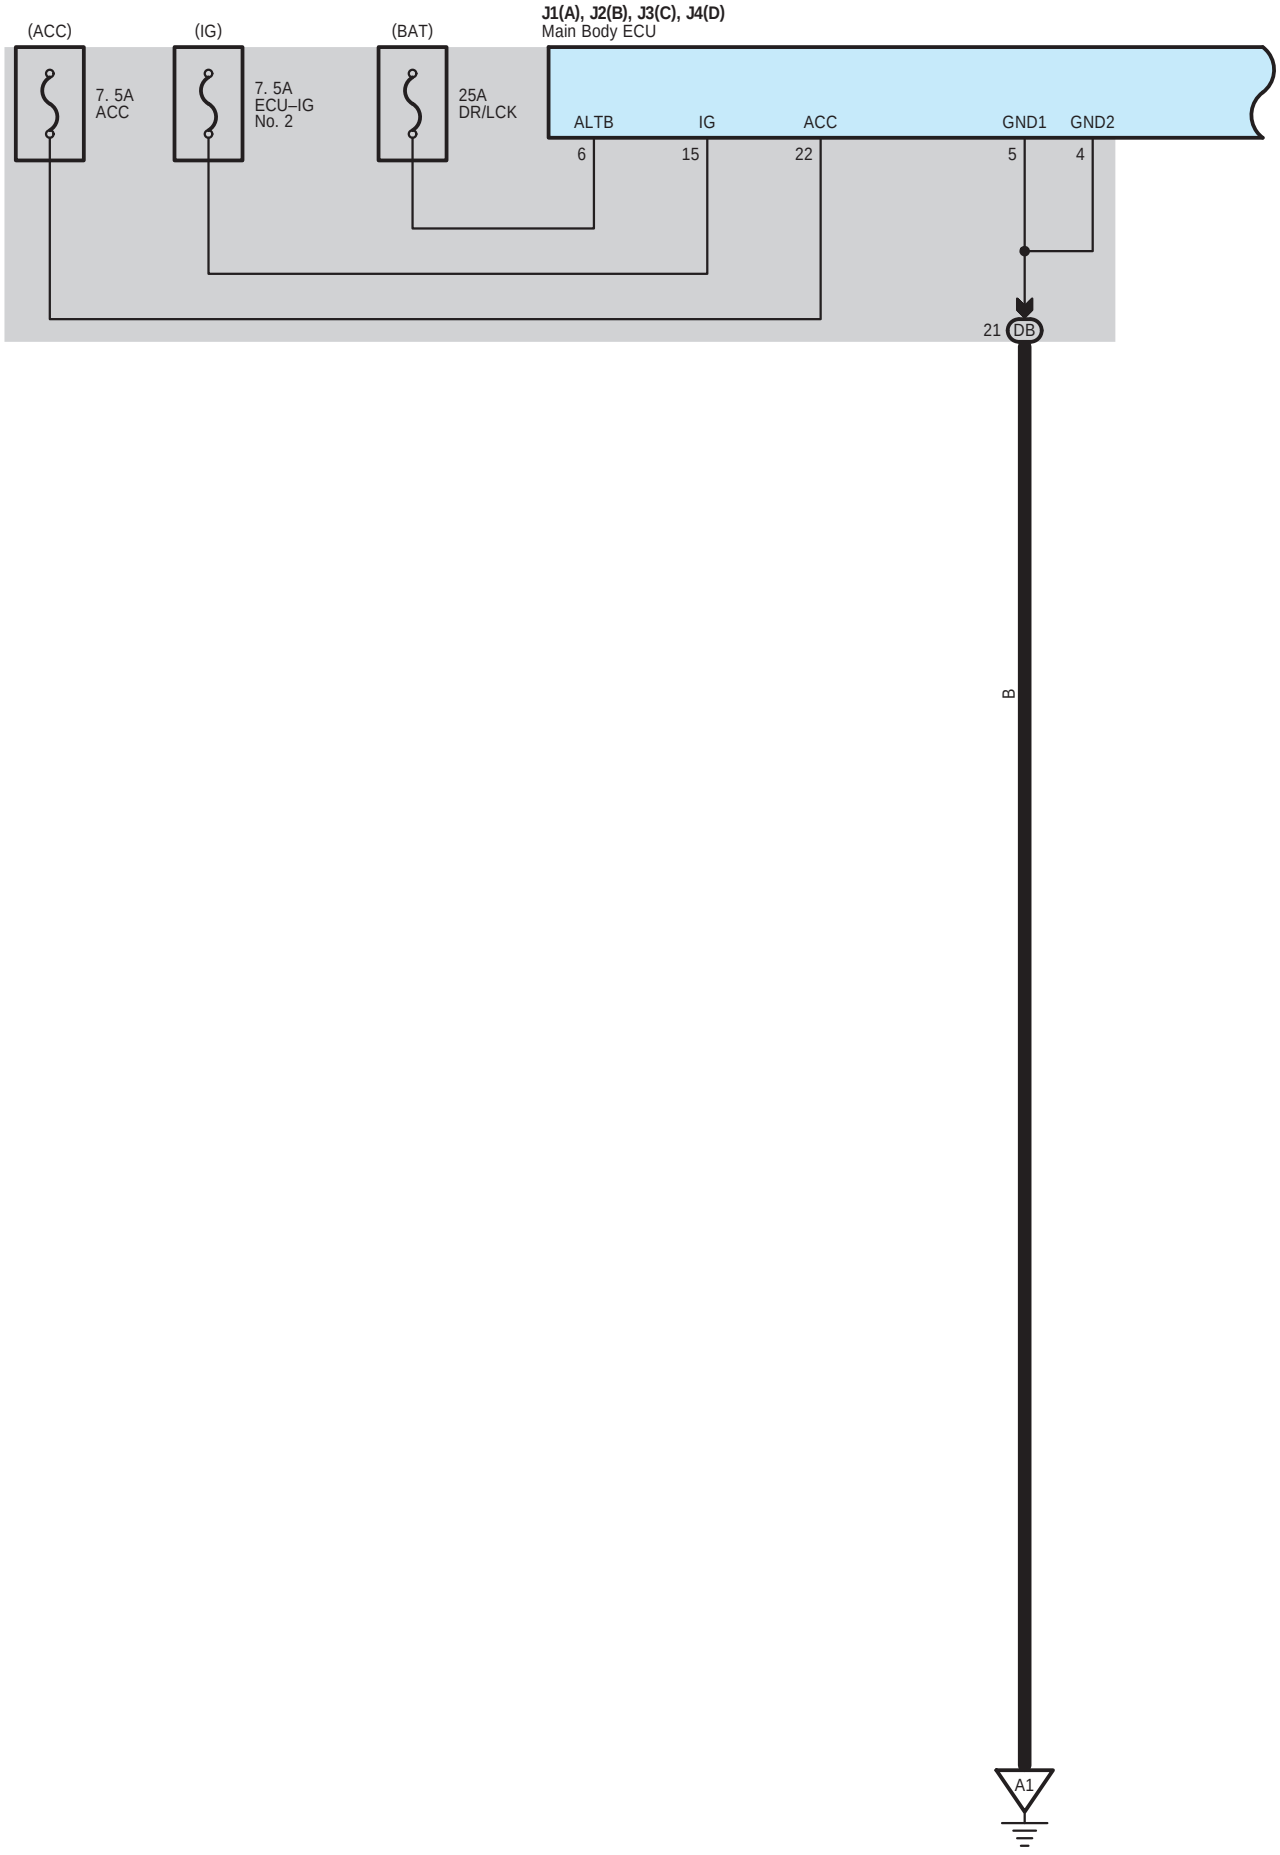
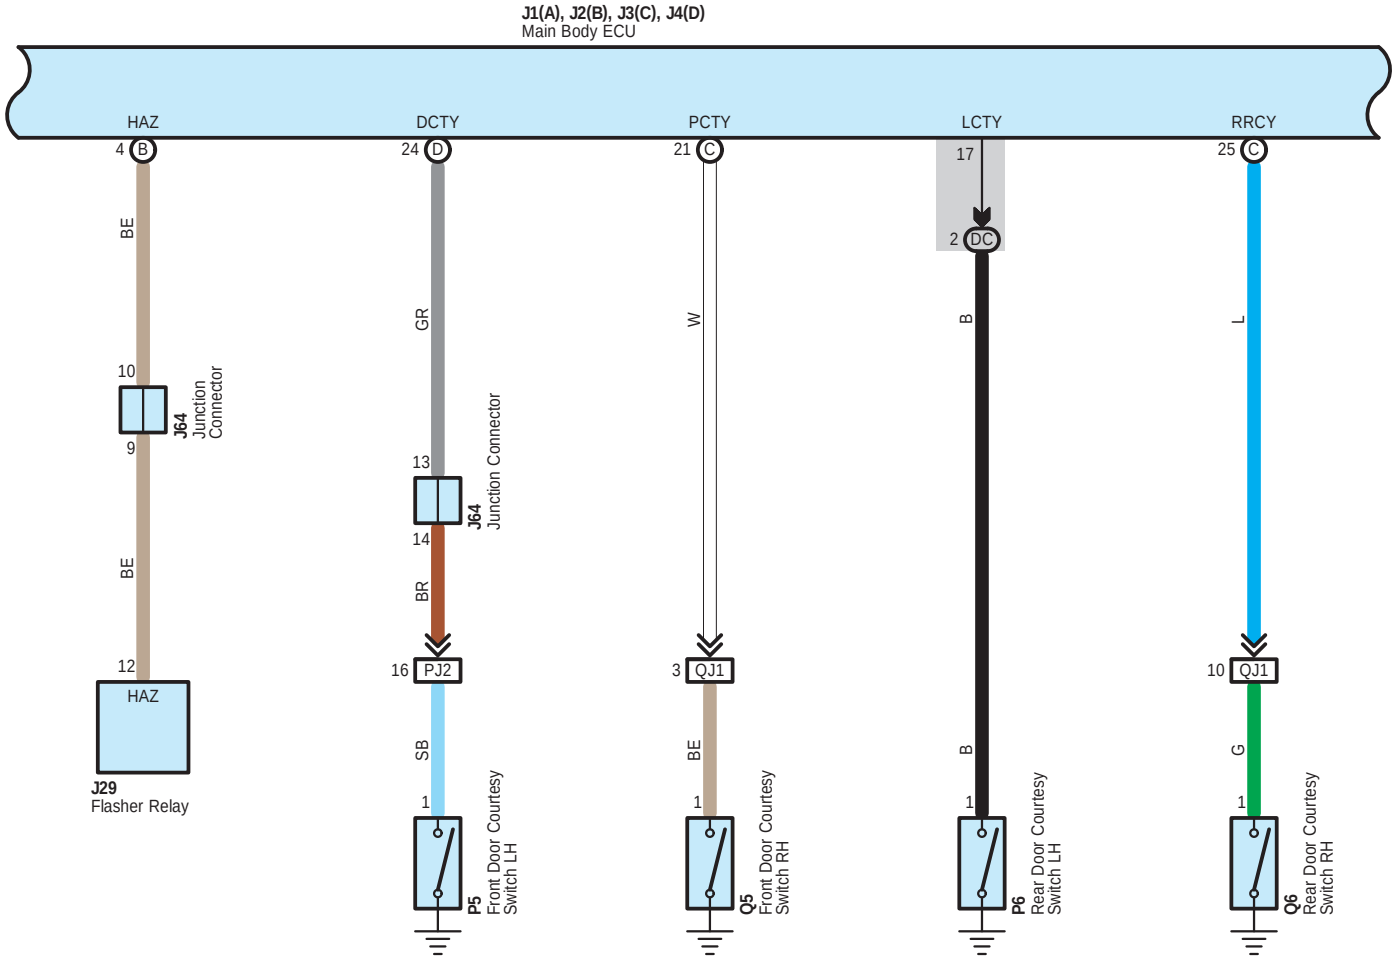
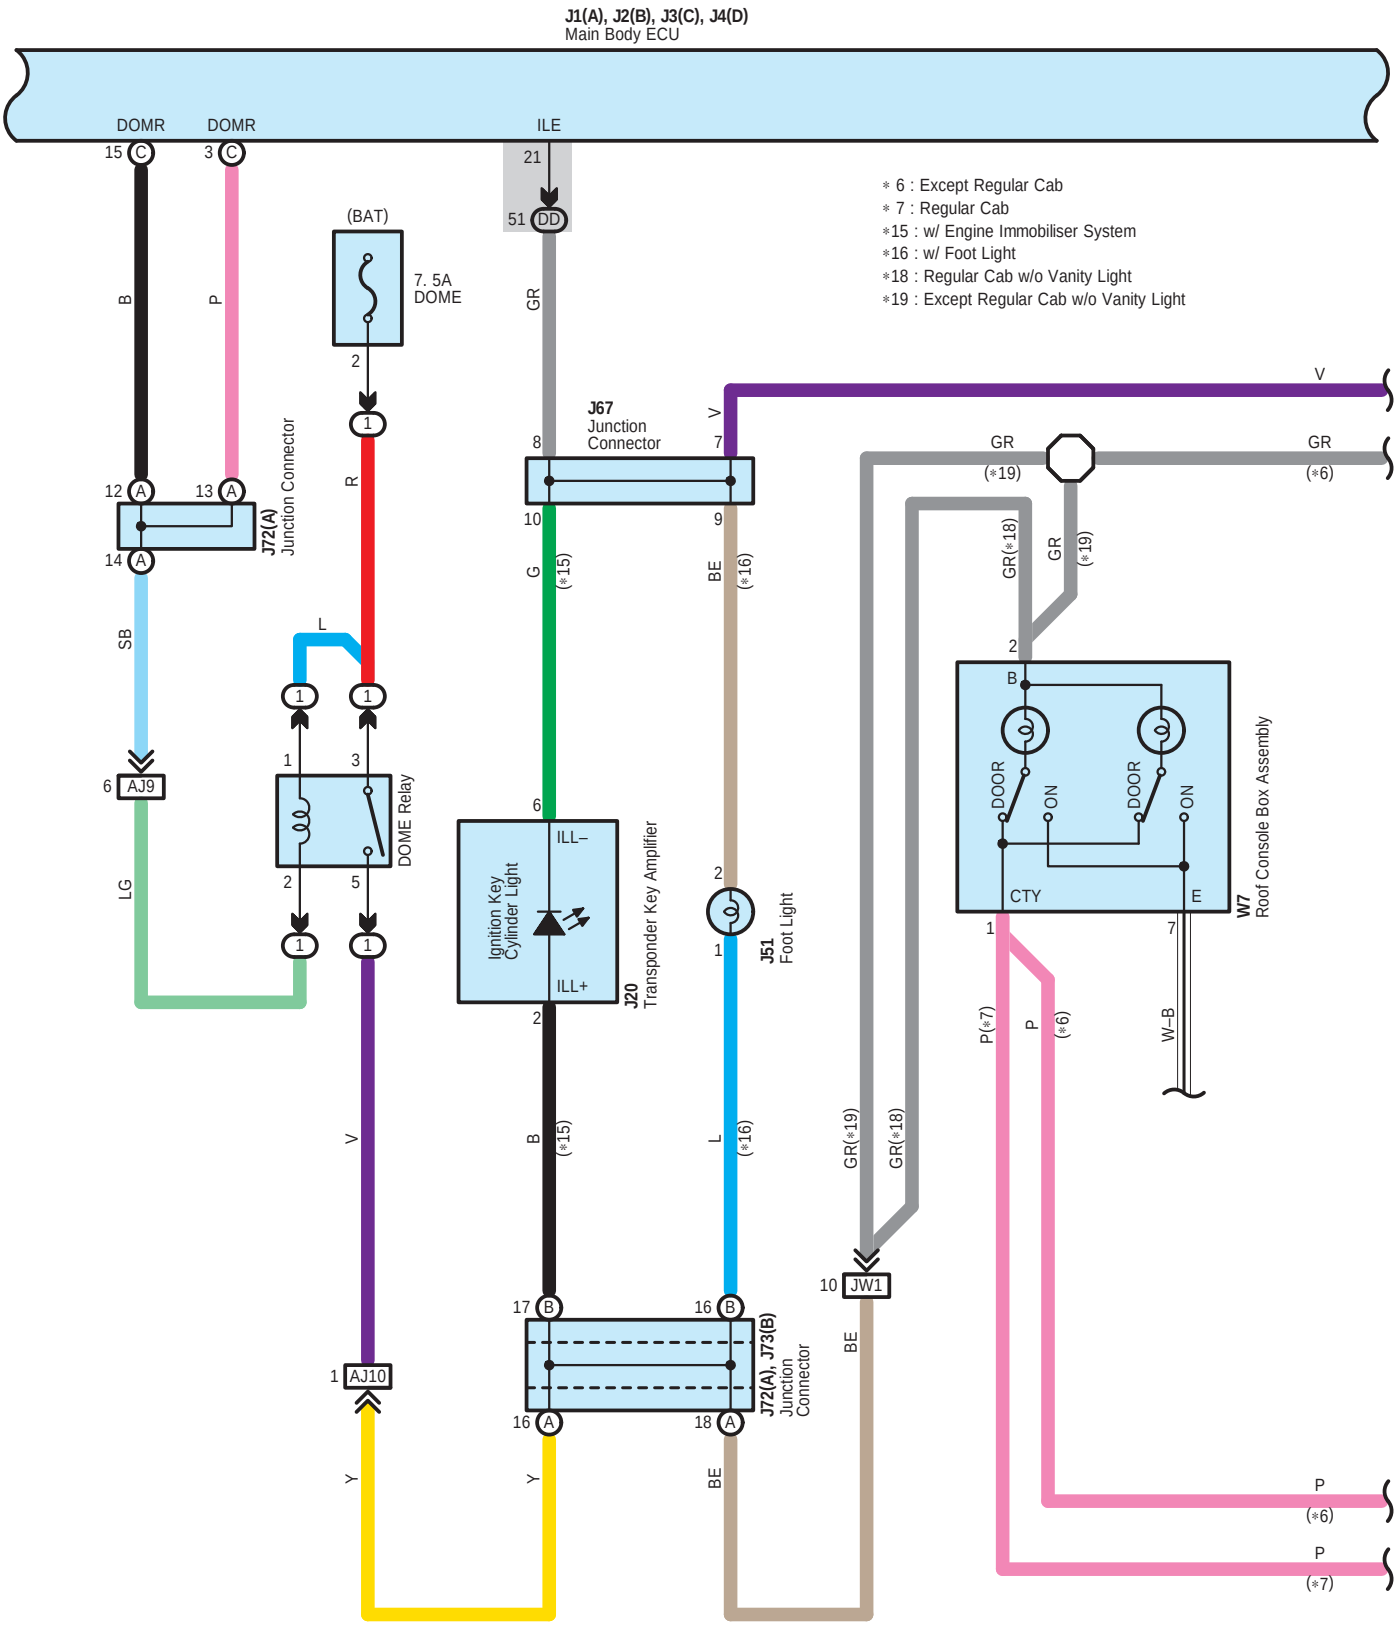
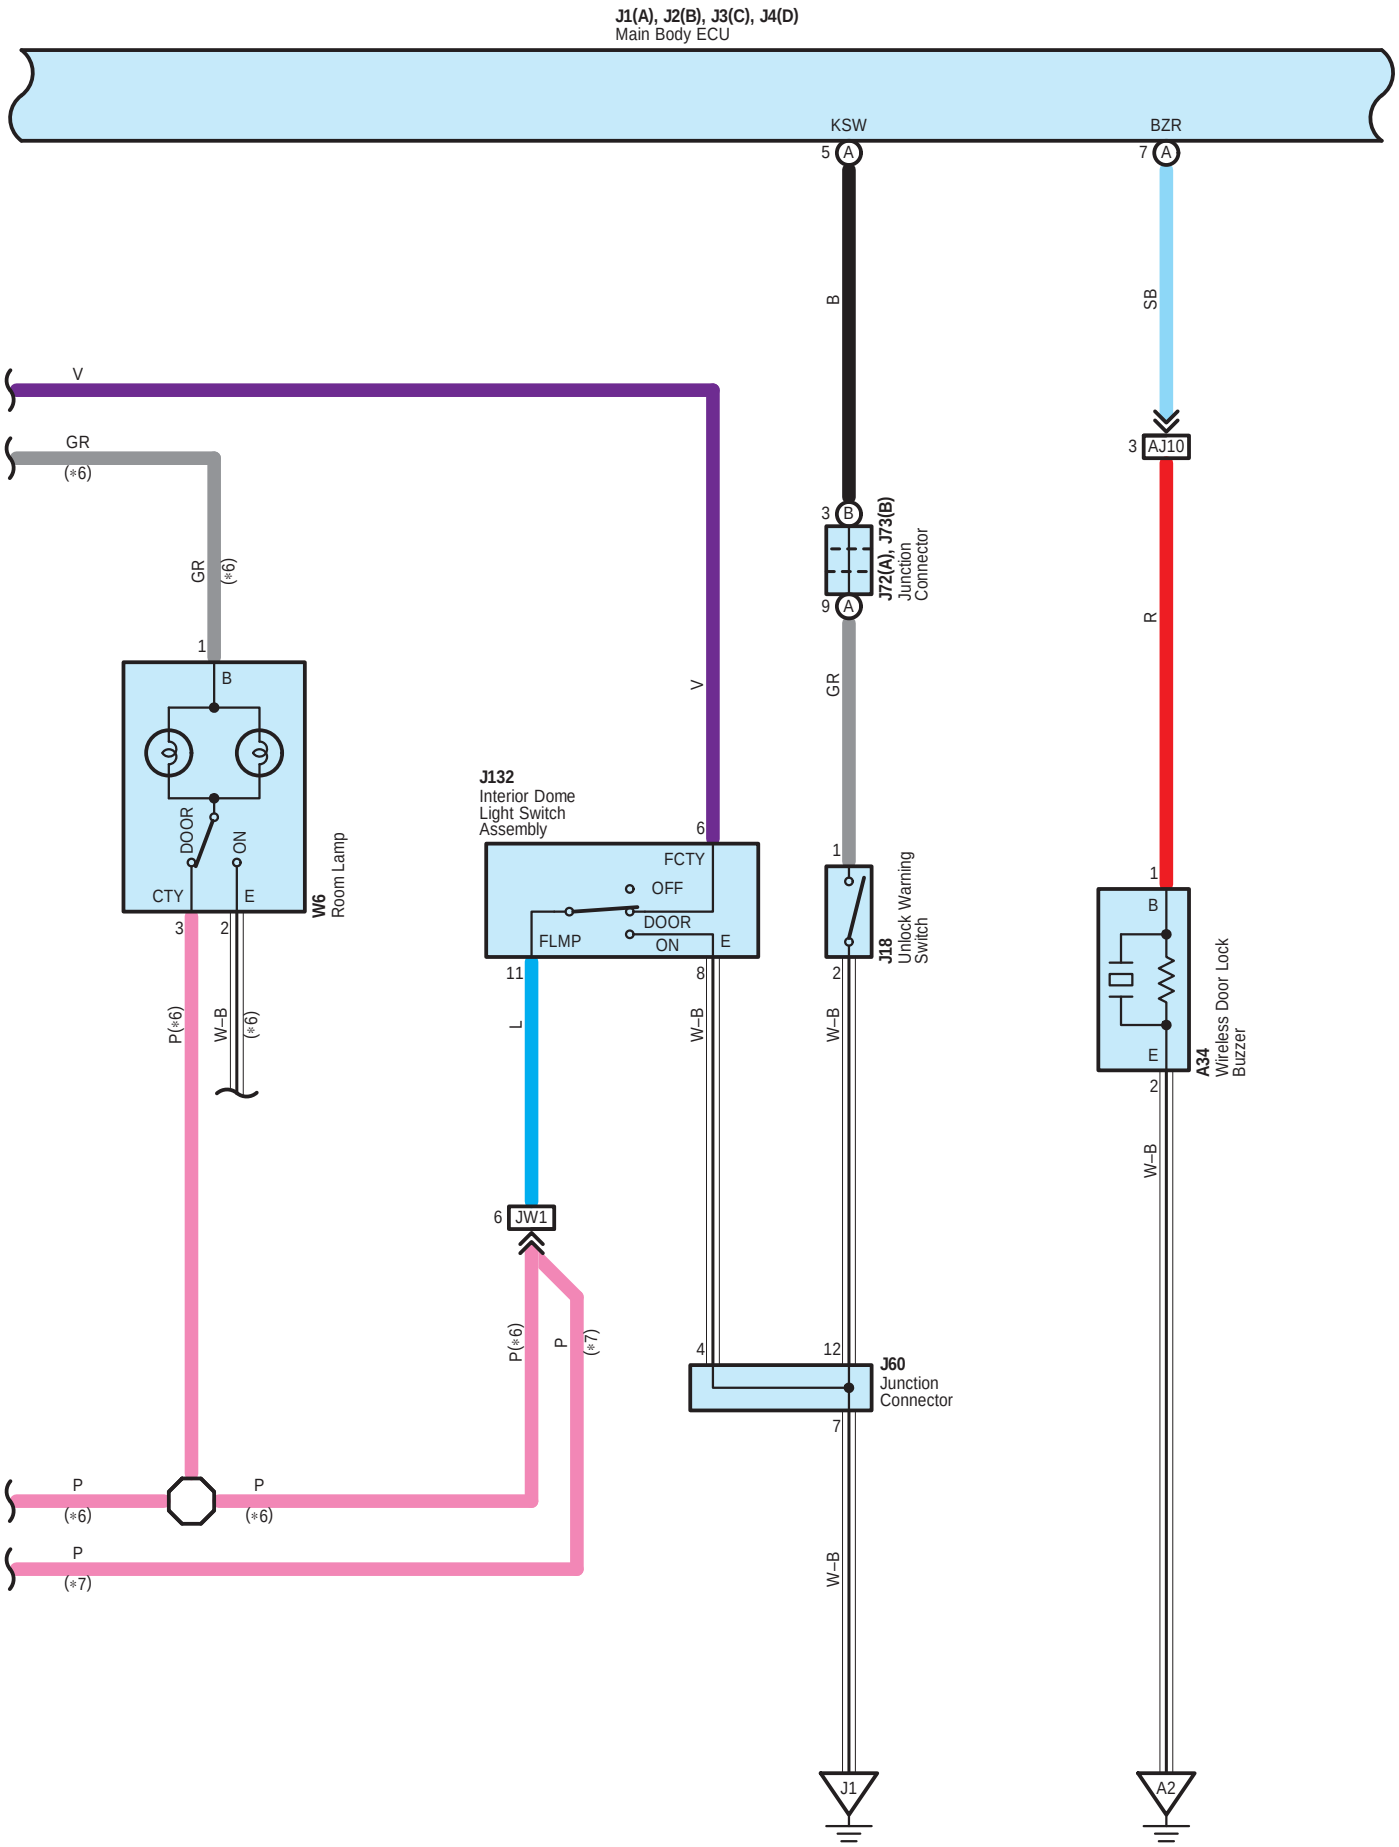
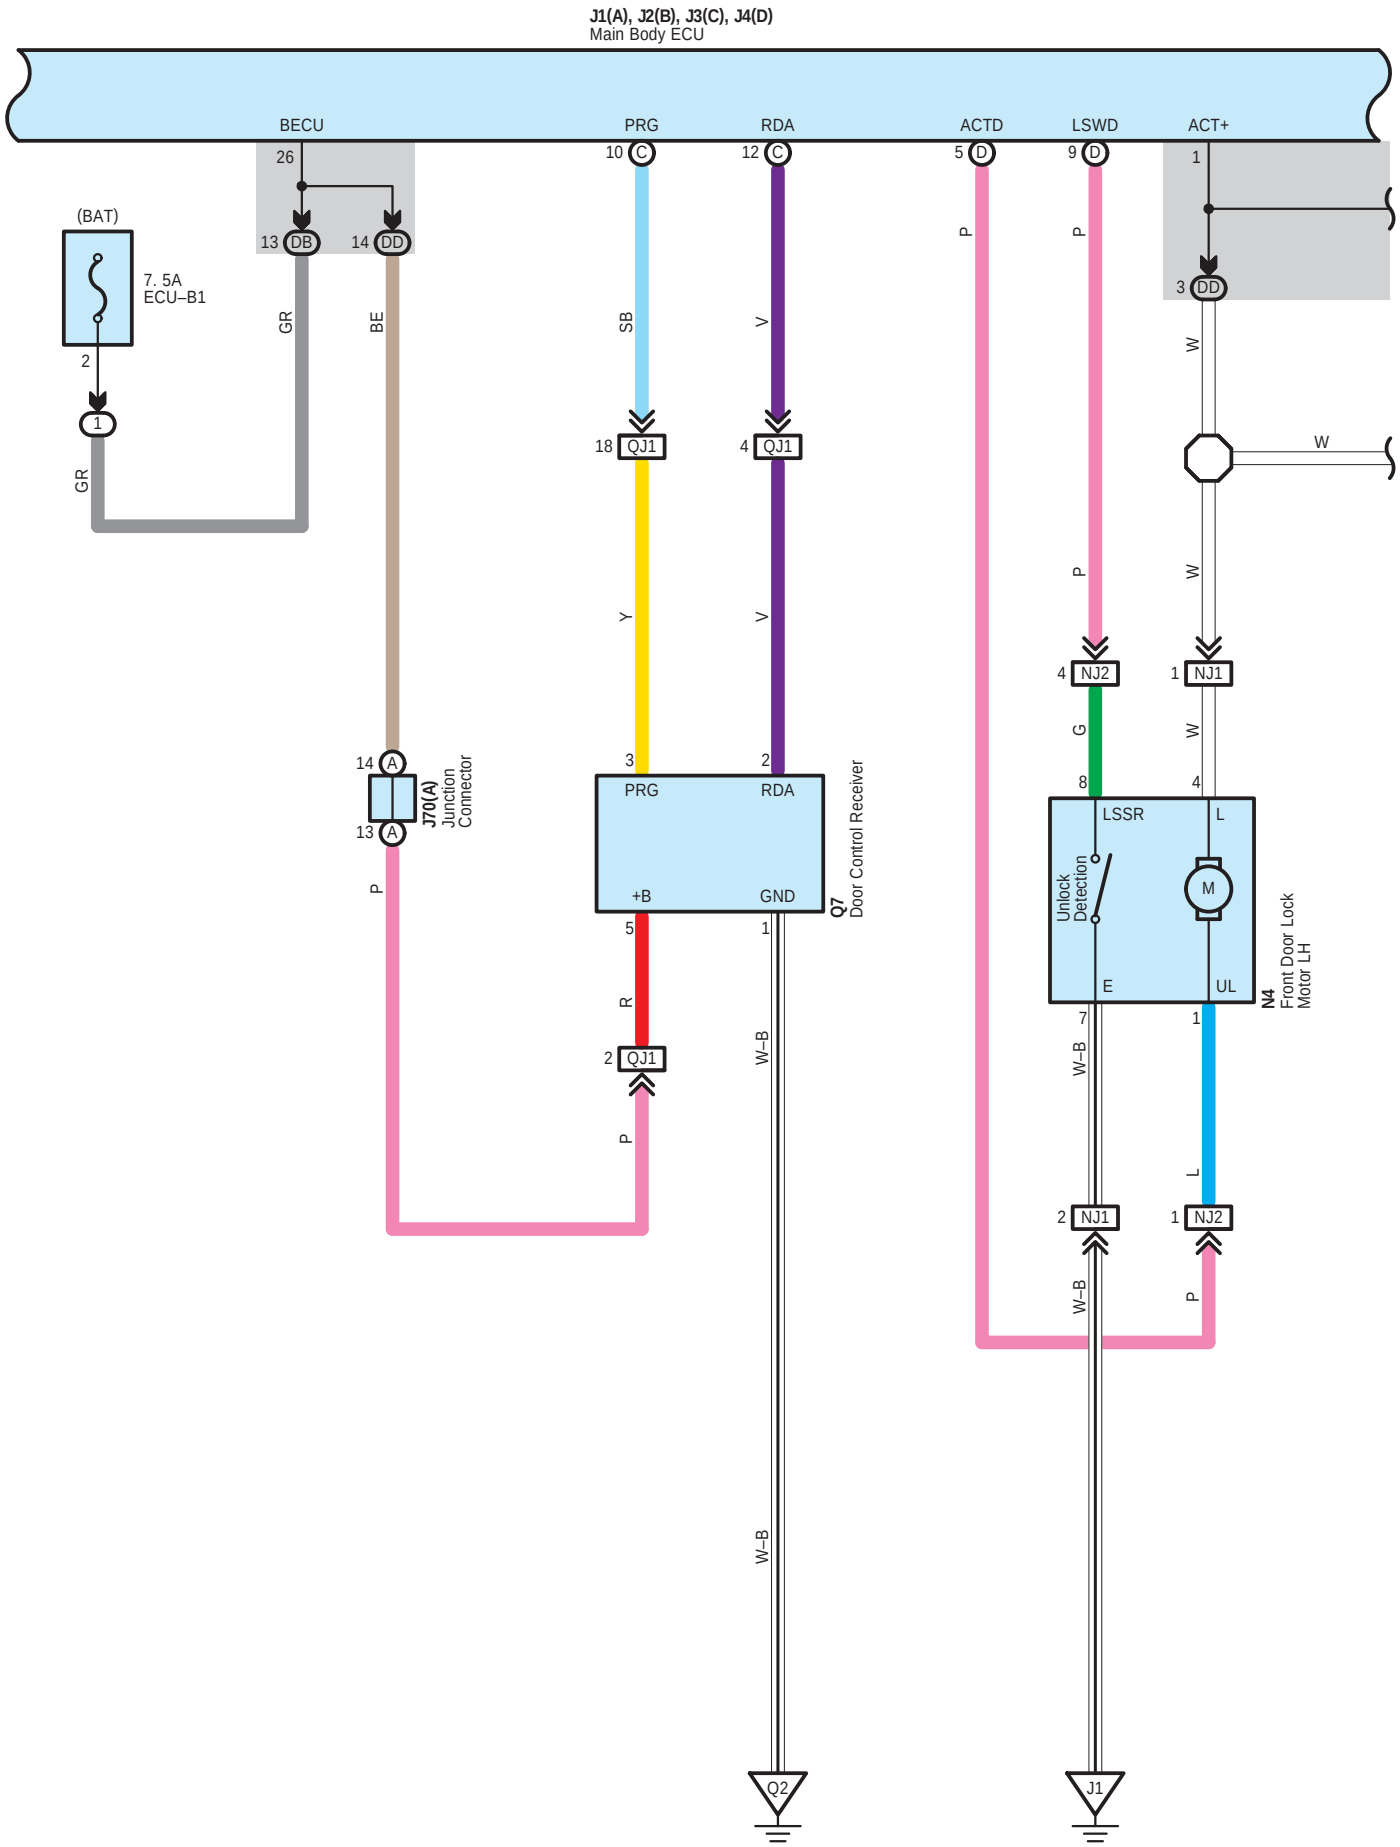
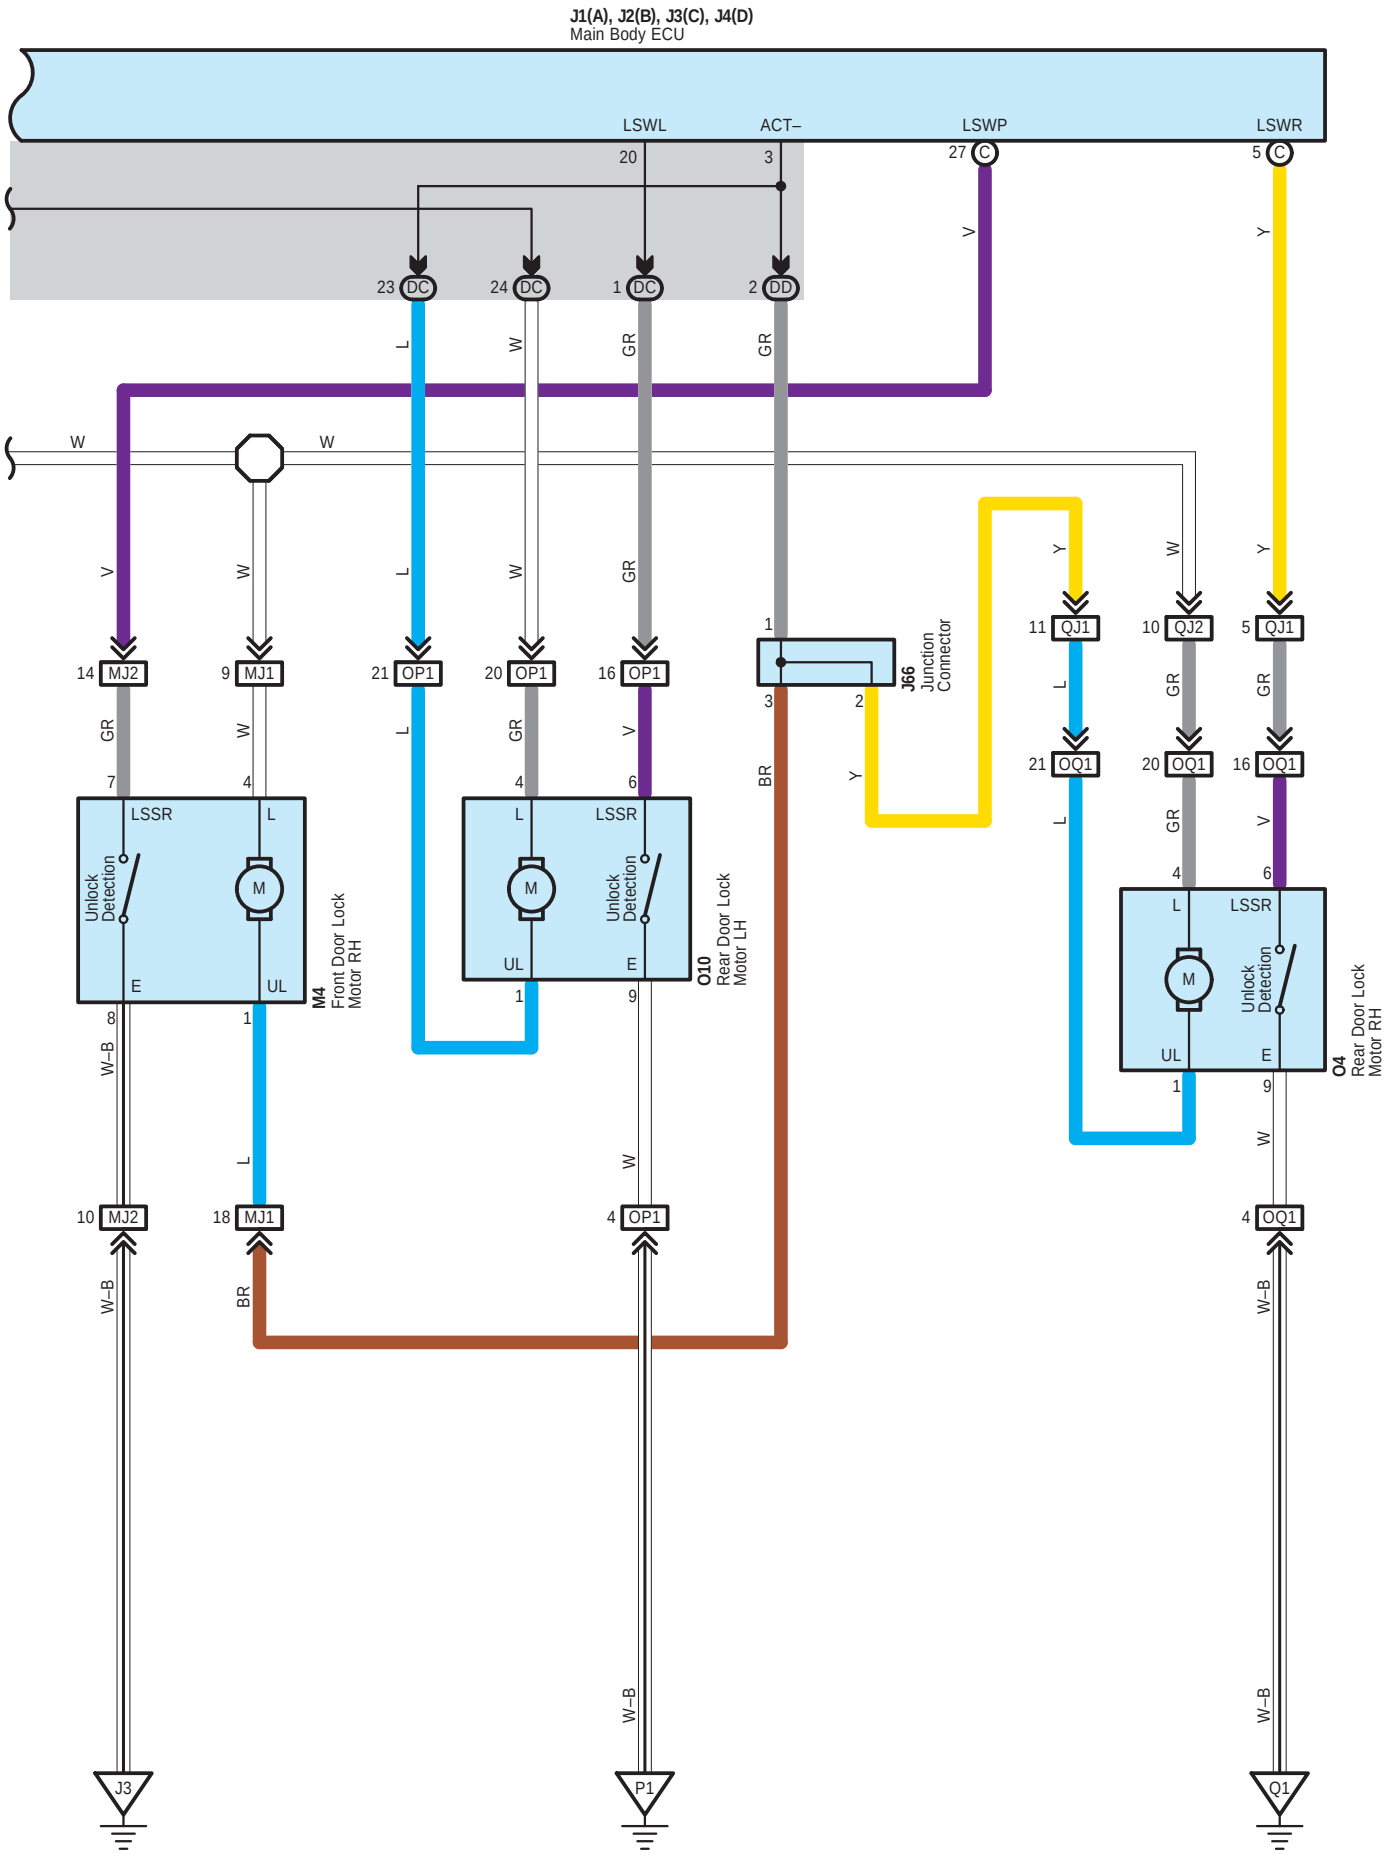

(ACC)
(IG)
(BAT)
J1(A), J2(B), J3(C), J4(D)
Main Body ECU
7. 5A
ACC
7. 5A
ECU–IG
No. 2
25A
DR/LCK
ALTB
IG
ACC
GND1
GND2
6
15
22
5
4
21
DB
B
A1


J1(A), J2(B), J3(C), J4(D)
Main Body ECU
HAZ
DCTY
PCTY
LCTY
RRCY
4 B
24 D
21 C
17
2 DC
25 C
BE
GR
W
B
L
10
J64
Junction Connector
9
13
J64
Junction Connector
14
BE
BR
12
16 PJ2
3 QJ1
10 QJ1
HAZ
J29
Flasher Relay
SB
BE
B
G
1
1
1
1
P5
Front Door Courtesy Switch LH
Q5
Front Door Courtesy Switch RH
P6
Rear Door Courtesy Switch LH
Q6
Rear Door Courtesy Switch RH



J1(A), J2(B), J3(C), J4(D)
Main Body ECU
DOMR
DOMR
ILE
15 C
3 C
21
51 DD
(BAT)
7. 5A
DOME
2
1
B
P
GR
R
L
SB
LG
V
Y
12 A
13 A
14 A
J72(A)
Junction Connector
6 AJ9
1 AJ10
DOME Relay
1 3
2 5
J67
Junction
Connector
8 7
10 9
G (*15)
BE (*16)
6
2
ILL–
ILL+
Ignition Key
Cylinder Light
J20
Transponder Key Amplifier
B (*15)
L (*16)
17 B
16 B
16 A
18 A
J72(A), J73(B)
Junction
Connector
BE
Y
J51
Foot Light
V
GR
(*19)
GR
(*6)
GR(*18)
GR
(*19)
GR(*19)
GR(*18)
10 JW1
BE
2
B
DOOR
ON
DOOR
ON
CTY
E
W7
Roof Console Box Assembly
1
7
P(*7)
P
(*6)
W–B
P
(*6)
P
(*7)
∗ 6 : Except Regular Cab
∗ 7 : Regular Cab
∗15 : w/ Engine Immobiliser System
∗16 : w/ Foot Light
∗18 : Regular Cab w/o Vanity Light
∗19 : Except Regular Cab w/o Vanity Light


J1(A), J2(B), J3(C), J4(D)
Main Body ECU
KSW
BZR
5 A
7 A
B
SB
3 AJ10
3 B
J72(A), J73(B)
Junction
Connector
9 A
R
GR
V
GR
(*6)
GR
(*6)
1
B
DOOR
ON
CTY
E
W6
Room Lamp
3
2
P(*6)
W–B
(*6)
V
J132
Interior Dome
Light Switch
Assembly
6
FCTY
OFF
DOOR
ON
FLMP
E
11
8
L
W–B
6 JW1
P(*6)
P
(*7)
1
J18
Unlock Warning
Switch
2
W–B
4
12
J60
Junction
Connector
7
W–B
J1
1
B
E
A34
Wireless Door Lock
Buzzer
2
W–B
A2
P
(*6)
P
(*6)
P
(*7)



J1(A), J2(B), J3(C), J4(D)
Main Body ECU
BECU
PRG
RDA
ACTD
LSWD
ACT+
(BAT)
7. 5A
ECU–B1
26
13 DB
14 DD
10 C
12 C
5 D
9 D
1
3 DD
GR
BE
SB
V
P
W
18 QJ1
4 QJ1
Y
4 NJ2
1 NJ1
G
14 A
13 A
J70(A)
Junction
Connector
3
2
PRG
RDA
+B
GND
Q7
Door Control Receiver
8
4
LSSR
L
Unlock
Detection
M
E
UL
N4
Front Door Lock
Motor LH
5
1
R
7
2 NJ1
1 NJ2
W–B
2 QJ1
Q2
J1


J1(A), J2(B), J3(C), J4(D)
Main Body ECU
LSWL
ACT–
LSWP
LSWR
20
3
27 C
5 C
23 DC
24 DC
1 DC
2 DD
L
W
GR
GR
V
Y
W
W
V
W
L
W
GR
Y
W
Y
1
11 QJ1
10 QJ2
5 QJ1
14 MJ2
9 MJ1
21 OP1
20 OP1
16 OP1
J66
Junction Connector
3
2
BR
Y
L
GR
GR
GR
7
4
4
6
21 OQ1
20 OQ1
16 OQ1
LSSR
L
Unlock Detection
M
E
UL
M4
Front Door Lock Motor RH
UL
LSSR
L
Unlock Detection
M
E
O10
Rear Door Lock Motor LH
L
LSSR
Unlock Detection
M
UL
E
O4
Rear Door Lock Motor RH
8
1
1
9
4
9
W–B
L
W
W–B
10 MJ2
18 MJ1
4 OP1
4 OQ1
W–B
BR
W–B
W–B
J3
P1
Q1


A 34
Black




J 1
White

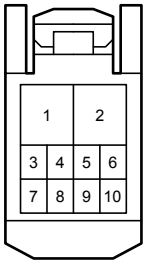


J 2
White

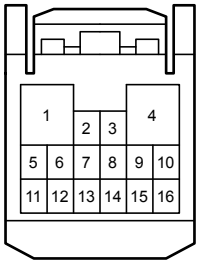

J 3
White

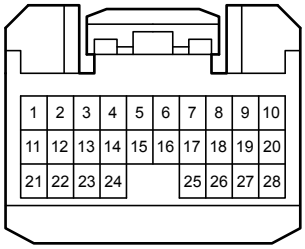


J 4
White

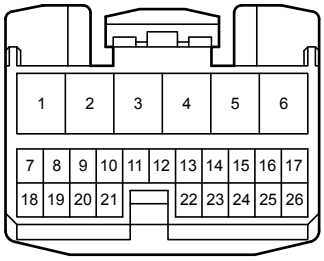


J 18
White




J 20
Black

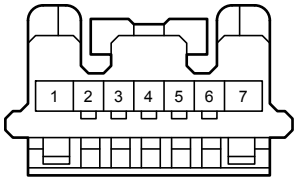


J 29
White

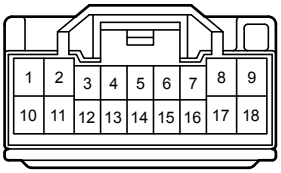


J 51
Black

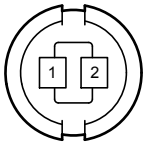


J 60
White

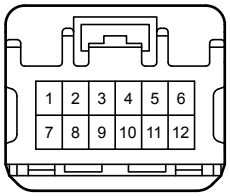


J 64
White

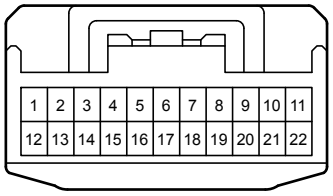


J 66
Black

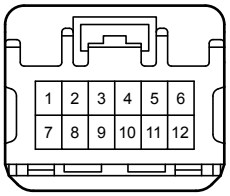


J 67
Blue

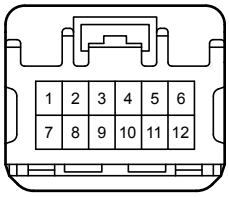


J 70
Blue

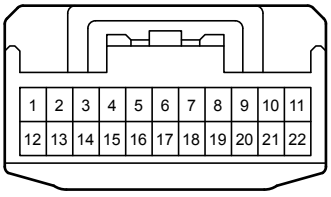


J 72
Black

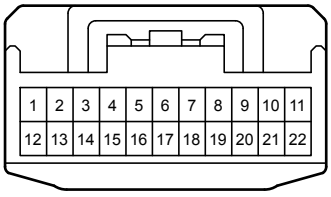


J 73
Black

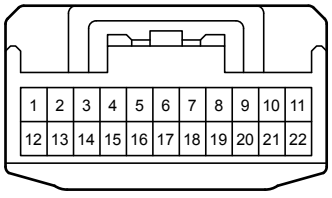


J132
Black




M 4
White

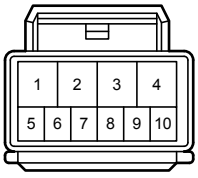


N 4
White

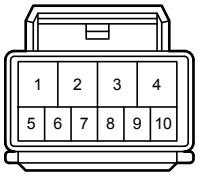

O 4
White

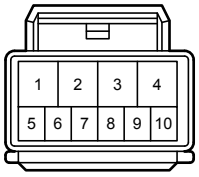

O 10
White

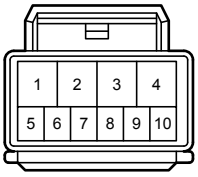

P 5
White



P 6
White




Q 5
White




Q 6
White




Q 7
White

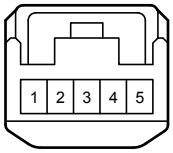


W 6
White

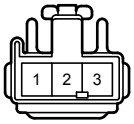


W 7
White

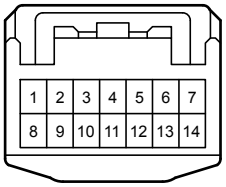


DB
White

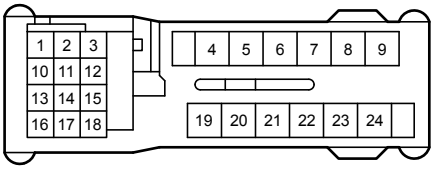


DC
White

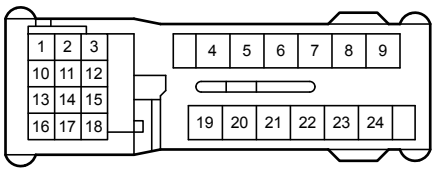


DD
White

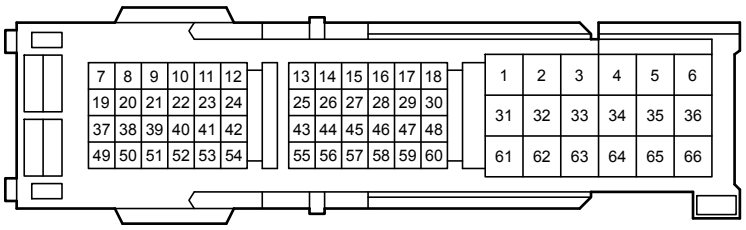


AJ9
White

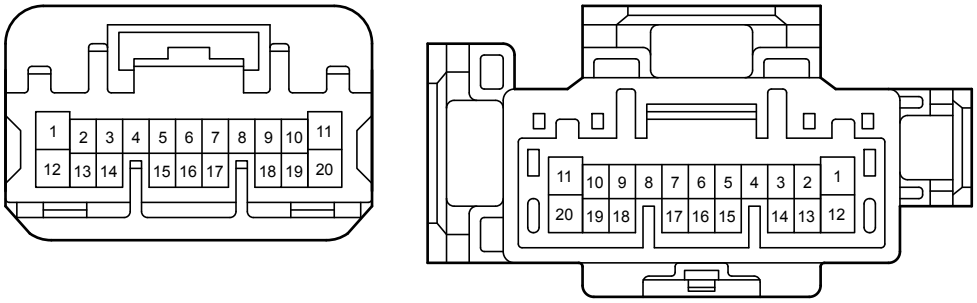


AJ10
Gray

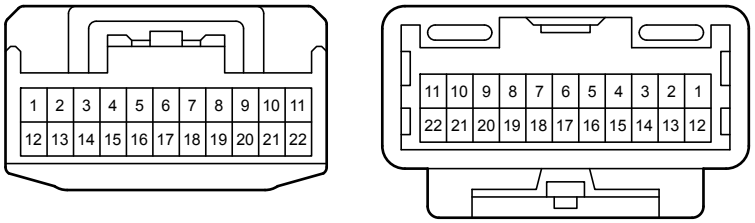


JW1
White

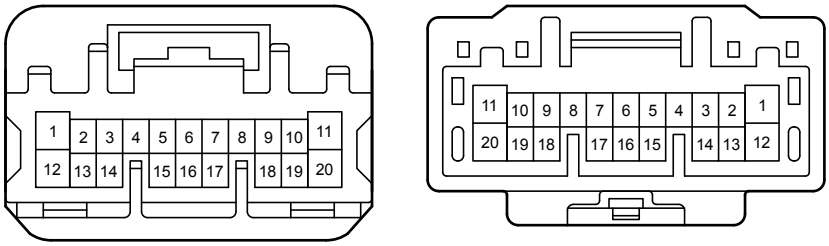


MJ1
Blue

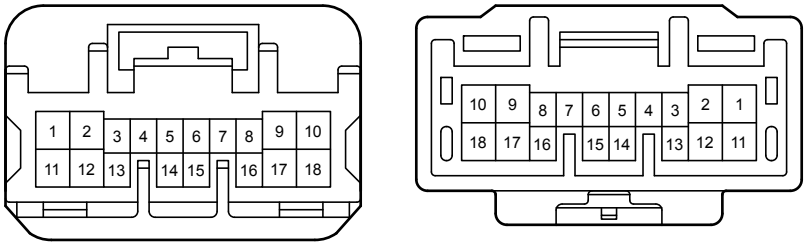


MJ2
Blue

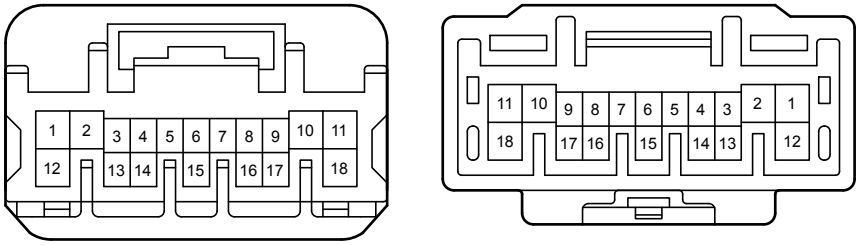


NJ1
Blue

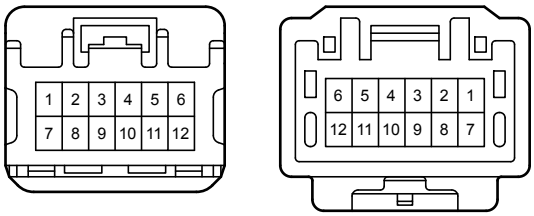


NJ2
White

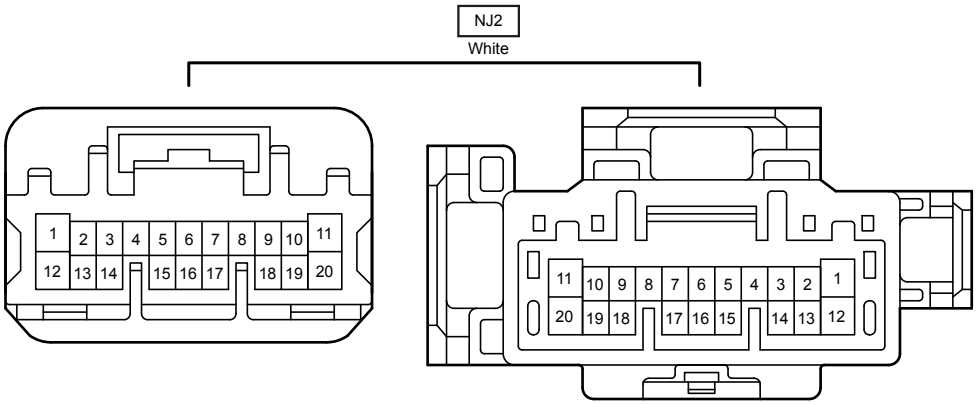


OP1
White

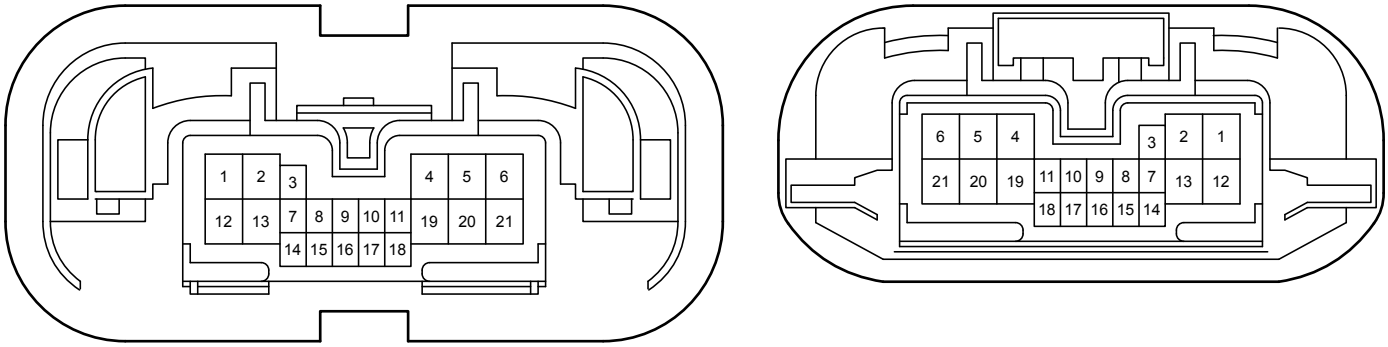


OQ1
White

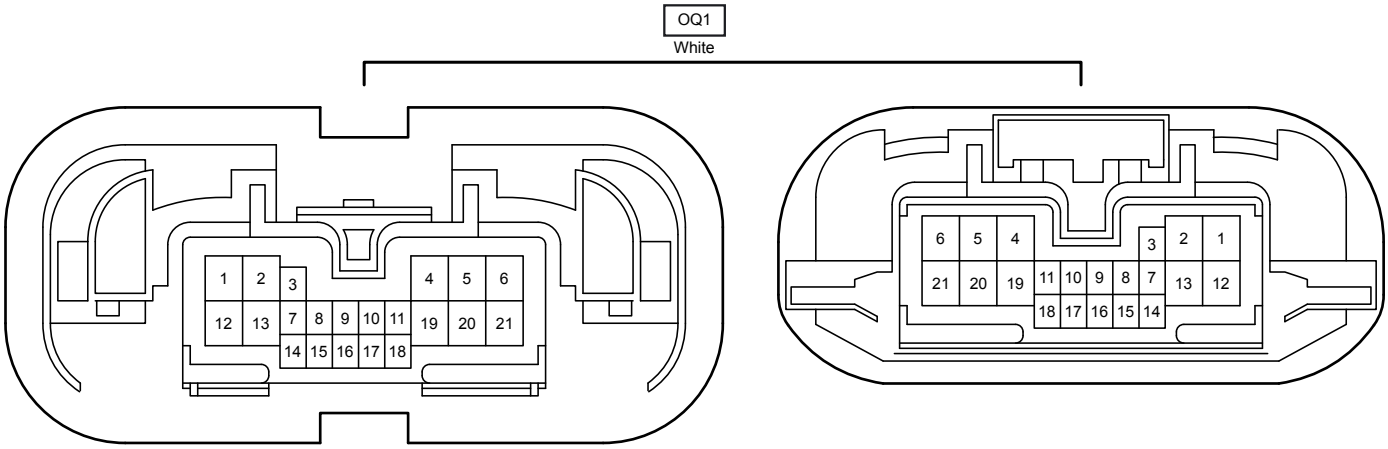


PJ2
White

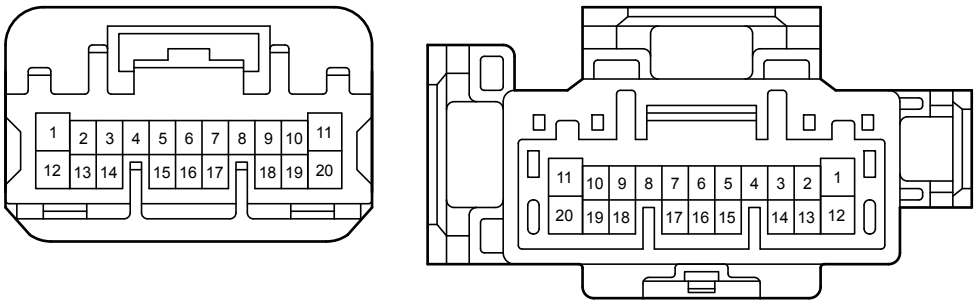

QJ1
White

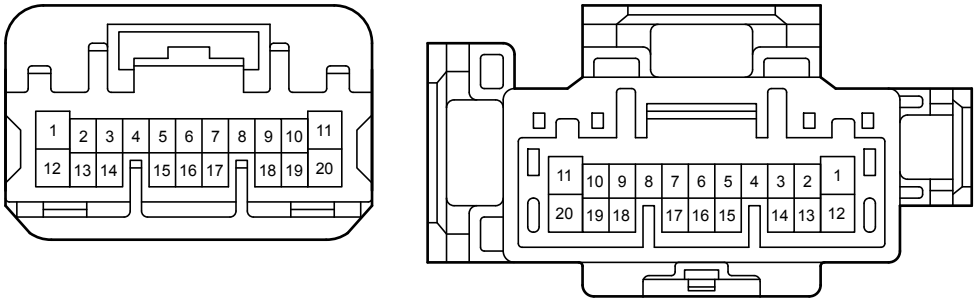

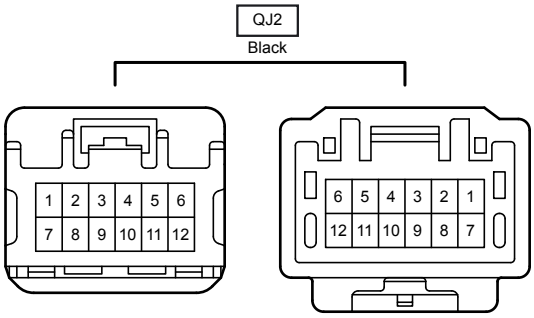
QJ2
Black
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7