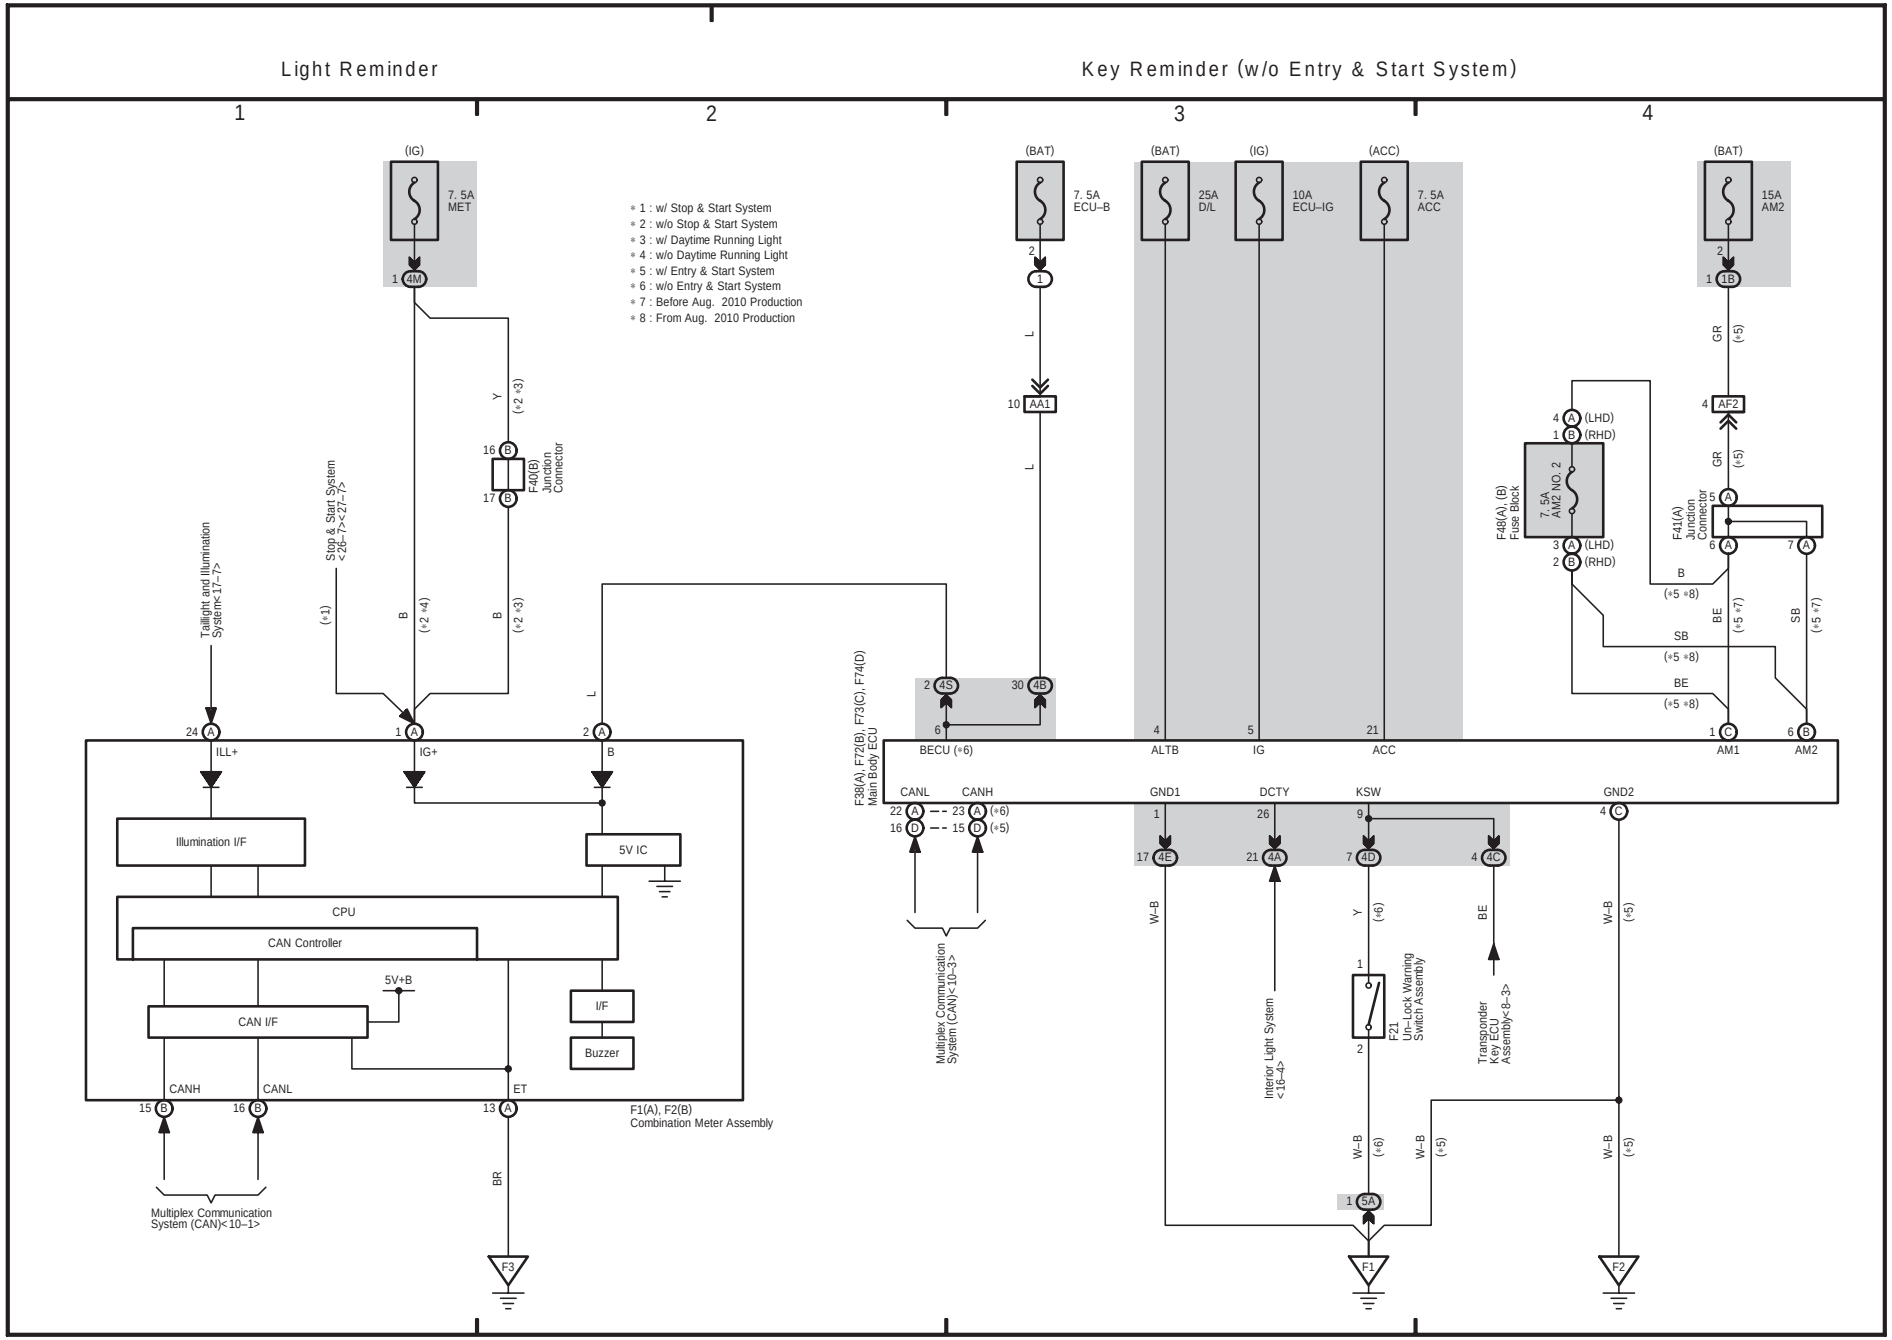
Light Reminder
Key Reminder (w/o Entry & Start System)
1
2
3
4
* 1 : w/ Stop & Start System
* 2 : w/o Stop & Start System
* 3 : w/ Daytime Running Light
* 4 : w/o Daytime Running Light
* 5 : w/ Entry & Start System
* 6 : w/o Entry & Start System
* 7 : Before Aug. 2010 Production
* 8 : From Aug. 2010 Production
(IG)
7. 5A MET
(BAT)
7. 5A ECU–B
(BAT)
25A D/L
(IG)
10A ECU–IG
(ACC)
7. 5A ACC
(BAT)
15A AM2
Taillight and Illumination System<17–7>
Stop & Start System <28–7><27–7>
F40(B) Junction Connector
F48(A), (B) Fuse Block
7. 5A AM2 NO. 2
F41(A) Junction Connector
F38(A), F72(B), F73(C), F74(D) Main Body ECU
BECU (*6)
ALTB
IG
ACC
AM1
AM2
CANL
CANH
GND1
DCTY
KSW
GND2
ILL+
IG+
B
Illumination I/F
5V IC
CPU
CAN Controller
5V+B
CAN I/F
I/F
Buzzer
ET
F1(A), F2(B) Combination Meter Assembly
Multiplex Communication System (CAN)<10–1>
Multiplex Communication System (CAN)<10–3>
Interior Light System <16–4>
F21 Un–Lock Warning Switch Assembly
Transponder Key ECU Assembly<8–3>
(LHD)
(RHD)
AA1
AF2
4S
4B
4E
4A
4D
4C
5A
F1
F2
F3