

(Cont. next page)

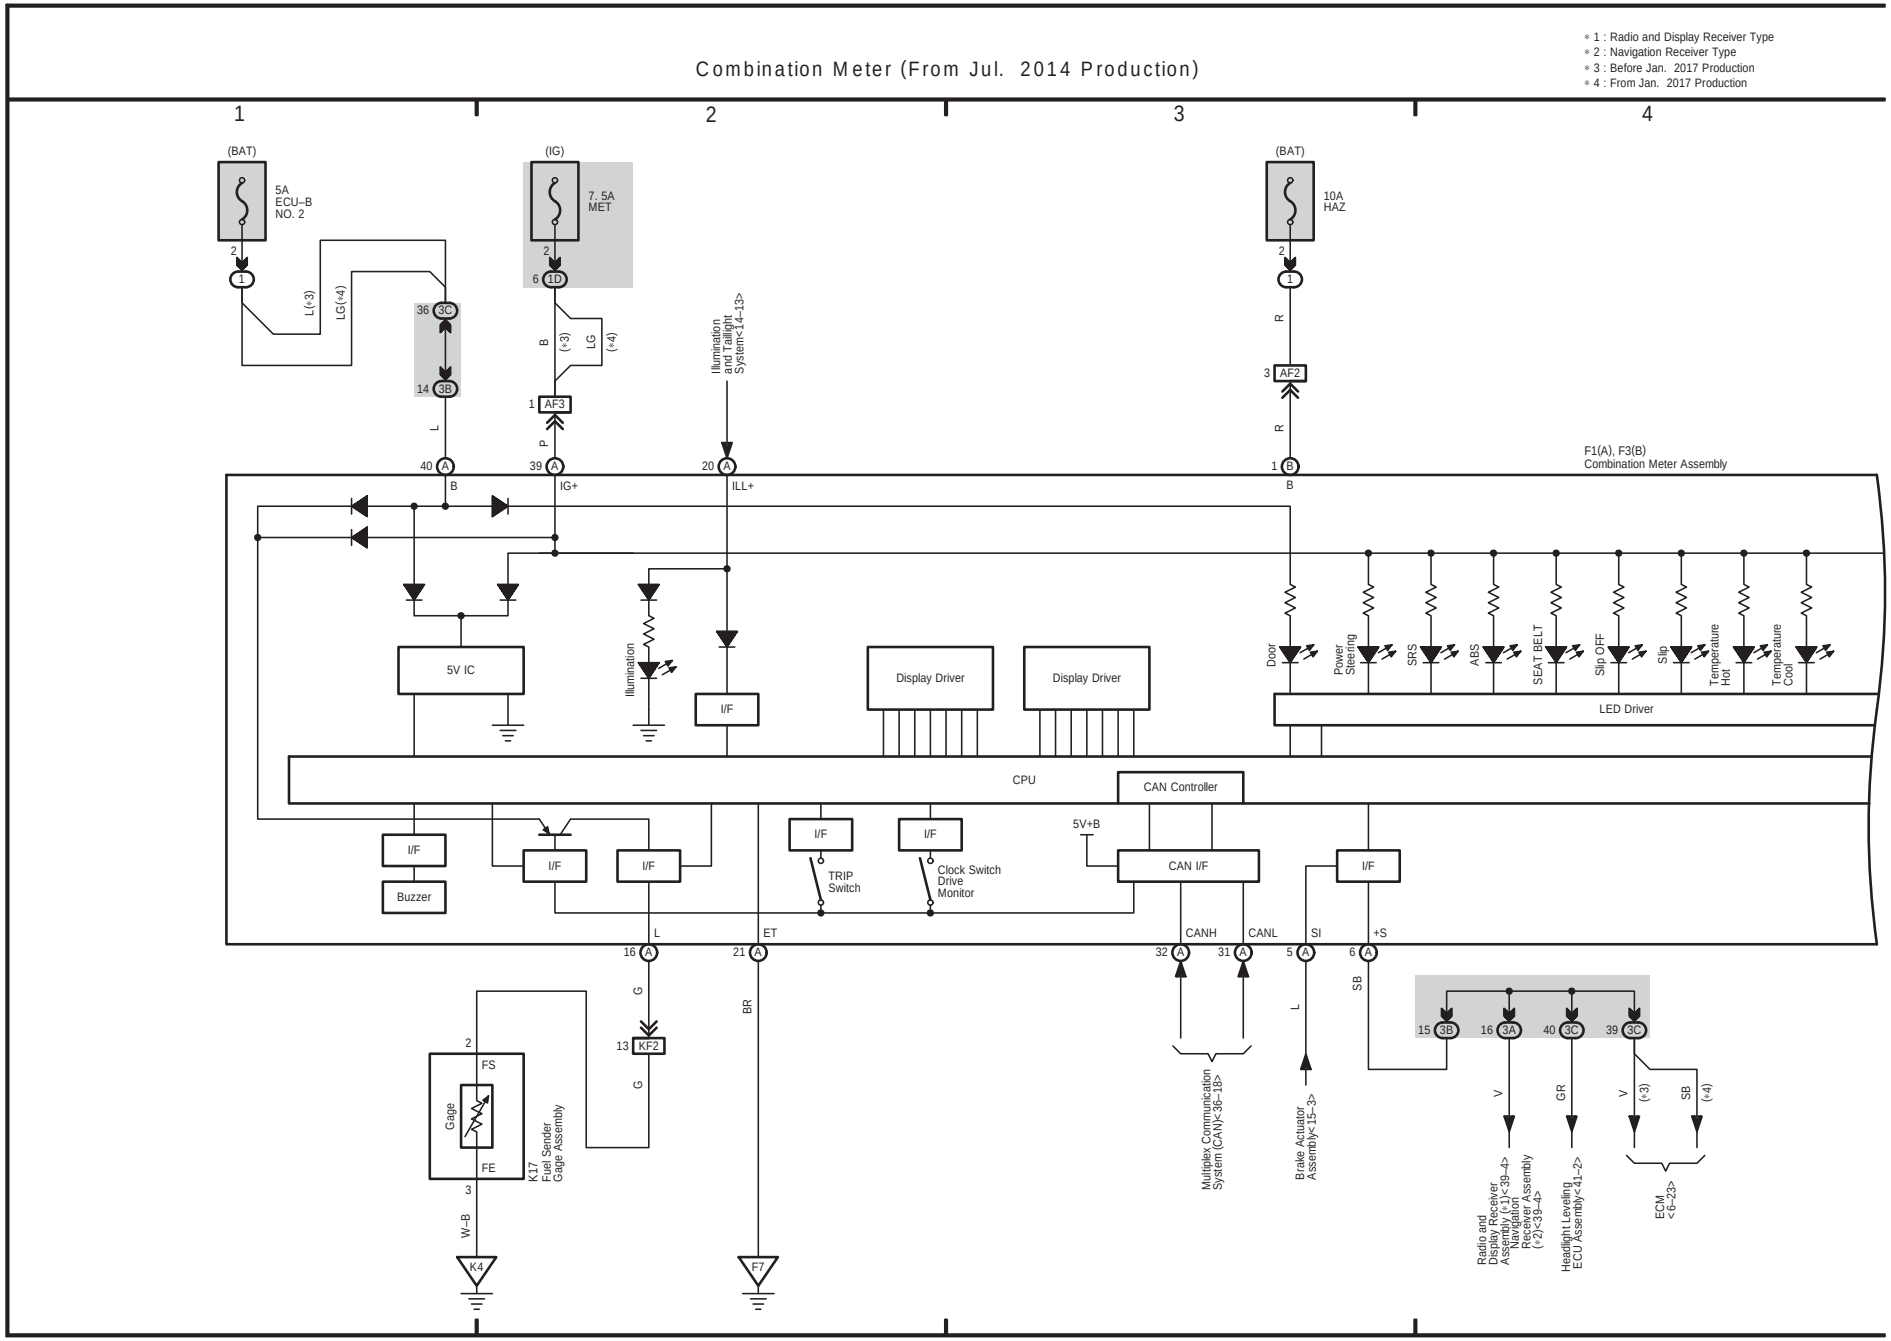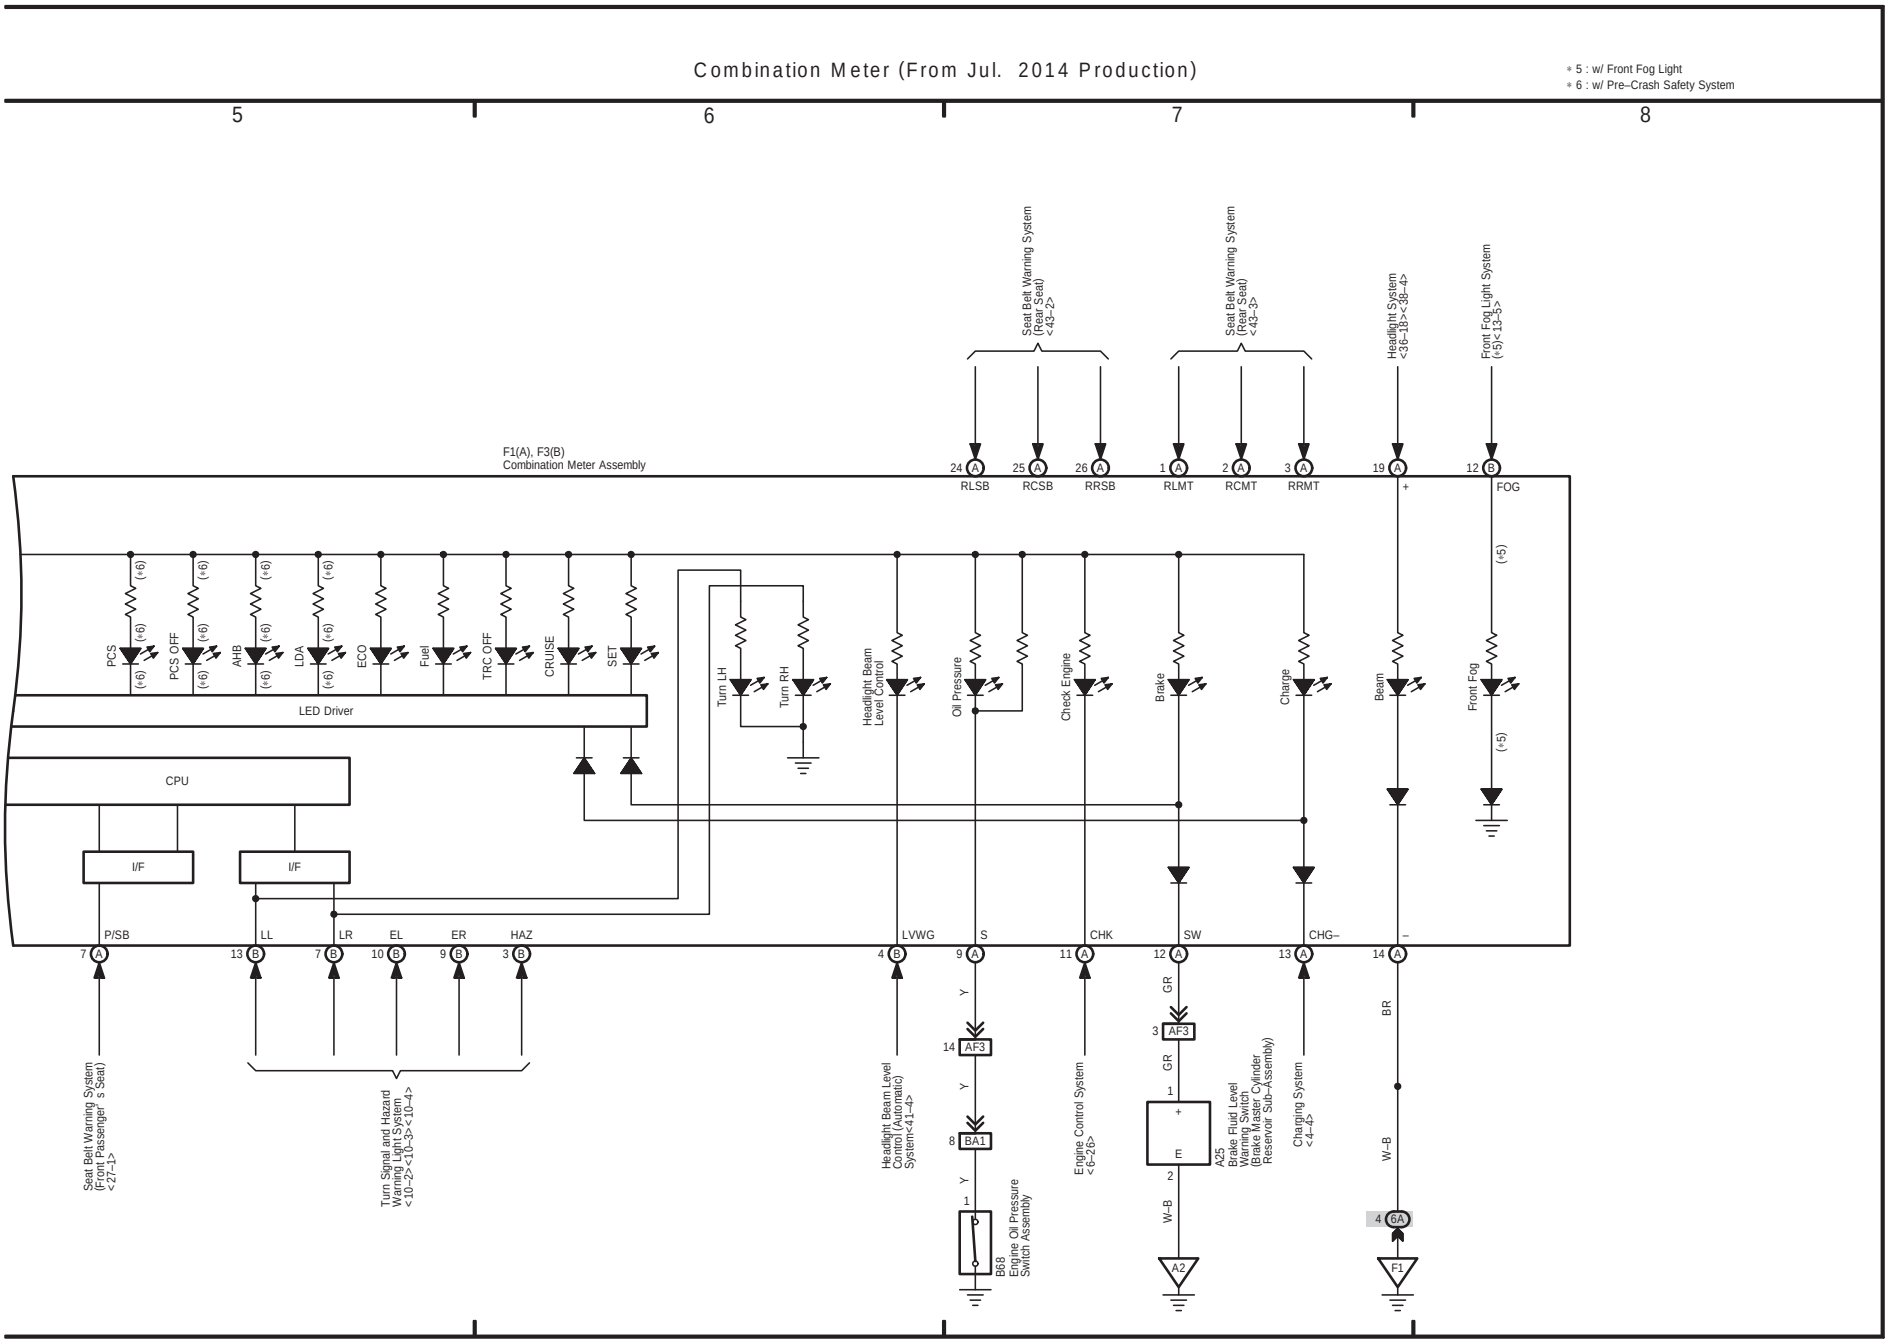


Combination Meter (From Jul. 2014 Production)
* 5 : w/ Front Fog Light
* 6 : w/ Pre–Crash Safety System
5
6
7
8
F1(A), F3(B)
Combination Meter Assembly
Seat Belt Warning System (Rear Seat) <43–2>
Seat Belt Warning System (Rear Seat) <43–3>
Headlight System <36–18><38–4>
Front Fog Light System (*5)<43–5>
24 A RLSB
25 A RCSB
26 A RRSB
1 A RLMT
2 A RCMT
3 A RRMT
19 A +
12 B FOG
PCS
PCS OFF
AHB
LDA
ECO
Fuel
TRC OFF
CRUISE
SET
(+6)
LED Driver
CPU
I/F
I/F
Turn LH
Turn RH
Headlight Beam Level Control
Oil Pressure
Check Engine
Brake
Charge
Beam
Front Fog
(+5)
P/SB
LL
LR
EL
ER
HAZ
LVWG
S
CHK
SW
CHG–
–
7 A
13 B
7 B
10 B
9 B
3 B
4 B
9 A
11 A
12 A
13 A
14 A
Seat Belt Warning System (Front Passenger's Seat) <27–1>
Turn Signal and Hazard Warning Light System <10–2><10–3><10–4>
Headlight Beam Level Control (Automatic) System<41–4>
Engine Control System <6–26>
Charging System <4–4>
Y
GR
B/R
W–B
14 AF3
3 AF3
8 BA1
1
2
4 6A
A25
Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub–Assembly)
B68
Engine Oil Pressure Switch Assembly
A2
F1