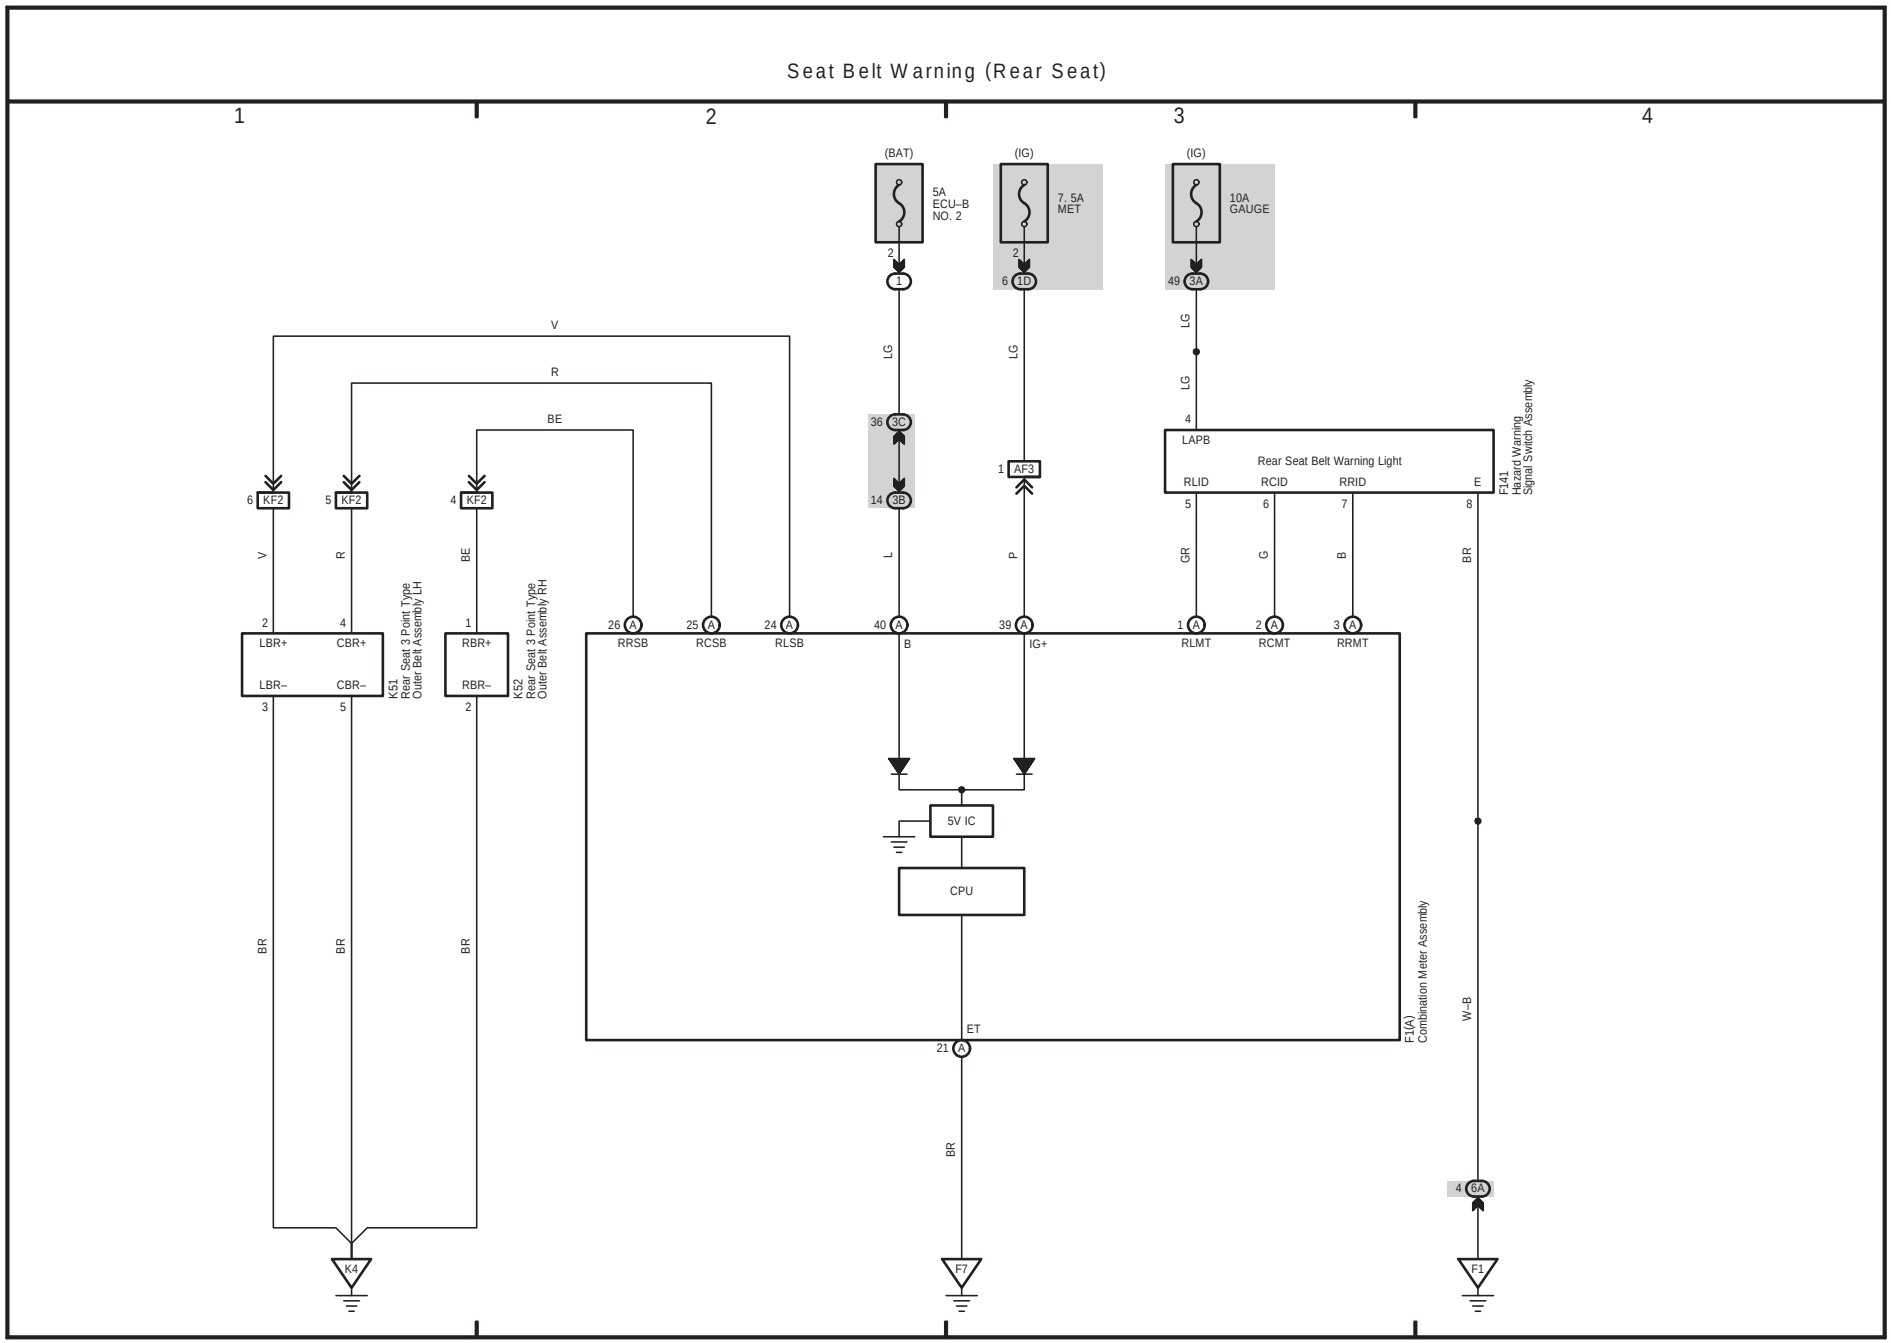

Seat Belt Warning (Rear Seat)
1
2
3
4
(BAT)
(IG)
(IG)
5A
ECU–B
NO. 2
7. 5A
MET
10A
GAUGE
2
1
6 1D
49 3A
LG
LG
LG
4
V
R
BE
36 3C
14 3B
1 AF3
LAPB
Rear Seat Belt Warning Light
RLID
RCID
RRID
E
F141
Hazard Warning
Signal Switch Assembly
5
6
7
8
6 KF2
5 KF2
4 KF2
V
R
BE
L
P
GR
G
B
BR
2
4
1
LBR+
CBR+
RBR+
LBR–
CBR–
RBR–
3
5
2
K51
Rear Seat 3 Point Type
Outer Belt Assembly LH
K52
Rear Seat 3 Point Type
Outer Belt Assembly RH
26 A
25 A
24 A
40 A
39 A
1 A
2 A
3 A
RRSB
RCSB
RLSB
B
IG+
RLMT
RCMT
RRMT
5V IC
CPU
ET
21 A
F1(A)
Combination Meter Assembly
BR
BR
BR
BR
W–B
4 6A
K4
F7
F1