

* 3:Before Jul. 2014 Production
* 4:From Jul. 2014 Production
* 9:Before Sep. 2016 Production
* 10:From Sep. 2016 Production
B7
B13
B15
B9
B17
B11
B19
(*9)
B37
(*10)
B90
B33
B30
(*9)
B84
(*10)
B89
B78
B5
B63
B2
(*3)
B25
(*4)
B87
B4
B86
B72
B61
B48
B77
B68
R1
B1
B53
B29
B69
(*3)
B88
(*4)
B74


B 1 Starter Assembly
B 2 Generator Assembly
B 4 Generator Assembly
B 5 Fuel Injector Assembly No. 1
B 7 Fuel Injector Assembly No. 2
B 9 Fuel Injector Assembly No. 3
B 11 Fuel Injector Assembly No. 4
B 13 Ignition Coil No. 1
B 15 Ignition Coil No. 2
B 17 Ignition Coil No. 3
B 19 Ignition Coil No. 4
B 25 Cam Position Sensor
B 29 Throttle with Motor Body Assembly
B 30 Camshaft Position Sensor
B 33 E.F.I. Engine Coolant Temperature Sensor
B 37 Oxygen Sensor (Bank 1 Sensor 1)
B 48 Transmission Revolution Sensor (Turbine)
B 53 Starter Assembly
B 61 Purge VSV
B 63 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
B 68 Engine Oil Pressure Switch Assembly
B 69 Park/Neutral Position Switch Assembly
B 72 Intake Mass Air Flow Meter Sub-Assembly
B 74 Electronically Controlled Transmission Solenoid
B 77 With Pulley Compressor Assembly
B 78 Fusible Link Block Assembly
B 84 ECM
B 86 Back-Up Light Switch Assembly
B 87 Cam Position Sensor
B 88 Park/Neutral Position Switch Assembly
B 89 ECM
B 90 Air Fuel Ratio Sensor

R 1 Knock Control Sensor (Bank 1)


B 1
Black

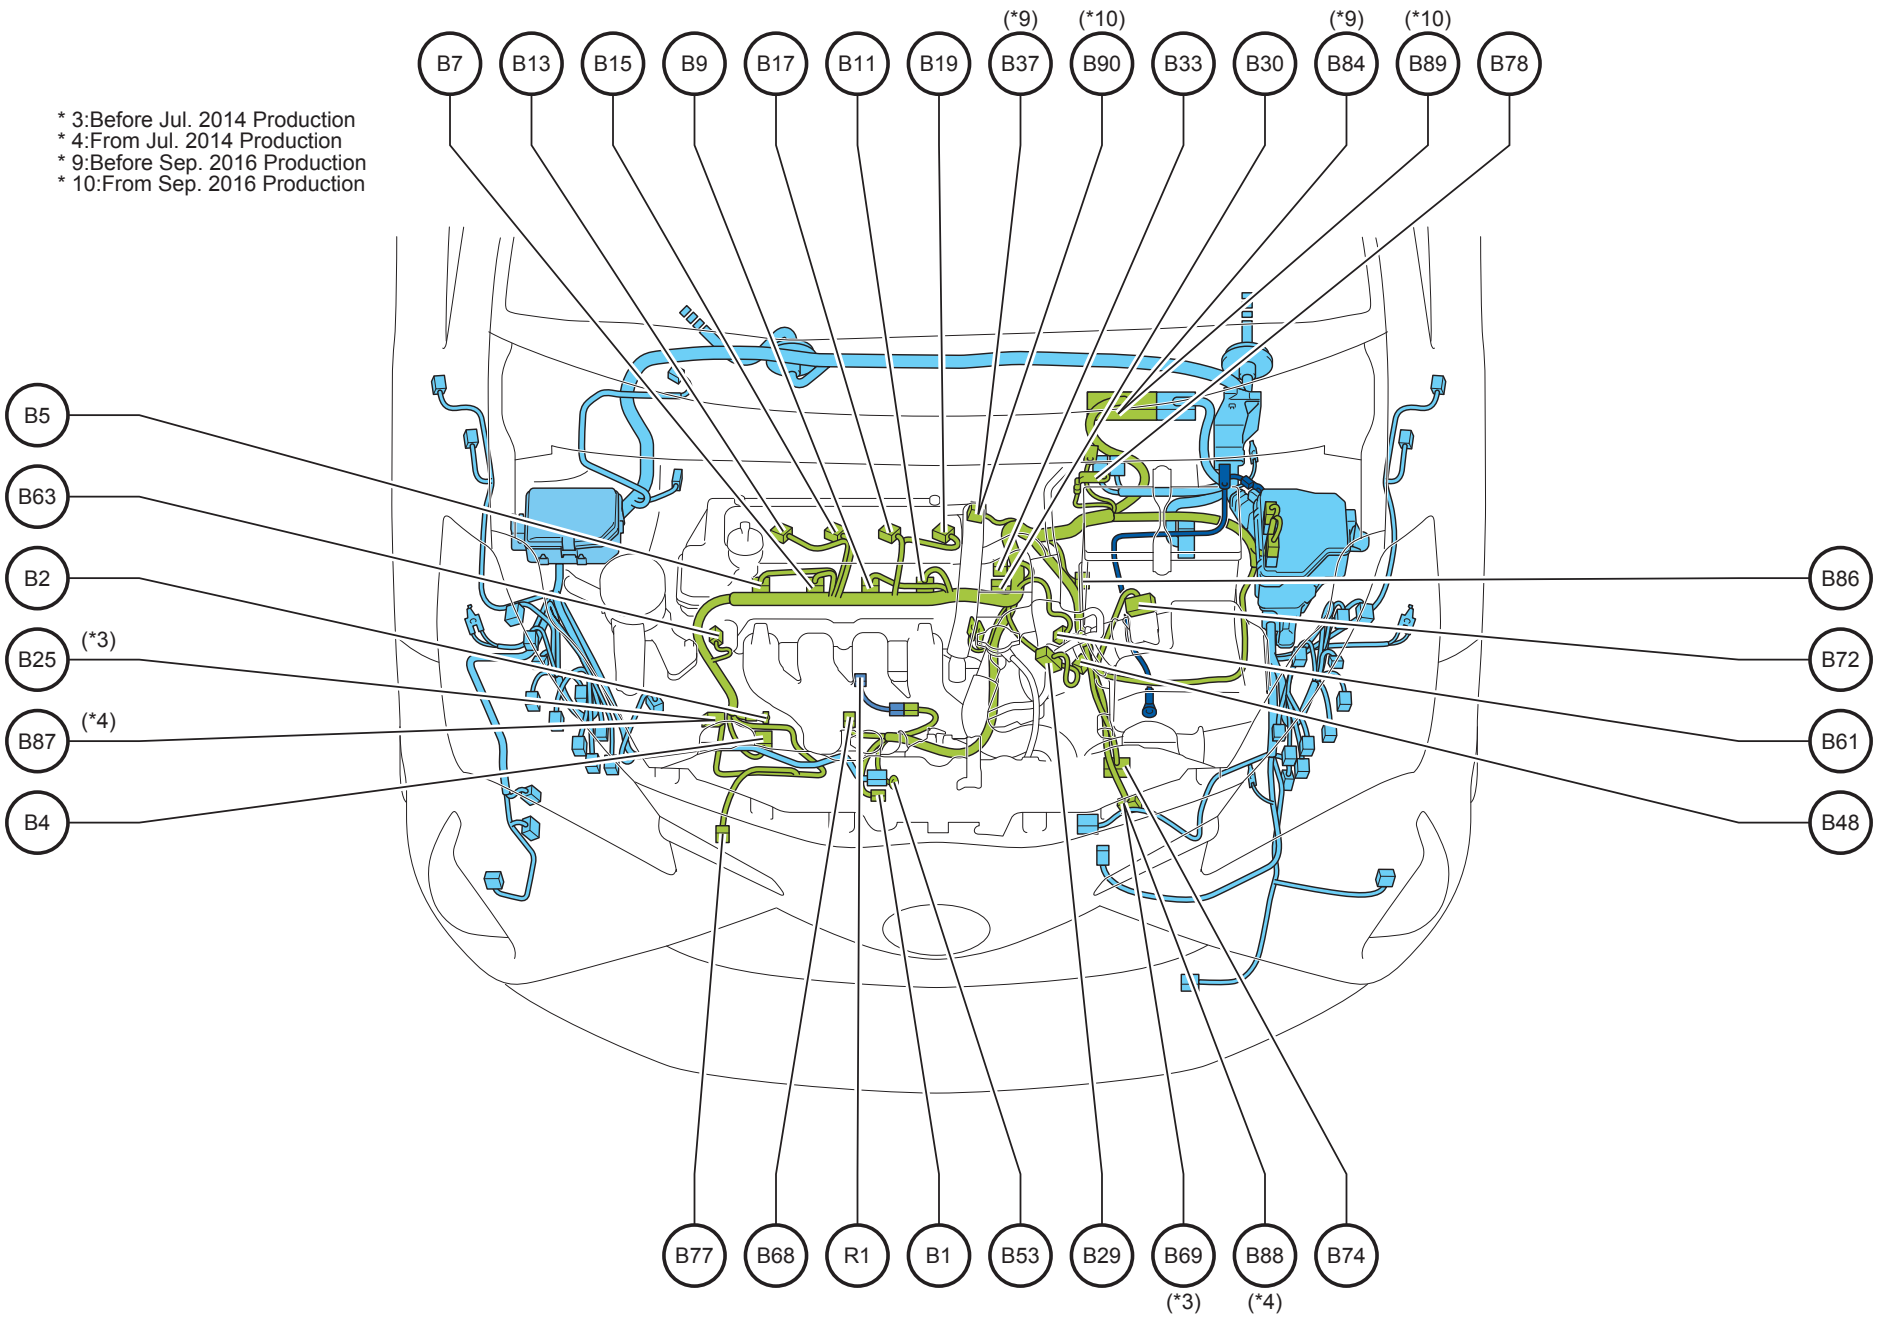


B 2




B 4
Black

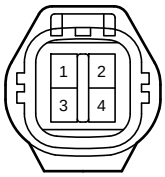


B 5
Black




B 7
Gray

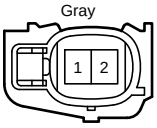


B 9
Black



B 11
Gray

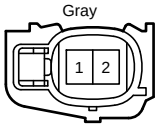


B 13
Black



B 15
Gray




B 17
Black




B 19
Gray



B 25
Black

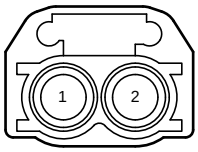

B 29
Black

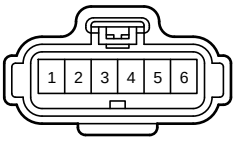

B 30
Black




B 33
Black




B 37
Gray




B 48
Black

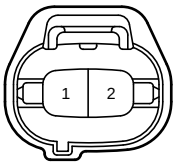

B 53



B 61
Blue

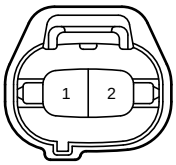


B 63
Black




B 68
Gray




B 69
Gray

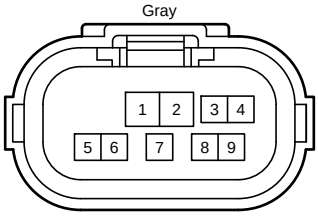


B 72
Black

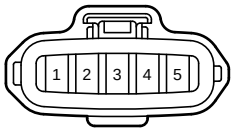


B 74
Gray

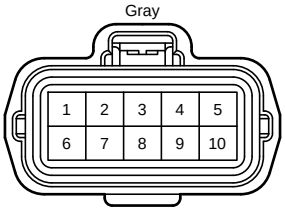


B 77
Gray

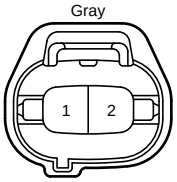


B 78




B 84
Black

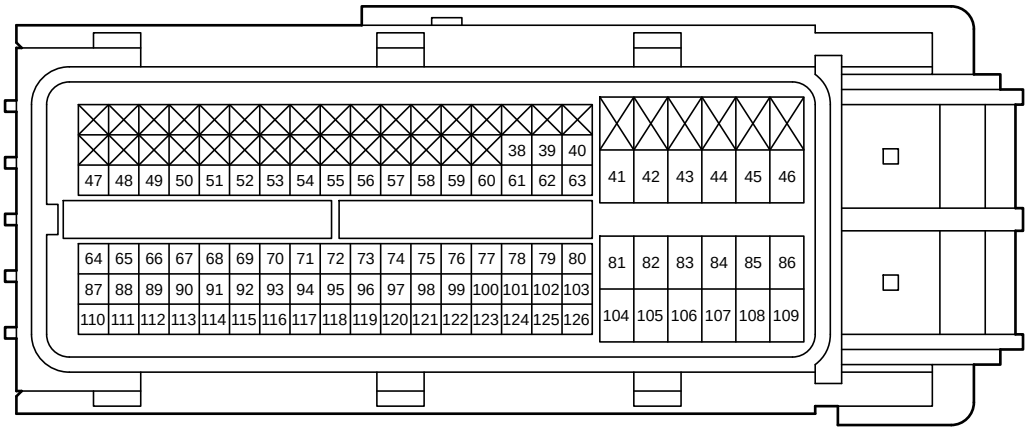


B 86
Gray

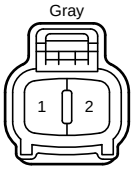


B 87
Black

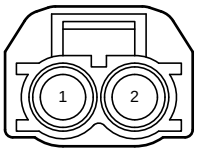

B 88
Gray

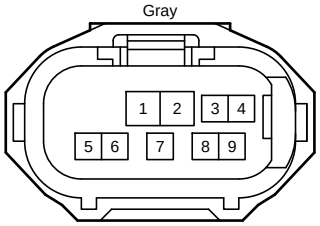

B 89
Black

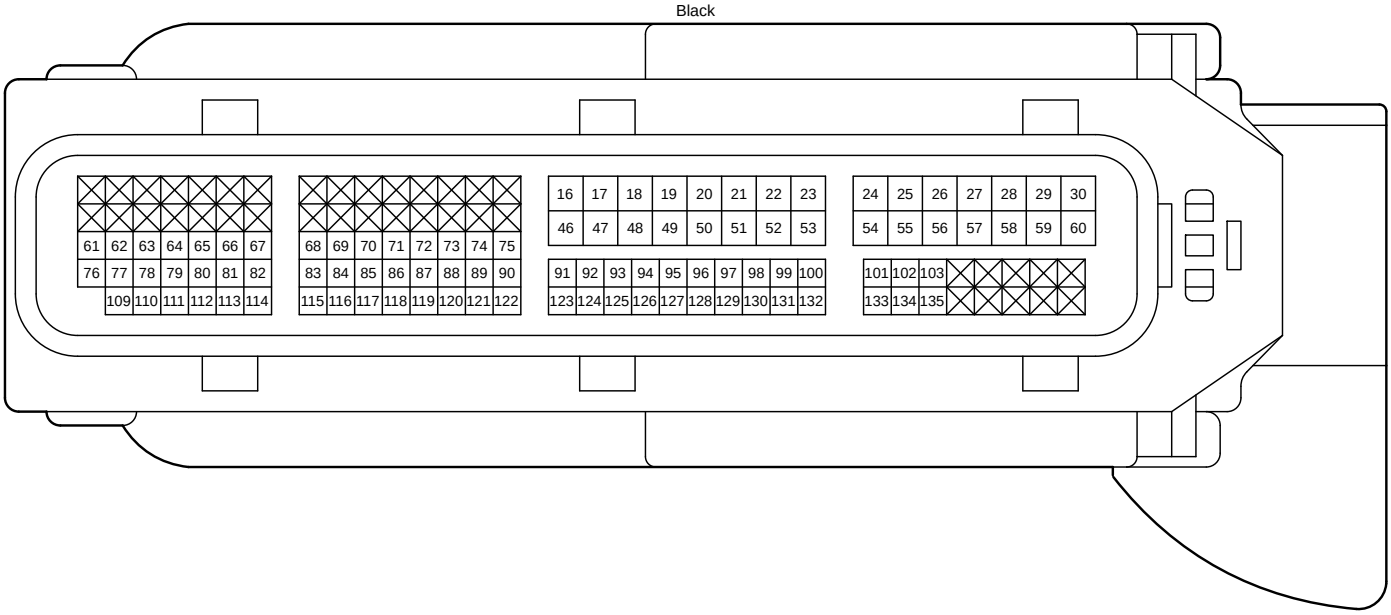

B 90
Gray



R 1
Black

